

TaiMei Series

Shower Door Measurement Guide

Prior to installation, please determine the following measurements of your enclosure based on the diagram provided:

· A: Horizontal Opening


 Measurement of the width of the opening at the top and the botiom of the enclosure

· B: Vertical Opening

 Measurement of the height of the opening

• C: Depth

 Measurement of the depth of the sill/threshold

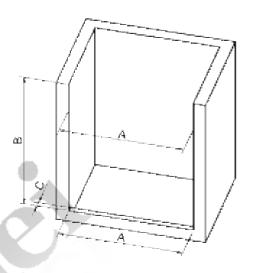

Opening Requirements for Installation:

- Horizontal Opening:56 in. recommended minimum ~60 in. maximum
- Total Product Height: 60 in
- Minimum Depth Required for Sill/Threshold: 2 in.

Measurement Recording Chart

Measurements	Measurements Values	Recommended
Horizontal Opening (A)		56 in ~ 60 in.
Total Product Height: (B)		Minimum 60 in
Depth (C)		Minimum 2 in.

Need Additional Assistance with TaiMei Shower Doors?



If you need assistance, please feel free tocontact us via email at pax@taimeibath.com

