


8860 7-Inch Touchscreen Keypad

Quick Start Guide



Full Installation and Programming Guide

To view the full [8860 7-Inch Touchscreen Keypad Installation and Programming Guide](#), scan this QR code or visit [DMP.com](https://www.dmp.com).

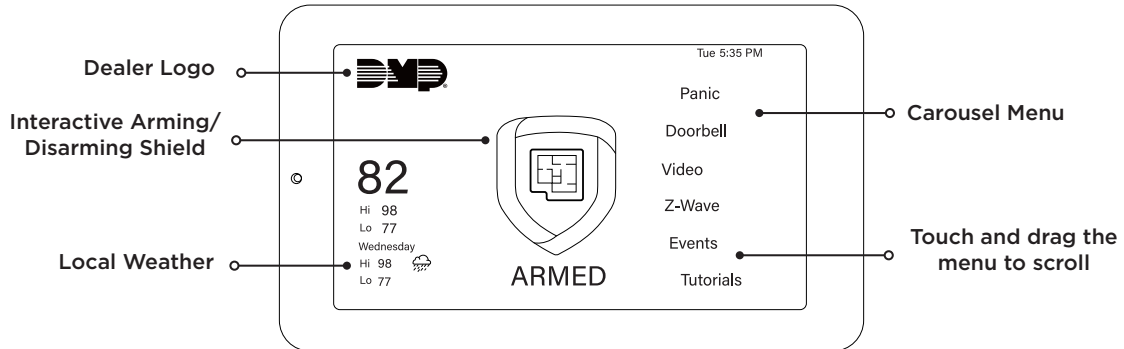

Step 1: Wire the Keypad

1. Connect the red wire to panel terminal 7.
2. Connect the yellow wire to panel terminal 8.
3. Connect the green wire to panel terminal 9.
4. Connect the black wire to panel terminal 10.

Step 2: Mount the Keypad

1. Use the keypad base to mark the holes for the screws on the mounting surface. Set the base aside and drill the holes.
2. Use the included screws to secure the keypad base to the surface. Do not overtighten.
3. Route the keypad wires through the cutouts in the base.
4. Attach the wire harness to the keypad.
5. Slide the keypad onto the base and press the keypad into place.

Step 3: Add the Keypad into the Panel

For all programming instructions, scan the QR code at the beginning of the document.

Step 4: Connect the Keypad to Wi-Fi

1. Ensure the system is set up in Dealer Admin™.
2. Connect the keypad to the Wi-Fi network by selecting Options from the Carousel Menu. Select Wi-Fi Settings and select the network you want to join. Enter the Wi-Fi password and select CMD.
3. Ensure the keypad is up to date. Select Options from the Carousel Menu, then select Installer Options. Enter 3577 and then enter CMD. Select Check for Updates.



Note: Some features may not be available until the keypad is updated.



Designed, engineered, and
manufactured in Springfield, MO
using U.S. and global components.

LT-2714 23023
© 2023

INTRUSION • FIRE • ACCESS • NETWORKS

2500 North Partnership Boulevard
Springfield, Missouri 65803-8877

Domestic: 800.641.4282 | International: 417.831.9362
[DMP.com](https://www.dmp.com)