







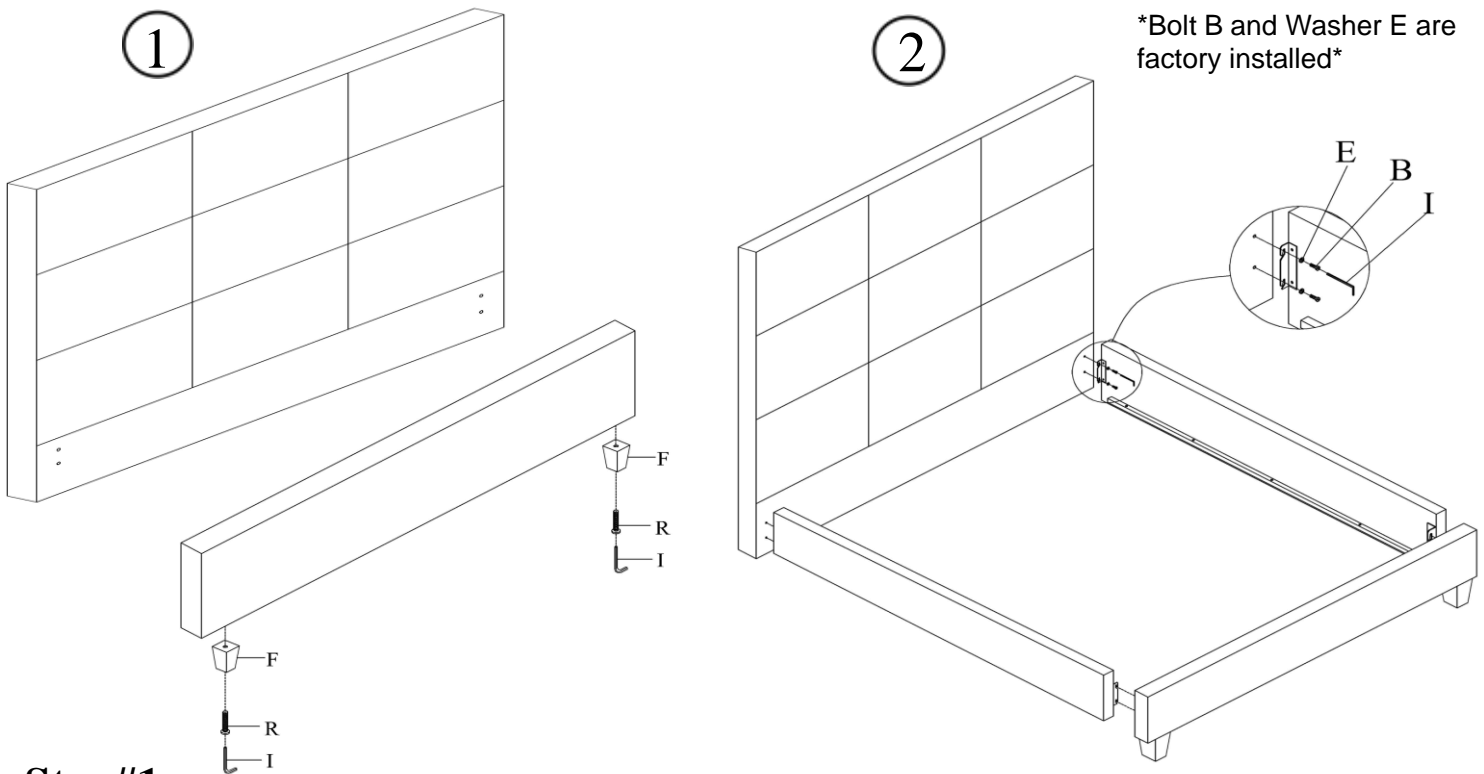


Oliver C/E King Assembly Instructions

Hardware included in side rails carton to attach bed feet and center support system.

A	D	F	G	I	J	R	T
							
Φ6*20MM	Φ6 MM	H= 8 CM	Metal Slats	Φ8 MM	Center support legs H= 14 CM	Φ8*60MM	Φ6*25MM
8PCS	16PCS	2PCS	4PCS	1PC	8PCS	2PCS	8PCS



Step#1

Retrieve bed feet from carton packed in side rails carton.

Attach bed feet (F) to the footboard using Wrench (I), Bolt (R) .

Step#2

Attach side rails to headboard using Wrench (I), Bolt (B) and Washer (E)(factory installed).









Attach side rails to footboard using Wrench (I), Bolt (B) and Washer (E)(factory installed).



CONGRATULATIONS ON YOUR NEW BED PURCHASE

~Warning: do not move bed after final assembly as it may result in damages to floor and/or bed.~

Oliver C/E King Assembly Instructions

Hardware included in side rails carton to attach bed feet and center support system.

A	D	F	G	I	J	R	T
							
Φ6*20MM	Φ6 MM	H= 8 CM	Metal Slats	Φ8 MM	Center support legs H= 14 CM	Φ8*60MM	Φ6*25MM
8PCS	16PCS	2PCS	4PCS	1PC	8PCS	2PCS	8PCS

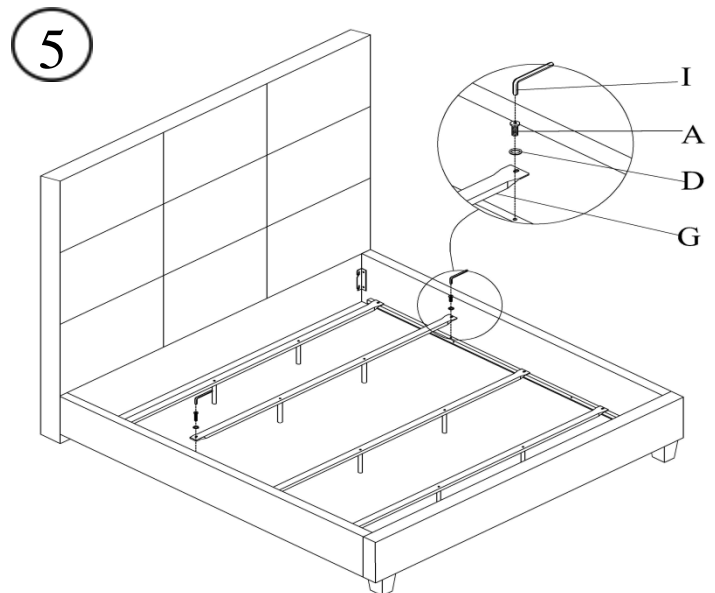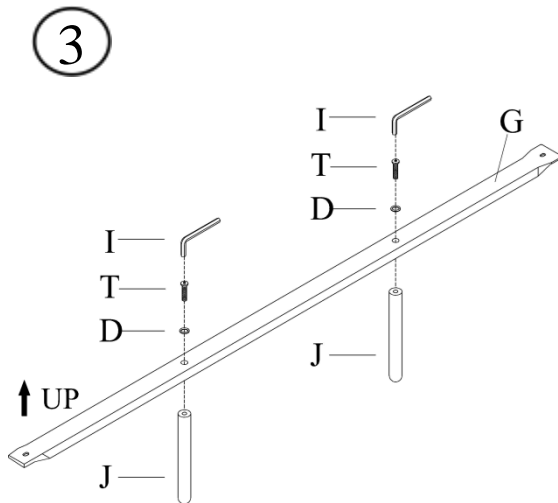

Step#3

Attach steel center support legs (J) to the Metal slat (G) using Wrench (I), Bolt (T) and Washer (D).

Step#4

Move/place bed into final position in bedroom.

Step#5

Attach steel slat support system to full length steel side support cleats(flat side facing up). Verify the metal slats are installed properly into support cleats and center support legs are perpendicular to the floor for full support.

CONGRATULATIONS ON YOUR NEW BED PURCHASE

~Warning: do not move bed after final assembly as it may result in damages to floor and/or bed.~