


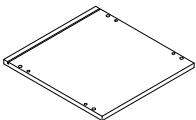
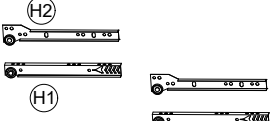
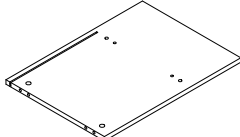

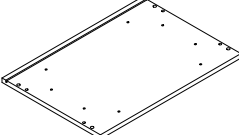

















IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

Notice:


1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, refer to two solutions: Follow the installation video tutorial on the Amazon product page or contact our customer service.
4. We provide extra spare hardware, please rest assured to assemble. After "+" are the spare parts.

Item no.	Reference Image	Qty	Item no.	Reference Image	Qty	Item no.	Reference Image	Qty
A		X30 +3	G		X8	1		X1
B		X30 +3	H	 300mm	X2	2		X1
C		X16 +1	I	 Φ5*40mm	X8	3		X1
D	 Φ3.5*14mm	X40 +4	J		X8 +2	4		X2
E		X4	K	 Φ3.5*35mm	X8	5		X2
F		X1	L		X2	6		X1


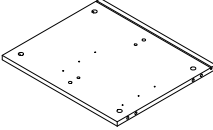


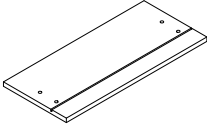Item no.	Reference Image	Qty	Item no.	Reference Image	Qty	Item no.	Reference Image	Qty
7		X2	15		X1			
8		X1	16		X1			
9		X1	17		X1			
10		X2						
11		X2						
12		X1						
13		X1						
14		X1						



Explosion Diagram

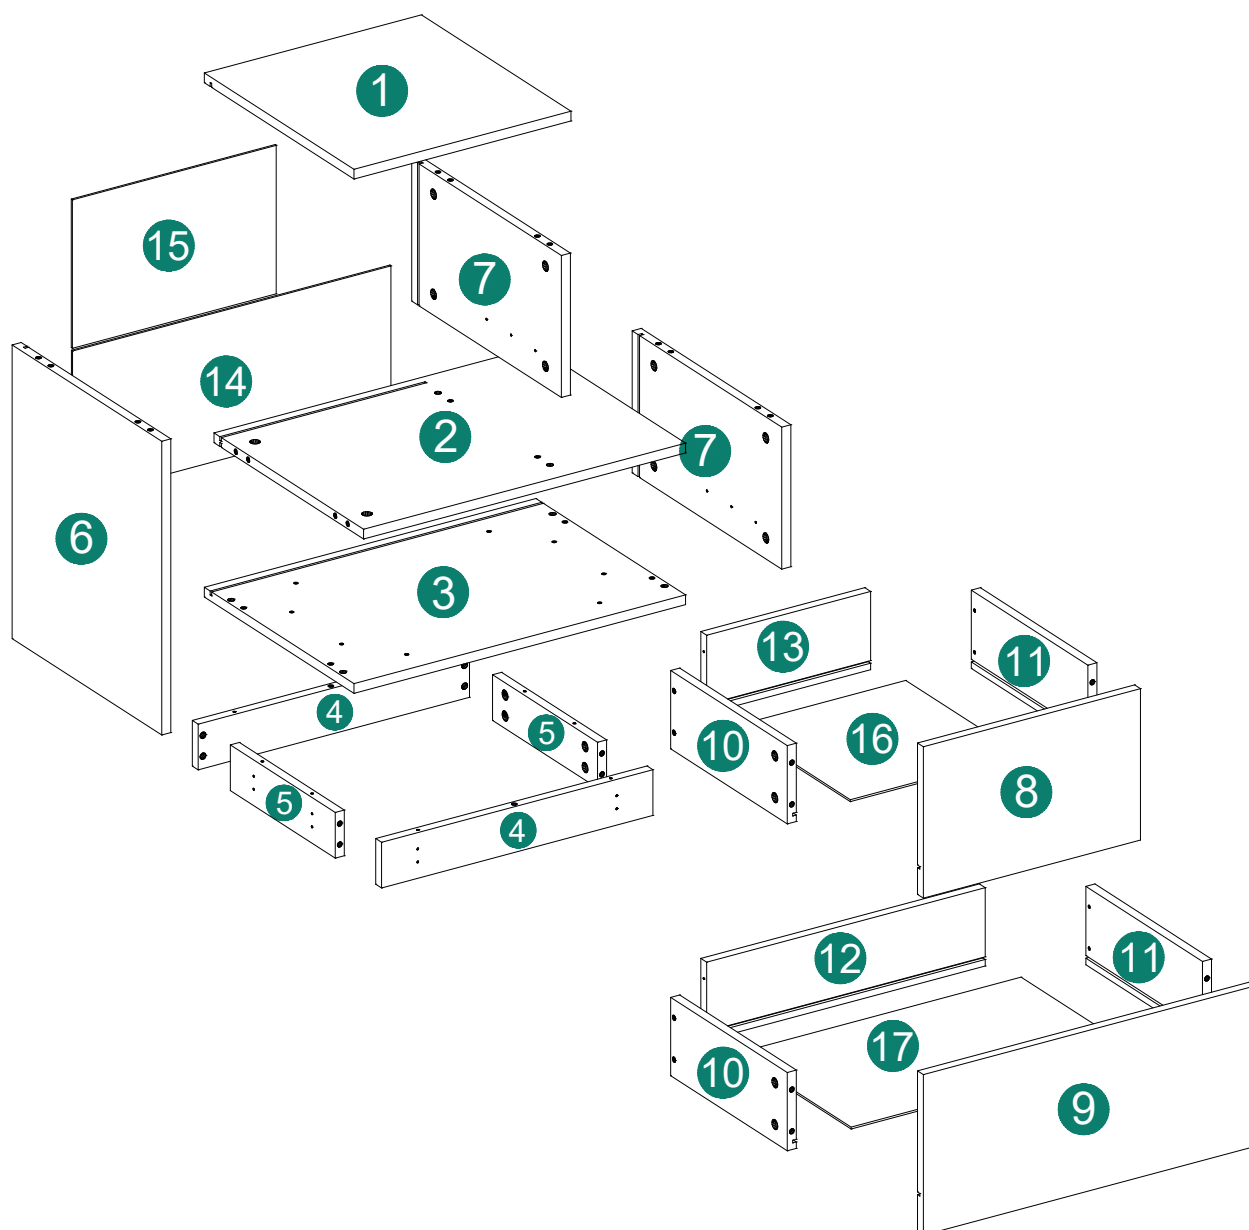

1

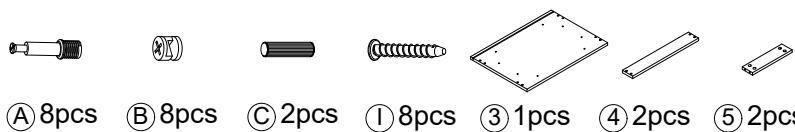

Attention: Quick installation screws need to be fully inserted into the hole position before tightening

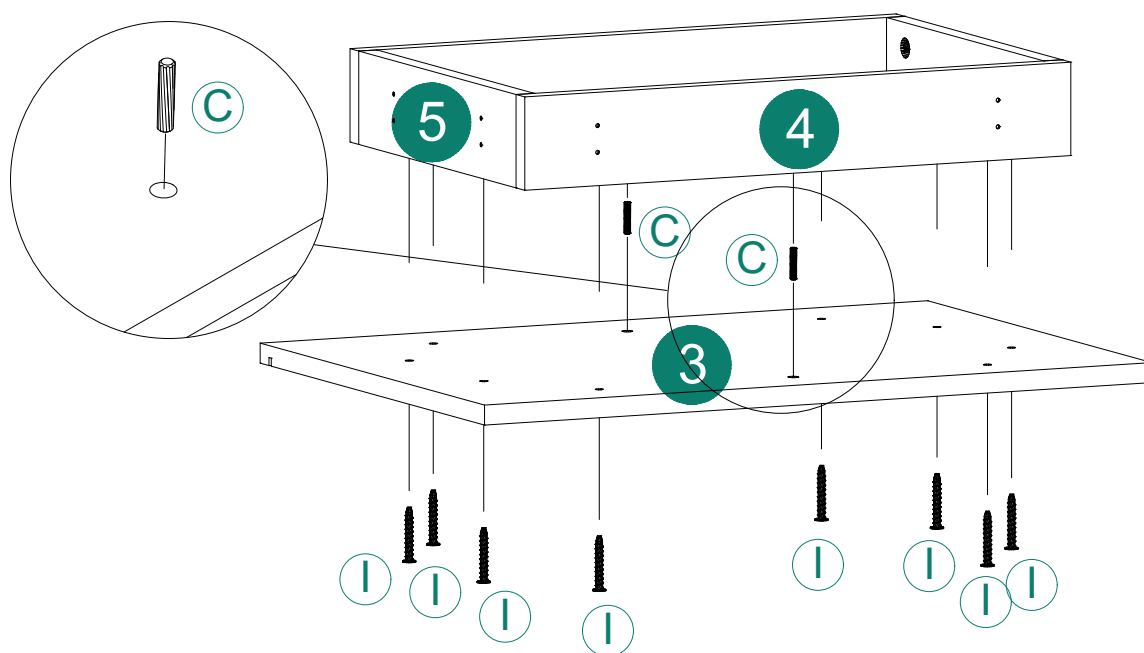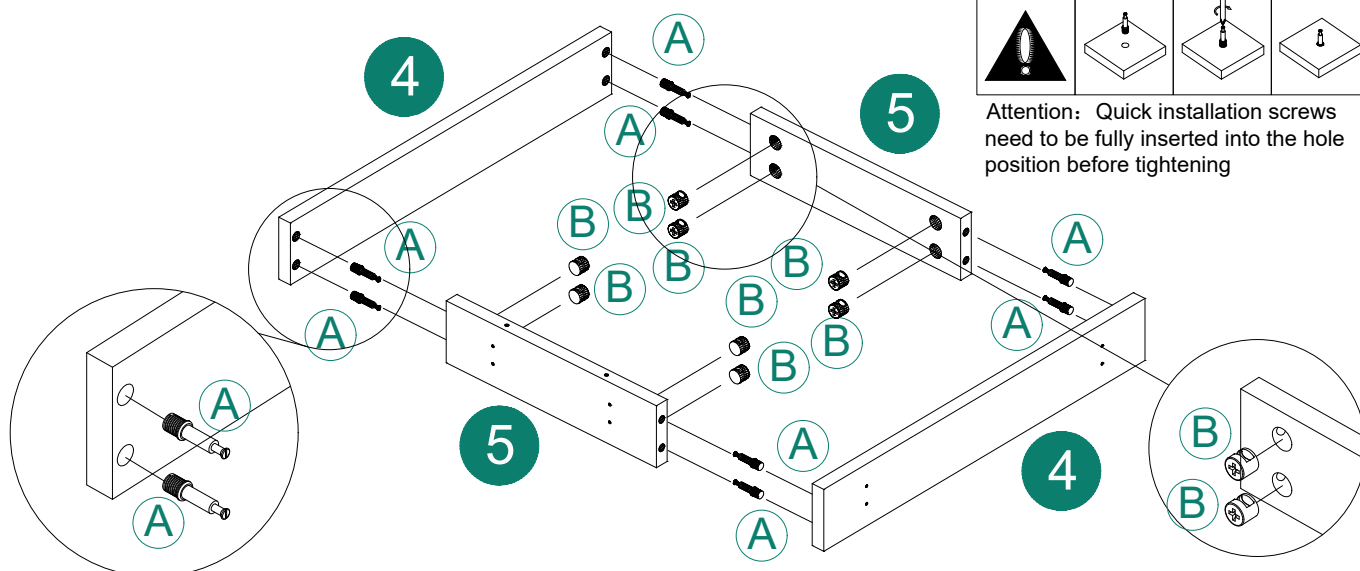

2




Ⓐ 6pcs




Ⓑ 6pcs




Ⓒ 6pcs



② 1pcs








⑥ 1pcs




⑦ 2pcs




Attention: Quick installation screws need to be fully inserted into the hole position before tightening

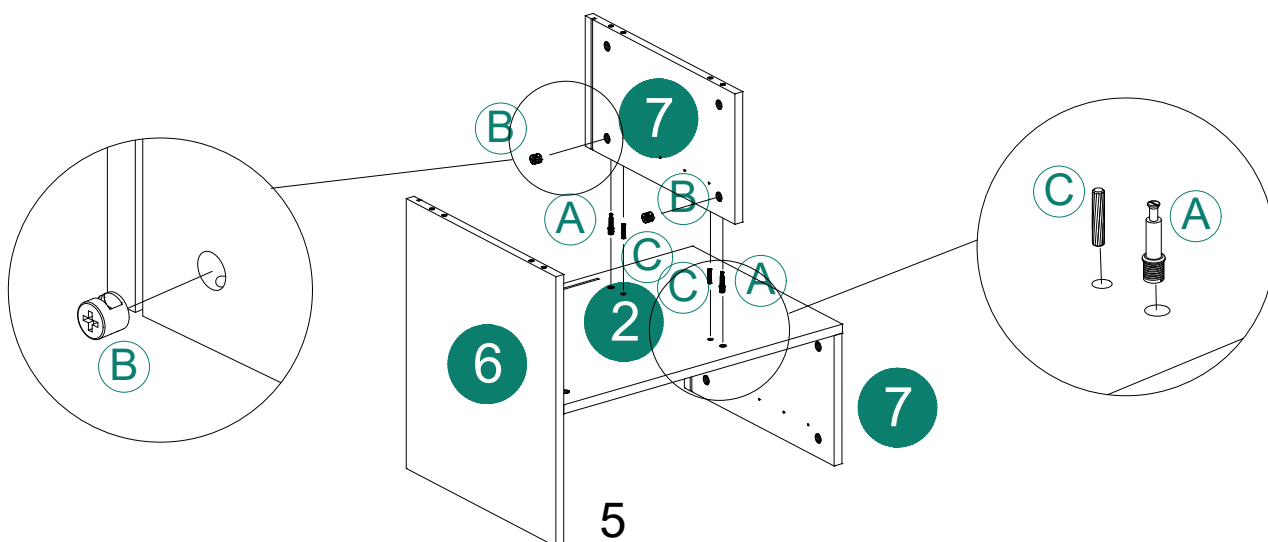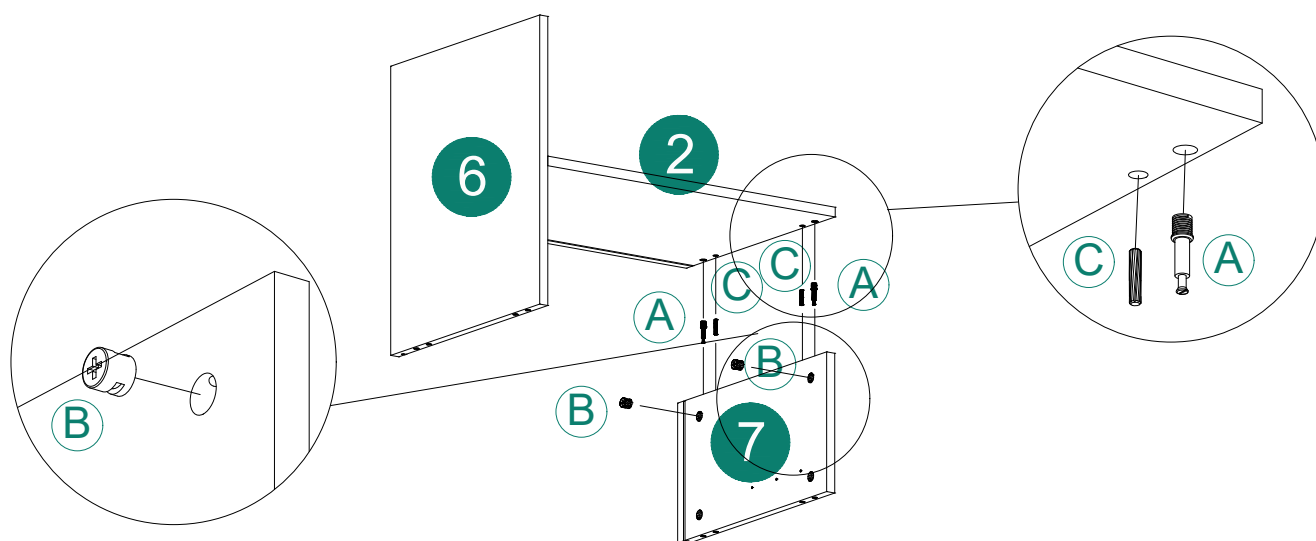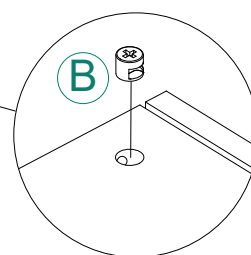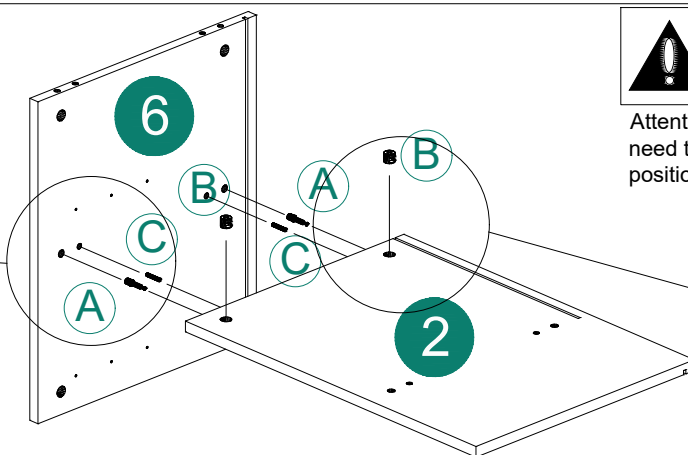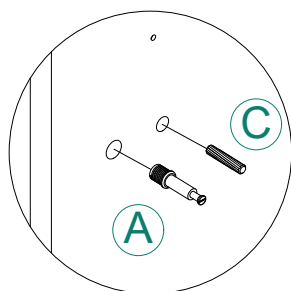


3



⑭ 1pcs



⑮ 1pcs

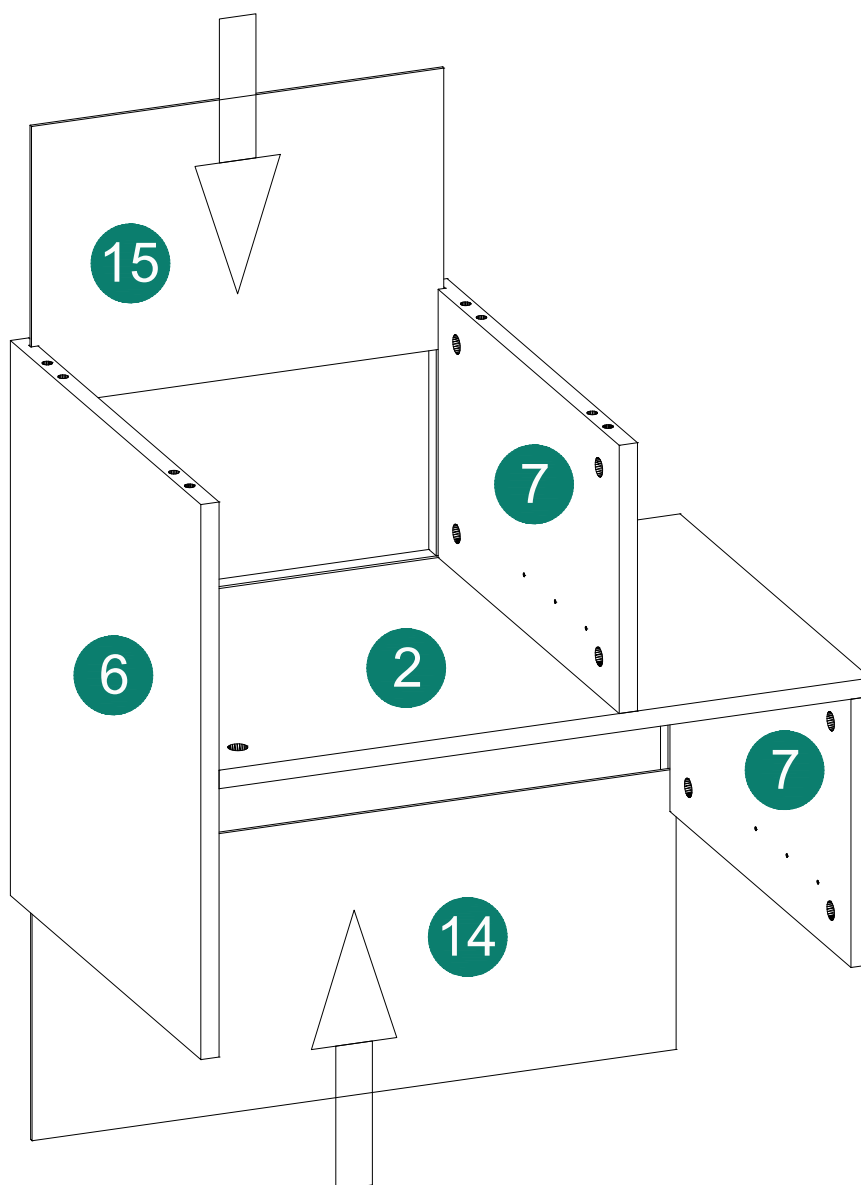

4




Ⓐ 8pcs



Ⓑ 8pcs




Ⓒ 8pcs






① 1pcs





Attention: Quick installation screws need to be fully inserted into the hole position before tightening

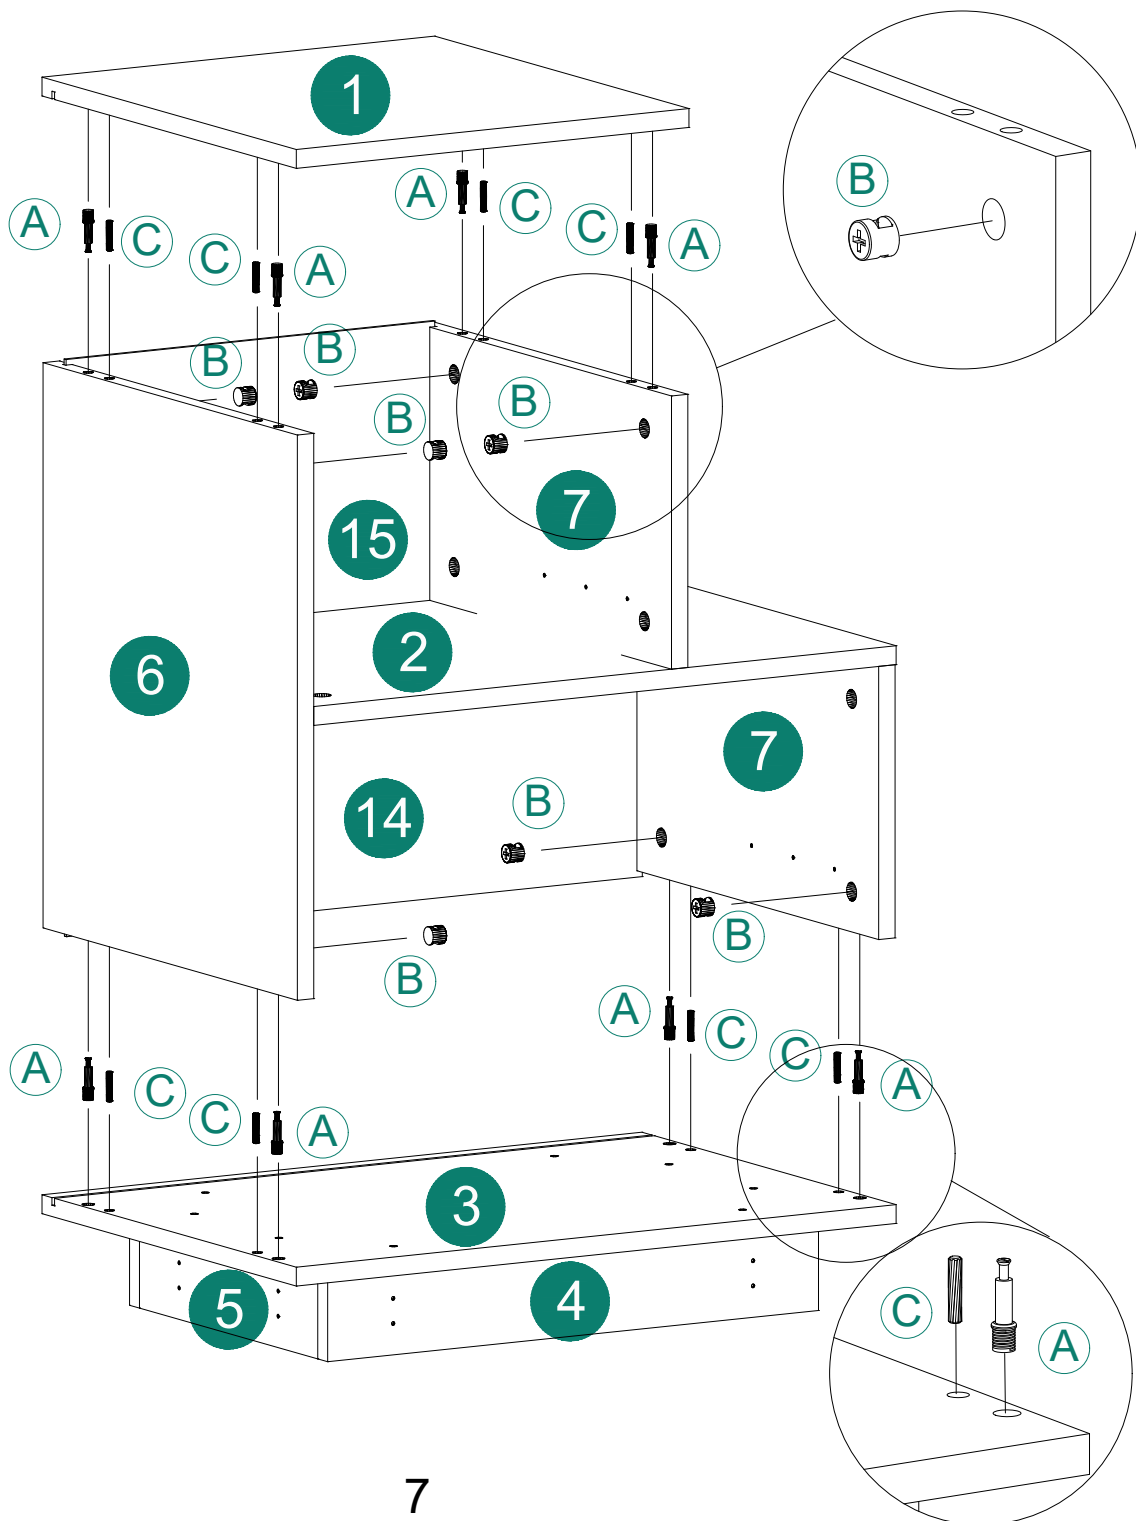


5

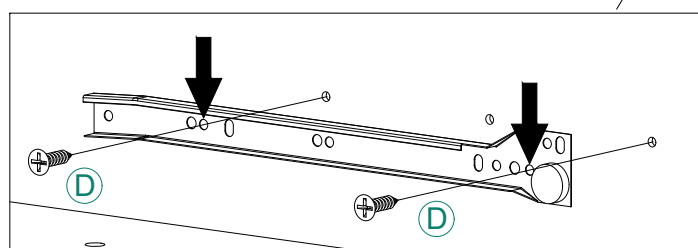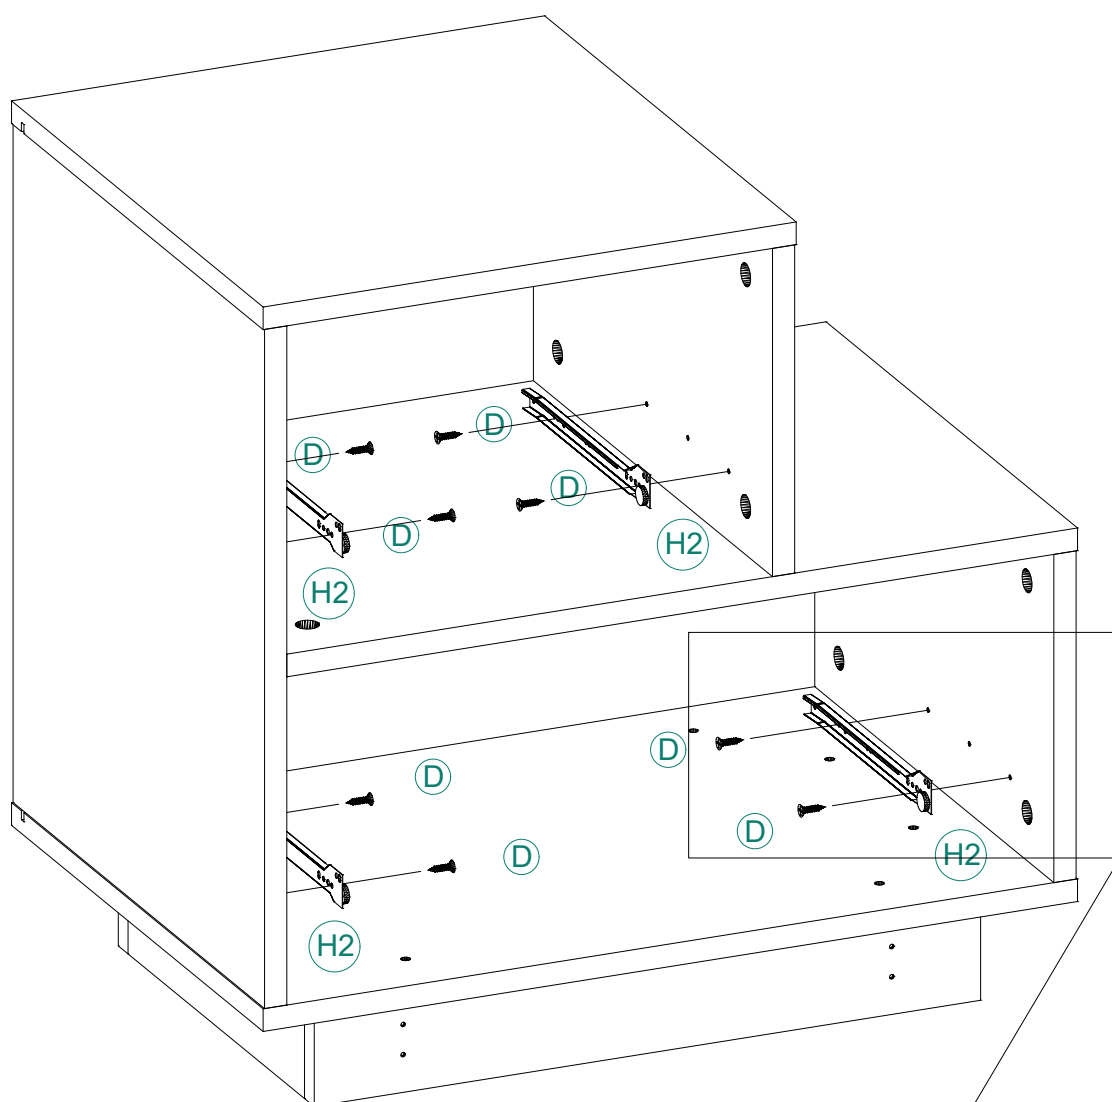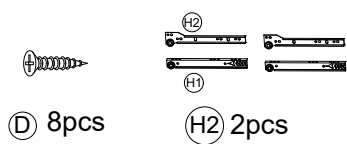



6

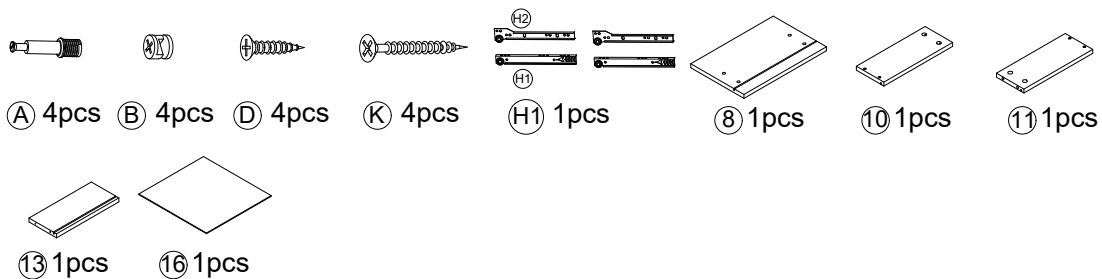


Attention: Quick installation screws need to be fully inserted into the hole position before tightening

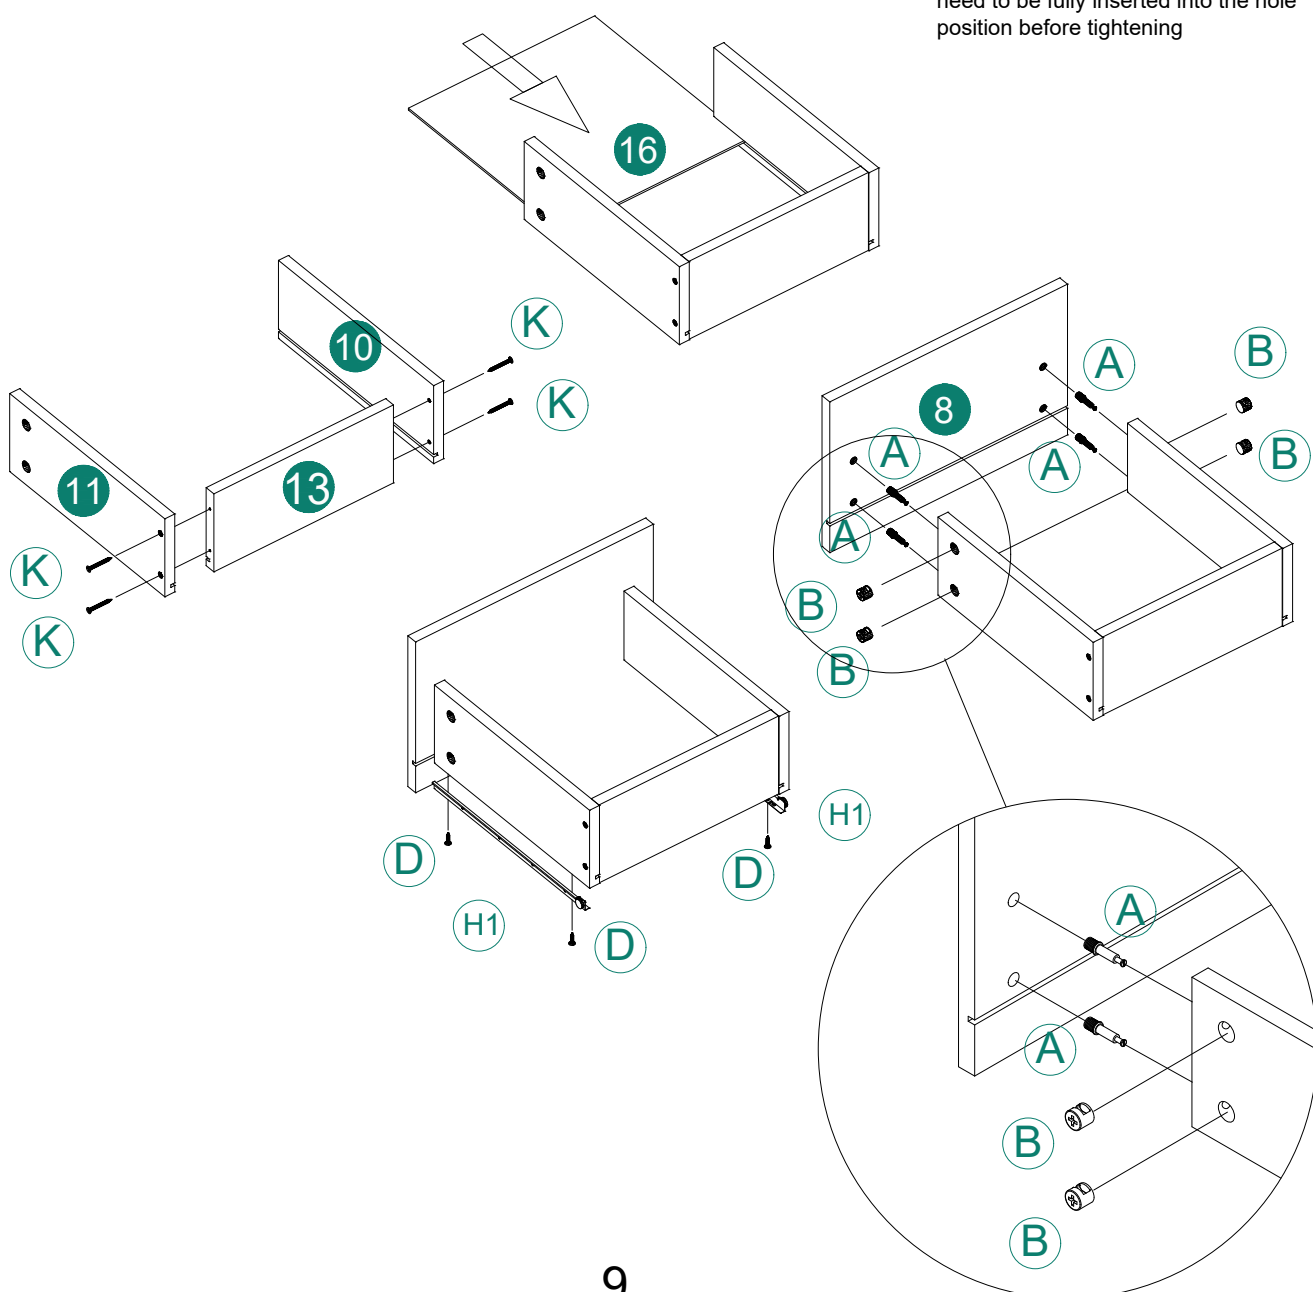


7

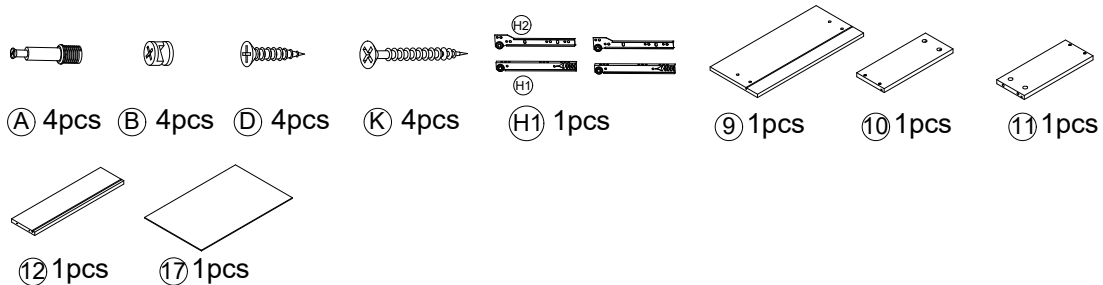

Attention: Quick installation screws need to be fully inserted into the hole position before tightening

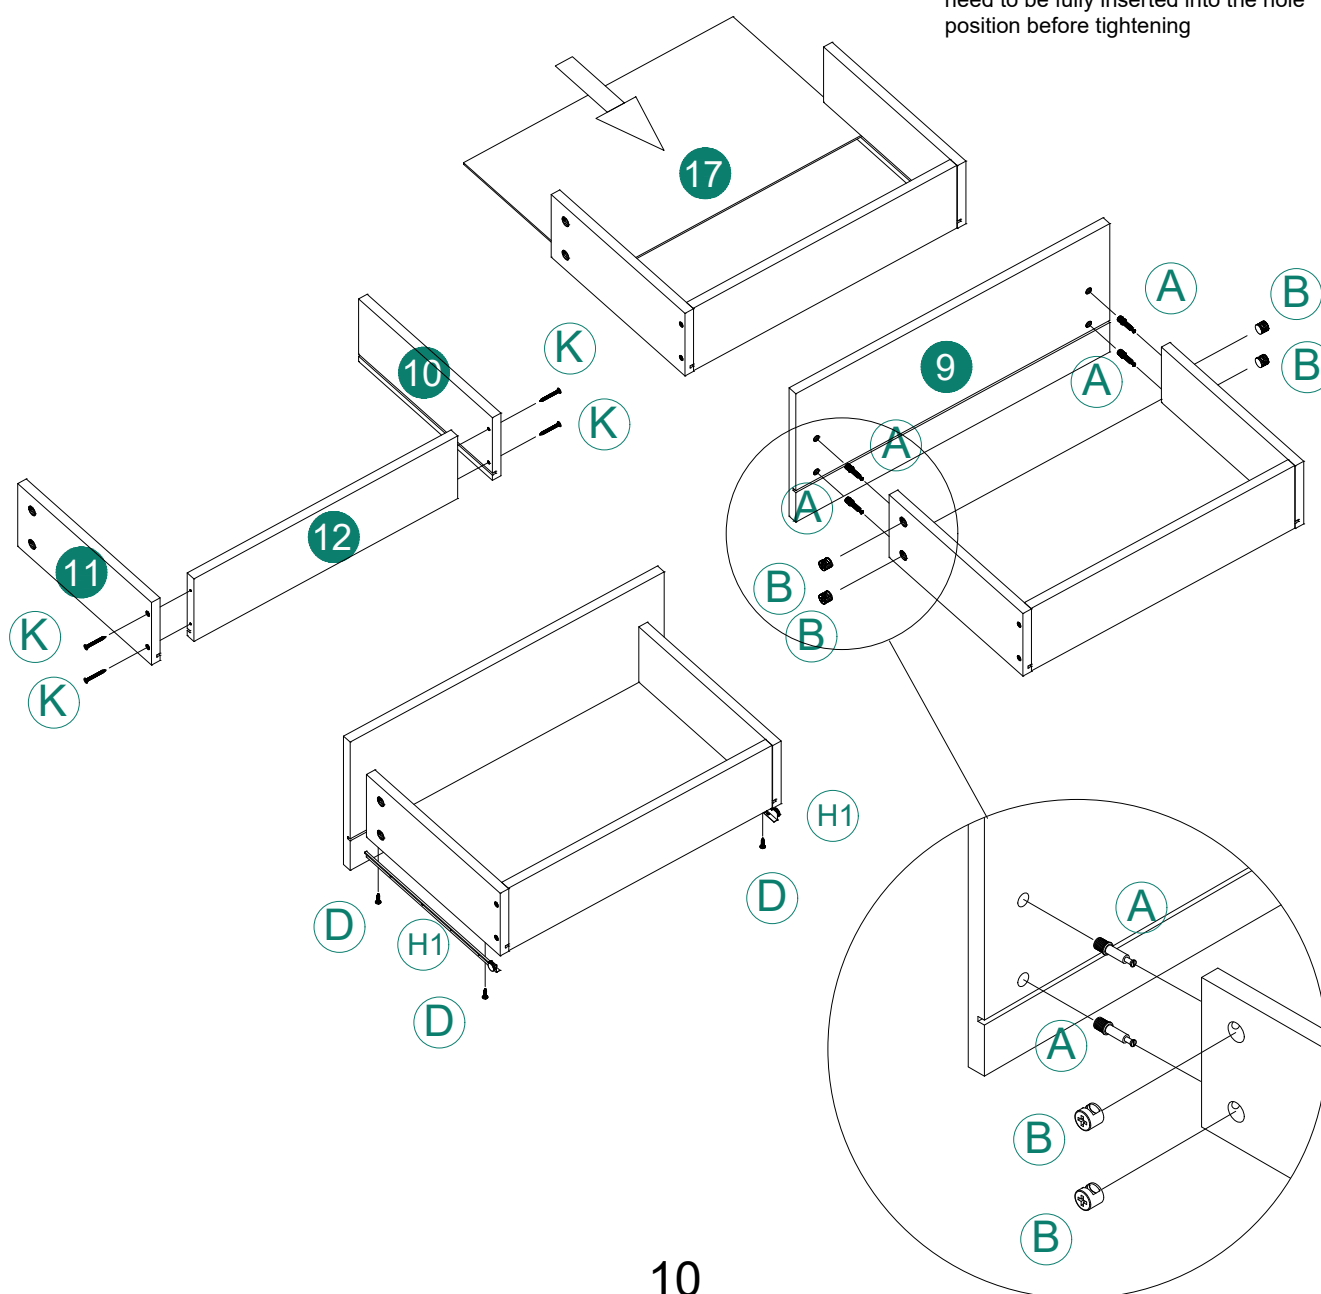


8

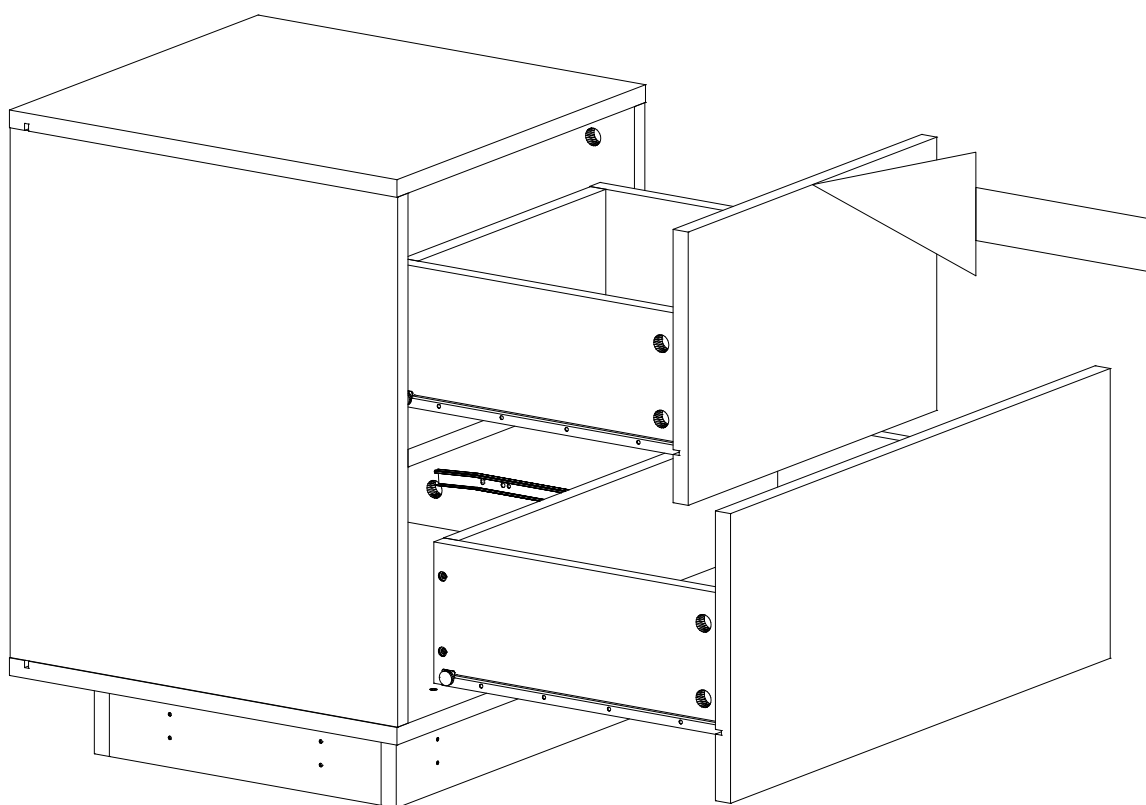

9




Ⓓ 16pcs



Ⓕ 1pcs



Ⓖ 8pcs

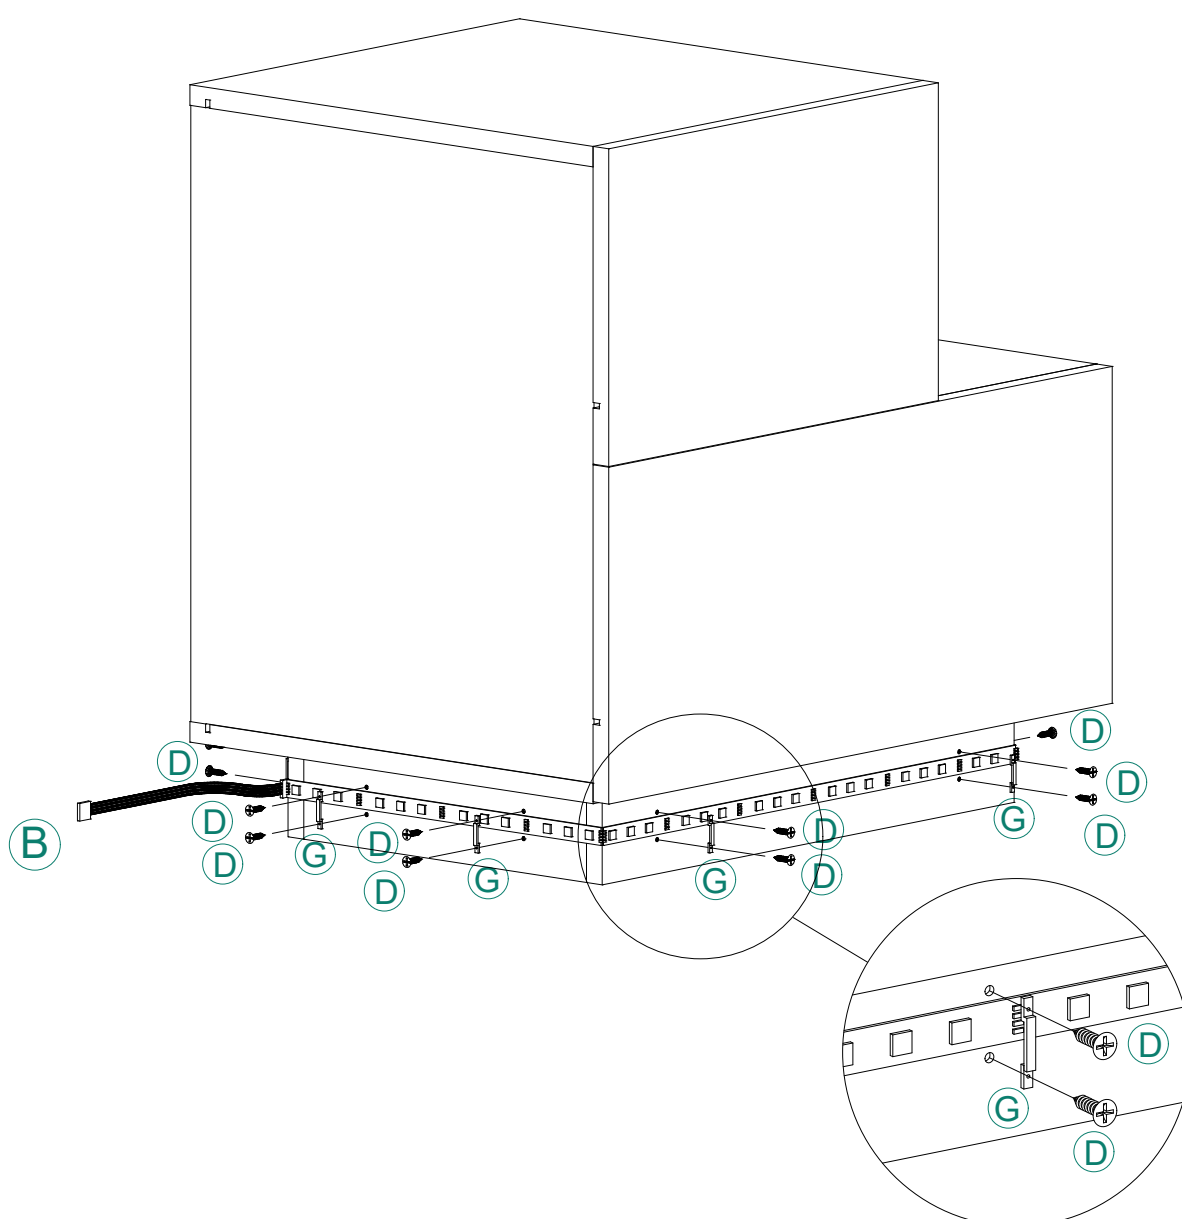

Remove the 3M adhesive from the back of the light strip, stick it along the cabinet body, and then fix it with Part H

10




ⓓ 8pcs




ⓔ 4pcs





ⓙ 8pcs

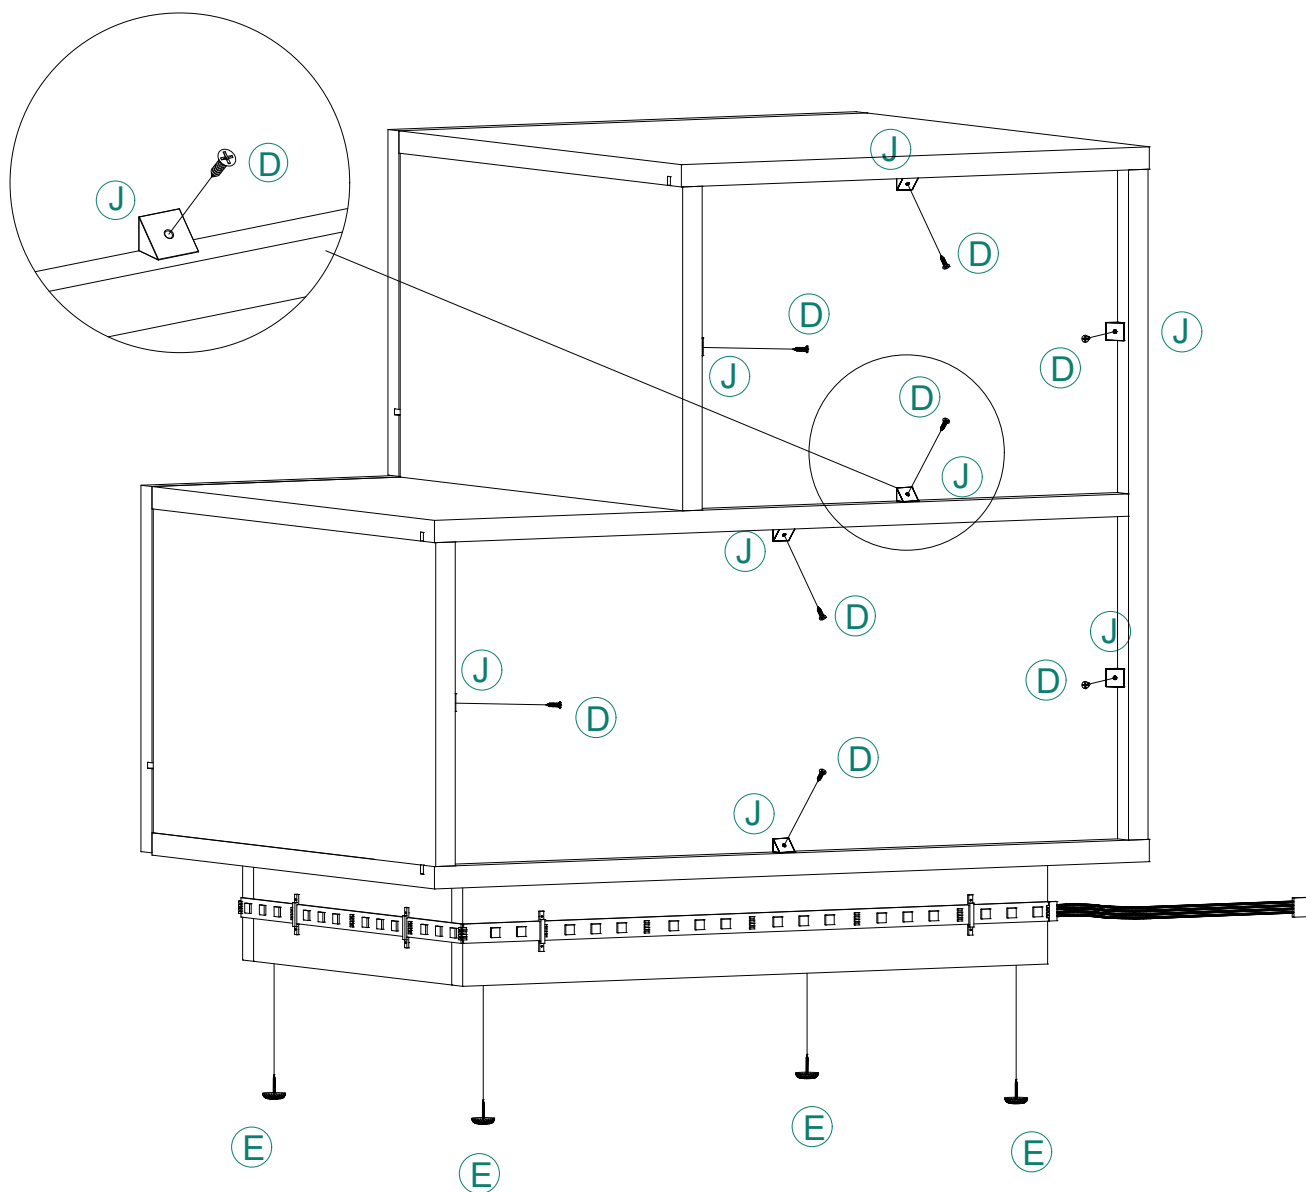

11



Ⓛ 2pcs

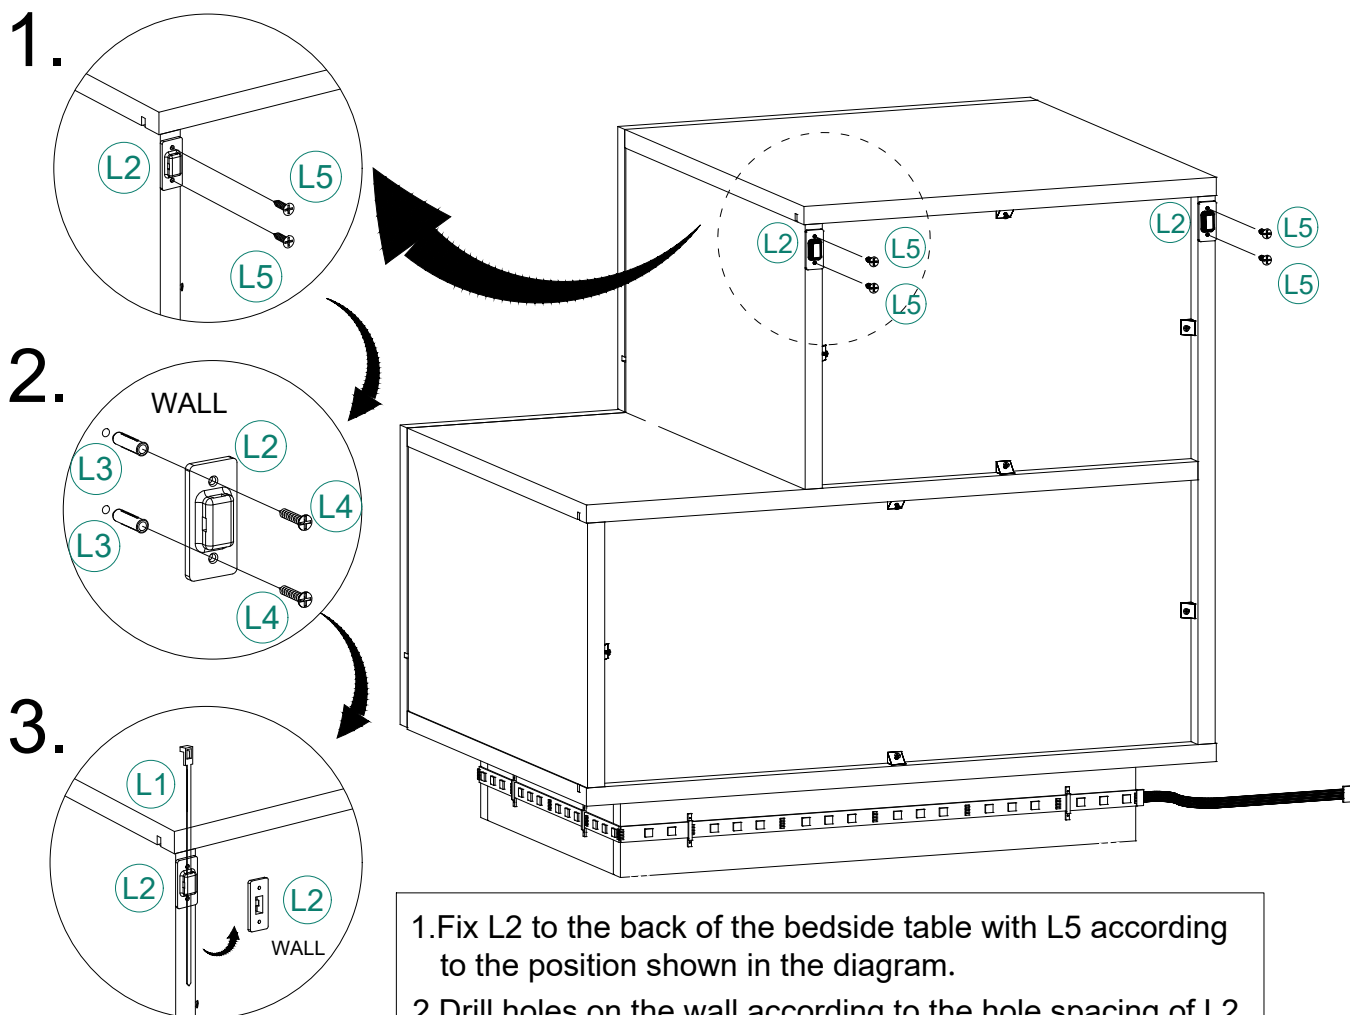

1. Fix L2 to the back of the bedside table with L5 according to the position shown in the diagram.
2. Drill holes on the wall according to the hole spacing of L2, insert L3 into the wall, and fix L2 on the wall with L4.
3. Finally, use L1 to link and fix the two L2's.

Attention: There is a protective film on the surface of the bright panel, please gently remove it from one corner of the panel.