


## Decaura®

- For Model Code: 8557, 8557-2, 8557-3, 8557-4 (In different shower heads only)

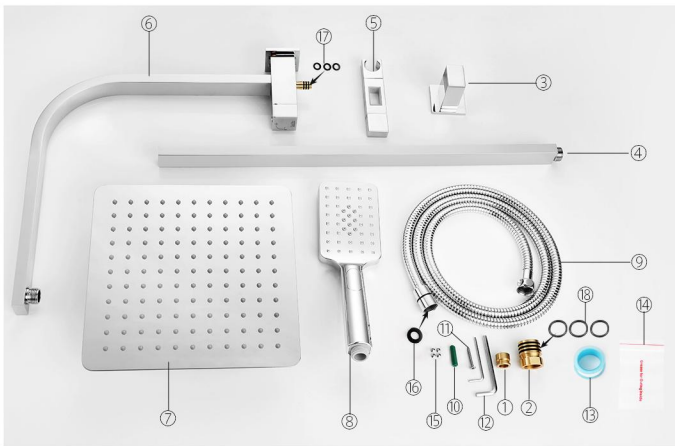

Spare Parts :		
15	M5 Grab Screws	x 4
16	Spare Shower Hose Rubber Washer	x 1
17	Spare O-Rings For Upper Pipe	x 3
18	Spare O-Rings For Connector	x 3

1. Working pressure: 0.05-1 Mpa, Working temperature: 0-55°C.
2. Products are manufactured as per standard AS/NZS 3662:2005. as per Australian standard, and with WaterMark & WELS certificate as shown in the packing.
3. All surfaces should be cleaned with water or mild liquid detergent. Do not use cream cleaner or citrus based or chemical cleaning products.

All products are guaranteed as below:

1. 5 years guarantee against main body,finishing and Cartridge.
2. 2 years guarantee on washers and O-rings.

## Installation Steps

1

Water supply outlet G 1/2"

350~550 mm

Find a proper position and drill one 6 mm hole for mounting nut

2

Should wrap enough teflon tape ⑩ over the water supply outlet.

Screw the connector ② to water supply outlet and tighten firmly by spanner.

Put plastic anchor ⑩ into drilled hole and fix the mounting nut ① by long screw ⑩ firmly.

3

Upper Pipe

Inlet Body

Nether Pipe

X 2

Put the sliding bracket from top of nether pipe. Unscrew 2 grab screws located at the rear of the nether pipe, then plug the upper pipe and nether pipe together and tighten firmly by 2 grab screws.

4

### Install The Rail

#### Very Important:

(1) Smear the grease oil ⑩ on the connector O-rings. Don't wrap teflon tape over the O-rings.

(2) To avoid connector O-rings scratched by screw tip and causing water leakage, the screws must be loosened enough before plug the main body onto the connector.

(3) Unscrew the nether pipe holder by big allen key, adjust holder to proper position and fix it firmly by big allen key. Gently plug the holder onto the mounting nut and tighten it by 2 bottom grab screws.

5

Rubber Washer

Make sure washers and flow restrictor as shown inside shower rose. Screw shower rose to arm.

6

Rubber Washer

Make sure washer as shown inside shower hose. Please note that the conical nut should be connected to handheld shower, the hex nut should be connected to shower rail.