


PLEASE READ BEFORE USE

Scan the QR Code to find How to Install video.



PEEL OFF the acrylic protection film.

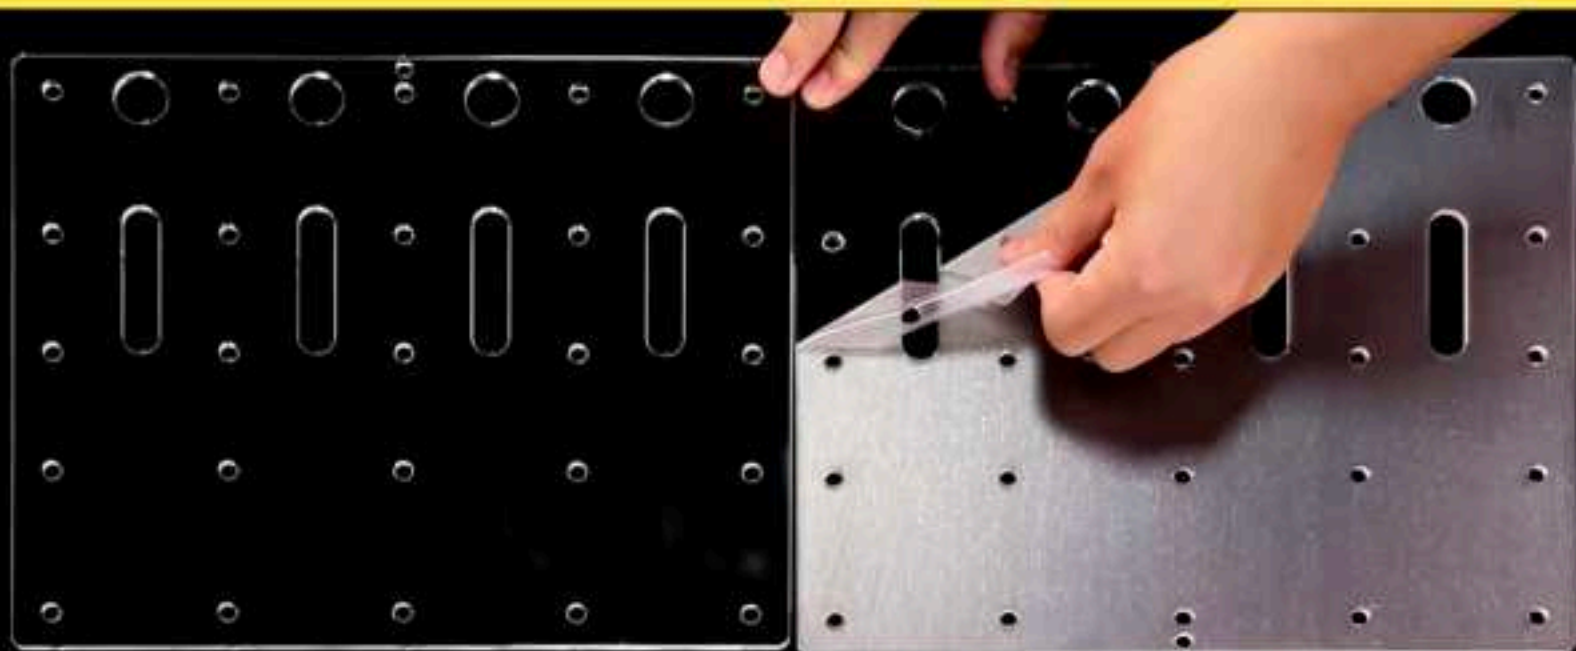

Keep brackets inside the panels, screw from OUTSIDE.

L3 Brackets



F2 Brackets



F4 Brackets




L2 Brackets




L4 Brackets



H2 Brackets

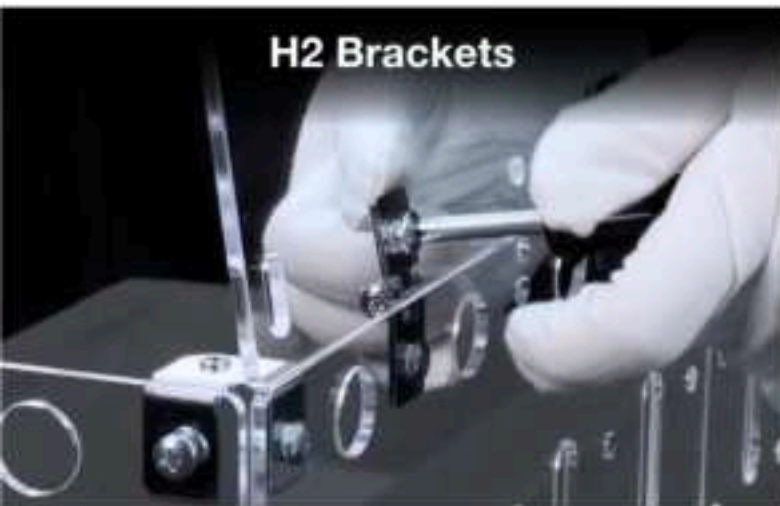

H4 Brackets

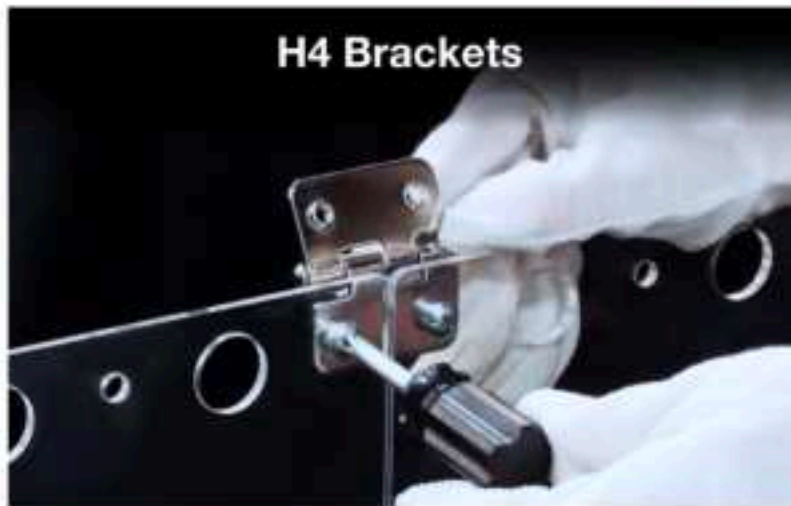

A2 Brackets



A4 Brackets



O2 Brackets



O4 Brackets

