

Model No: T3073BU-BK-C


Installation without Junction Box-Plug In

ASSEMBLY INSTRUCTIONS

1. Mark the mounting holes on the wall according to the hole spacing of a mounting plate and drill holes on the wall (A).
2. Gently tap the plastic drywall anchors (B) into the hole with a hammer.
3. Install the mounting plate (C) on the wall with the screws (D).
4. Wrap a few loops of the ground wire (E) around the green screw on the mounting plate (C) and then tighten the green screw.
5. Fix the canopy (F) to the mounting plate (C) with the ball nuts (G).
6. Put the lamp shade (H) around the lamp holder and secure the shade with the socket ring (J).
7. Screw the bulb (K) into the lamp holder.

Please consult a qualified Electrician if you are not familiar with electrical wiring.

Used without junction box

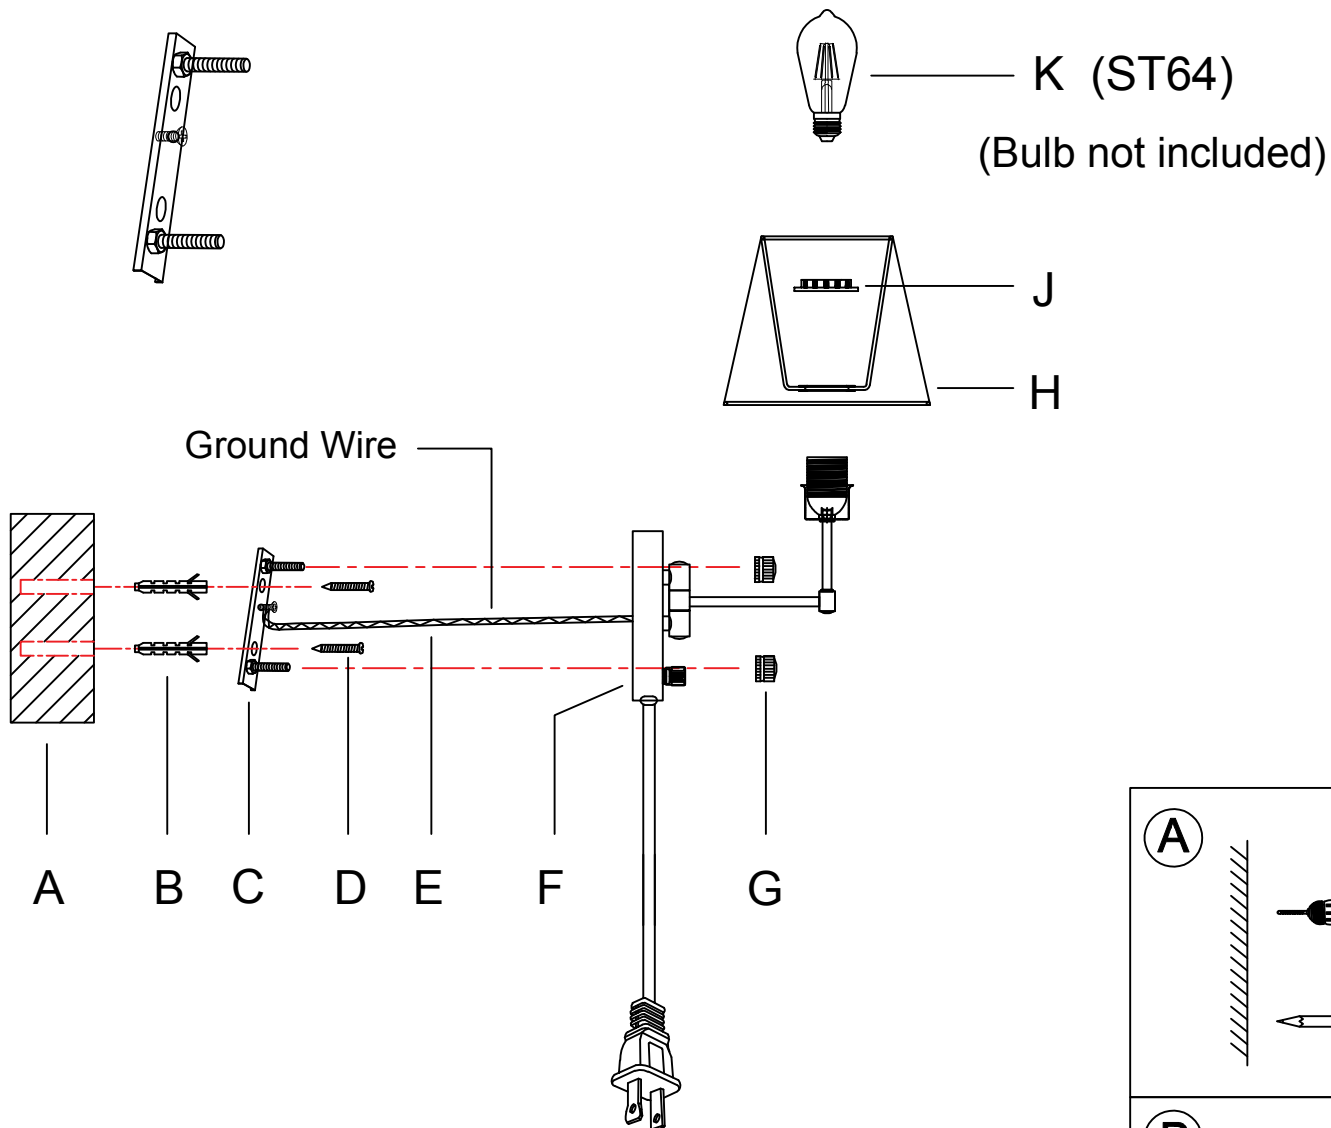

How to differ negative wire from live wire of plug-in cord:
Live Wire: (L) Parameters Printed on Wire Cover
Neutral Wire: (N) Nothing Printed on Wire Cover