Model No: T3073BU-BK-C


Installation without Junction Box-Plug In

ASSEMBLY INSTRUCTIONS

- 1. Mark the mounting holes on the wall according to the hole spacing of a mounting plate and drill holes on the wall (A).
- 2. Gently tap the plastic drywall anchors (B) into the hole with a hammer.
- 3.Install the mounting plate (C) on the wall with the screws (D).
- 4. Wrap a few loops of the ground wire (E) around the green screw on the mounting plate (C) and then tighten the green screw.
- 5. Fix the canopy (F) to the mounting plate (C) with the ball nuts (G).
- 6. Put the lamp shade (H) around the lamp holder and secure the shade with the socket ring (J).
- 7. Screw the bulb (K) into the lamp holder.

Please consult a qualified Electrician if you are not familiar with electrical wiring.

Used without junction box

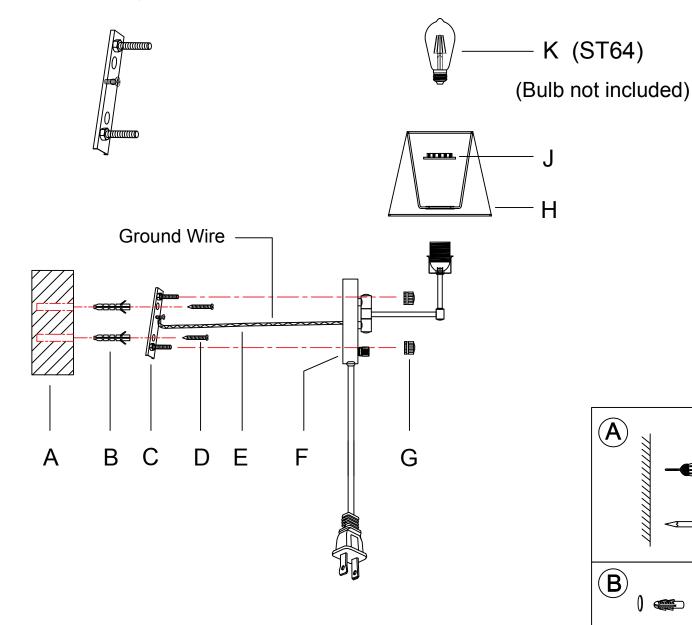

How to differ negative wire from live wire of plug-in cord: Live Wire: (L) Parameters Printed on Wire Cover

Neutral Wire: (N) Nothing Printed on Wire Cover

