
## **DGHN**

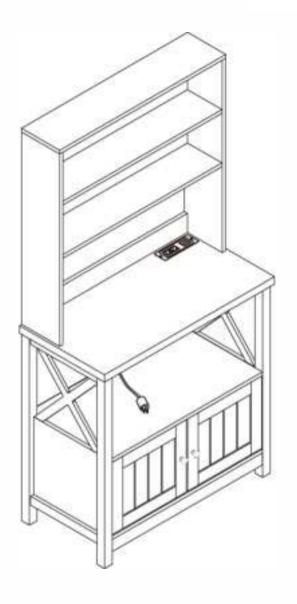




## "IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY"


## Notice:


- 1.Follow the installation instructions. Please confirm all accessories are preset before installation.
- 2.Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
A		x46	K	<b>1</b>	x2
B		x46	L	M4x18	x2
©	Ø8x30	x12	M	0	x2
D		x2	N	0	x4
E	<b>இ∑∭</b> Ø4x16	x2	0	<b>©</b> Ø4x16	x10
F		x2 SETS	P	ورسال Ø7.8x38	x2
G	Ø3.5x14	x8	<u>-</u>		(2)
$\bigcirc$	<b>«пинини №</b> Ø4x40	x2			
	⊚M6x50	x4			
J		x2			

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
1		<b>x</b> 1	10		x1
2		x1	1		x2
0		<b>x</b> 1	12		x1
4		x2	13		<b>x</b> 1
5		<b>x</b> 3	14		x1
6		<b>x</b> 1			
7		<b>x</b> 1			
8		<b>x</b> 1			
9		<b>x</b> 1			

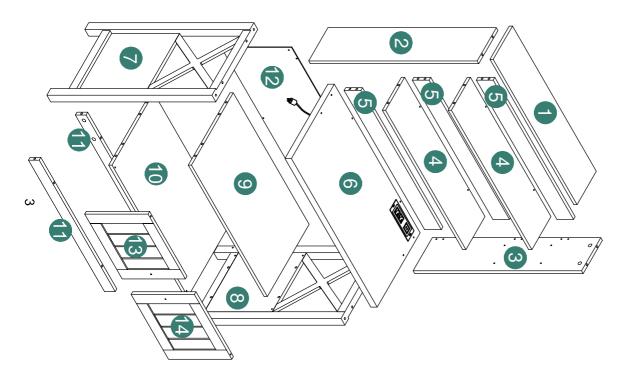

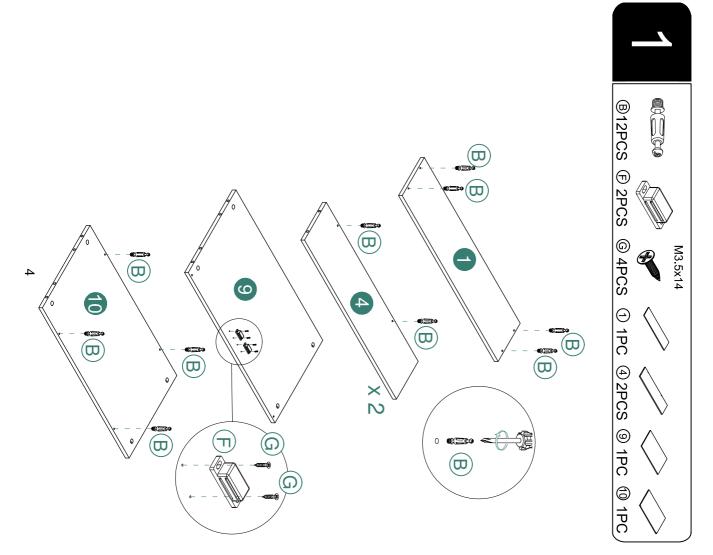





®22PCS ©2PCS © 2PCS © 2PCS ©1PC ©1PC

@ 1PC

0


Ø4x16

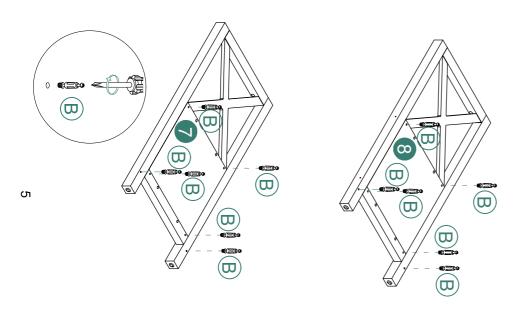


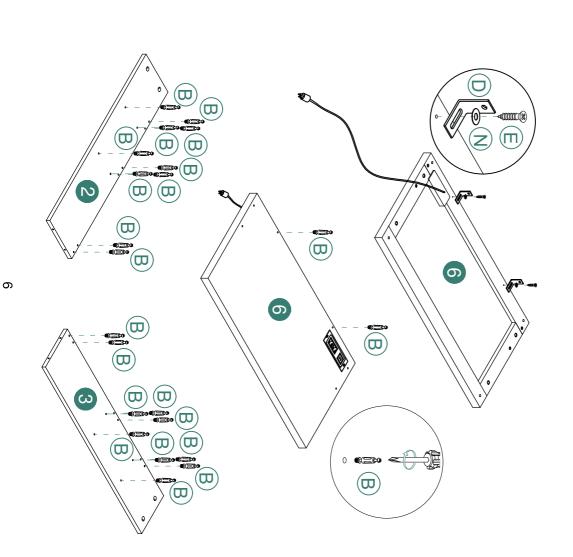






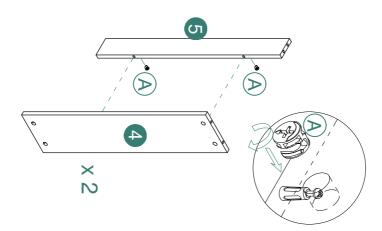

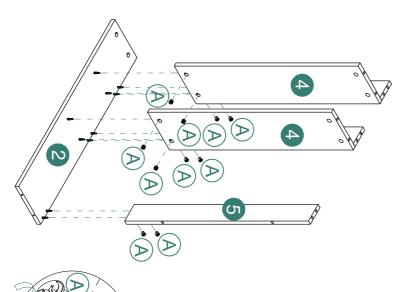




∞






⊕10PCS

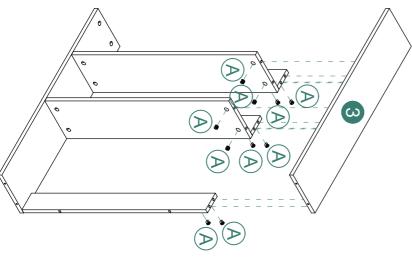




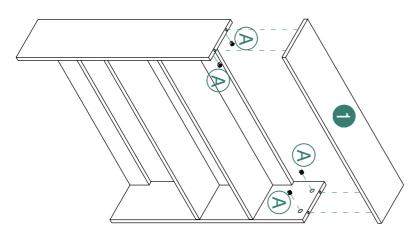









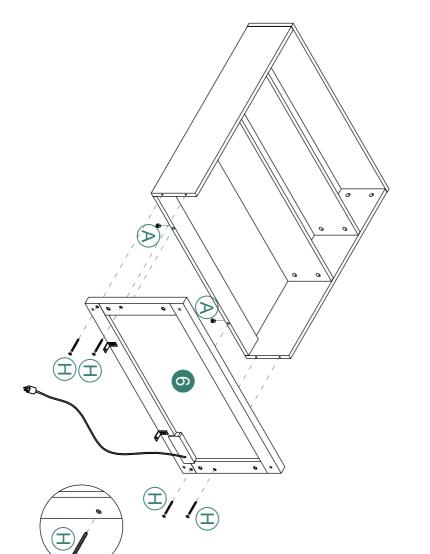



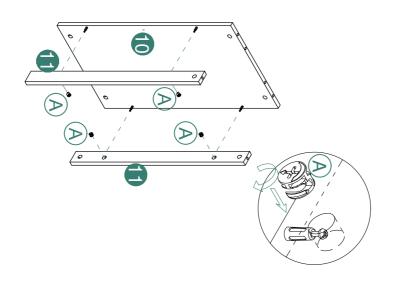










Ø8x30



-/ > Holes are on the side of the board **(2)** 


9

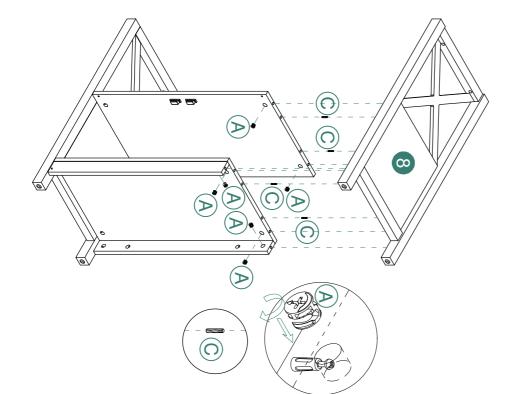








3

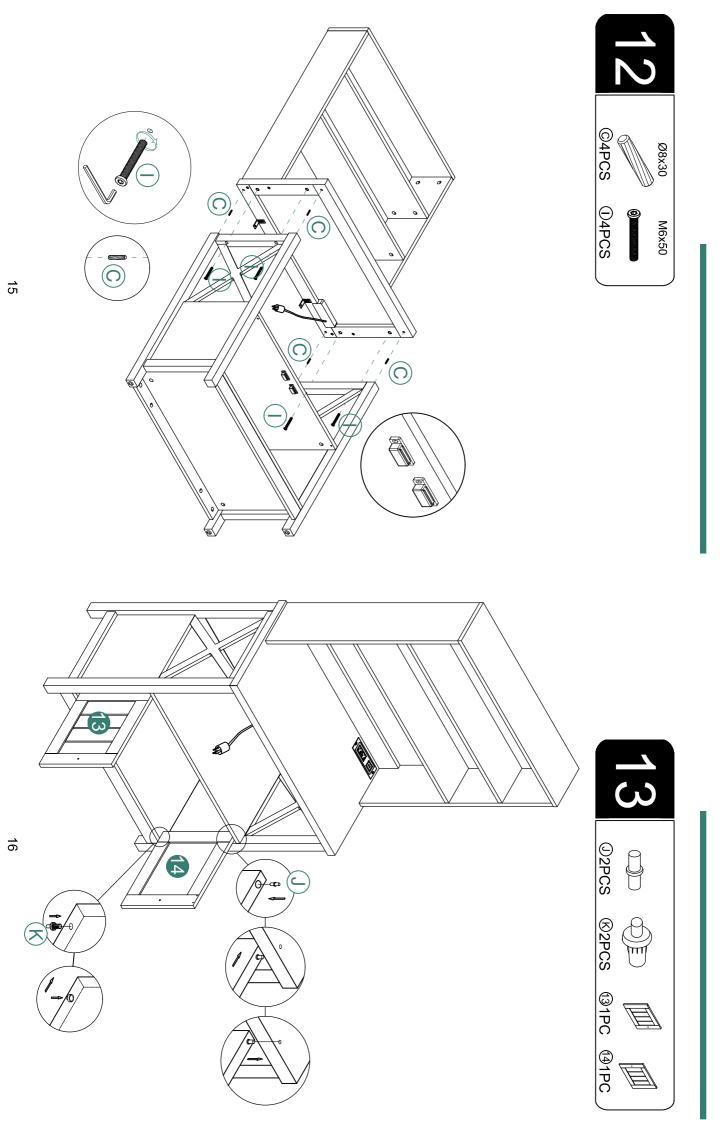

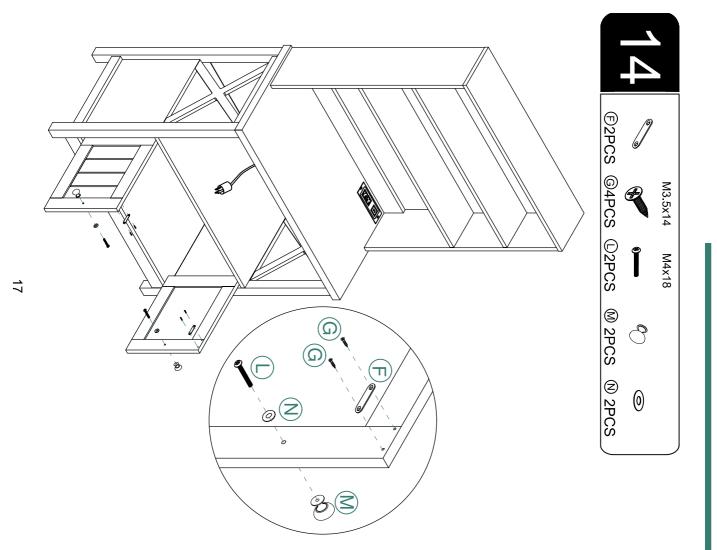


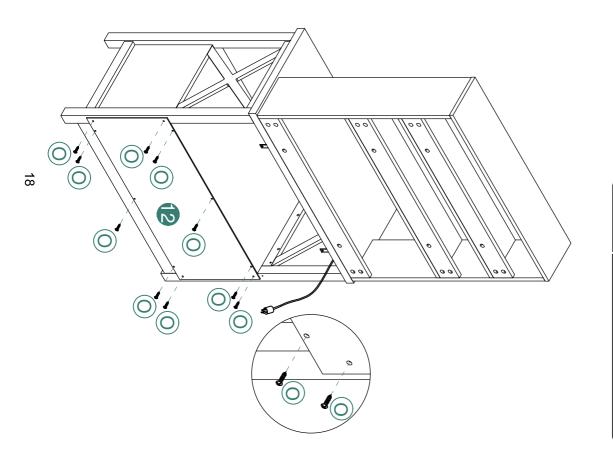






Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.

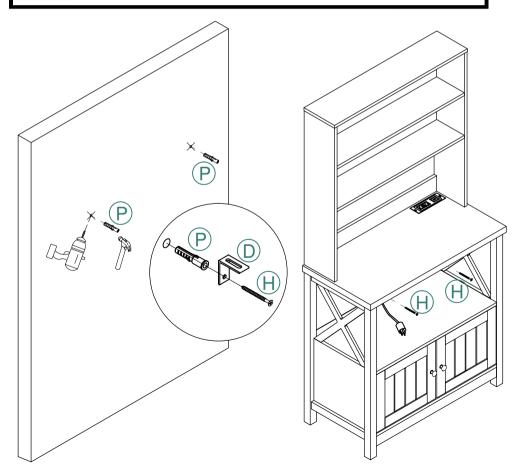

17

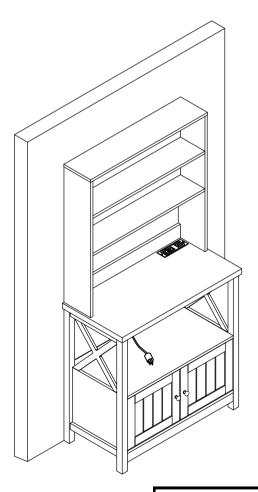

Installation Completed

19