


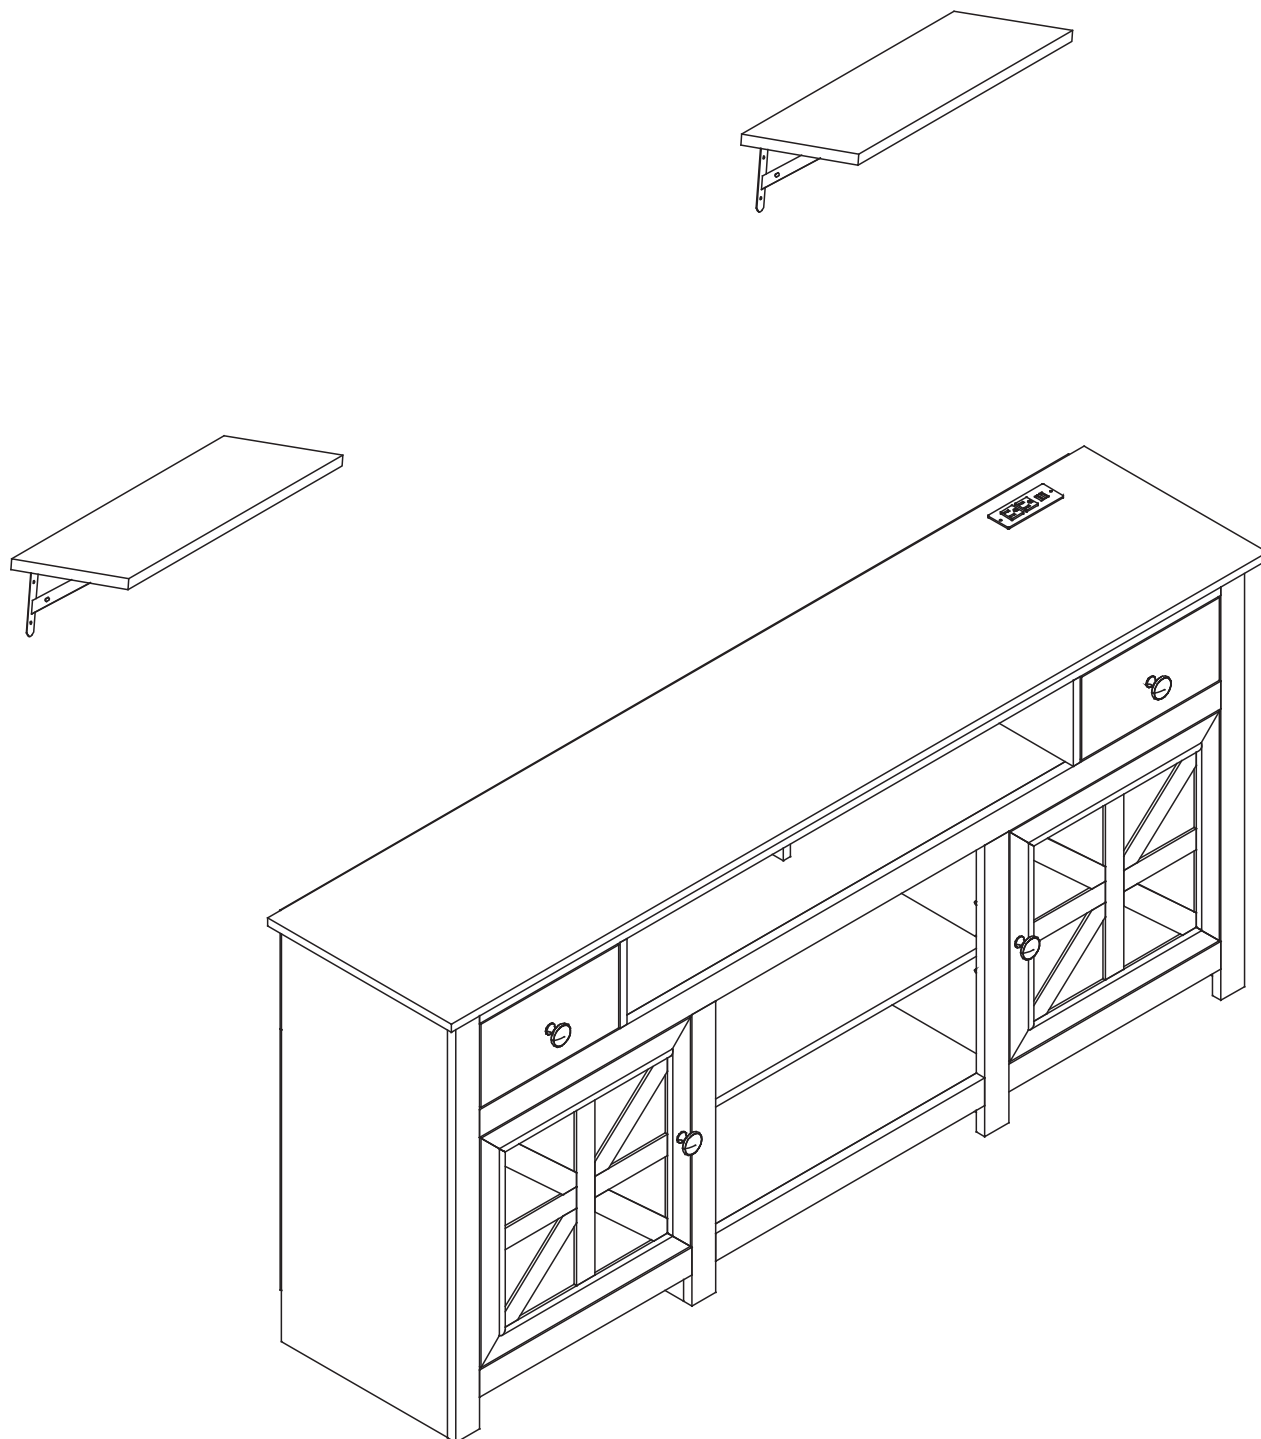








ZSJX-V2







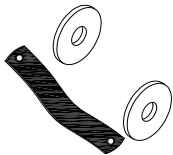


FTLFFT-0001
FTLFFT-0002





















FIREPLACE TV STAND







- !** 1. Two or more people are needed to complete the installation.
 2. Please protect the wires and remote control accessories from damage during installation.
 3. Professional installation is highly recommended.
 4. Assemble on a flat, clean and soft surface.







Item no.	Reference Image	Qty.
(A)		X62+4extra
(B)		X62+4extra
(C)		X62+4extra
(D)		X4
(E)		X4
(F)		X12
(G)		X4
(H)		X10
(I)		X2


Item no.	Reference Image	Qty.
(J)		X60+4extra
(K)		X8
(L)		X40+4extra
(M)		X2
(N)		X45
(O)		X1
(P)		X2
(Q)		X10
(R)		X4

Item no.	Reference Image	Qty.
①		X1
②		X1
③		X1
④		X2
⑤		X2
⑥		X2
⑦		X2
⑧		X2
⑨		X1


Item no.	Reference Image	Qty.
⑩		X1
⑪		X1
⑫		X1
⑬		X1
⑭		X1
⑮		X2
⑯		X1
⑰		X1
⑱		X1

Item no.	Reference Image	Qty.
19		X1
20		X1
21		X1
22		X1
23		X1
24		X1

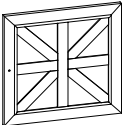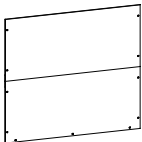
Item no.	Reference Image	Qty.
25		X1
26		X1
27		X2
28		X2
29		X2
30		X1

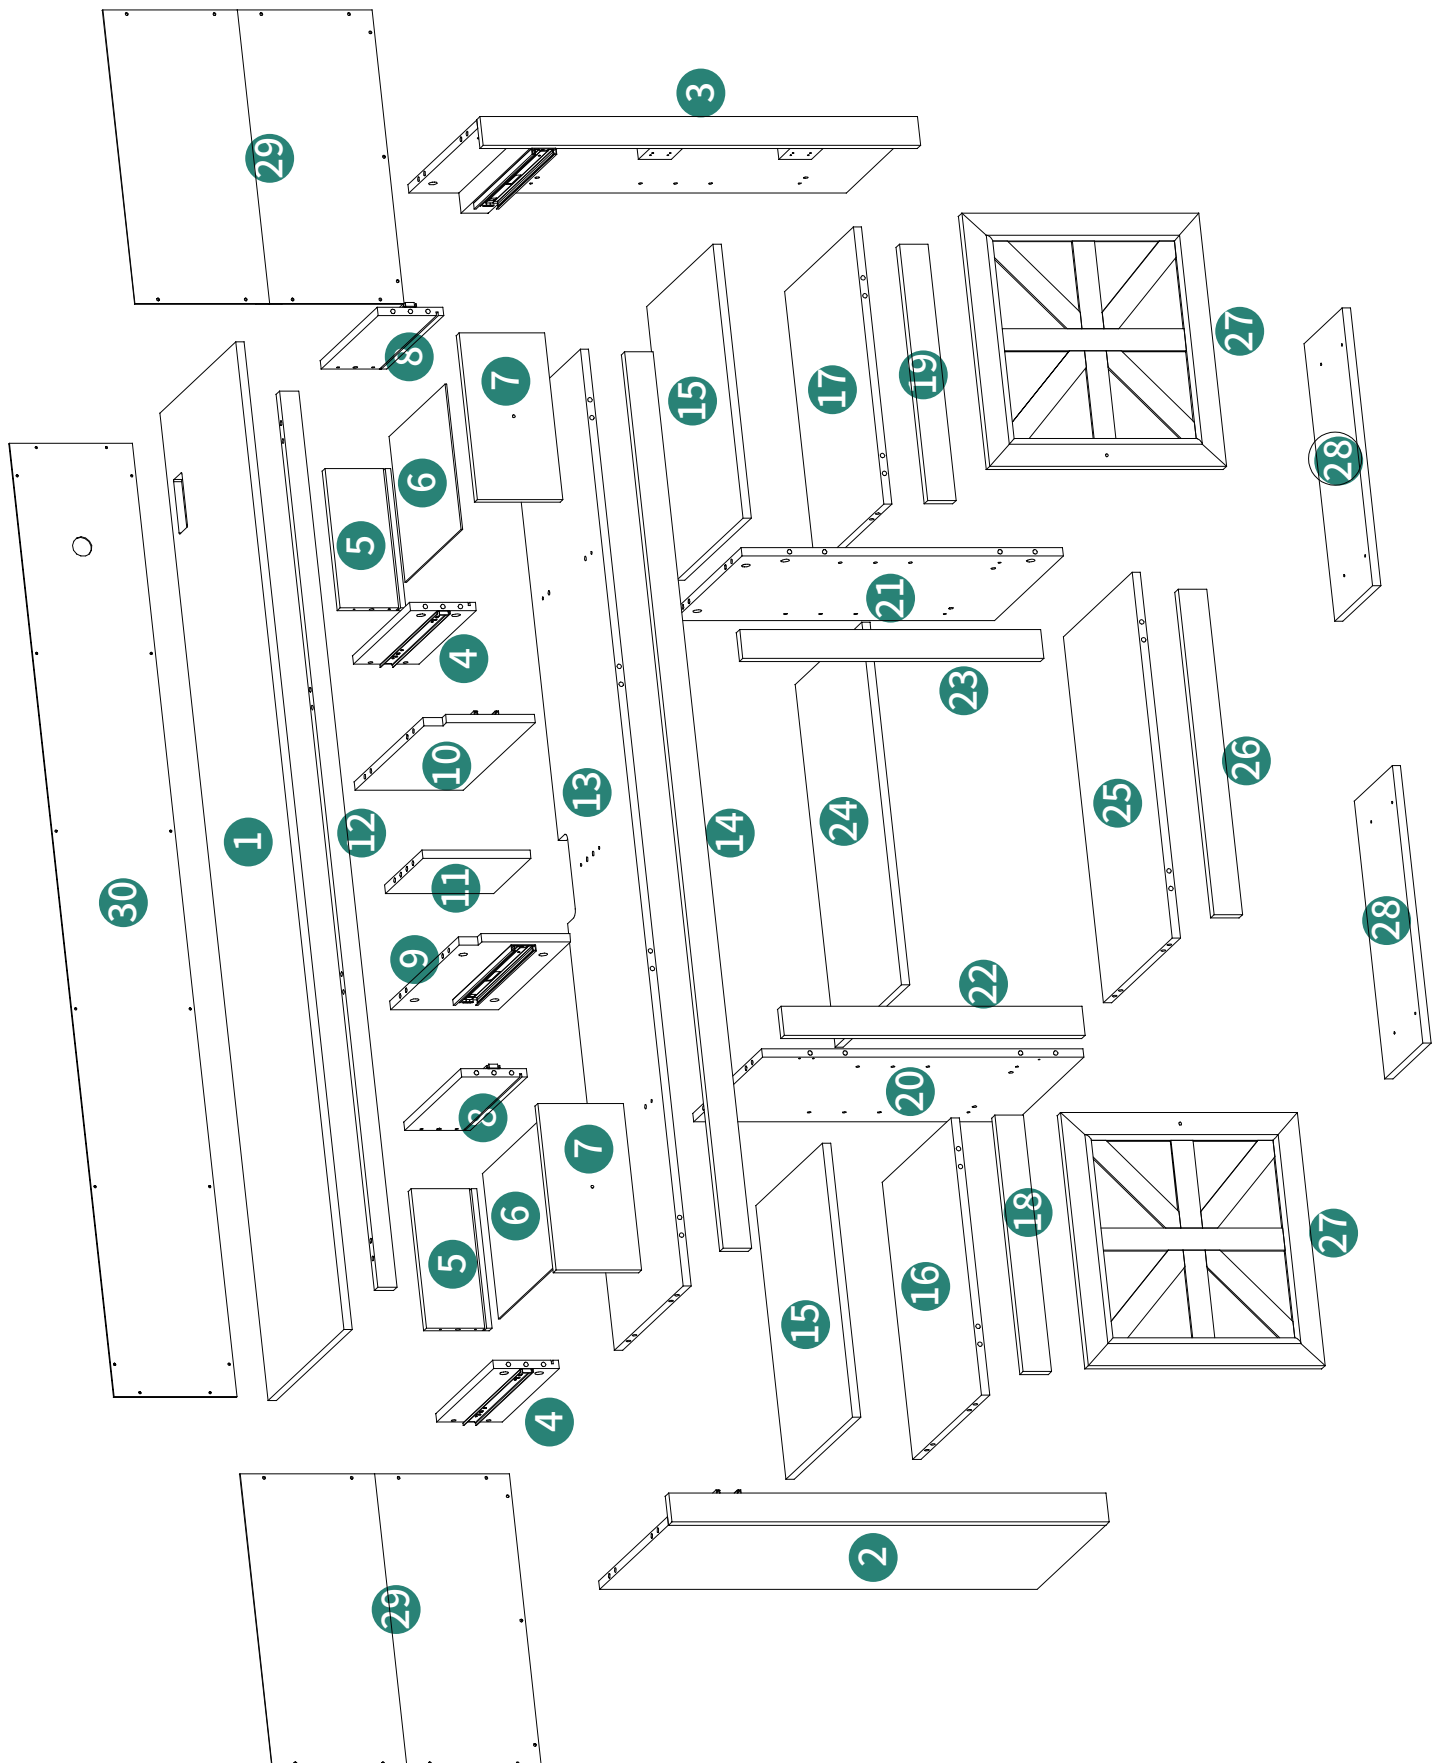

1




②0 1pc



②1 1pc




Ⓐ 8pcs




Ⓘ 2pcs




Ⓙ 4pcs

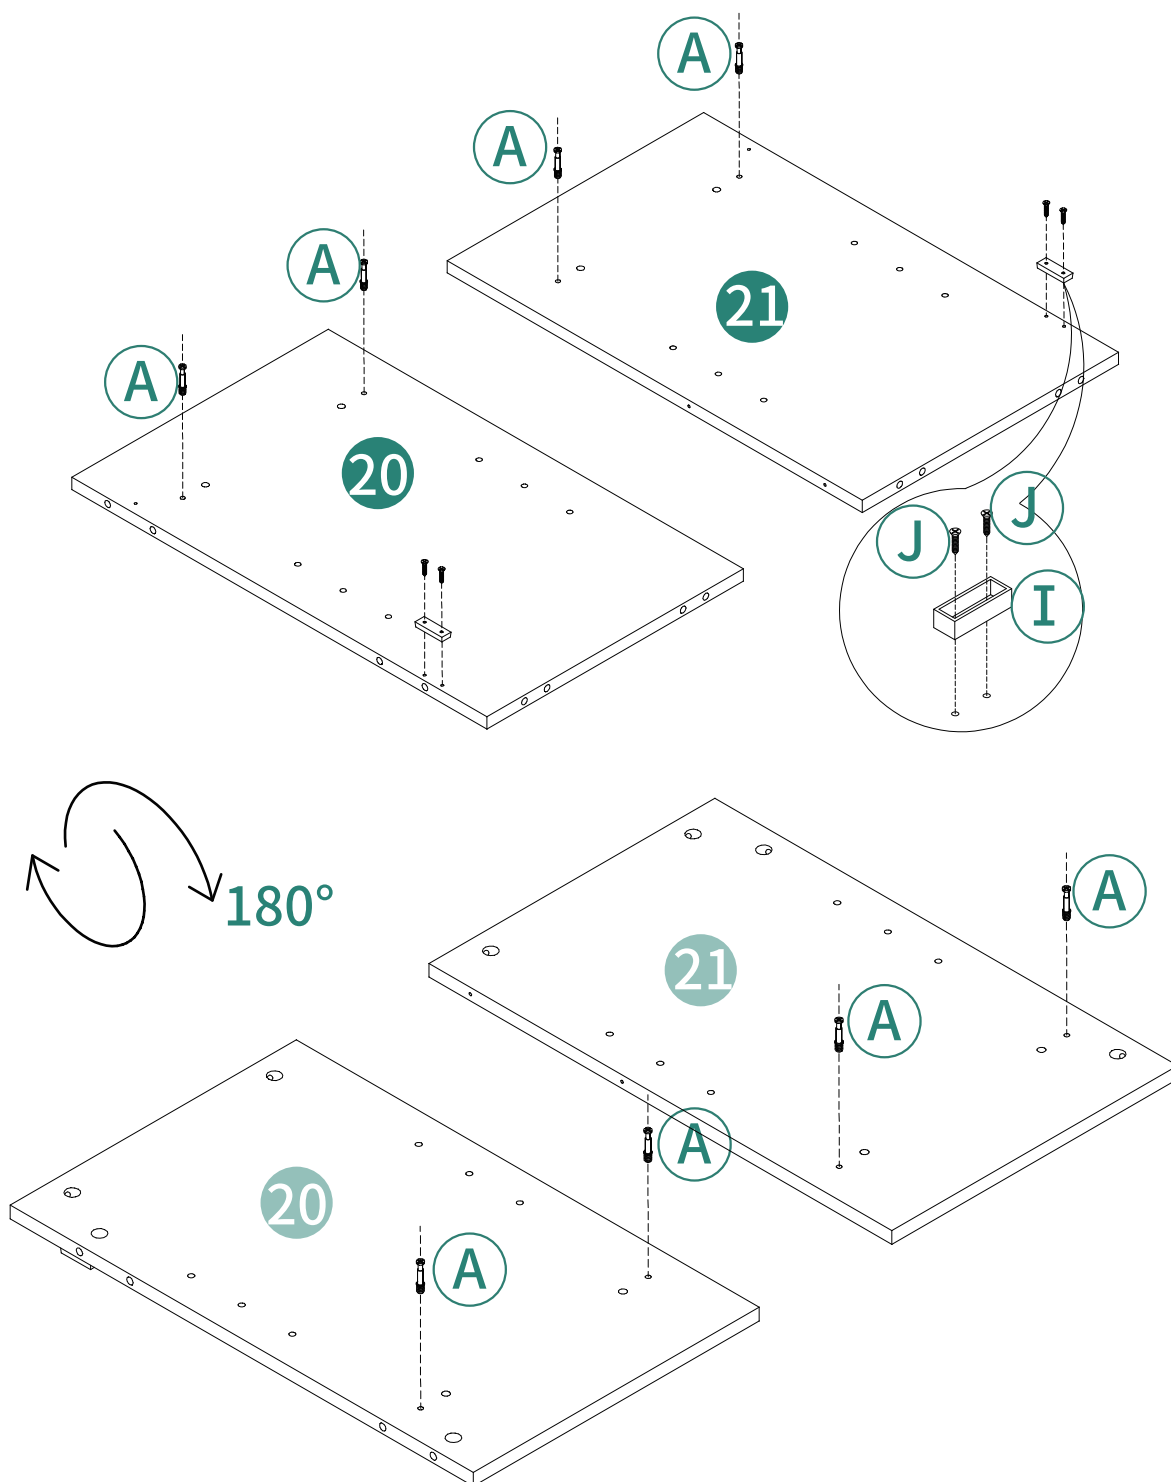


2



②2 1pc



②3 1pc




②6 1pc



Ⓐ 6pcs




Ⓒ 6pcs

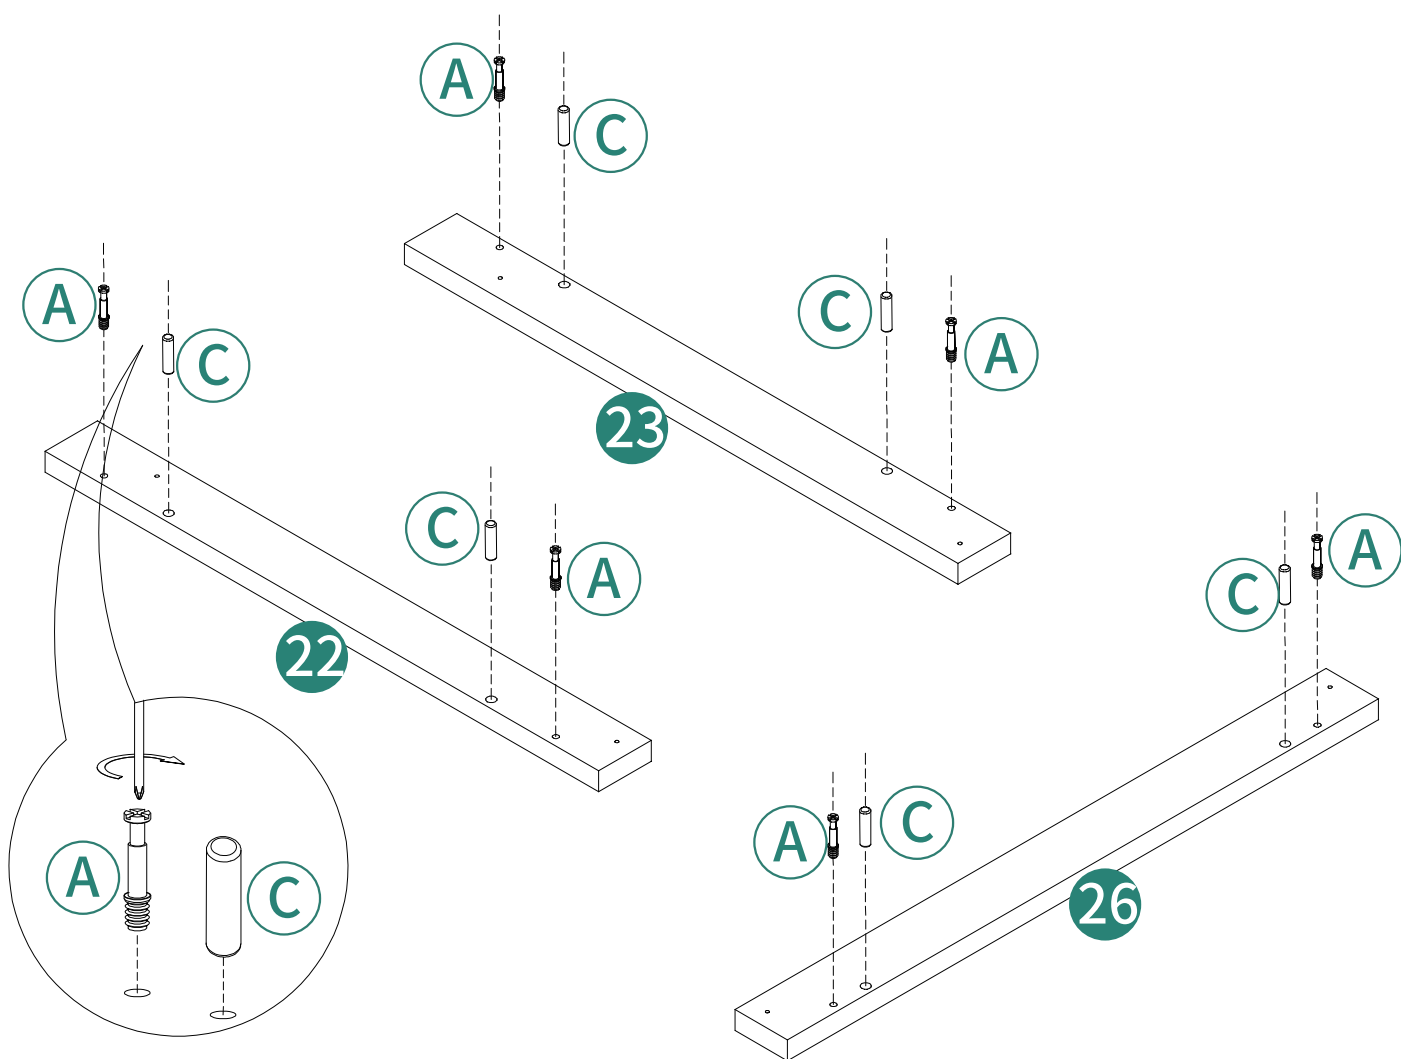


3



Ⓑ 4pcs

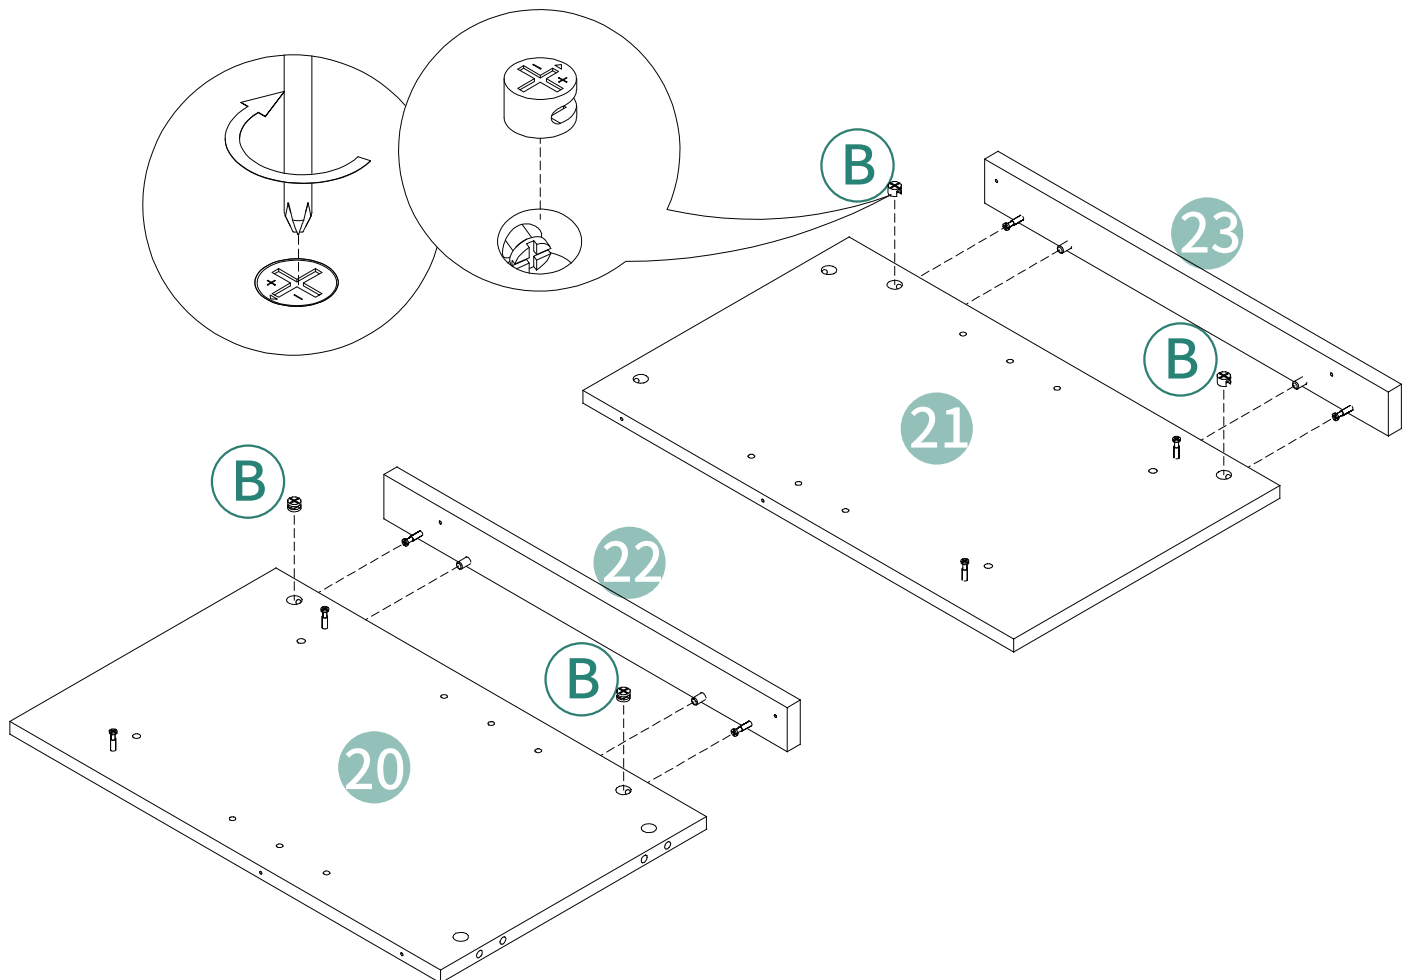

4




②⑤ 1pc




Ⓑ 6pcs




Ⓒ 4pcs

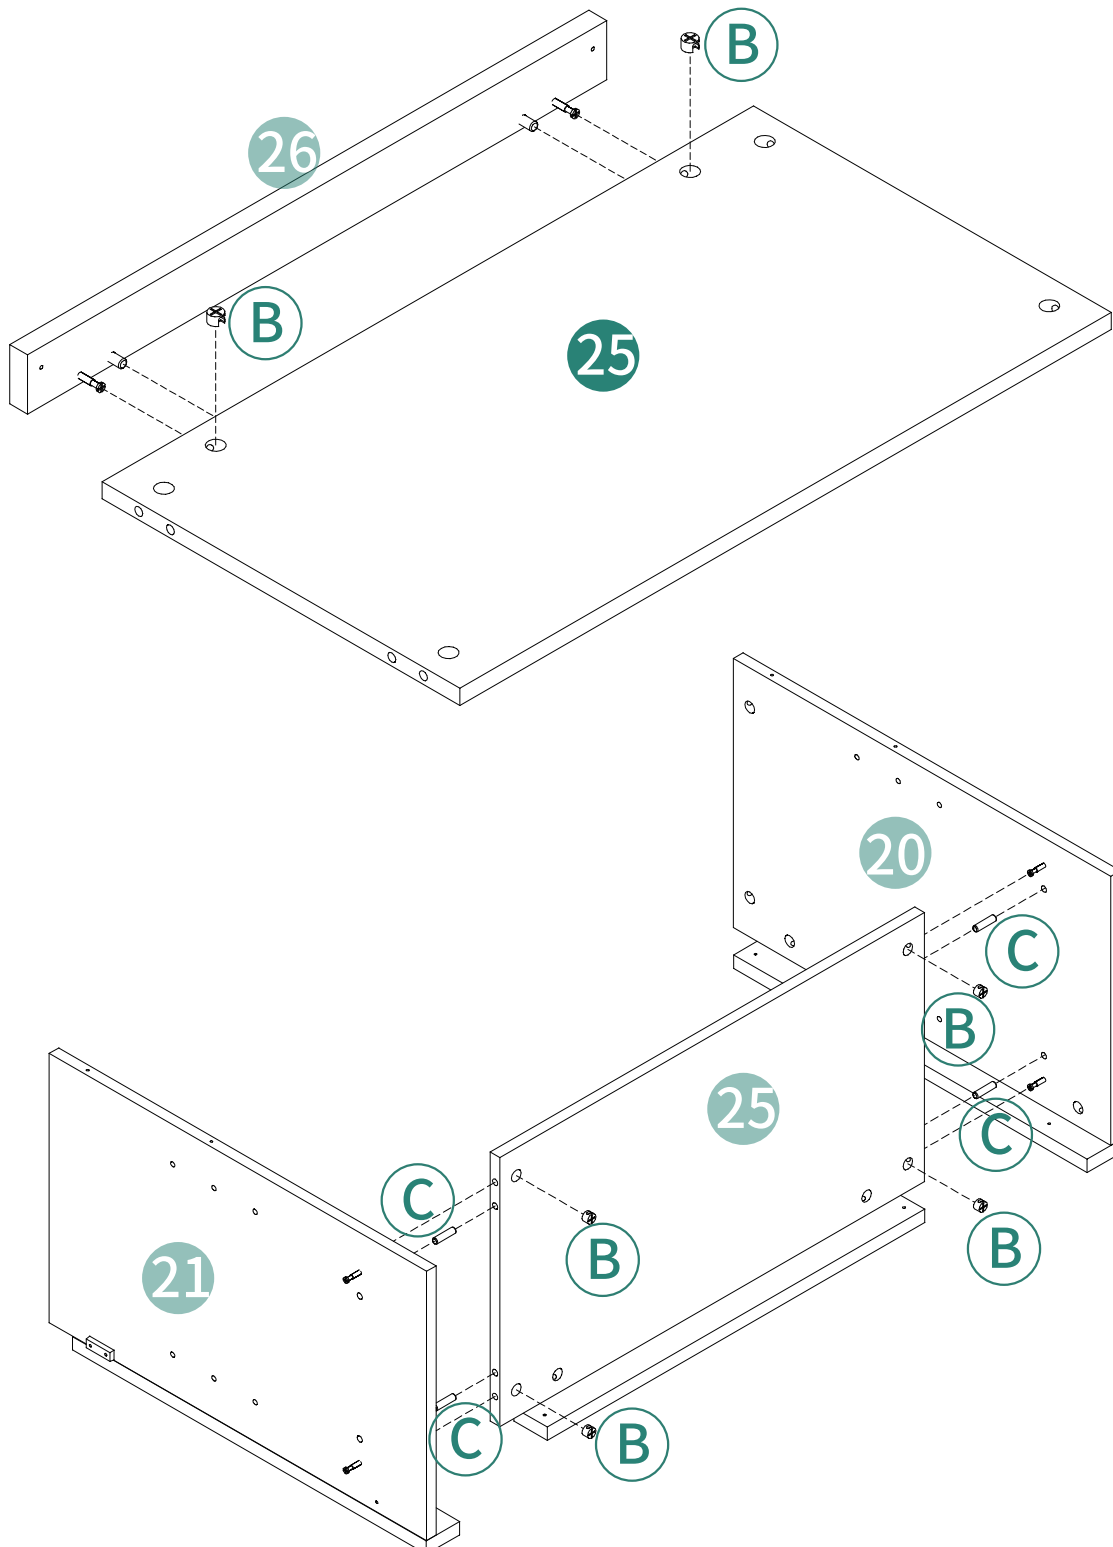

5



⑬1pc




⑭1pc




Ⓐ10pcs




Ⓒ4pcs

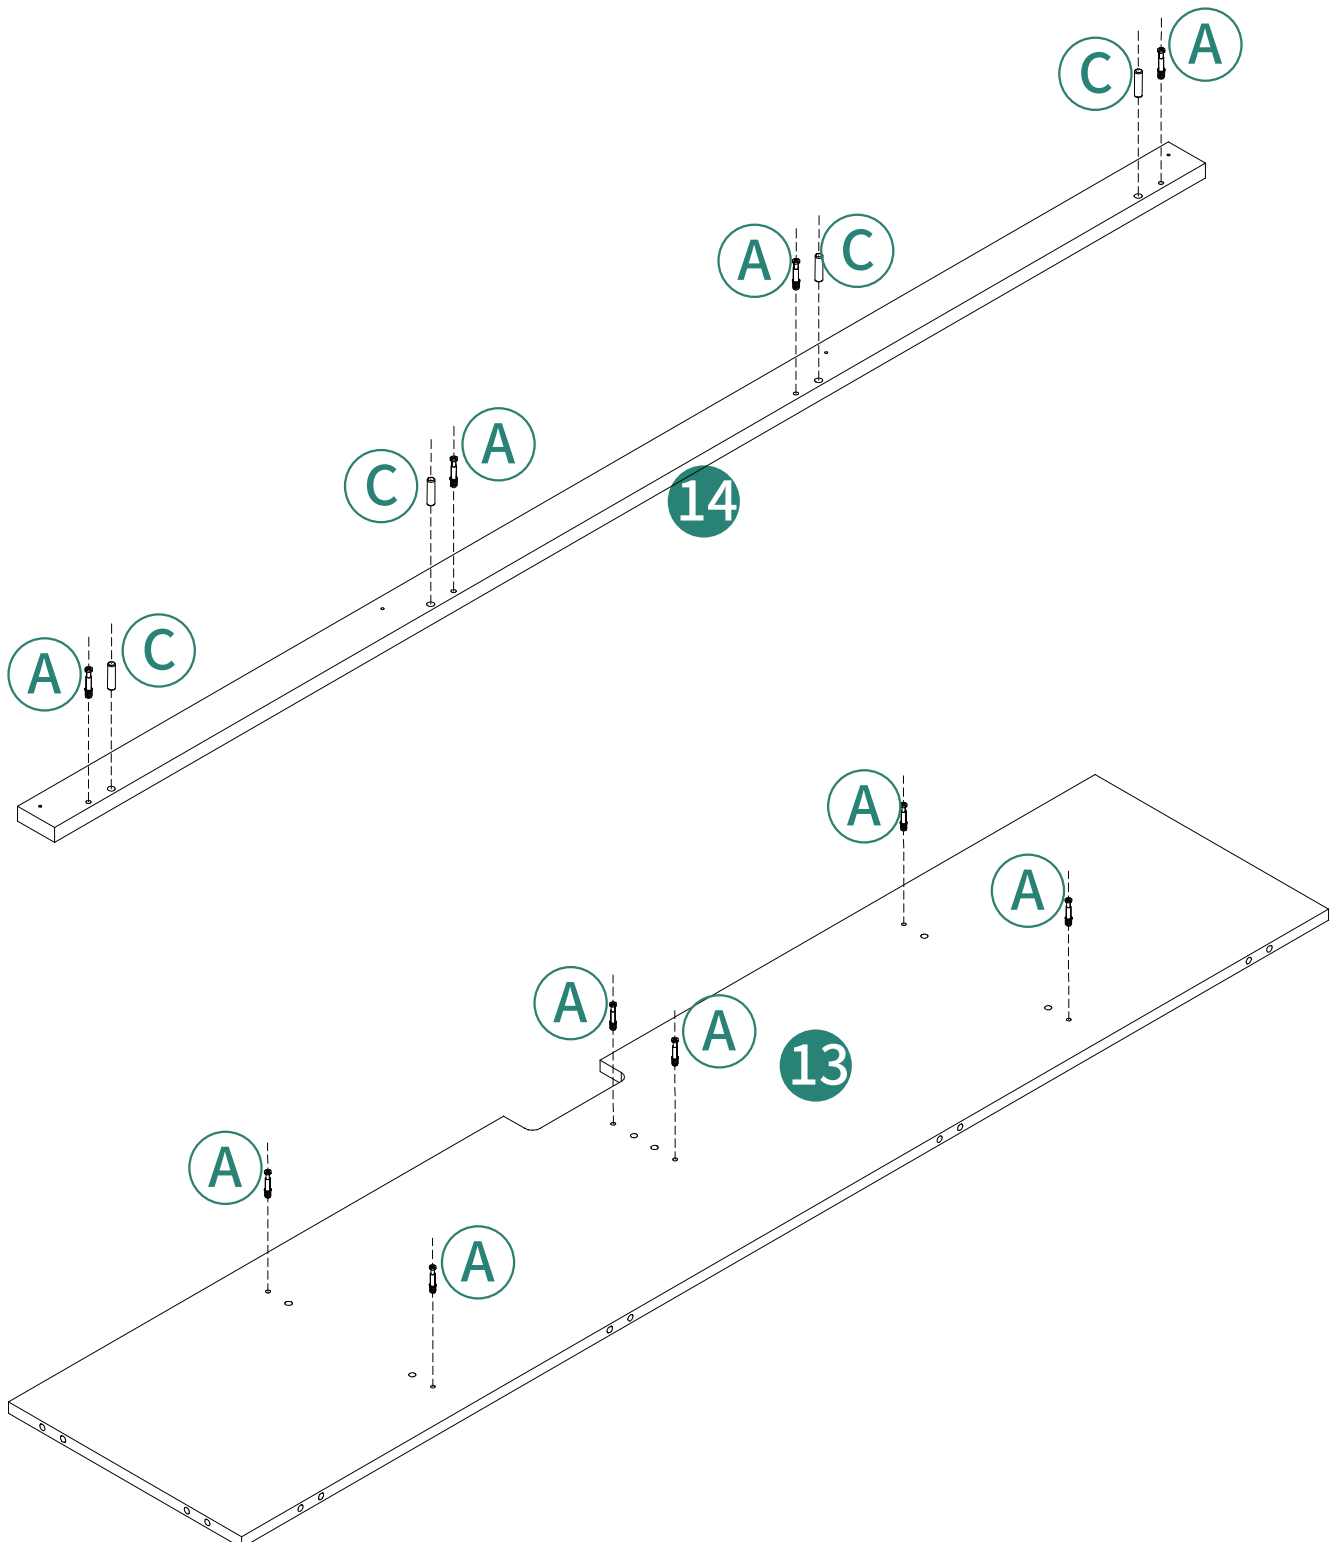


6

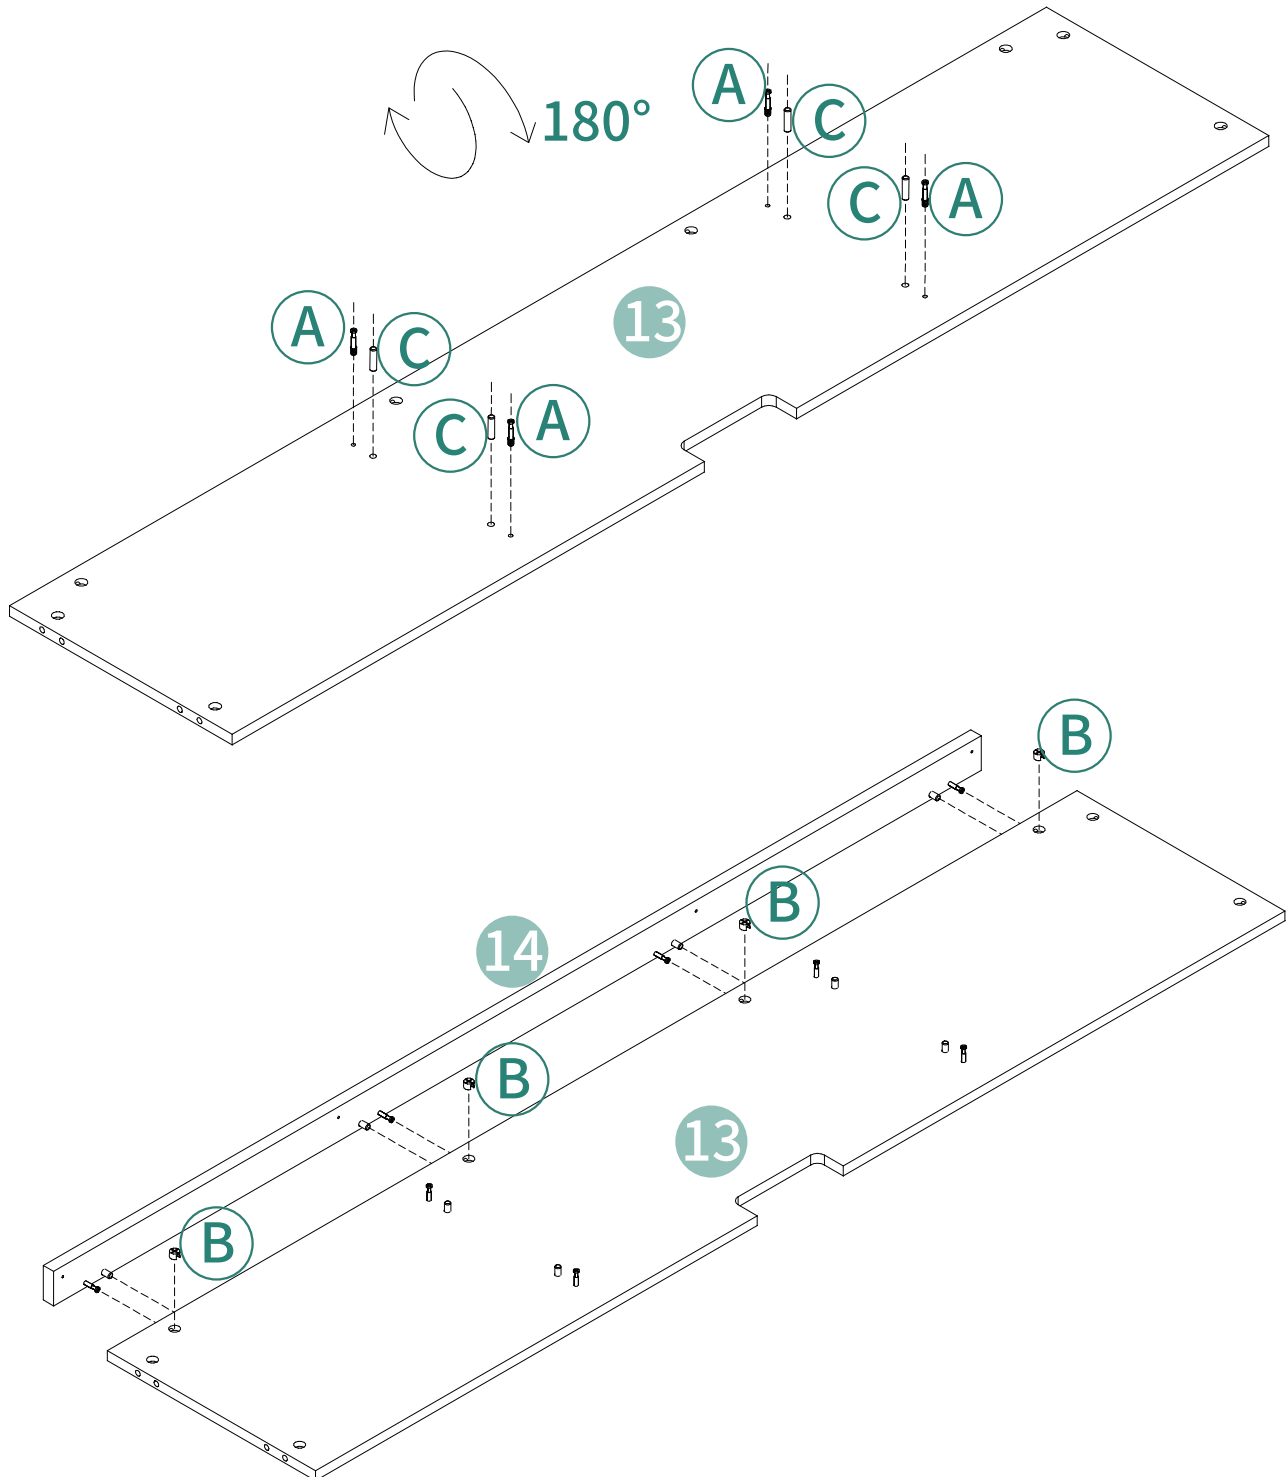


7




Ⓑ4pcs ⓓ4pcs ⓙ8pcs

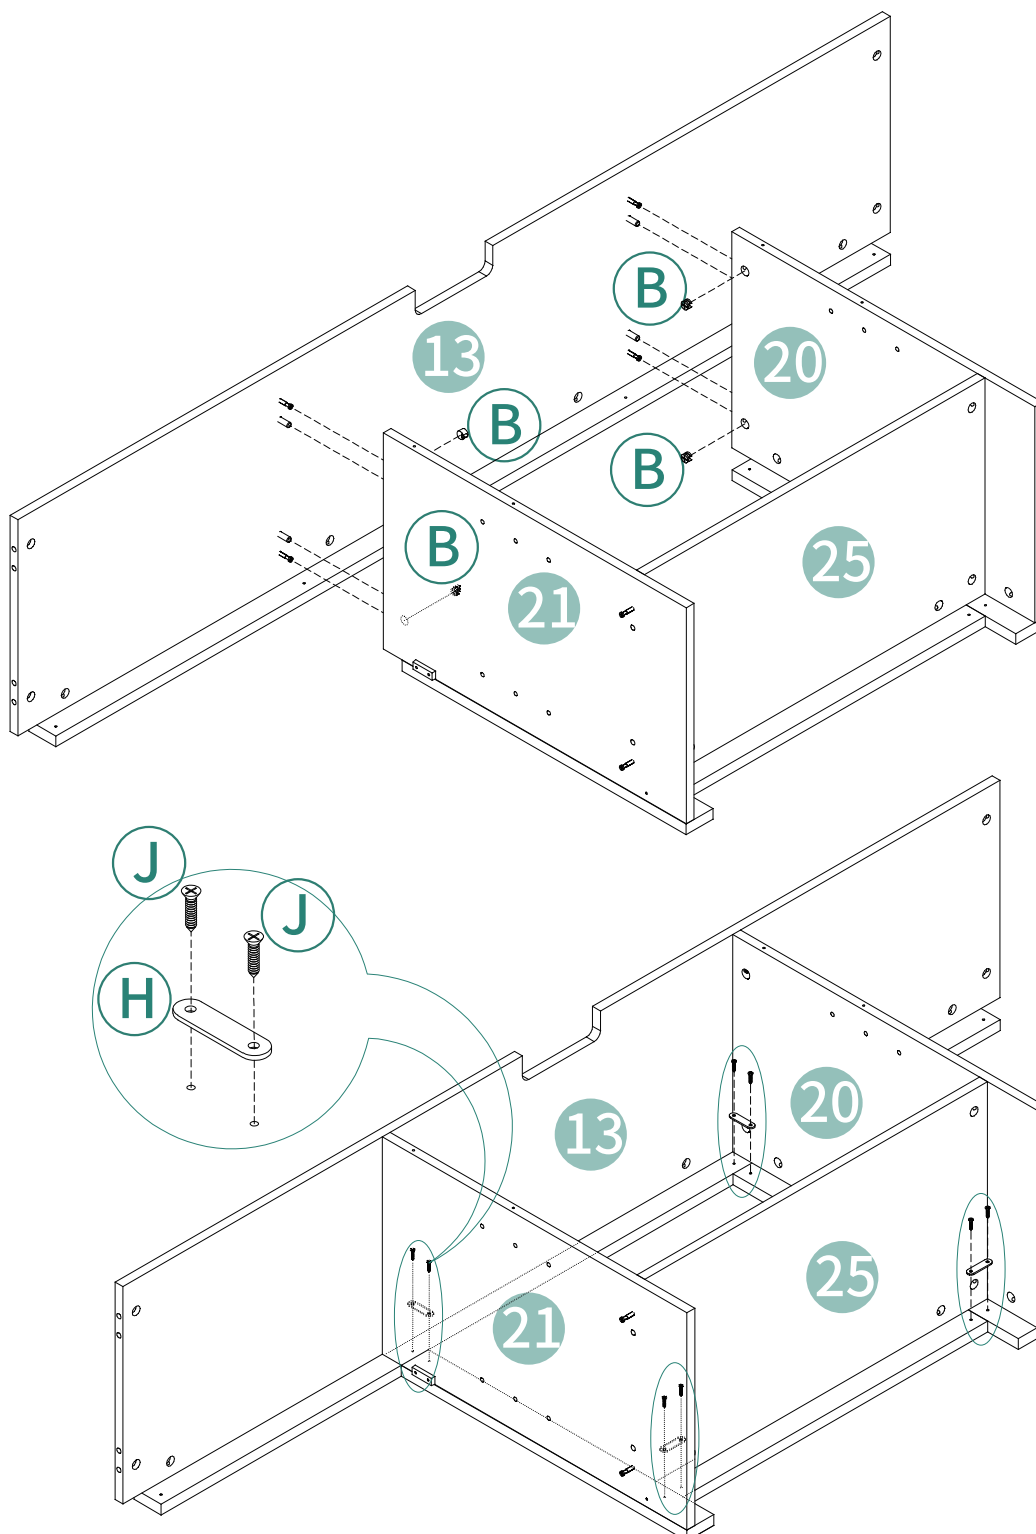


8




①6 1pc



①7 1pc



①8 1pc



①9 1pc




Ⓐ 4pcs



Ⓑ 4pcs



Ⓒ 4pcs

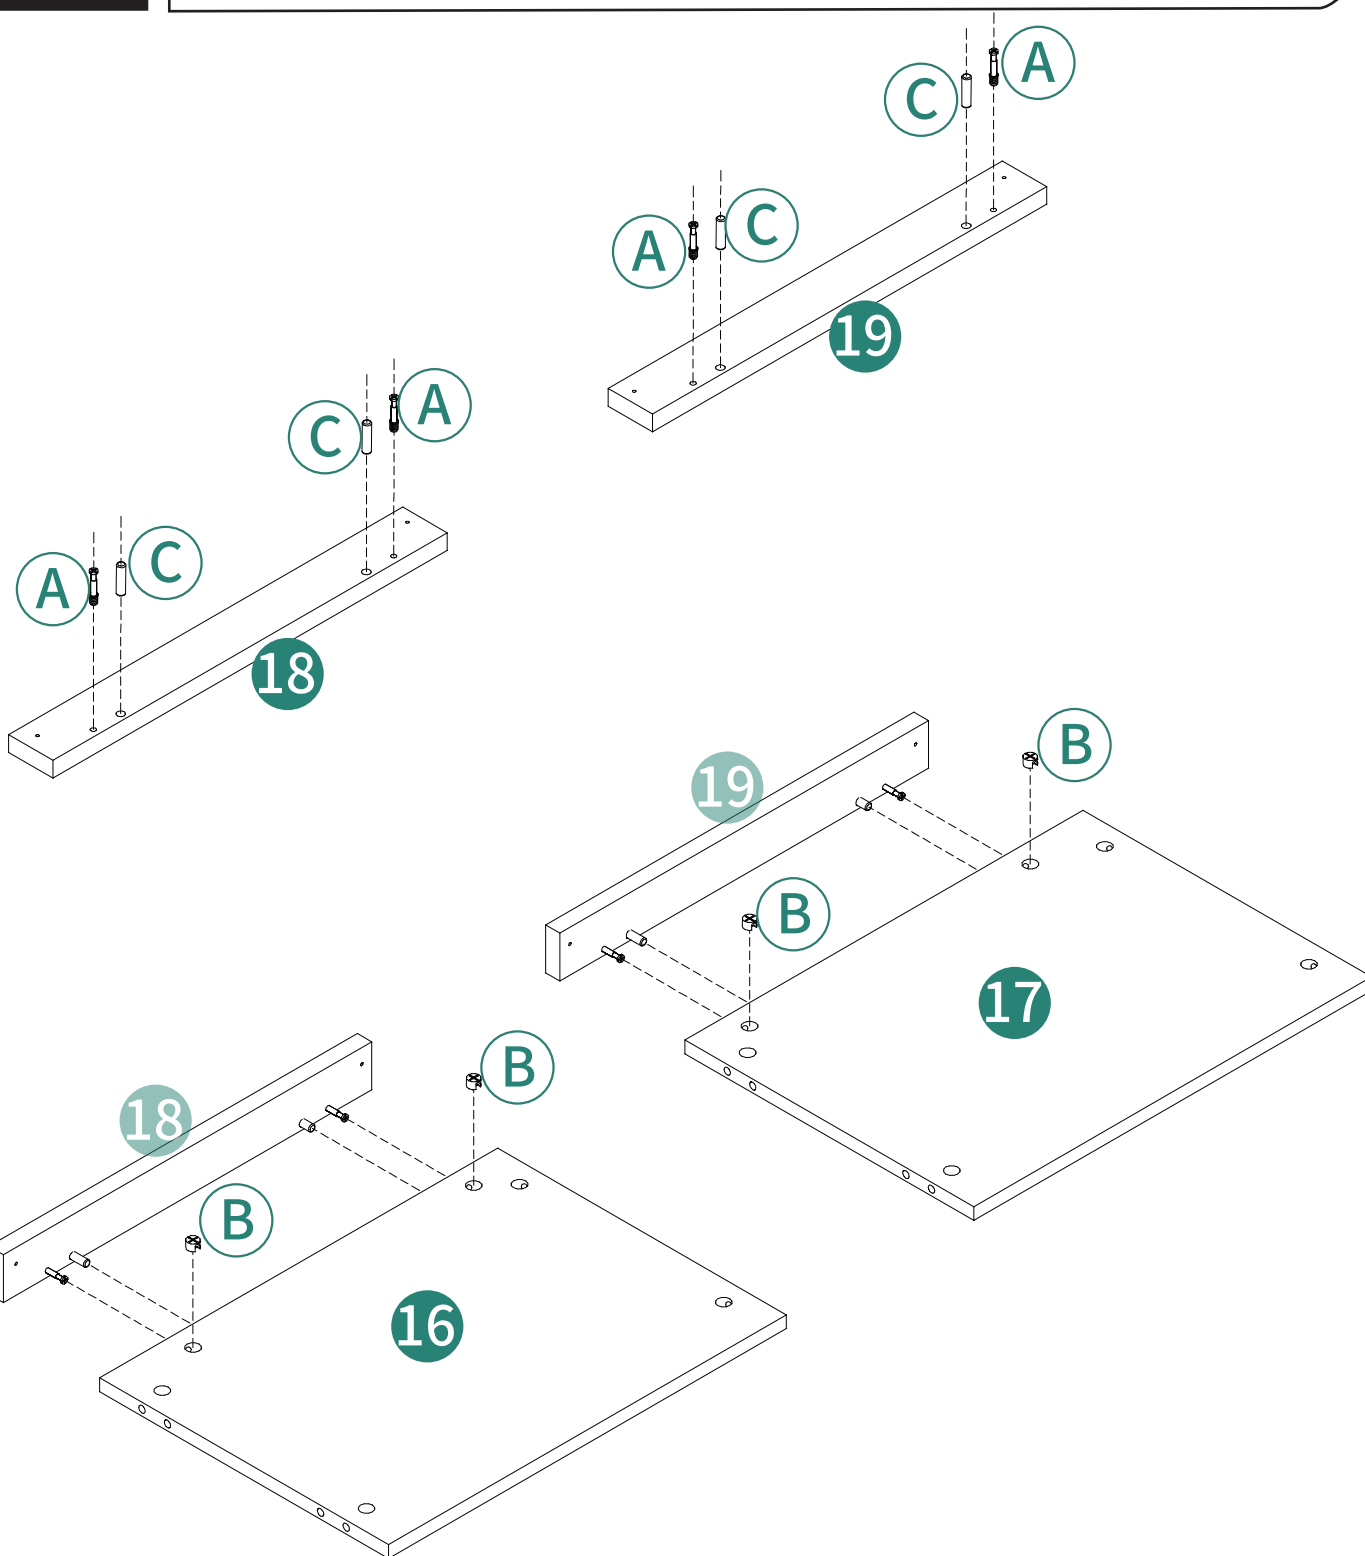

9



Ⓑ 4pcs




Ⓒ 4pcs




Ⓐ 4pcs




Ⓜ 2pcs

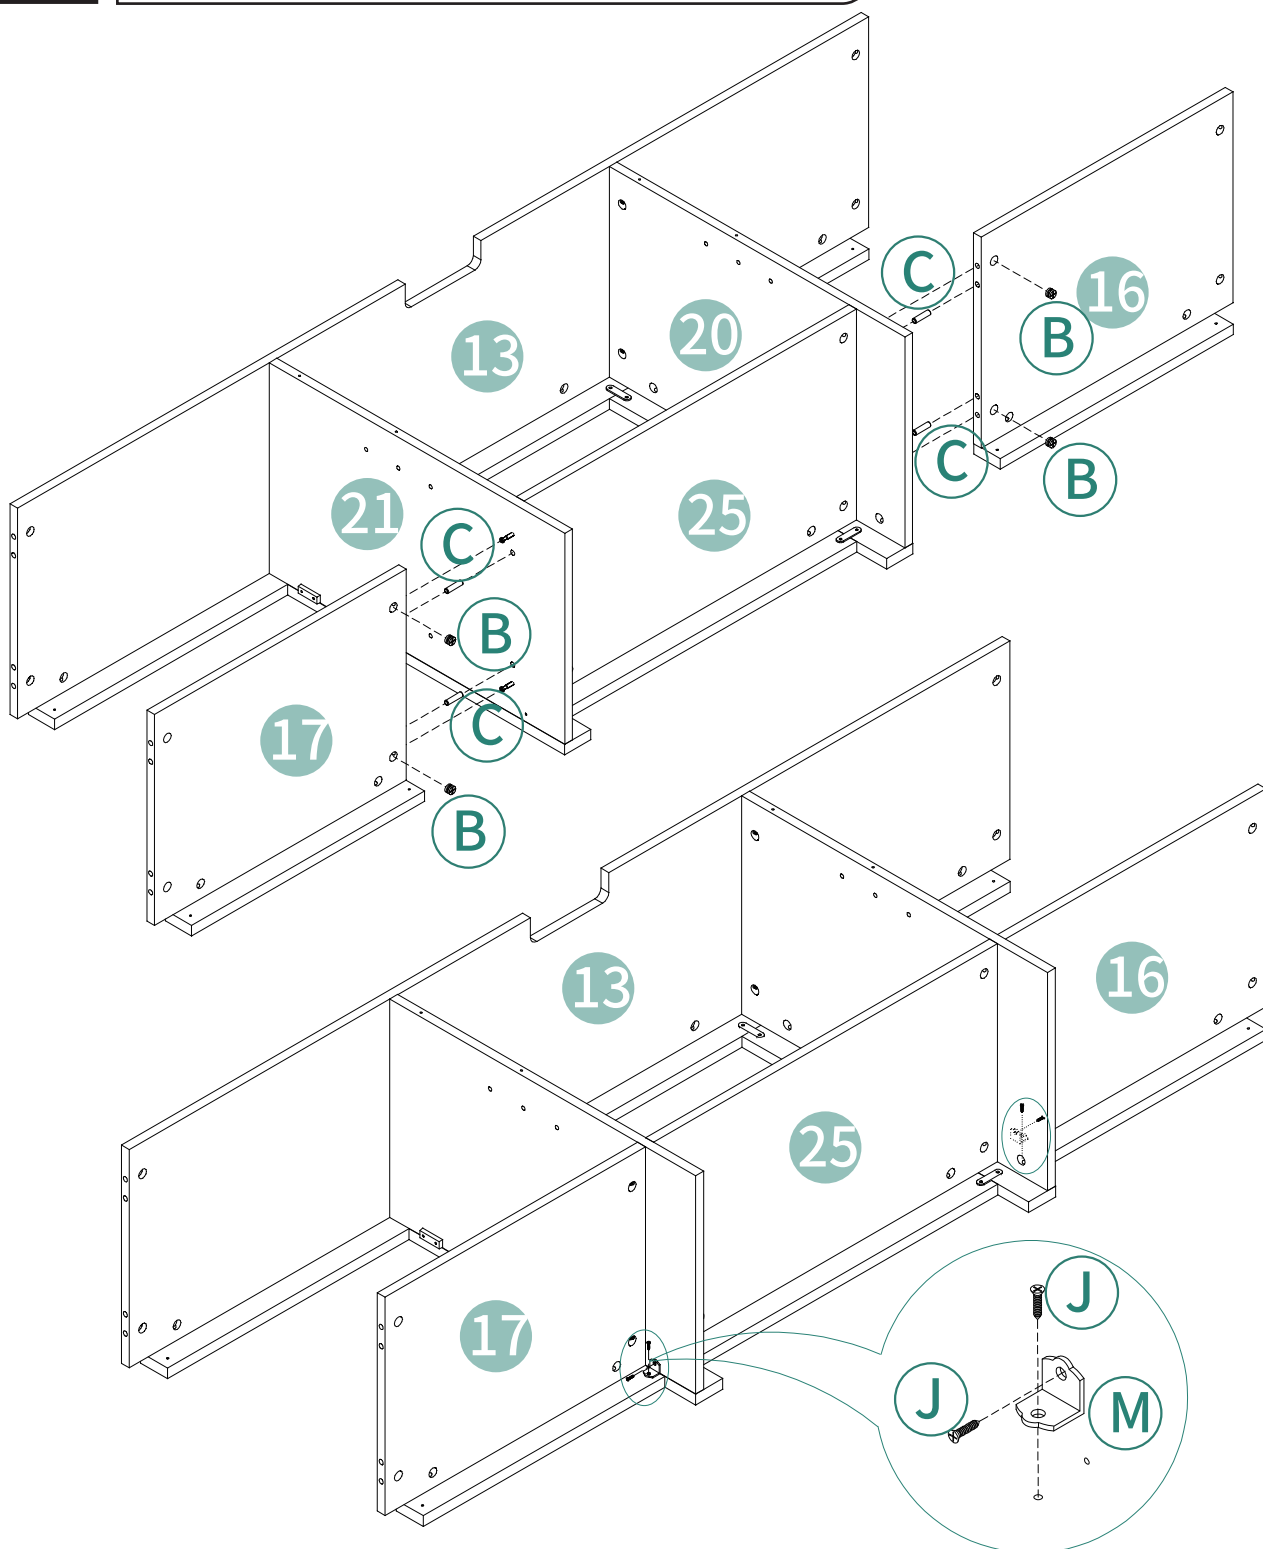

10



② 1pc



③ 1pc




Ⓐ 8pcs




Ⓑ 8pcs




Ⓒ 8pcs

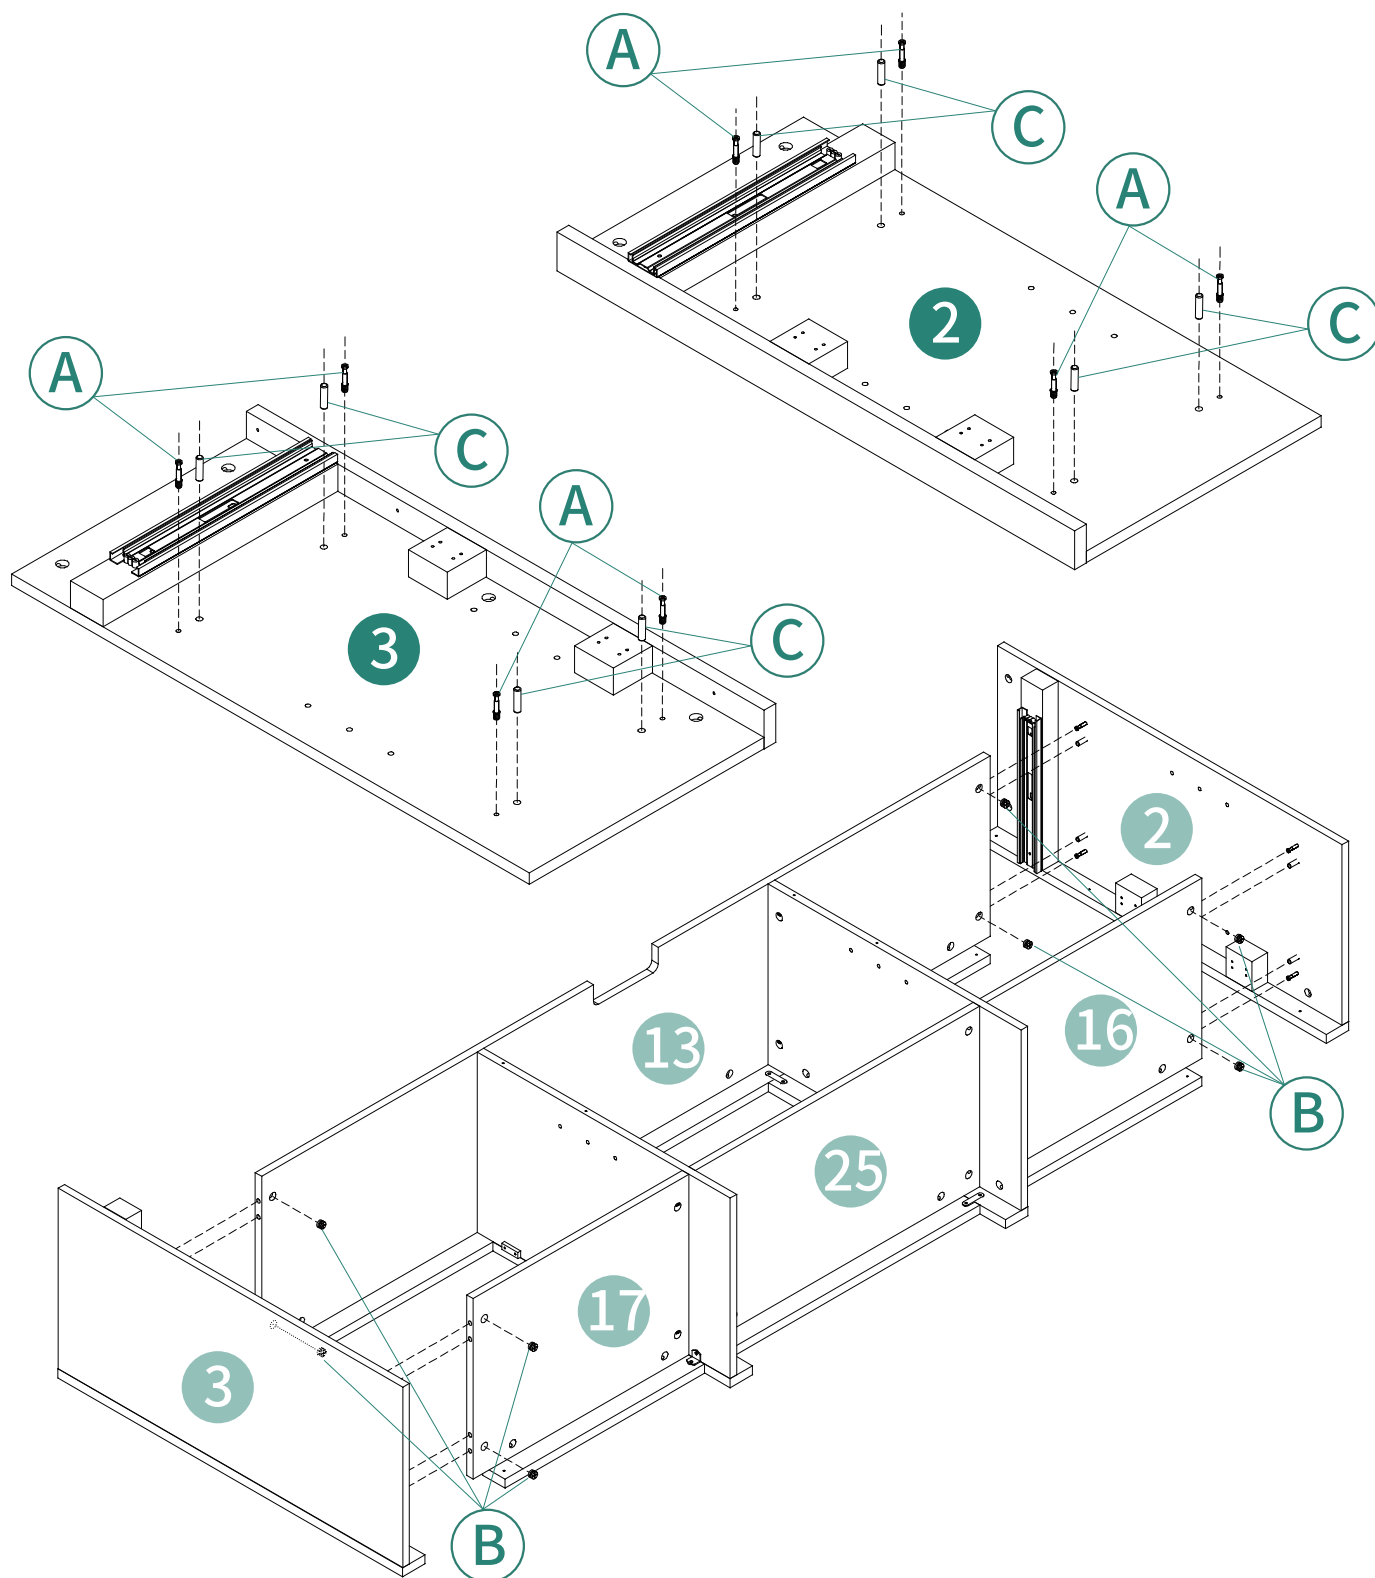



11




Ⓜ4pcs Ⓜ8pcs

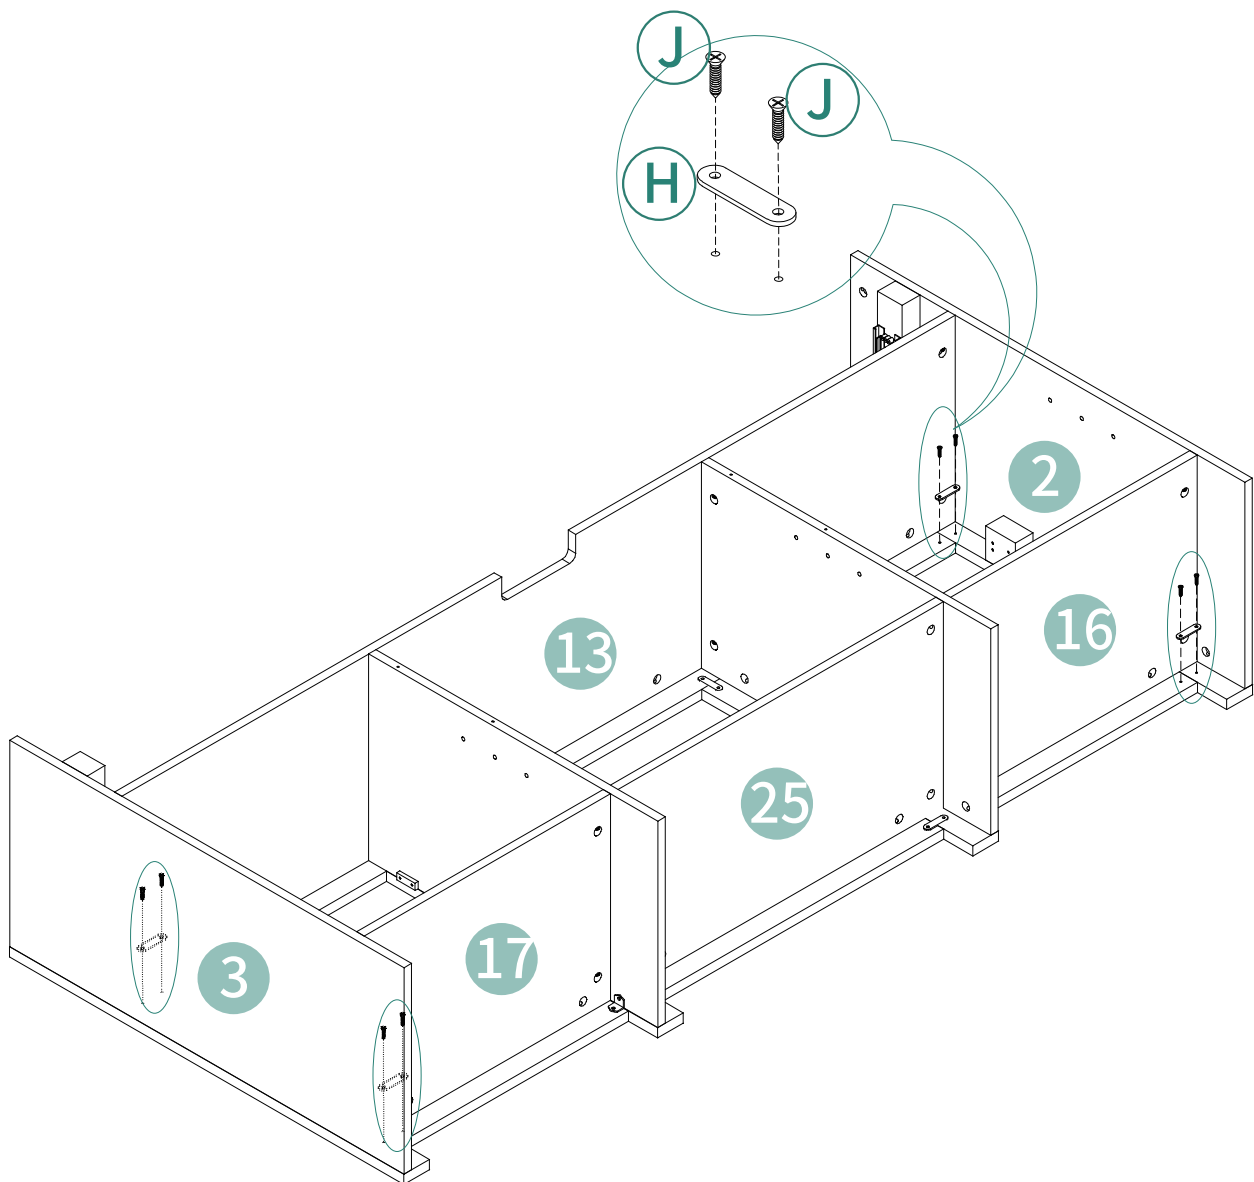

12

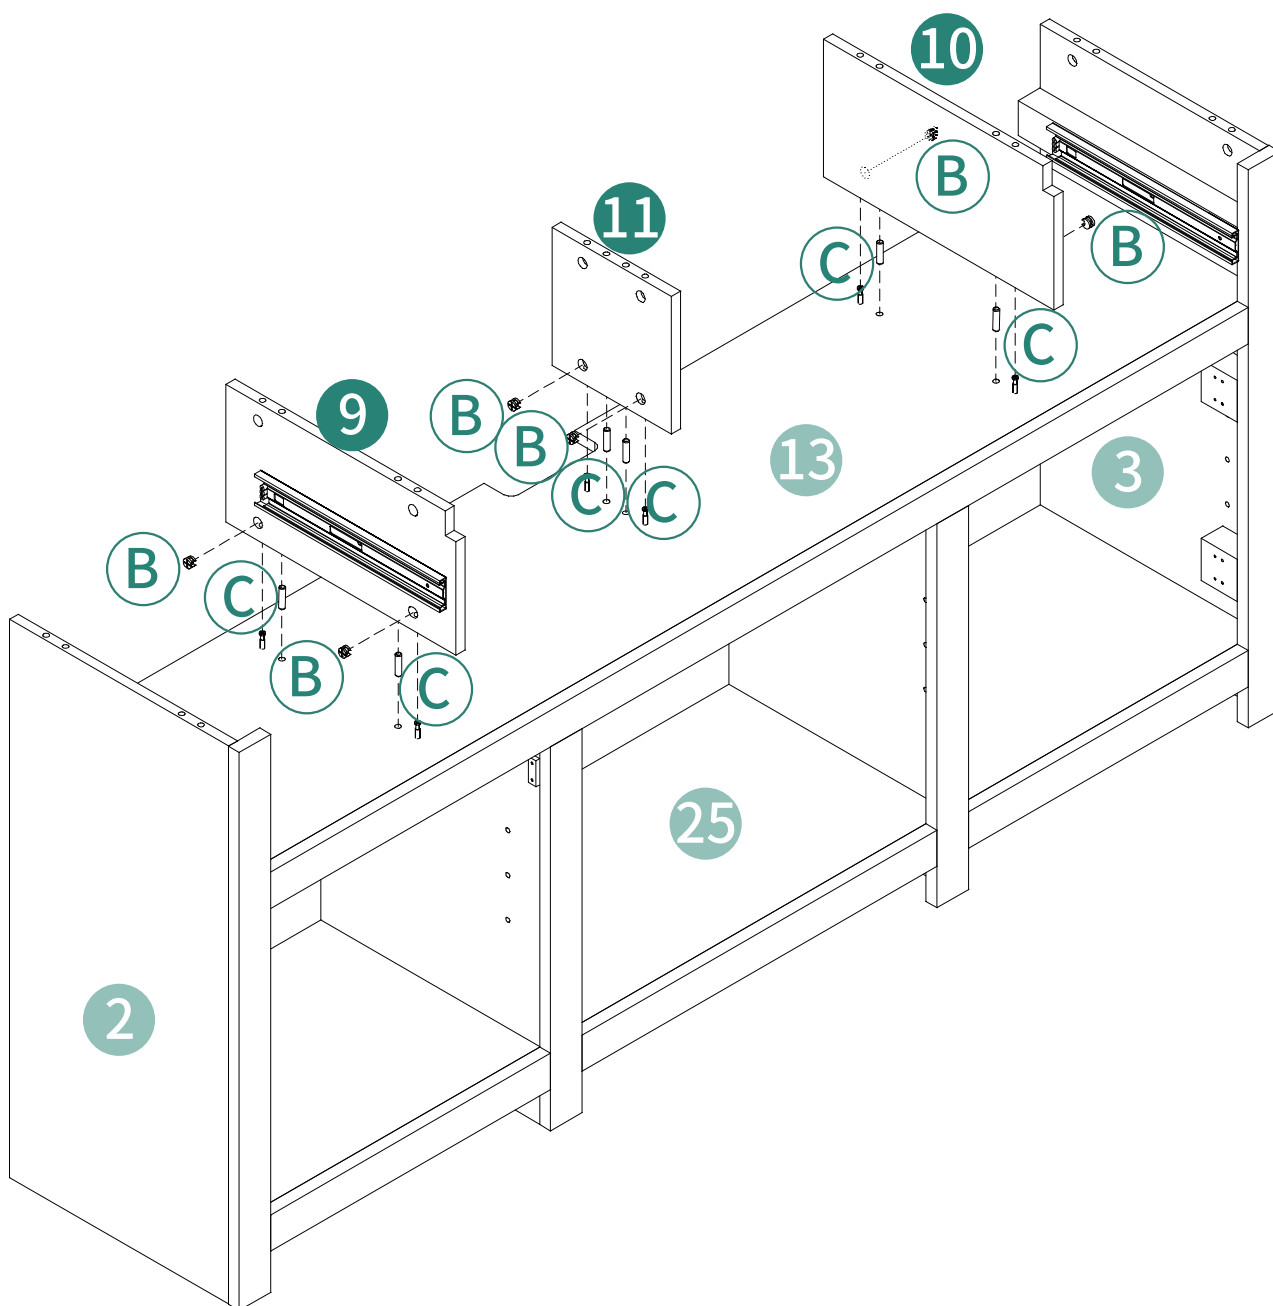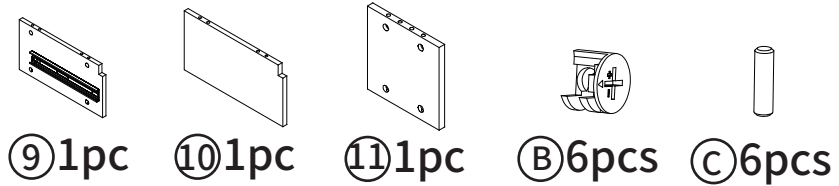

13




① 1pc




Ⓐ 14pcs



Ⓒ 10pcs

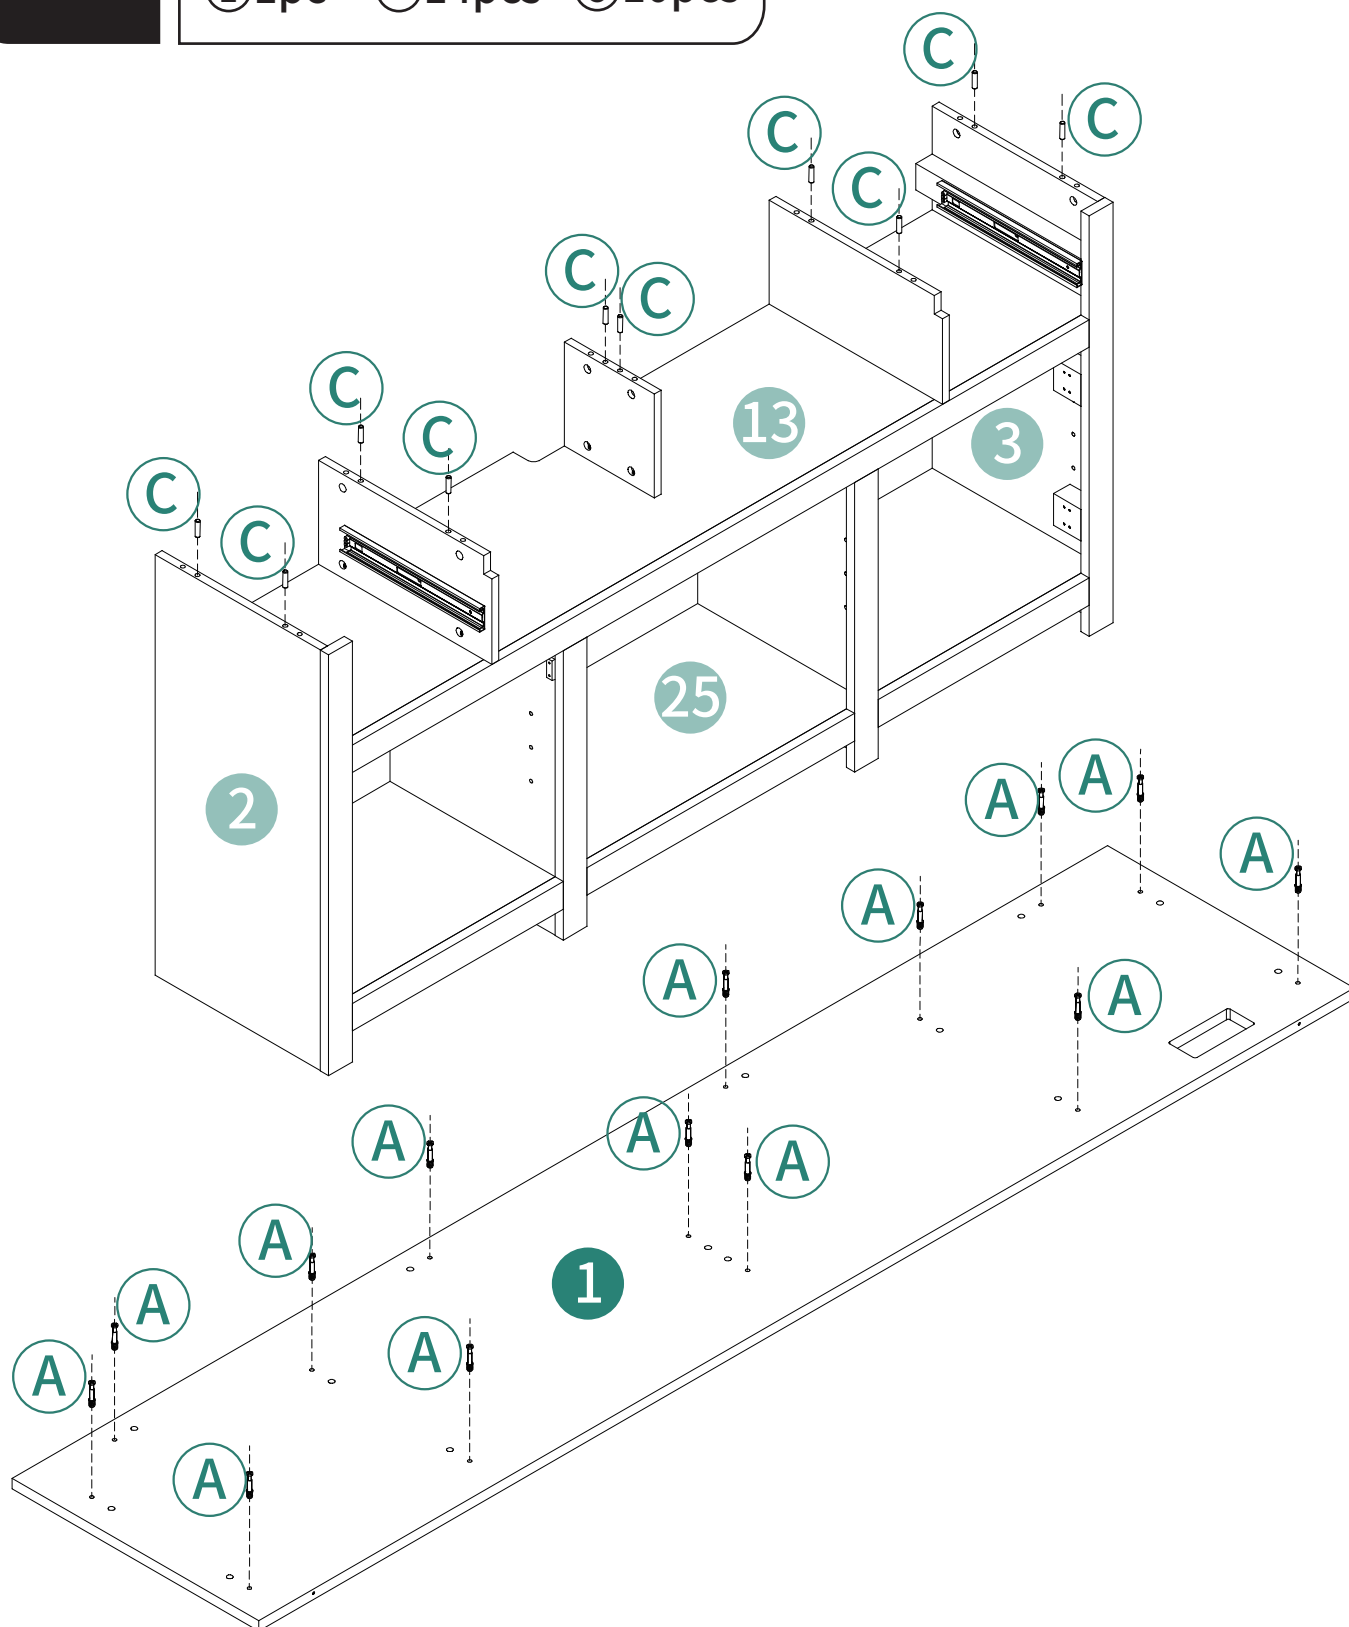

14

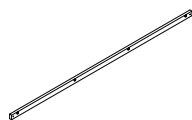


⑫1pc




Ⓑ14pcs




Ⓒ4pcs

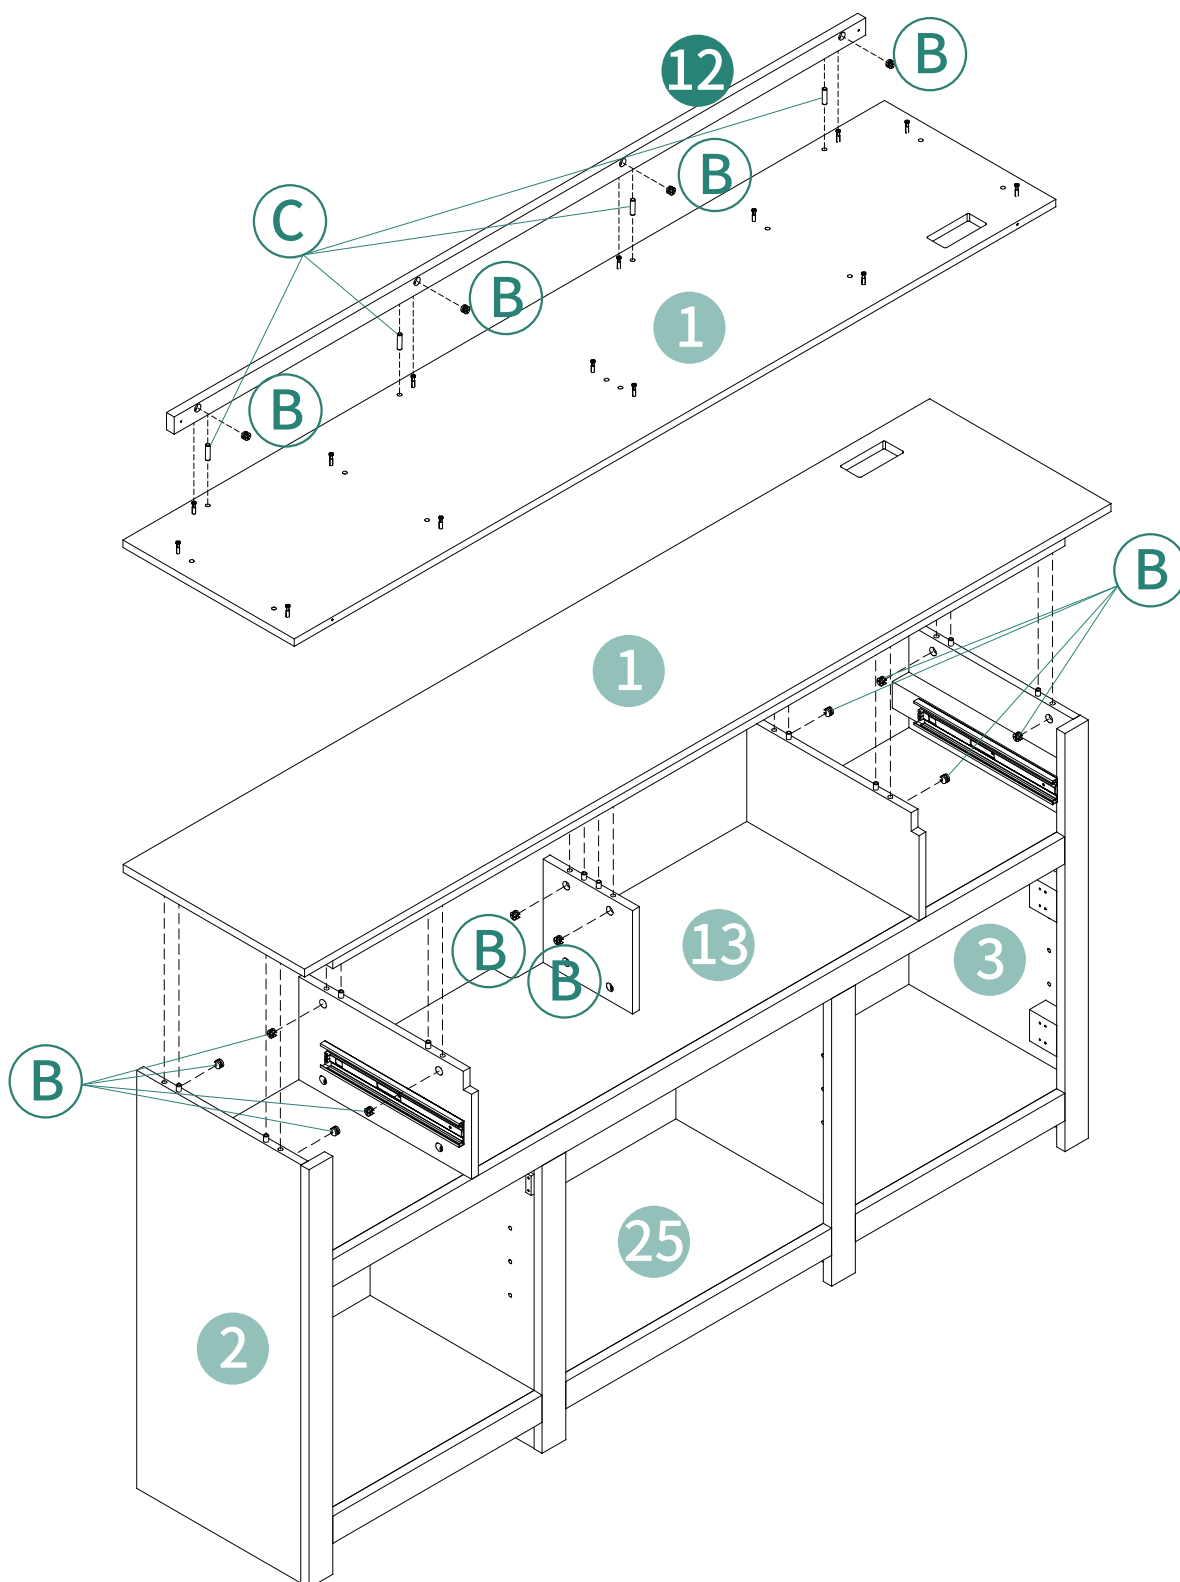

15



③01pc






④H2pcs



④J4pcs




④L16pcs

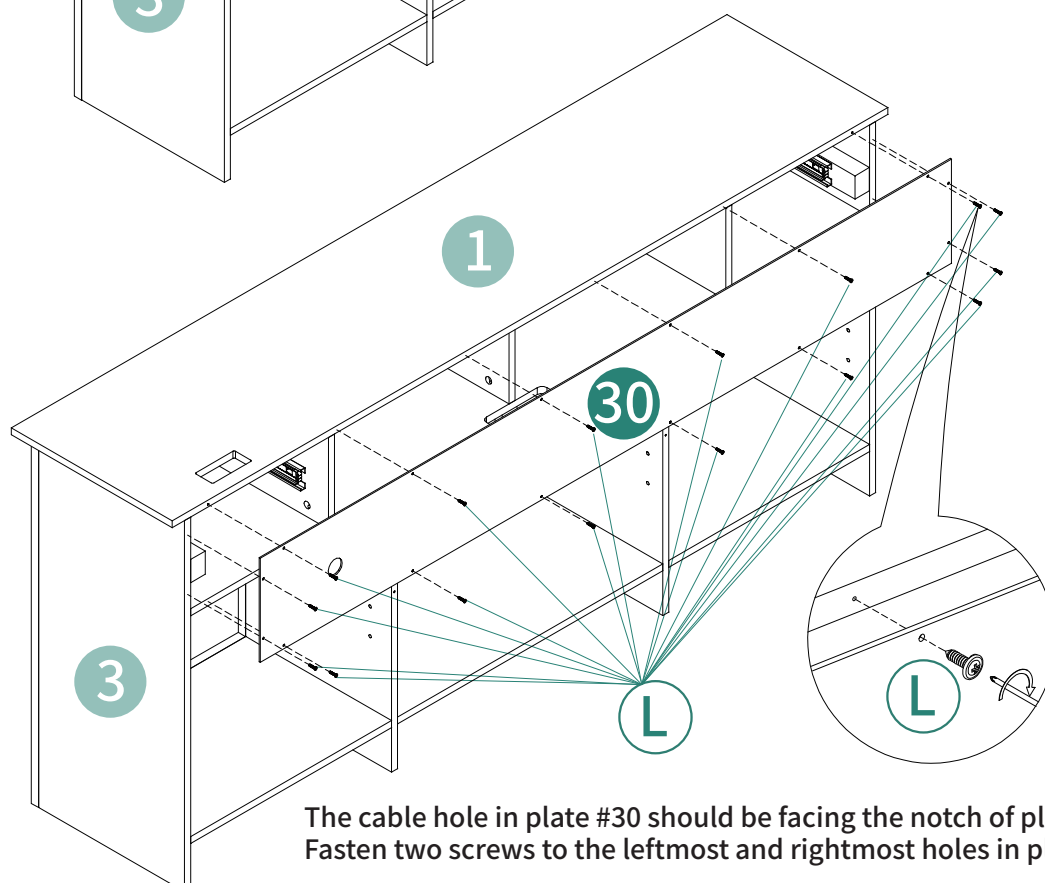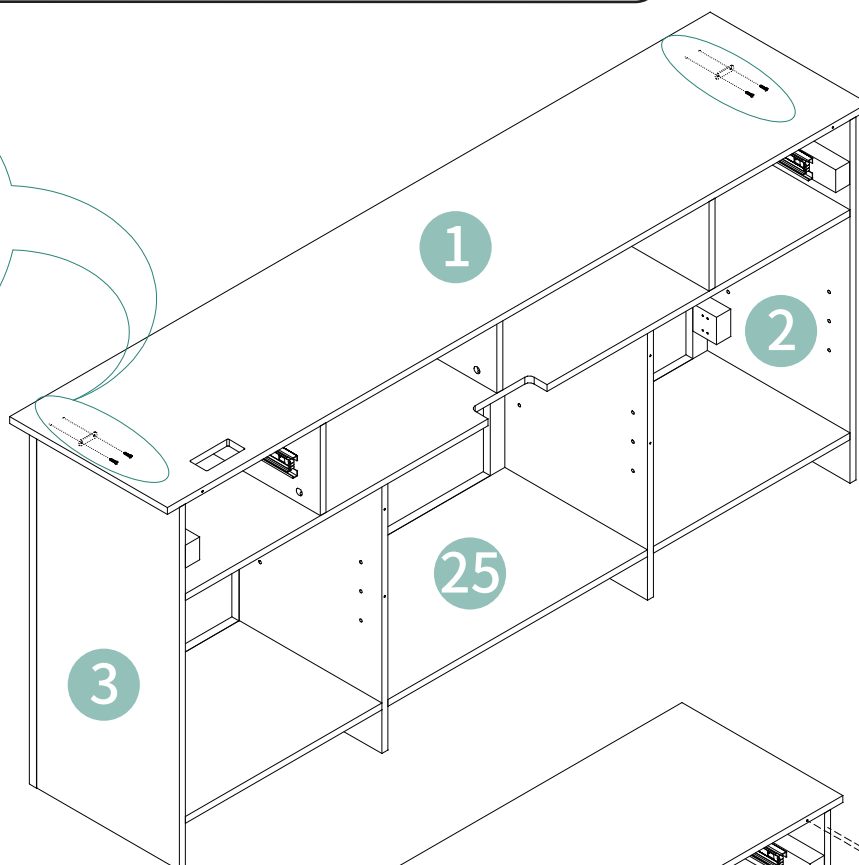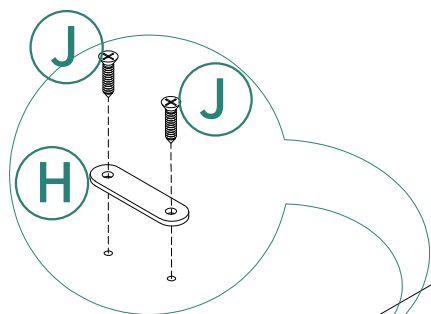


The cable hole in plate #30 should be facing the notch of plate #1.
Fasten two screws to the leftmost and rightmost holes in plate #30.

16

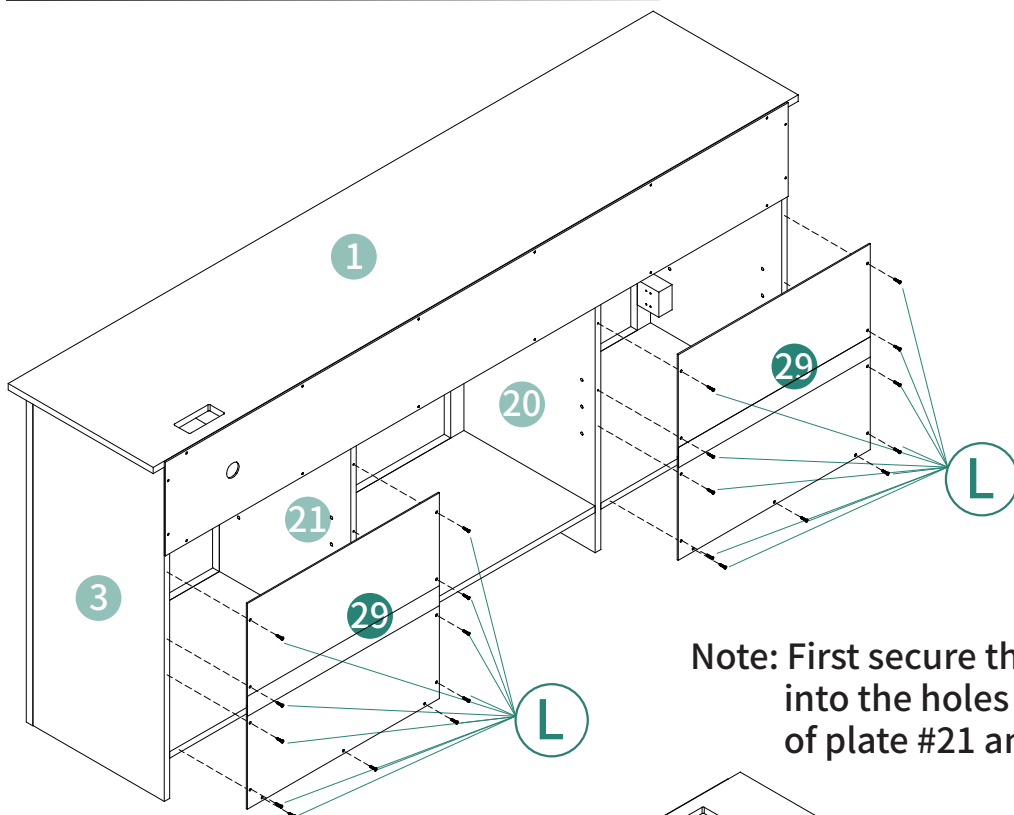


Note: First secure the two screws into the holes on the back of plate #21 and plate #20.

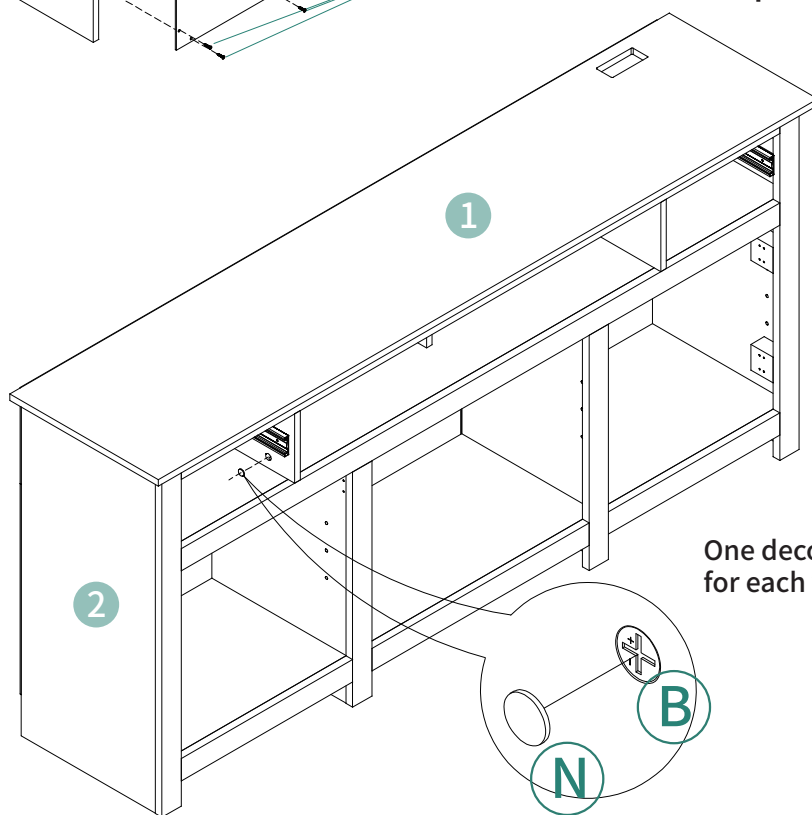


One decorative screw cover (N)
for each visible eccentric wheel (B)

17







①1pc


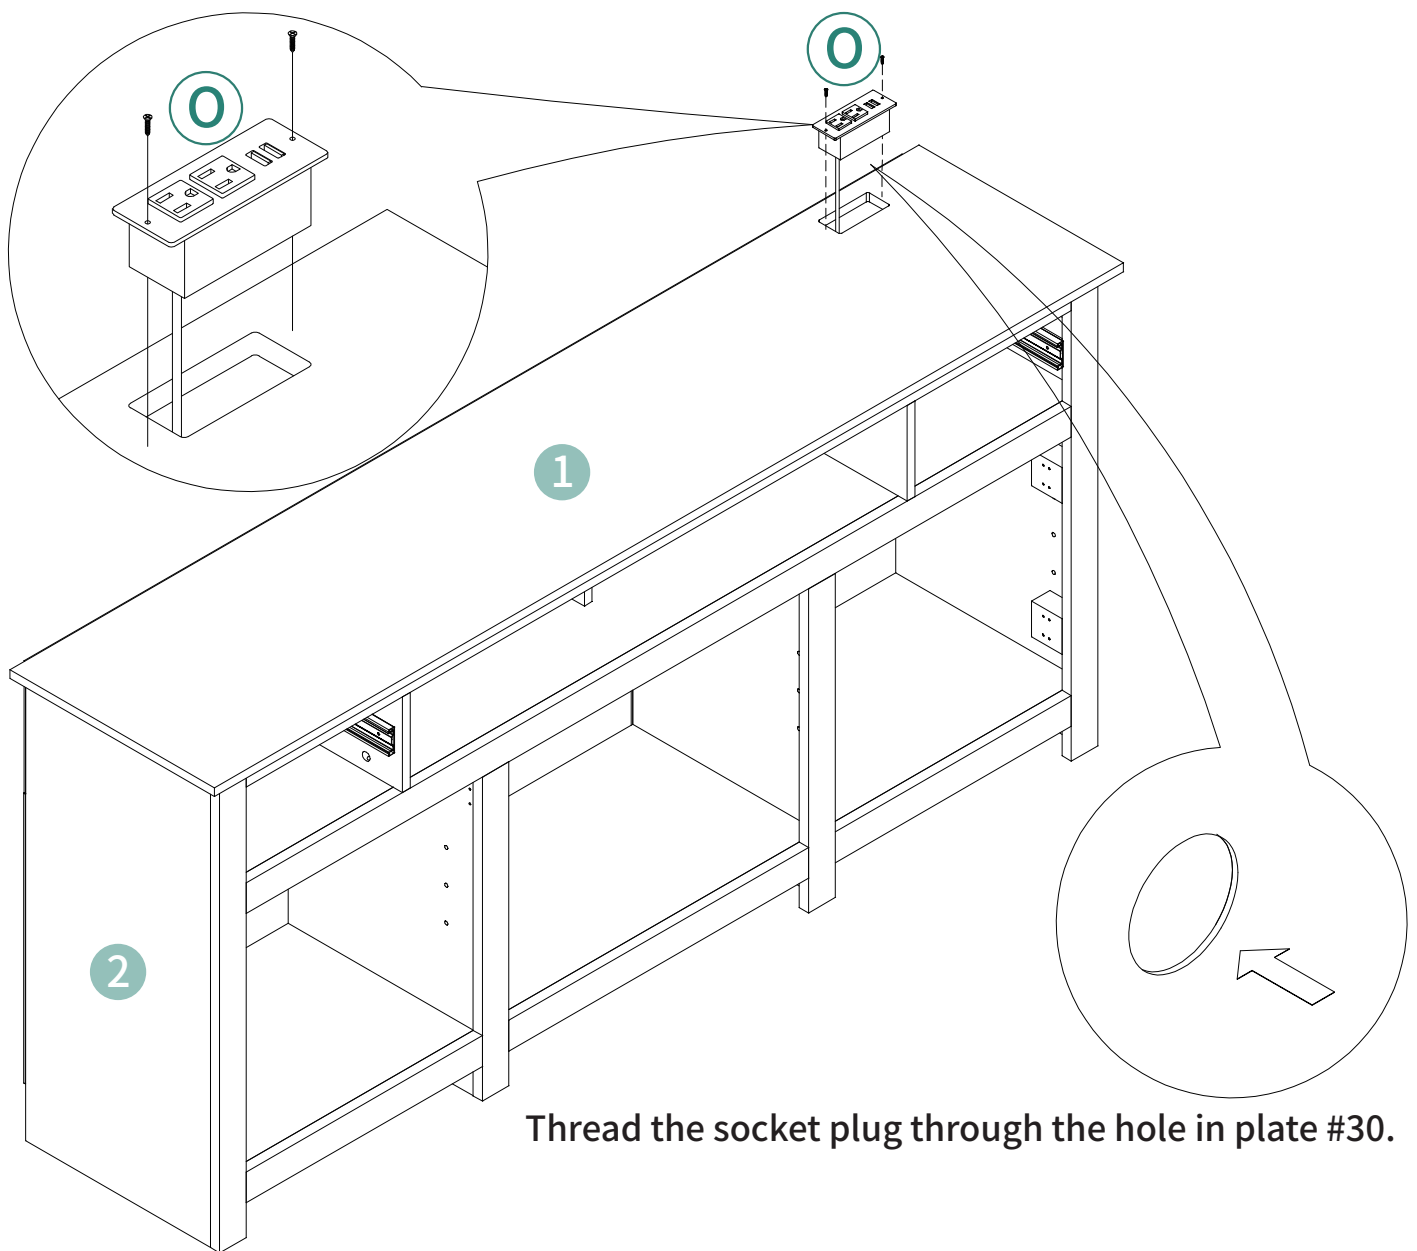


18

X2




④2pcs ⑤2pcs ⑥2pcs ⑧2pcs ③4pcs ①8pcs

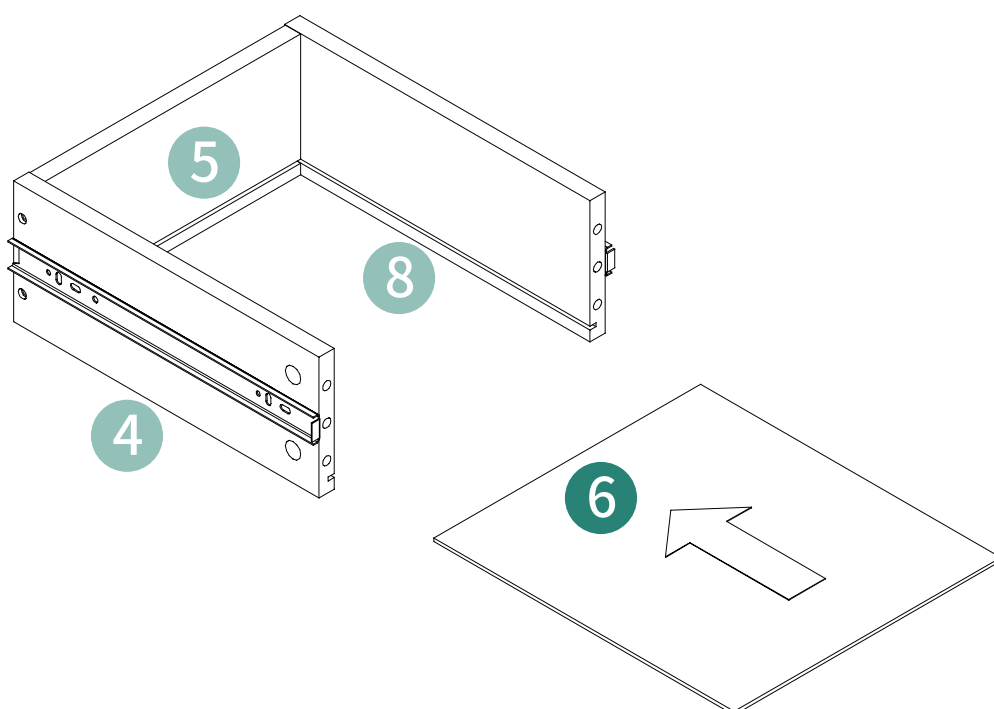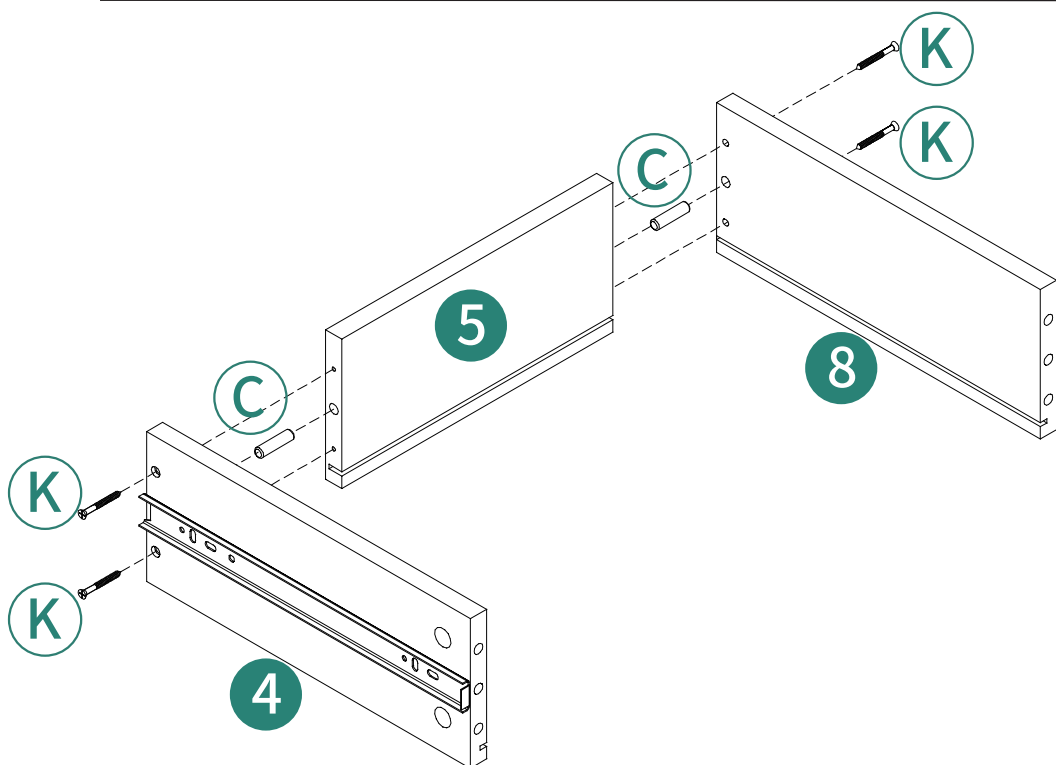

19

X2



⑦ 2pcs



Ⓐ 8pcs



Ⓑ 8pcs






Ⓒ 4pcs




Ⓓ 2pcs






Ⓔ 2pcs

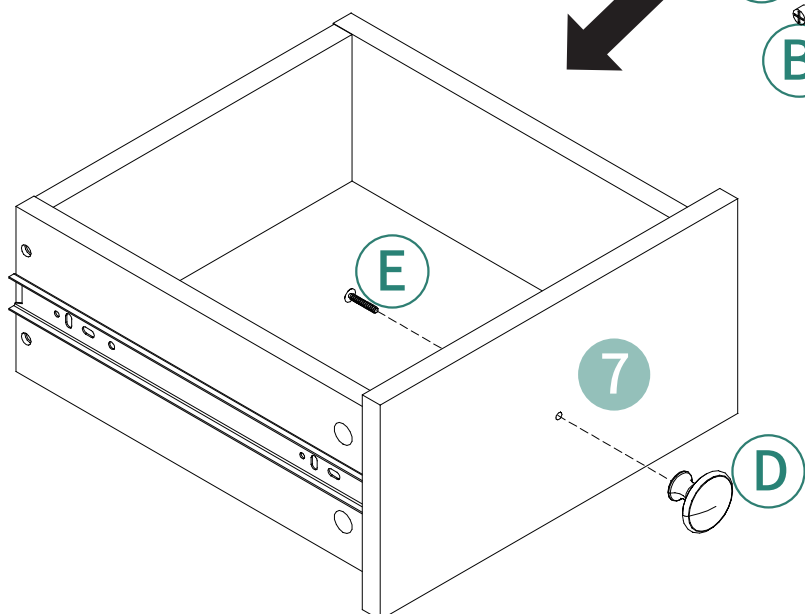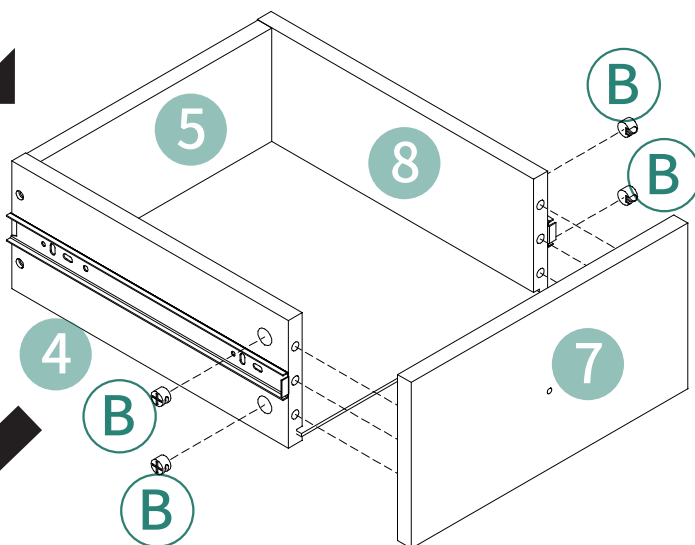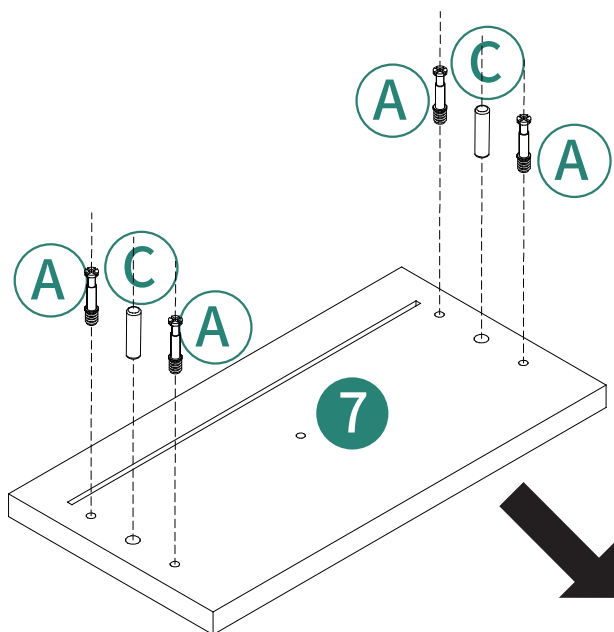


20

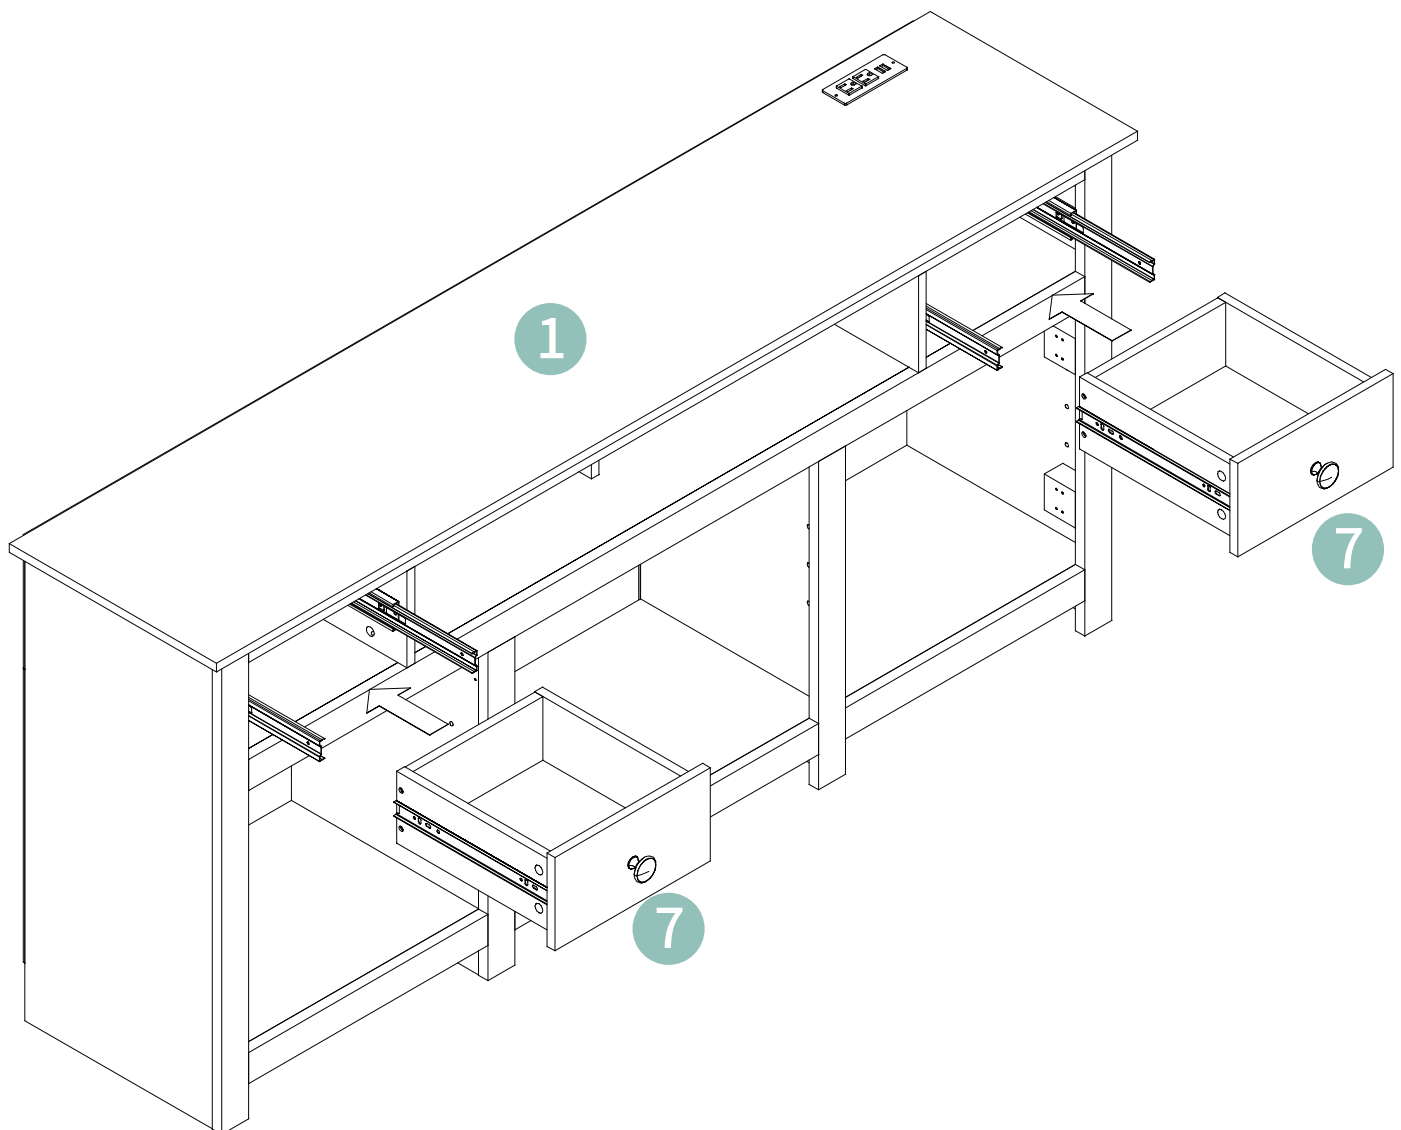


21




 ⑮2pcs ②④1pc ①②③12pcs

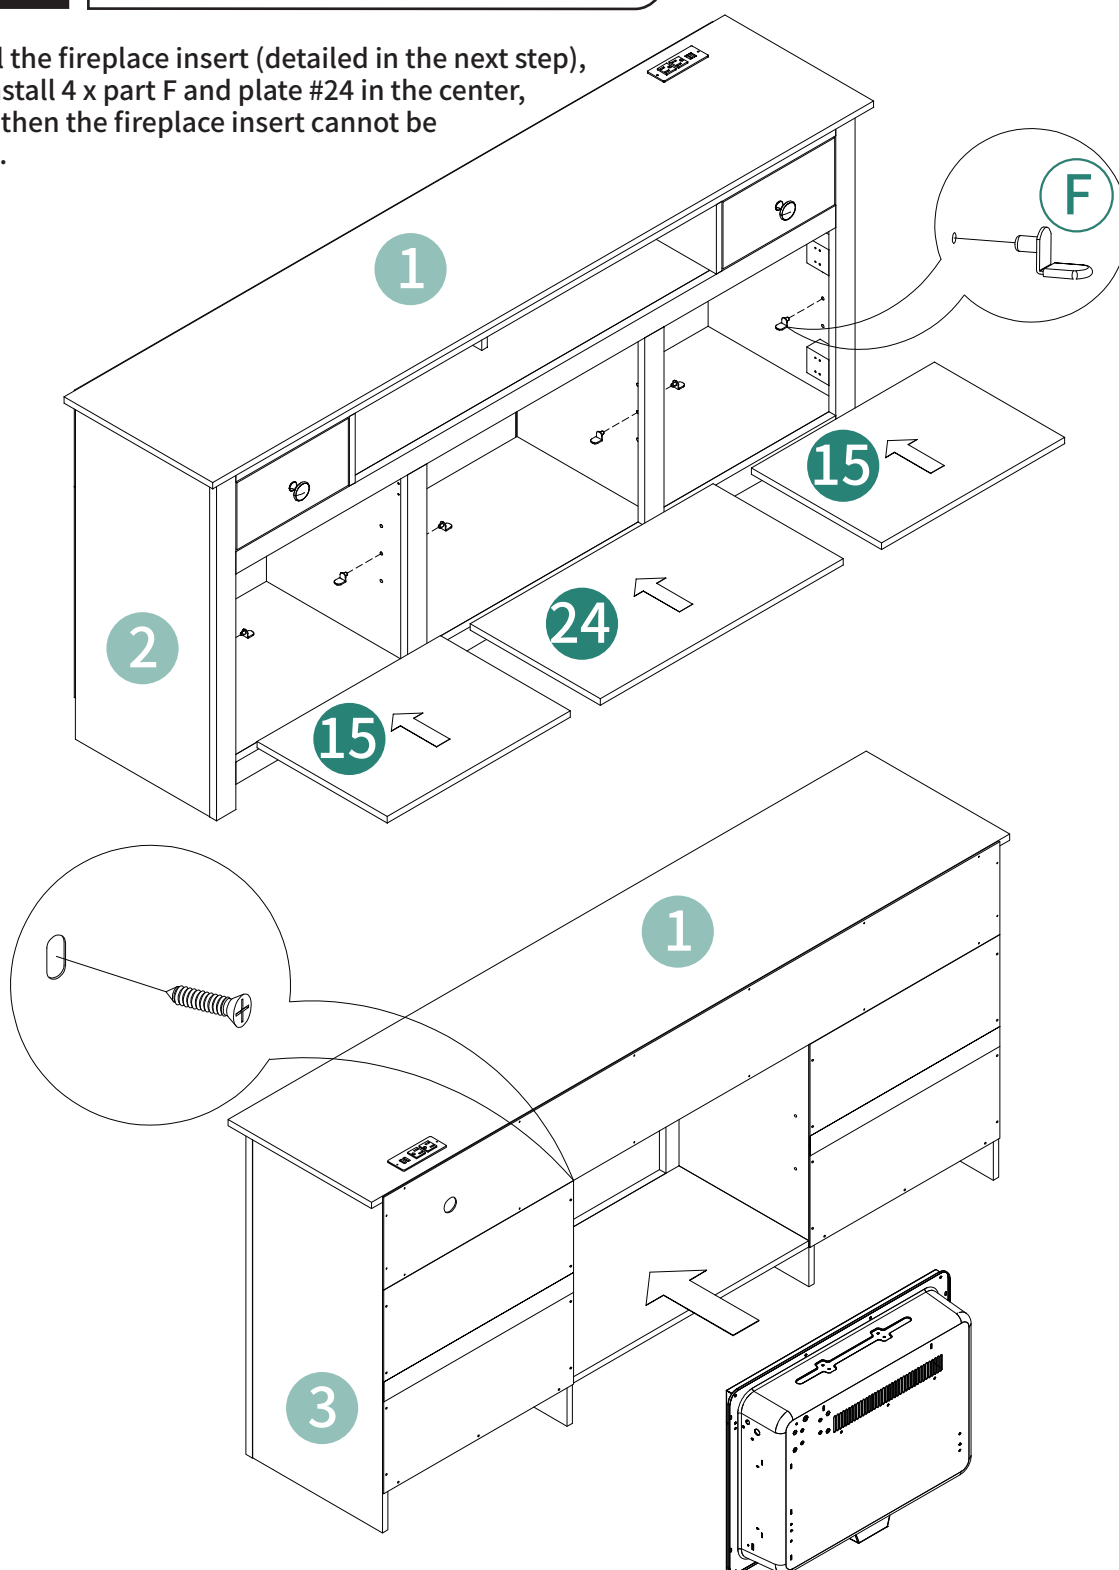
To install the fireplace insert (detailed in the next step), do not install 4 x part F and plate #24 in the center, because then the fireplace insert cannot be installed.



22





②7 2pcs



ⓖ 4pcs




ⓙ 24pcs

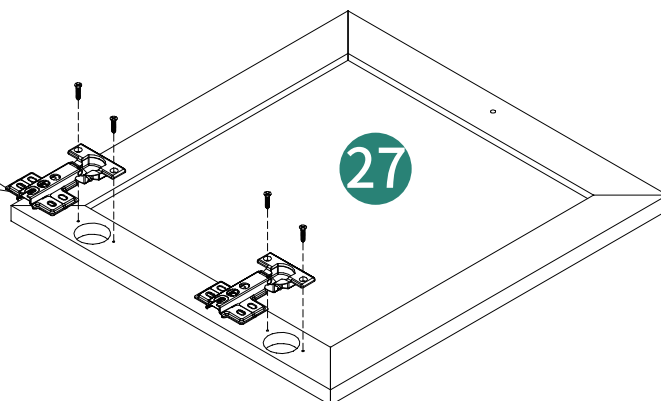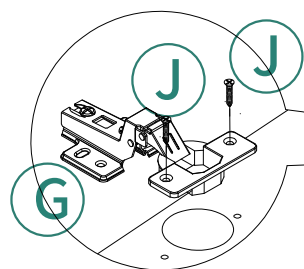


X 2

In order to ensure the consistent spacing between the upper and lower door joints, the lower part of the door hinge should be installed first, followed by the upper part.

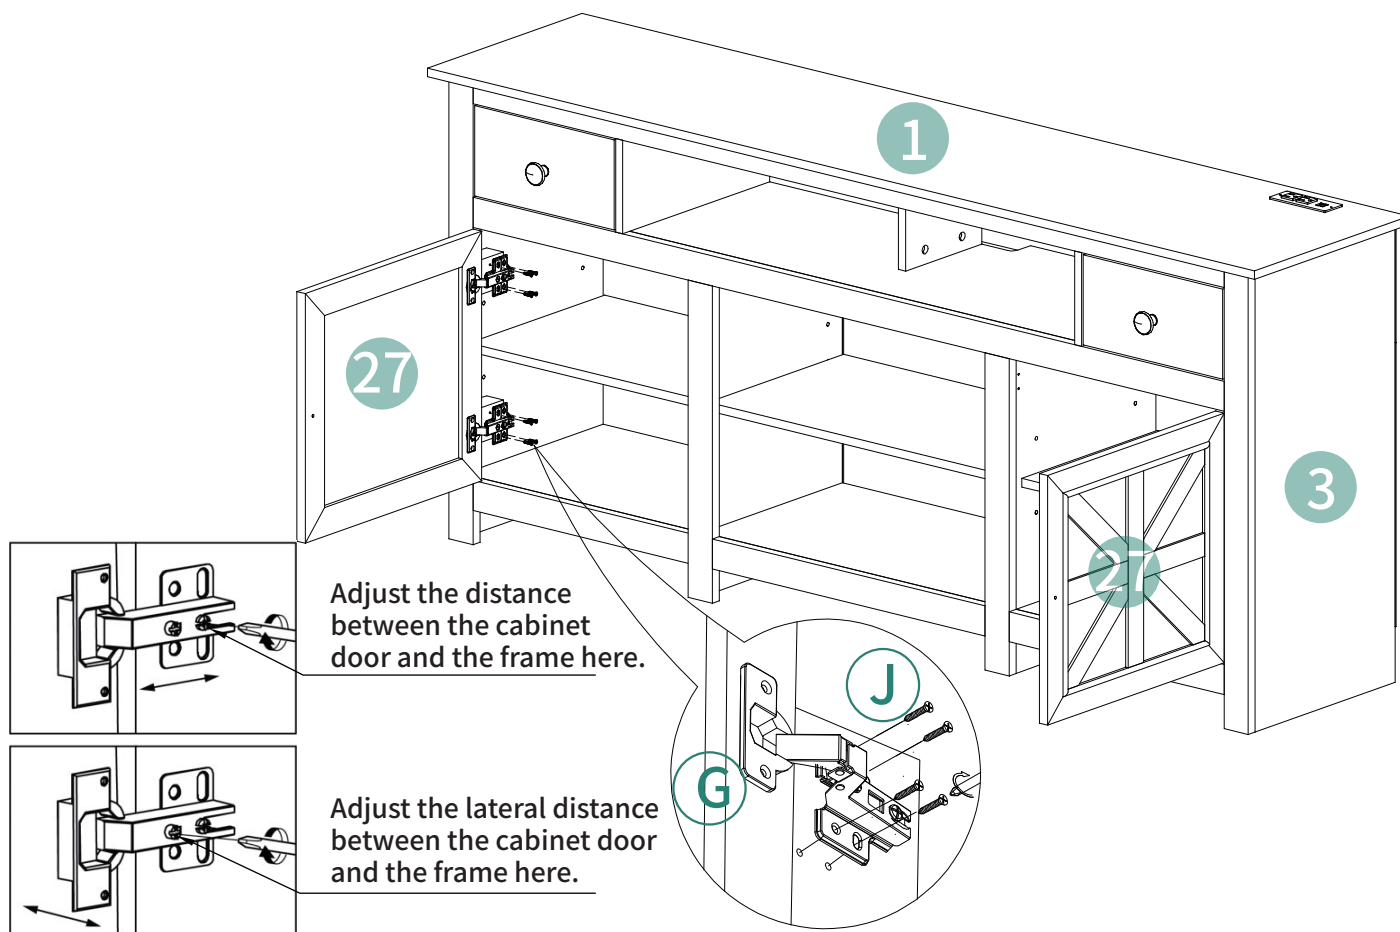



23

 ① 2pcs
  ② 2pcs
  ③ 2pcs
  ④ 2pcs

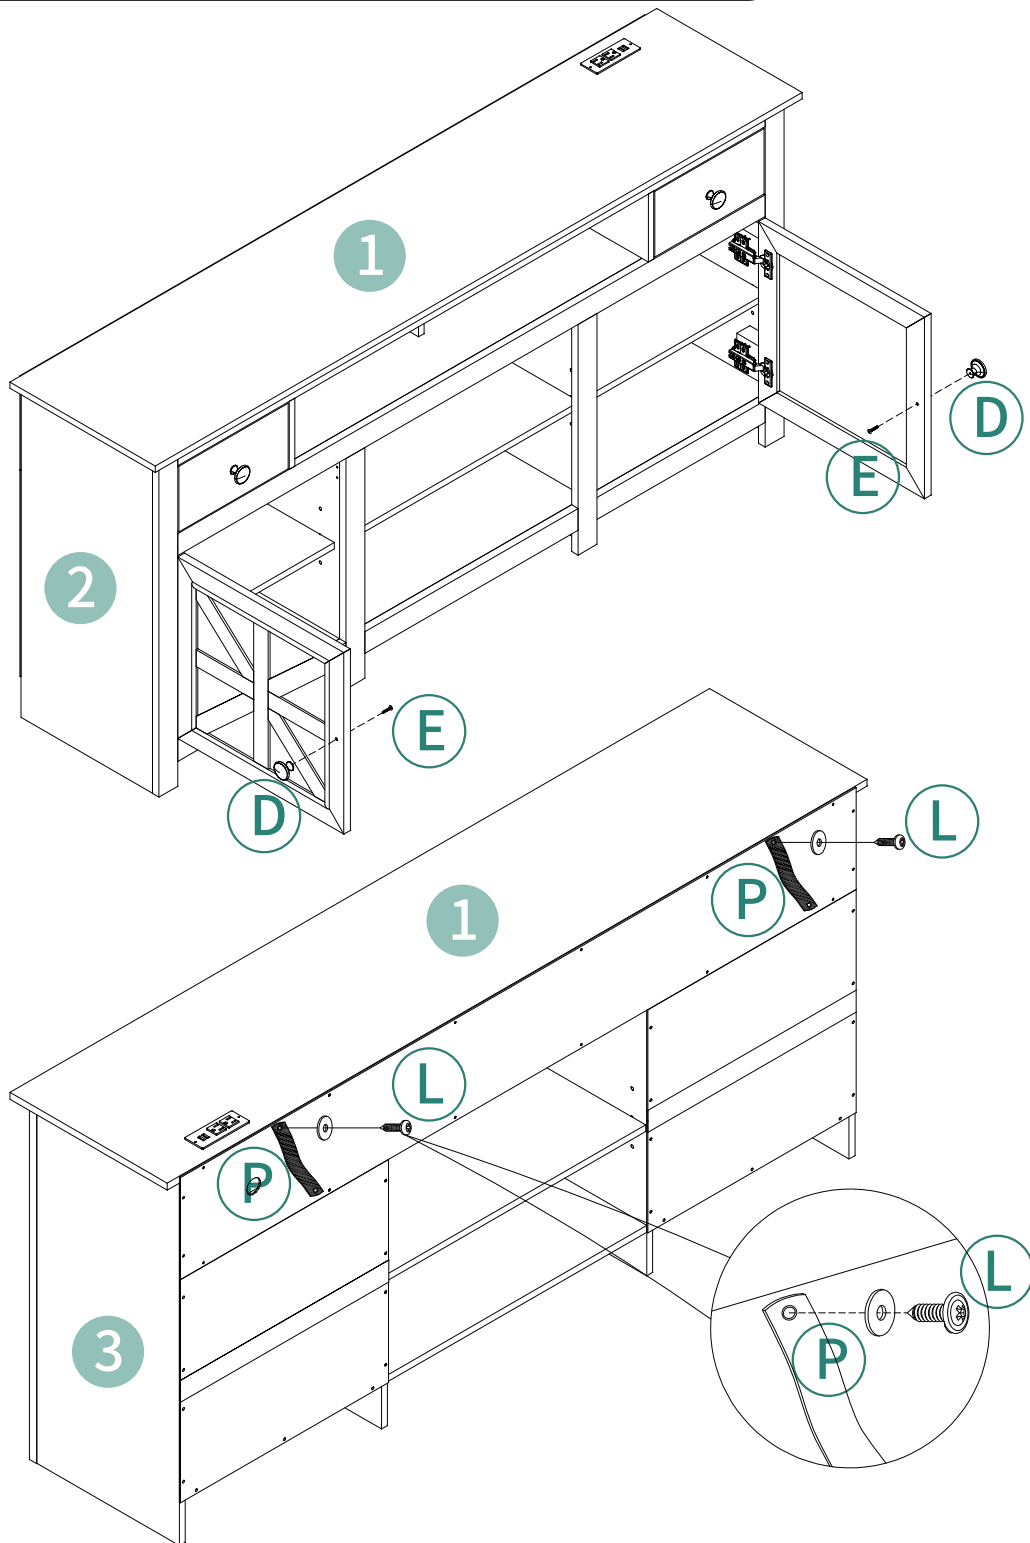


24



 Q2pcs P2pcs

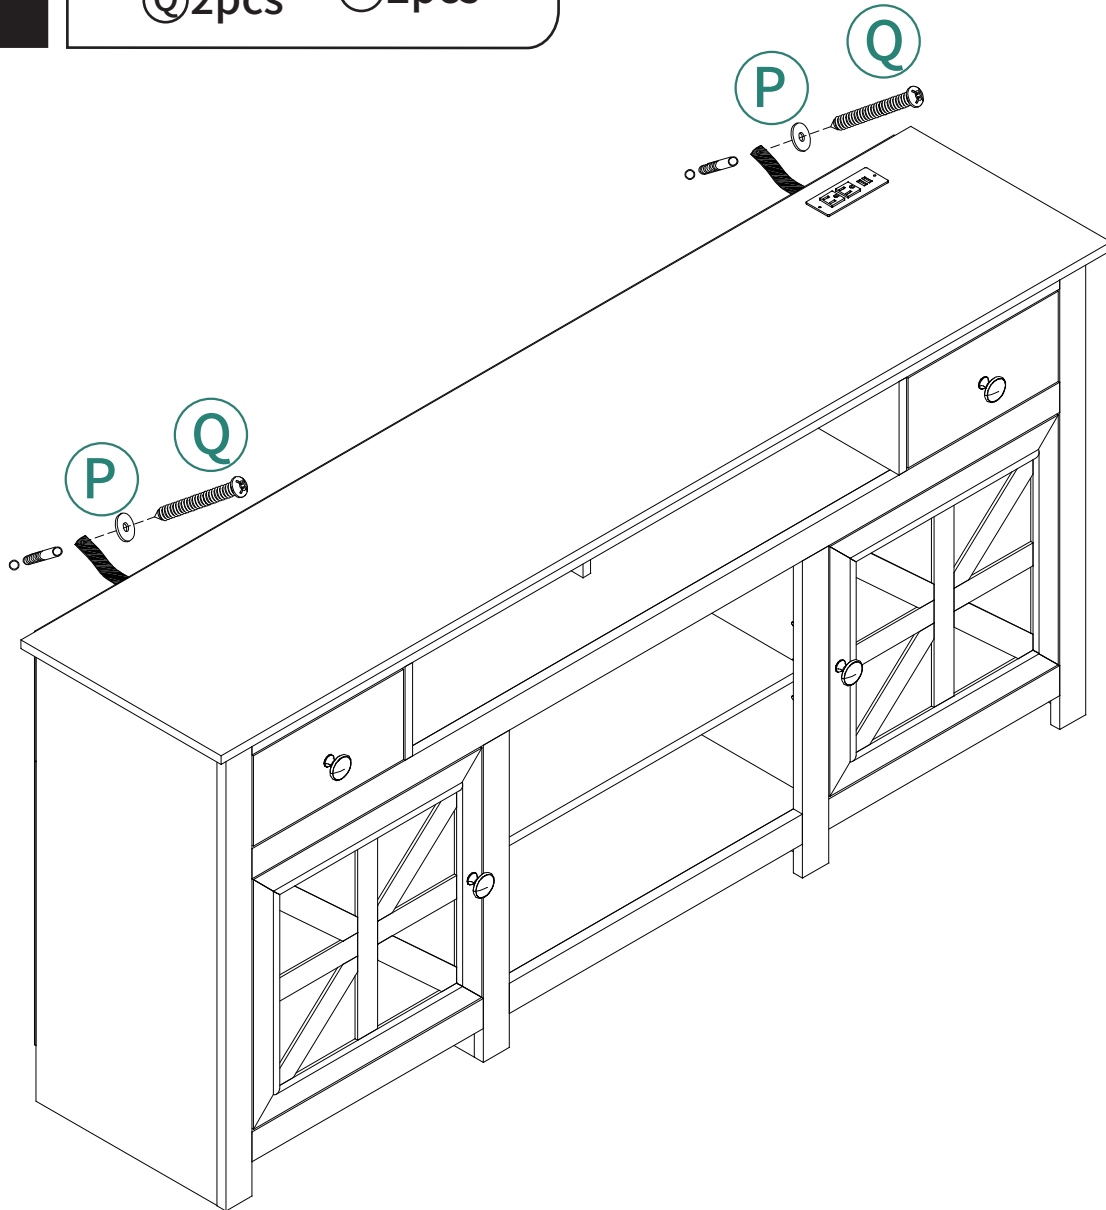


1

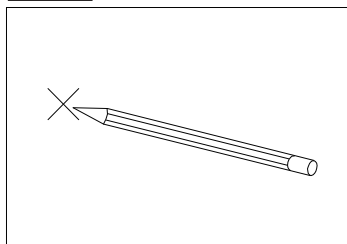


2

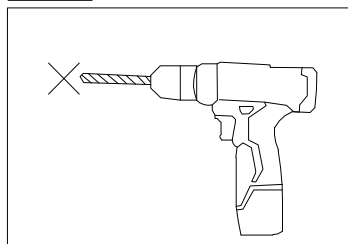


3

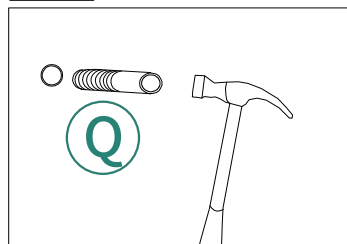

4

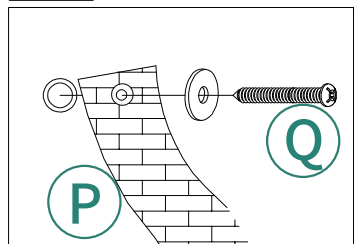

25
X2




28 2pcs








R 4pcs



J 8pcs




Q 8pcs

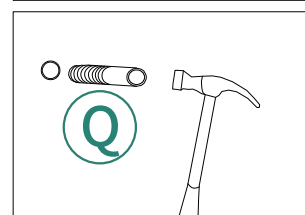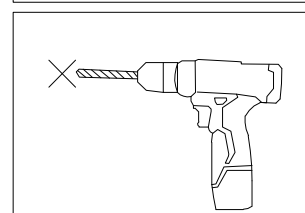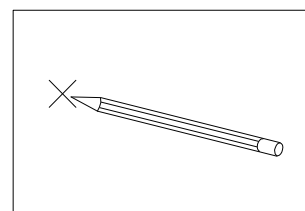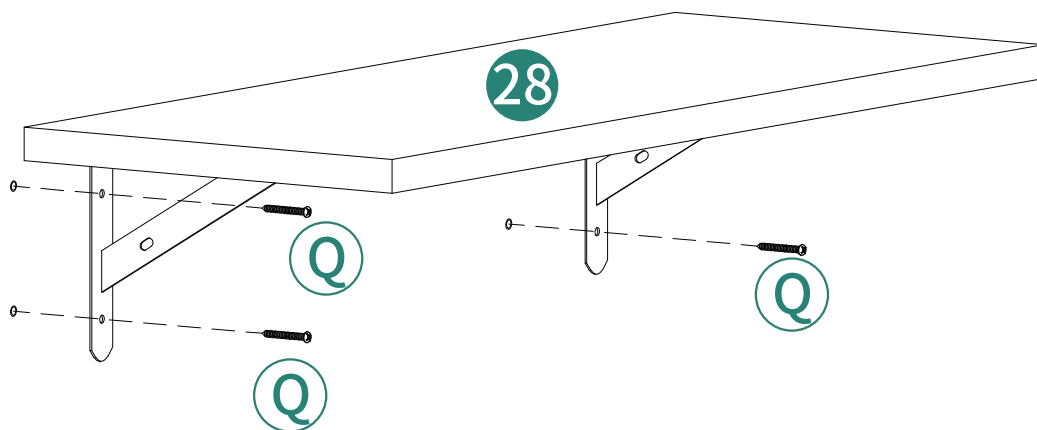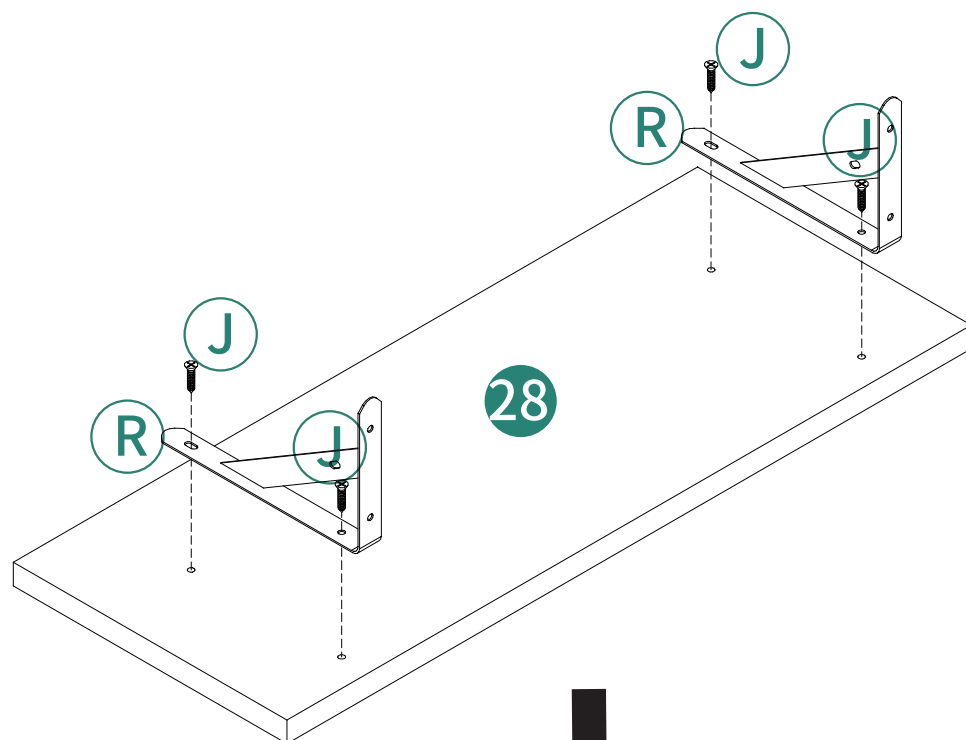

Note: Before drilling holes to the wall, please confirm the position first and mark the drilling locations with a pen. (The above picture is just for reference)

Special Attention: The max load capacity for wall-mounted shelf is 25lbs.

26

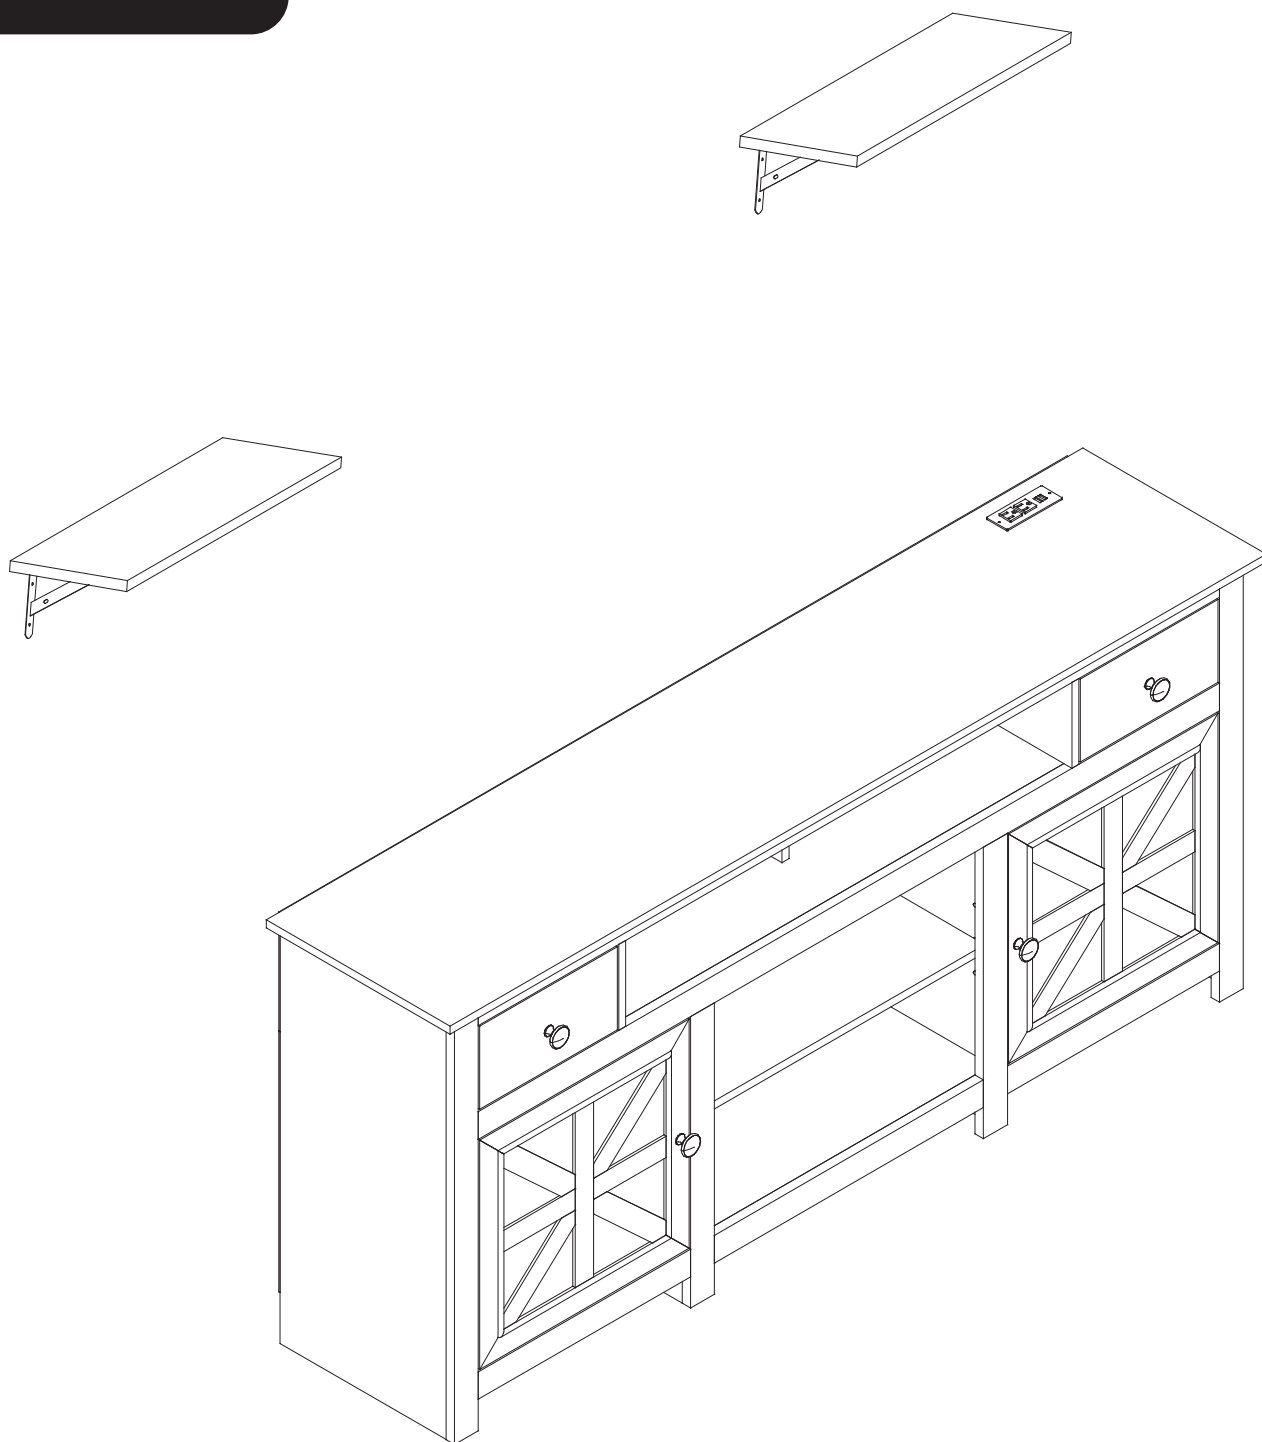

Installation Completed



CONTACT US:

If you have any questions about the installation of YITAHOME products, just contact us at +1 (888) 717-8084 from Mon-Fri 8:00 AM-4:30 PM PST / Sat. 8:00 AM-12:00 PM PST or e-mail us at after-sale.cs@hotmail.com

Alternative method to contact us (amazon.com orders only)

1. Log into your Amazon account
2. Go to "Your Orders" and find the purchase
3. Click on "Contact Seller"