

IARMOR EDGE™

PART#: IA-W093

BEFORE INSTALLATION

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED. THANK YOU FOR CHOOSING OUR PRODUCT!


***ROCKER PANEL MOUNT**

***DRILLING/TRIMMING NOT REQUIRED**

Torque Value

Fastener Size	Tightening Torque (ft-lbs)	Required
6mm	6-7	X
8mm	16-18	X
10mm	31-32	√
12mm	56-58	√
14mm	92-94	X


PART LIST

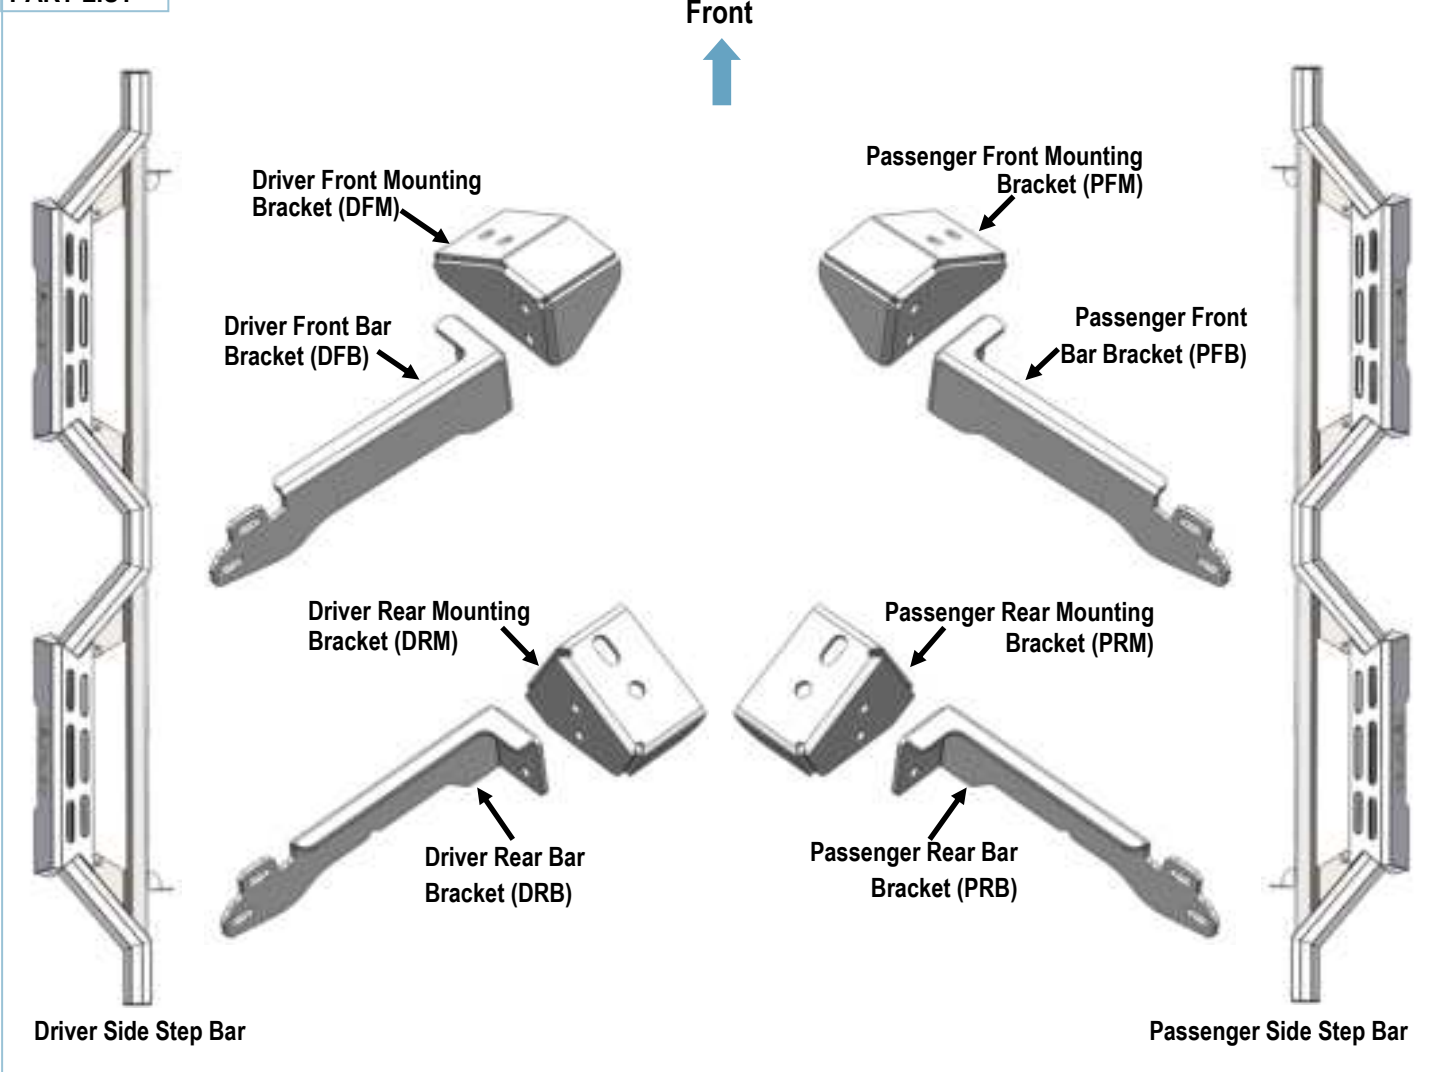

Customer Support: info@iarmorauto.com

iArmor®

Hardware Package (For Brackets & Step Bars Installation)					
Item	QTY	Description	Item	QTY	Description
1#	4	Backing Plates	7#	8	M10 Lock Washers
2#	8	M12X1.75-30 Hex Bolts	8#	8	M10 Hex Nuts
3#	8	M12 Large Flat Washers	9#	8	M10X1.5-25 Hex Bolts
4#	8	M12 Lock Washers	10#	16	M10 Flat Washers
5#	8	M10X1.5-30 Hex Bolts	11#	8	M10X1.5 Nylon Lock Nuts
6#	16	M10 Large Flat Washers			

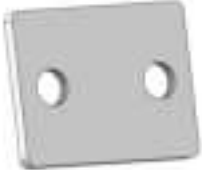

1#



2#



3#



4#



5#



6#



7#



8#



9#



10#




11#

iArmor®

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation.

STEP 1


Start installation from the driver side front of the vehicle. Assemble the Driver Front Mounting Bracket (**DFM**) and Driver Front Bar Bracket (**DFB**) with (2) M10X1.5-30mm Hex Bolts, (4) M10 Large Flat Washers, (2) M10 Lock Washers and (2) M10 Hex Nuts, (**Fig 1**). Do not tighten hardware at this time.

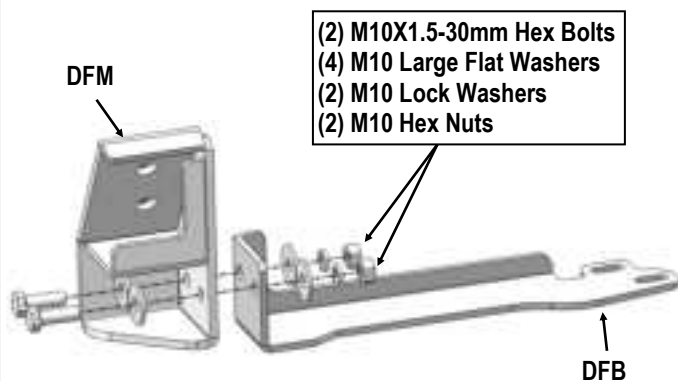


(Fig 1) Driver Side Front Brackets Assembly

STEP 2

Select (1) Backing Plate and put it behind the frame, line up the holes, attach (1) Driver Front Mounting Bracket (**DFM**) on the other side of the frame with (2) M12X1.75-30 Hex Bolts, (2) M12 Lock Washers and (2) M12 Large Flat Washers. Do not fully tighten hardware at this time, (**Figs 2&3**).

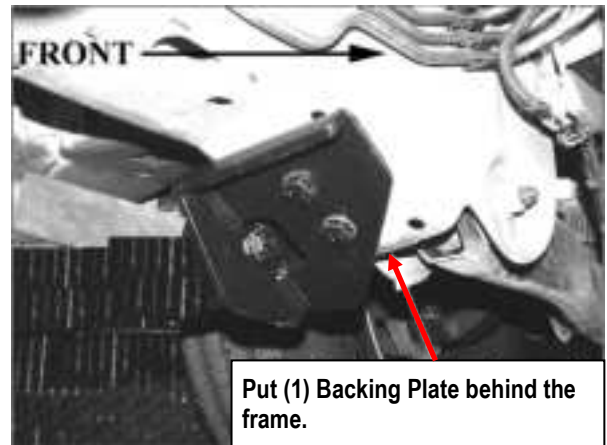

(Fig 2) Example of Driver Front Mounting Bracket Installed

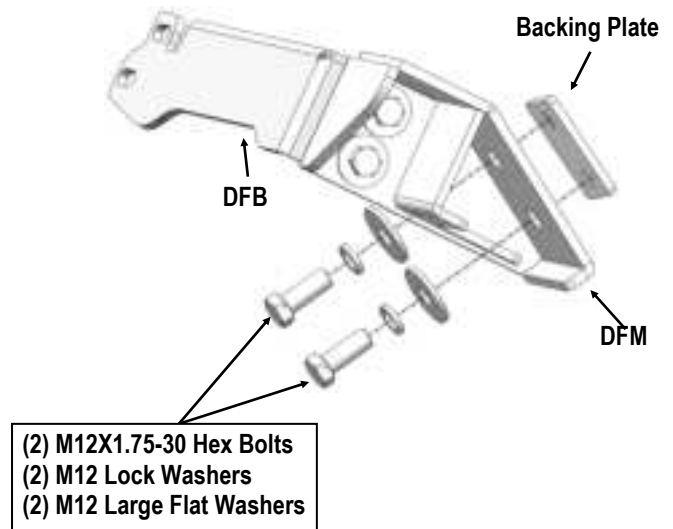


(Fig 3) Assembled Driver Front Mounting Bracket Installation

STEP 3

Move to the Driver Side Rear Mounting Location. Assemble the Driver Rear Mounting Bracket (**DRM**) and Driver Rear Bar Bracket (**DRB**) with ((2) M10X1.5-30mm Hex Bolts, (4) M10 Large Flat Washers, (2) M10 Lock Washers and (2) M10 Hex Nuts, (**Fig 4**). Do not tighten hardware at this time.

iArmor®

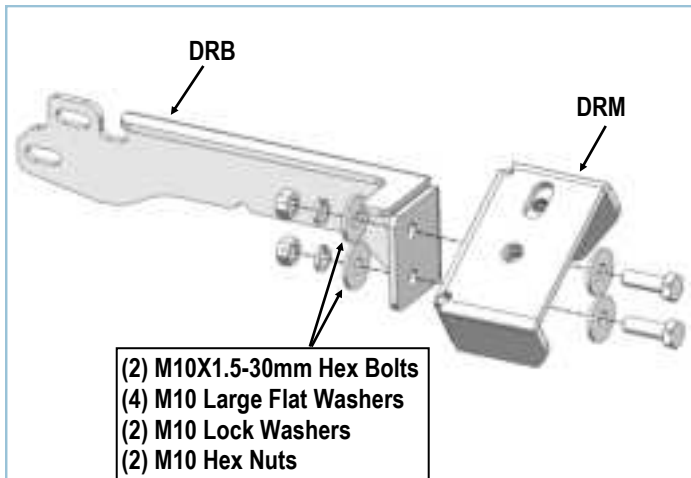

(Fig 4) Driver Rear Mounting Brackets Assembly

STEP 4


Repeat **Step 2** to install the Assembled Driver Rear Mounting Bracket. Do not fully tighten hardware at this time, **(Figs 5-6)**.



Place (1) Backing Plate behind the frame to attach the mounting bracket.

(2) M12 X1.75-30 Hex Bolts
(2) M12 Lock Washers
(2) M12 Flat Washers

(Fig 5) Example of Assembled Driver Rear Mounting Bracket Installed

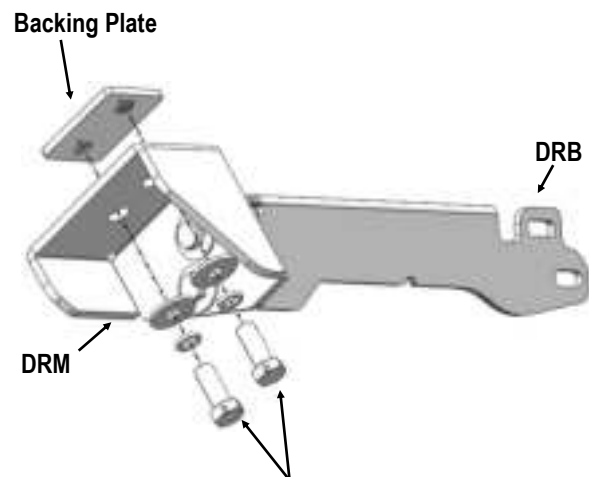

(Fig 6) Driver Rear Mounting Bracket Installation

STEP 5

Once all (2) Mounting Brackets have been installed, attach the Driver Side Step Bar to the Mounting Brackets with (4) M10X1.5-25 Hex Bolts, (8) M10 Flat Washers and (4) M10X1.5 Nylon Lock Nuts, **(Fig 7)**. Do not fully tighten hardware at this time.


STEP 6

Properly level and adjust the Step Bar and fully tighten all hardware.

STEP 7

Move to the other side of the vehicle. Repeat **Steps 1-6** for the other Side Step Bar installation.

iArmor®

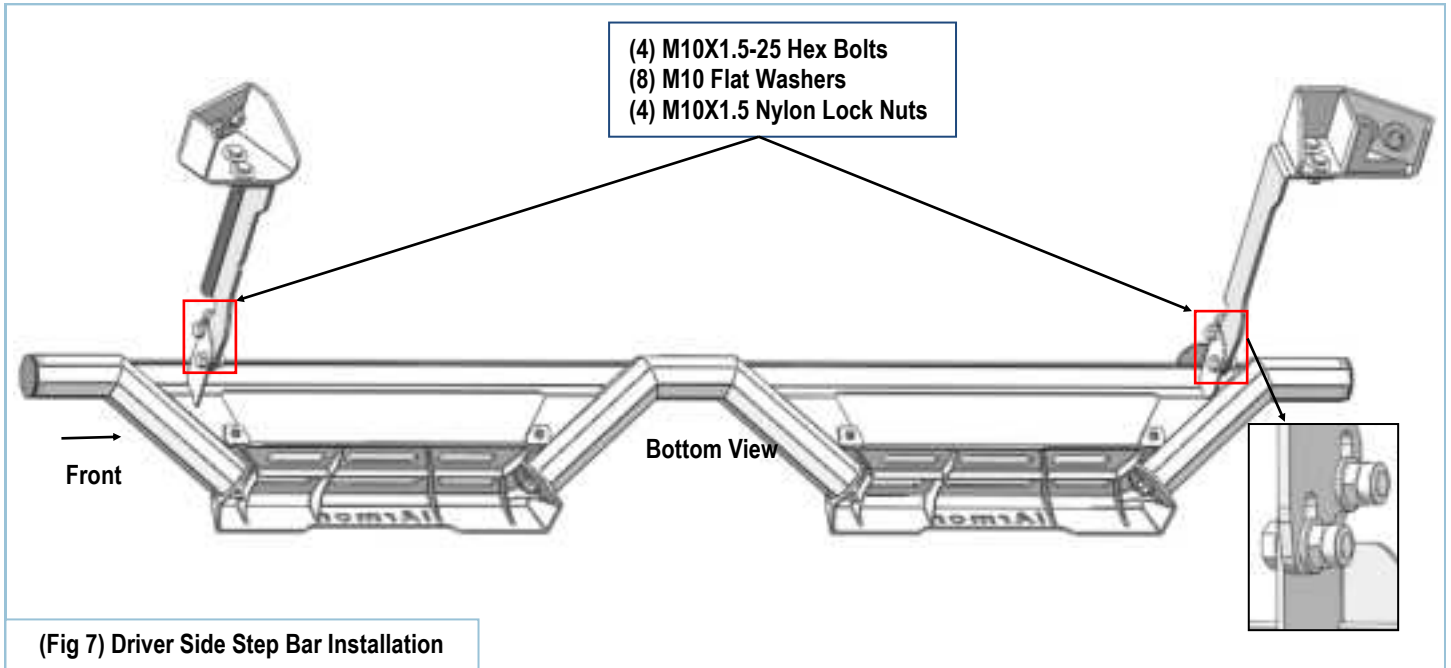

Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.
In order to protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.