



# Medium wall light

## INSTRUCTIONS


### INCLUDED

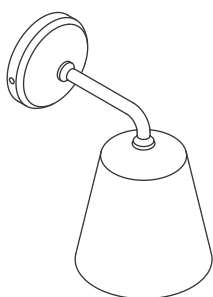


Light body x1

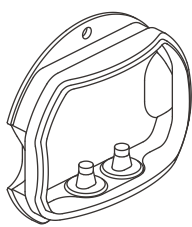

Wall mount x1

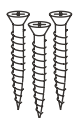


Wall screw x3

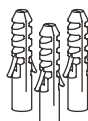

Anchor x3



2-terminal  
WAGO x1

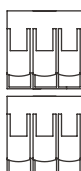


3-terminal  
WAGO x2



Hex key x1

### TOOLS YOU'LL NEED

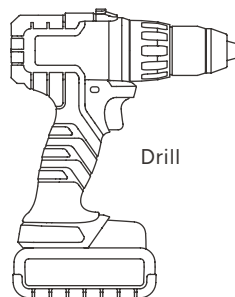

Drill




6mm drill bit




Crosshead screwdriver


## Medium wall light instructions

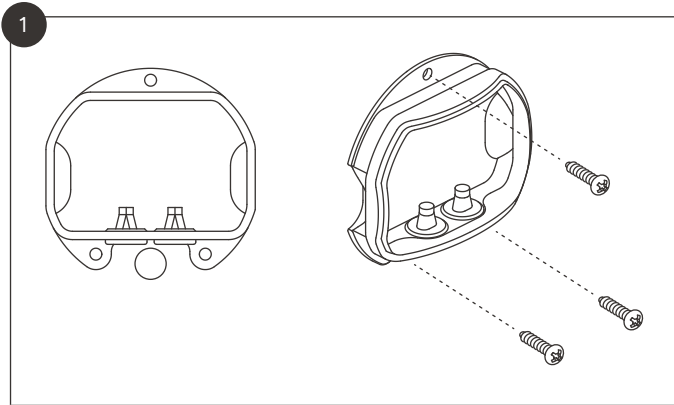


Install the wall light mount. See **page 4** for dimensions.

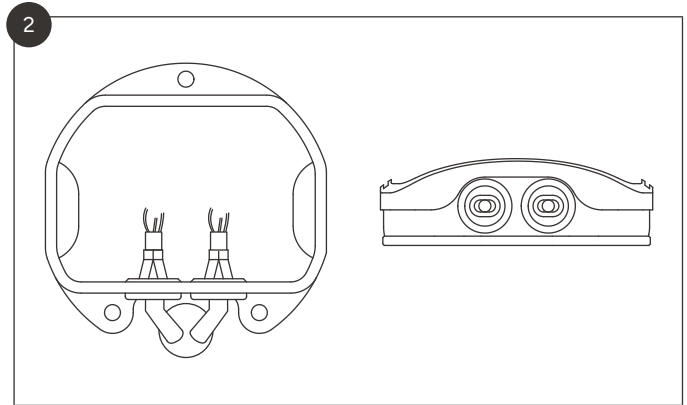

Push the wires through the grommet.

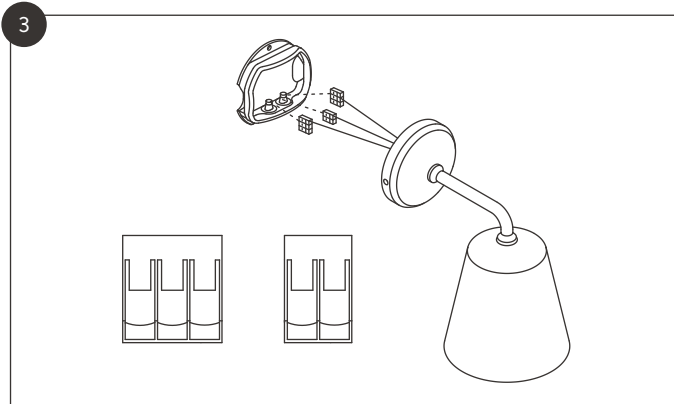


Connect the WAGOs inside the base.

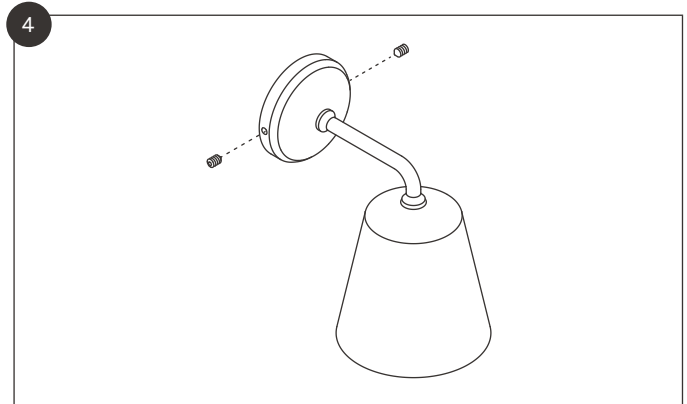

Tighten the grub screws.

## Medium wall light instructions


5

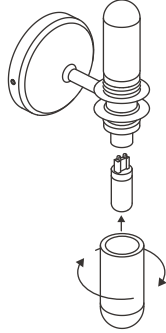


Unscrew the glass cover to fit the bulb.

**Note:** the glass cover protects the bulb in wet environments and is required for the IP rating. If the light is installed in a dry setting, you can remove the glass cover to increase the life expectancy of the bulb.


6

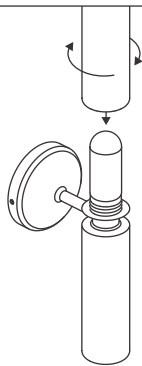

**Claremont:** screw the shade onto the body.

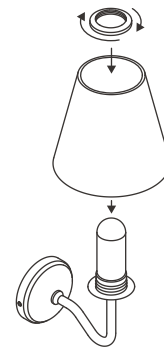

**Malvern:** use the shade ring to secure the shade.

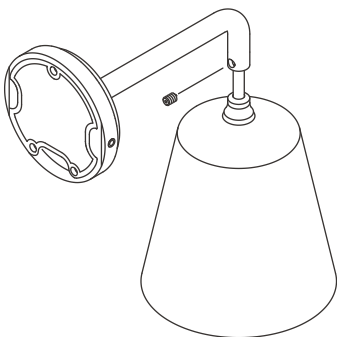

**Richmond (hanging):** use the grub screw to adjust the shade height.

