




Premium Floorstand with LED Light Add-On for 9-11" Tablets

PAD-LEDPARAF


INSTRUCTION - MANUAL

CONTENTS:

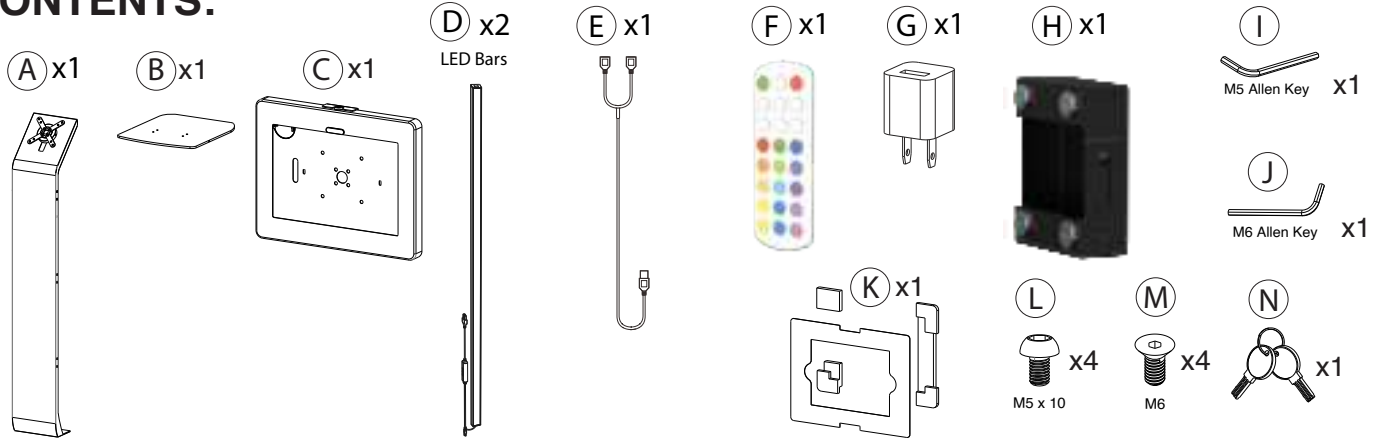


INSTALLATION:

1. Assembling floorstand base:

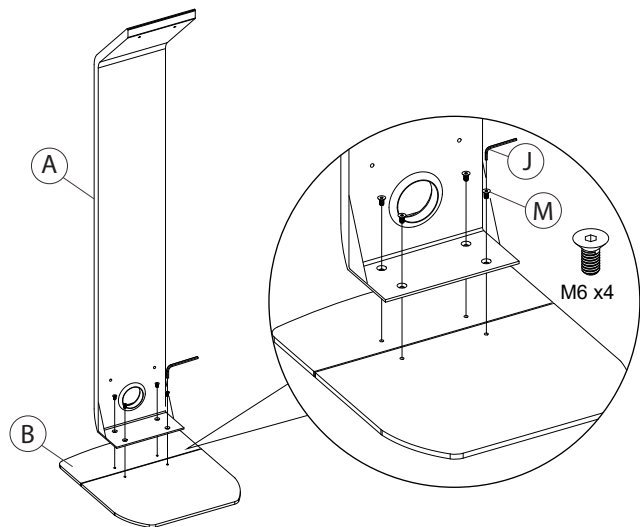

1A. Align the holes on the stand (A) with holes on the base (B) and turn in screws (M) with provided allen tool (J) until securely tightened. Shown above.


2. Cable routing:

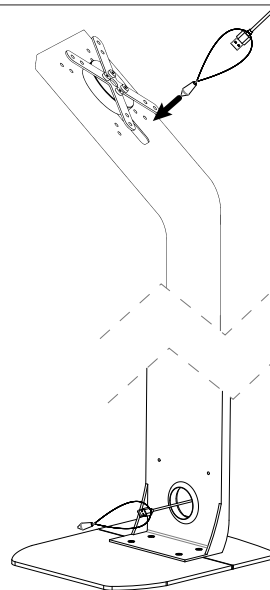

2A. To route a charge cable through the stand, attach the weighted pendant to your charge cable, then pass through the cutout at the top of the stand.


2B. When the cable reaches the bottom of the stand, pull through the hole at the stand back and remove the weighted pendant as shown.

3. Attaching enclosure to VESA plate:

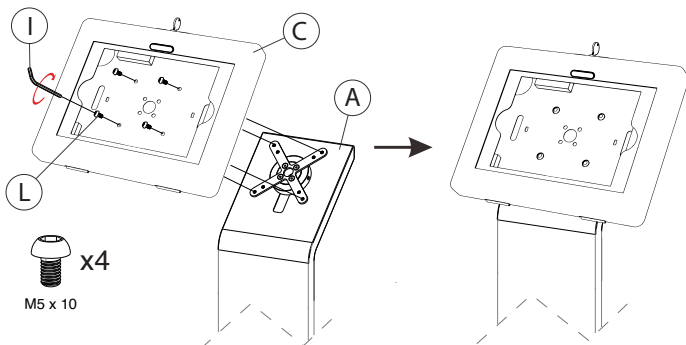


3A. Align enclosure (C) VESA holes to VESA plate holes in stand (A) and from the front of enclosure turn in screws (L) into the threaded VESA holes with provided allen tool (I) until securely tightened. Shown above.

4. Inserting tablet into enclosure:

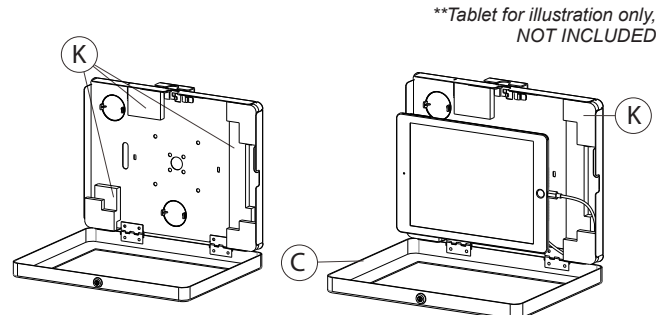


4A. Find the appropriate size foam padding (K) for the tablet you wish to use. Make sure device is compatible for the enclosure. If having power/data cord attached to tablet, slide it through the back of the foam as shown and out the opening in the back.

5. Optional - Placing blank sheet insert into enclosure:

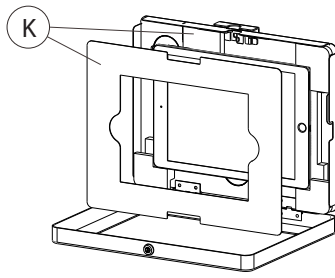


5A. Lay-in correct masking insert from bundle (K) as needed the correct fitted look for your device.

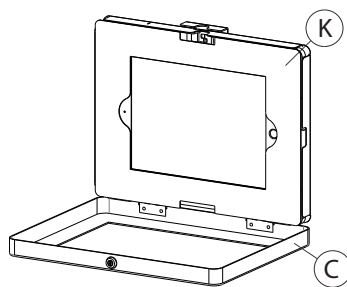


5B. Close and lock enclosure afterwards and you're set

****Tablet for illustration only, NOT INCLUDED**

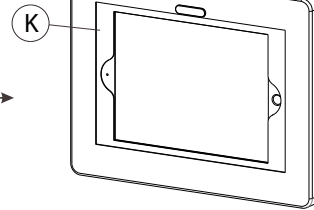

6. Removing back covers:


****Tablet for illustration only, NOT INCLUDED**

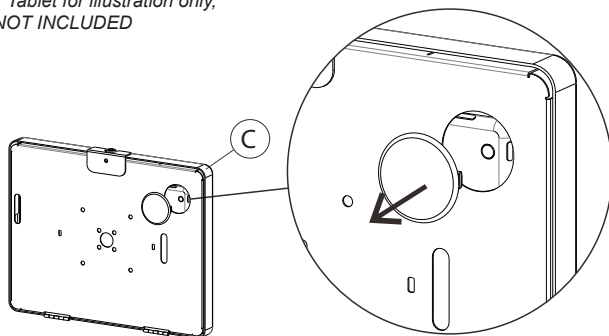


6A. When installing device into enclosure (C), identify where the camera is. Then simply remove and pop out the cover prior to mounting or setting up tablet to properly expose camera.

7. Setting up security:

****Tablet for illustration only, NOT INCLUDED**

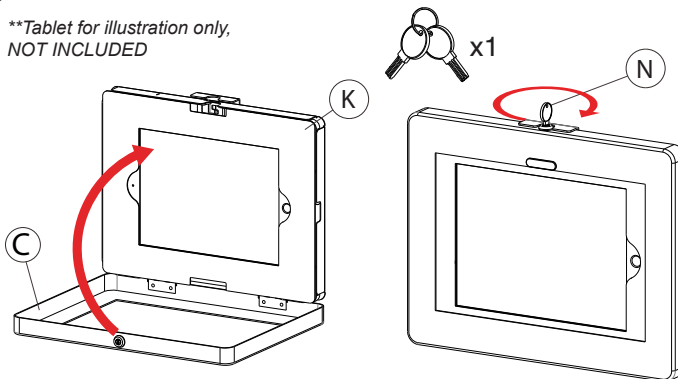


7A. Once the tablet device is set up, close the front lid of the enclosure (C).

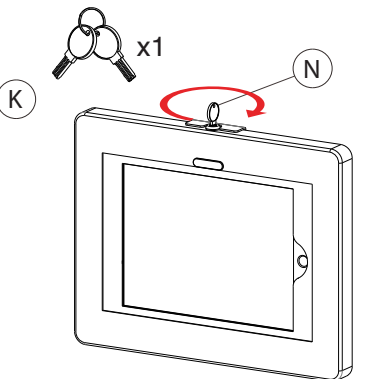


7B. Insert the key (N) in the keyhole on top of enclosure, and turn clockwise to lock the enclosure in place.

8. Setting Up LED Bar:

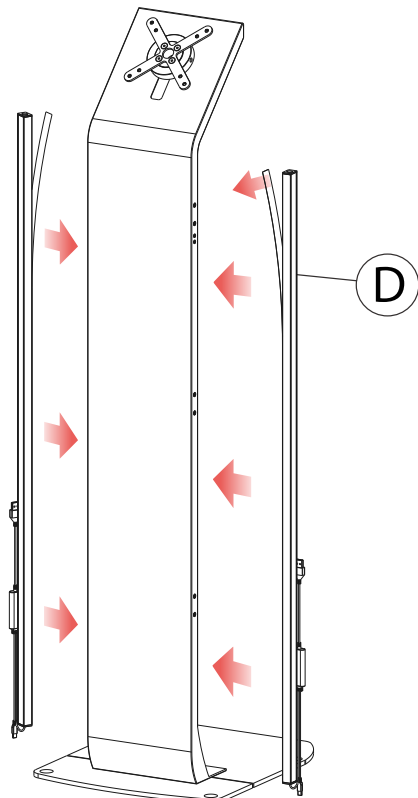


1A. Peel off the 3M adhesive sticker on the back of the LED light bar (D) as illustrated. Attach the LED bar onto the edge of the CTA floor stand with the wire end on the bottom side. Repeat same steps for the LED bar on the other side of the floor stand.

9. Attaching Wire Storage Component:

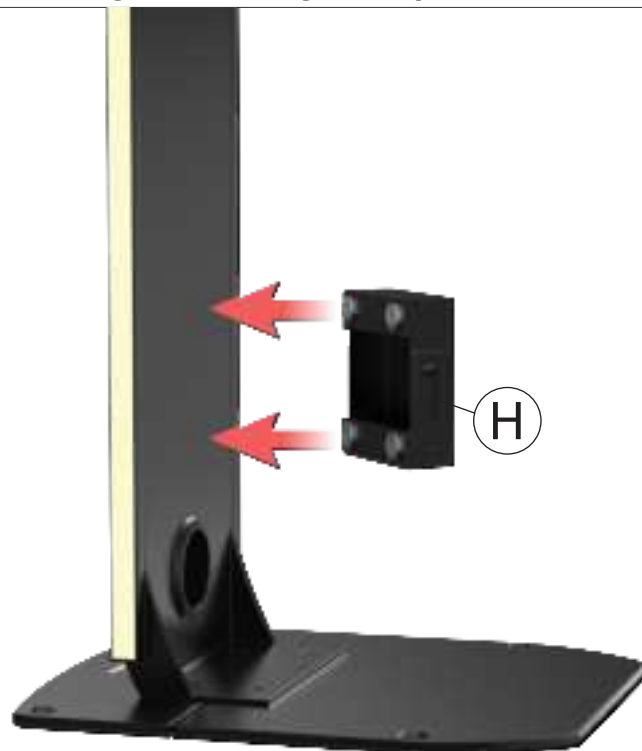


2A. Take the cable storage (H) and magnetically affix onto the backside of the floor stand as illustrated above. Be sure to have the openings at the bottom side when orienting storage component .

10. Cable Routing and Cable Management:

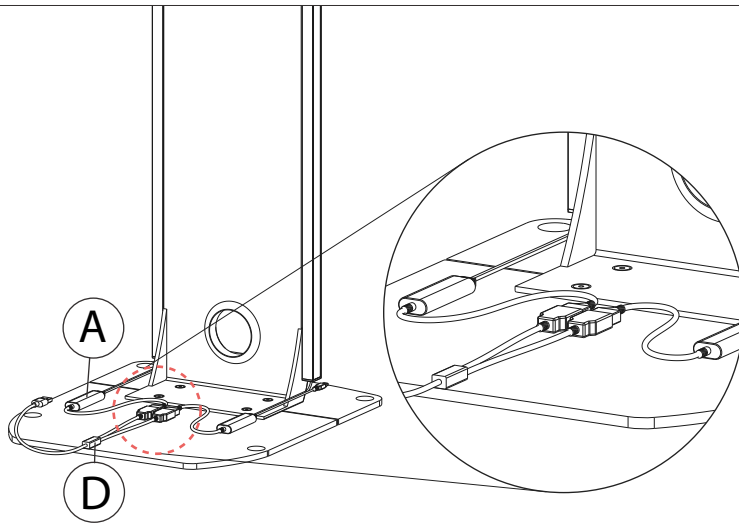


10A. Take the cables attached to the LED (A) and attach them to the bottom half power cable (B) via USB connection.

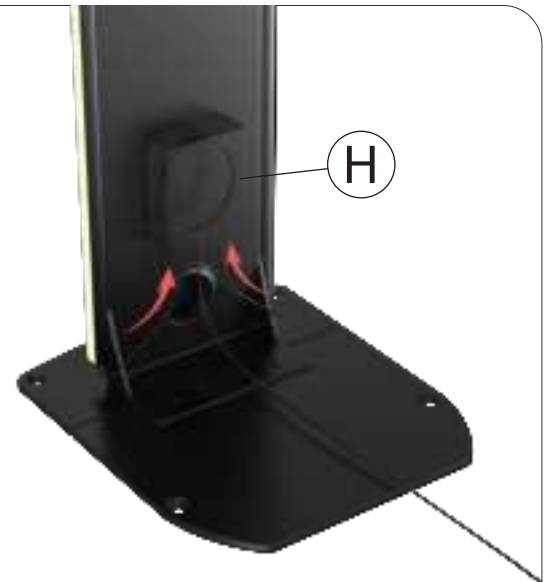


10B. Route all the cables into the cable storage component (E) as illustrated.

11. Cable Routing and Cable Management (Continued):

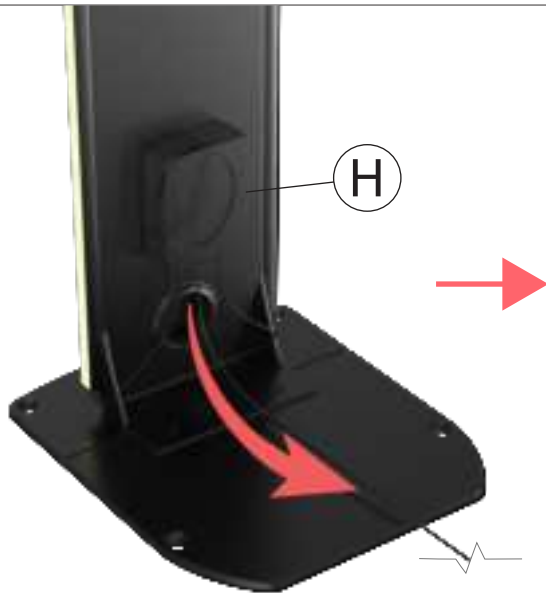

11A. Route the power cable out the bottom of the cable storage (H)

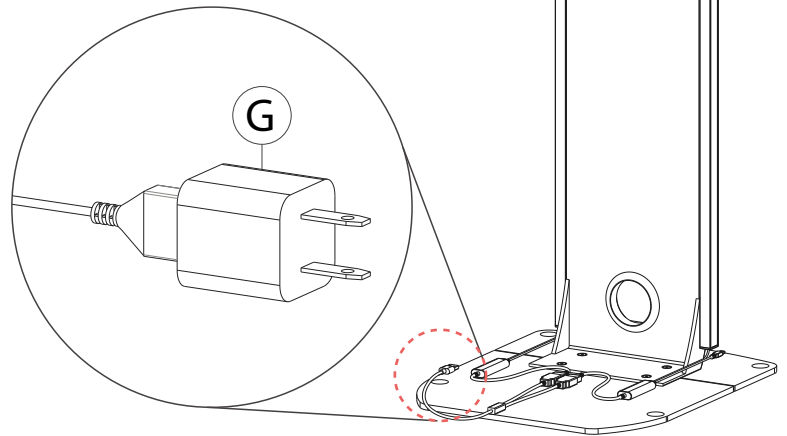

11B. Attach the power adapter (D) to the end of the cable as illustrated. Then plug into power source as needed.