




+ AWNING BRACKETS QUICK RELEASE

Instruction Manual






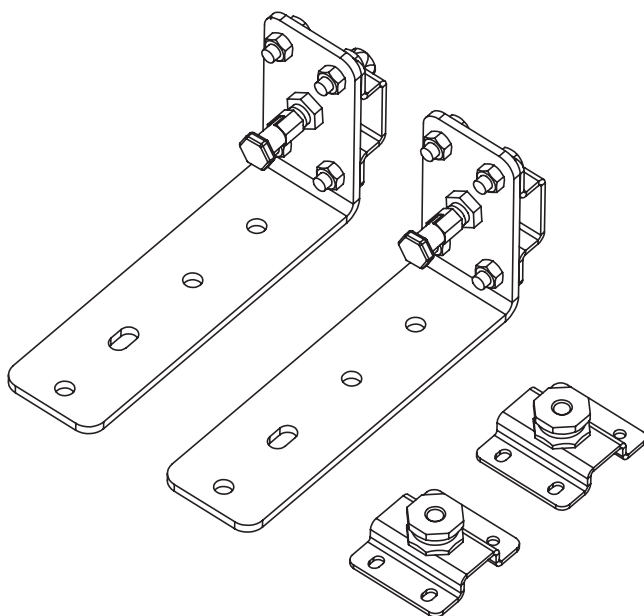

To ensure correct operation, please carefully read the manual before installation.

210MM

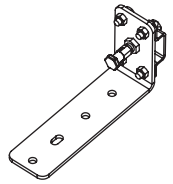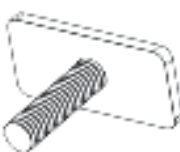

148MM

+ PARTS LIST

Bracket A 2 PCS 	Bracket B 2 PCS 
M8*30mm T Slot bolts 4 PCS 	M8 Nyloc Nuts 4 PCS 
M8 Washers 4 PCS 	M6*20mm Bolts 8 PCS 
M6 Nyloc Nuts 8 PCS 	

+ WARNING


Please read and understand all the following safety information prior to installing and using the awning brackets.

- The awning brackets are designed to fit XTM pullout awnings.
- Ensure that all the mounting brackets are installed correctly as per instructions. Inspect the connections periodically to ensure all bolts and nuts are tight.

+ BRACKETS ASSEMBLY


STEP 1

Using the M8 x 30mm T Slot bolts, washers and Nyloc nuts to assemble the Brackets A on the appropriate position of roof tray.

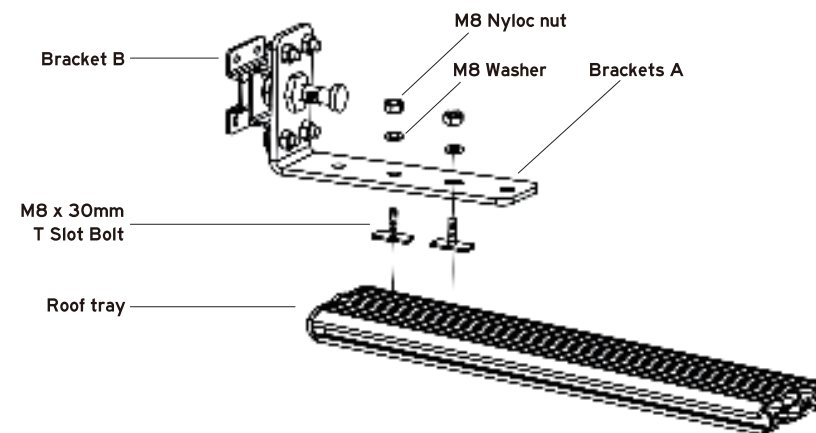


STEP 2

Attach the Brackets B to the awning board of the awning with the M6 x 20mm bolts and Nyloc nuts.

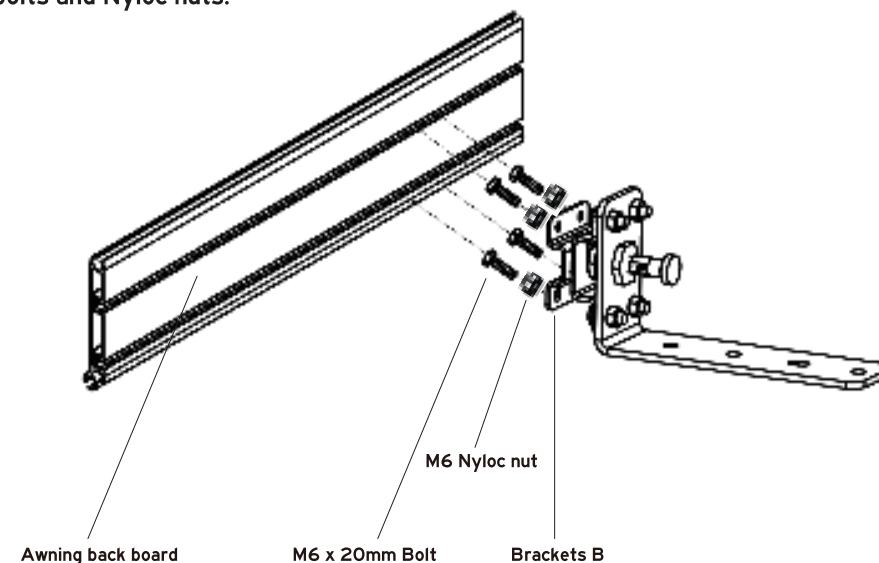

+ RELEASE AWNING INSTRUCTIONS

1. Pull out index plunger and rotate 90 degrees.
2. Lift the slot wheel mounting up then take it out from the Bracket A.

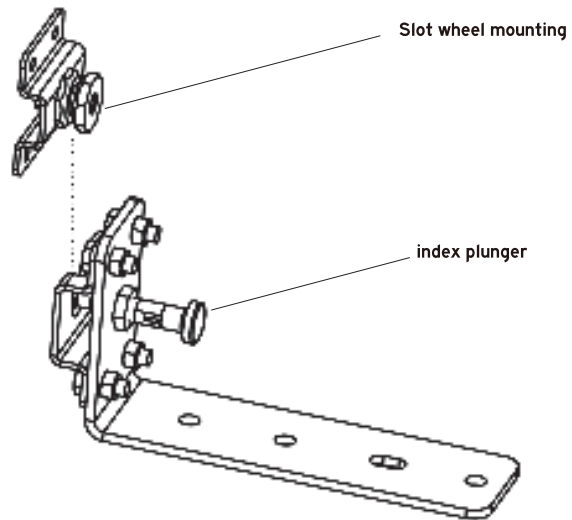

Remark:

To attach awning, just simply reverse the above steps.

PLU: 686791
CODE: QRK02
Manufactured and packaged for
SRGS PTY LTD
ABN 23 113 230 050
6 Coulthards Avenue,
Strathpine QLD 4500, Australia
MADE IN CHINA