

SMART HOME DATA CABLE TERMINATION KIT




Remove 2.5 - 3.8 cm of jacket.



Remove centre spline (CAT6).



Untwist pairs to jacket base, and align in order. Trim ends flat.

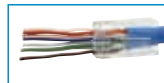

Slide cable into connector until fully seated. Verify wiring order.



Place assembly into FT-45™ tool. Squeeze handle closed.



IDEAL INDUSTRIES EMEA

Unit 3, Europa Court, Europa Boulevard, Westbrook, Warrington, WA5 7TN. UK.
Tel: +44 (0)1925 44 44 46, Email: eur.sales@idealindustries.com, www.idealind.com

IDEAL Industries Germany GmbH

Esslinger Strasse 7, D-70771 Leinfelden-Echterdingen, Germany



RoHS **ISO 9001**
COMPLIANT Registered Quality Management System