


KIT PREPARATION

ATTACHING THE REAR BRACKET:

Align the two (2) screw emboss locations to the matching locations on pocket. When aligned, slide the bracket together. Screw the two (2) supplied screws to screw emboss locations

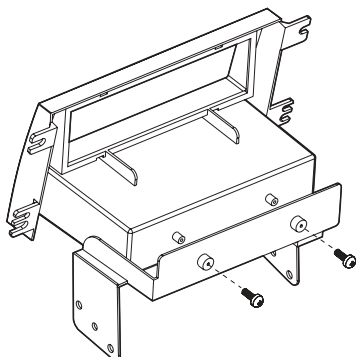


MOUNTING THE RADIO

IN-DASH DIN PULLOUT, DETACHABLE FACEPLATE, (DIN-E) RADIOS

The kit panel comes DIN ready. Follow the instructions supplied with the radio, secure the mounting kit. Install the assembly in the dash and use the rear support strap supplied with the radio to support the rear of the radio.

CAUTION:

Rear supporting the radio adds to the installation's structural integrity.

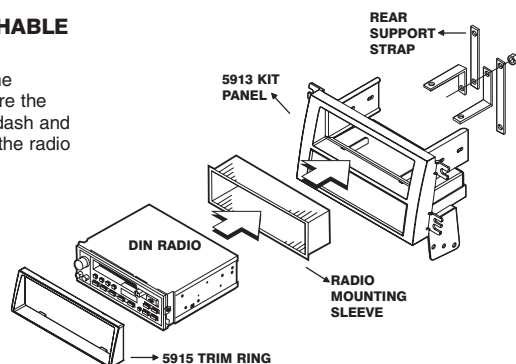


DIN-ISO MOUNT:

(DIN-E Radio with Side Mounting Holes)

1. Snap the DIN-ISO side mounting brackets to the back of the mounting panel (1 left and 1 right). Use supplied hardware to bolt them to the back of the kit panel.
2. Snap the DIN-ISO trim ring into the radio opening.
3. Load the radio from the REAR of the mounting panel until the nose piece of the radio comes through the front of the kit.
4. Use the 5MM screws to secure the radio from the sides.

CAUTION:

Rear supporting the radio adds to the installation's structural integrity.

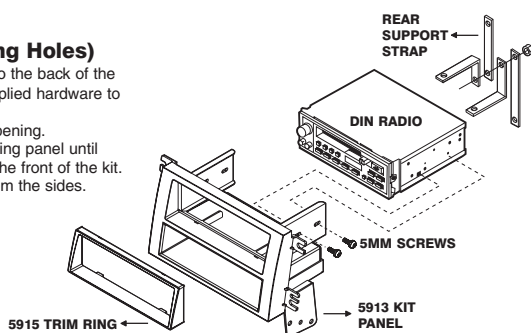

DASH DISASSEMBLY


RADIO REMOVAL

1. Apply parking brake, and lower shifter all the way down to 1st gear.
2. Using panel removal tool, unsnap dash bezel surrounding radio, lift away, disconnect, and remove.
3. Extract (5) Philips head screws securing radio, lift away, disconnect, and remove.

SCOSCHE®

HA1578

IN-DASH INSTALLATION KIT FOR 2006 HONDA RIDGELINE

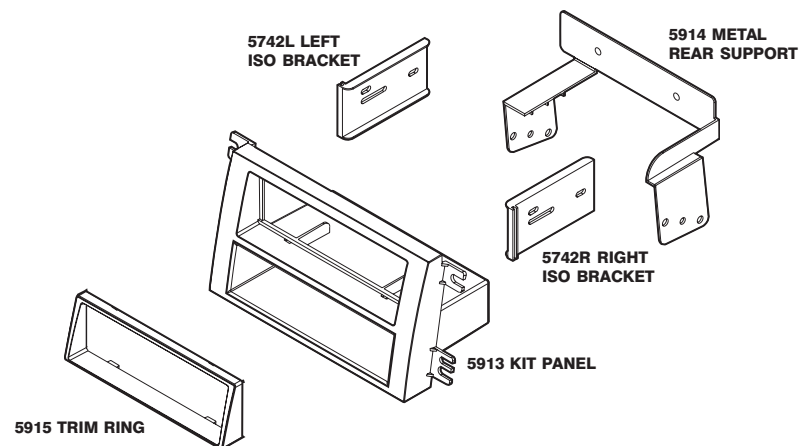

INTRODUCTION / PRELIMINARY

Thank you for purchasing the Scosche HA1578 Kit. This kit was manufactured with the highest of quality standards.

CAUTION:

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIR BAG WIRING - AIR BAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

HA08
1998-UP Honda



LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (HA1578) in 2006 Honda Ridgeline. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.