

F216

INSTRUCTION MANUAL

4MODERN
HOME

Dear Customer:

Thank you for choosing 4modernhome! We appreciate your business. Should you have **any questions** or encounter **any issues**, please don't hesitate to contact us. You can reach us via email at support@4modernhome.com or by calling **469-312-6428**. Our team is dedicated to ensuring your complete **satisfaction** with your purchase. We value your feedback, as it helps future customers in making informed decisions. We encourage you to share your experience by leaving a brief product review on the platform where you made the purchase. Once again, thank you for choosing 4modernhome!

Best regards,


[4Modernhome/Support Team]

Warning: If any special control devices are used with this fixture, follow the instructions carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a qualified electric contractor.

Warning: California Residents Proposition 65
This product contains lead, a chemical known to the state of California to cause cancer and birth defects or other reproductive harm. Do not place the product in your mouth. Wash your hands after handling this product.

Caution: It is highly recommended to get an electrician to install this light. Please make sure to turn the electricity off at the main circuit breaker before beginning installation. All glass is fragile. Use care when handling glass component(s) and/or lamp(s).

Applicable bulb type:
A19,A60,T45,ST58...(Excluding bulb)

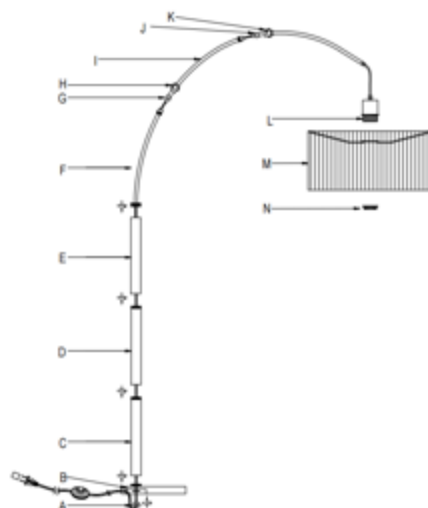

1. Unpack all parts from cartons carefully.
2. Carefully pull-out excess power cord from the lamp base while assembling to prevent the cord from becoming twisted.
3. Tighten the tube(C) into the base (B) until tight.
4. Tighten the tube(D) into the tube(C) until tight.
5. Tighten the tube(E) into the tube(D) until tight.
6. Tighten the bend tube(F) into the tube(E) until tight. Insert the small part(G) into the end of bend tube(F), put screw part(H) in and screw with the bend tube(F) together.
7. Insert the small part(J) into the end of bend tube(I), put screw part(K) in and screw with the bend tube(I) together.
8. Place the shade(M) into the lamp socket(L) and tighten by socket ring(N).
9. Adjust the lamp socket(L)/shade(M) to one side of base centerline and lock base with butterfly nut(A).

CAUTION : Risk of fire



Please read all instruction carefully. Before you proceed to install, make sure that the power supply is turned off and remains off until installation is completed.

PARTS INCLUDED

Code	Part Description	QTY
A	Butterfly nut	1
B	Lamp Base	1
C&D	Tube	1
E	Tube	1
F&I	Bend Tube	1
G&J	Small part	1
H&K	Screw part	1
L	Socket	1
M	Shade	1
N	Socket ring	1