


MAKE A DIFFERENCE

Rear Bumper

BXG.5303 (INSTALLATION INSTRUCTION)


ATTENTION • Please verify all parts are present and read instructions carefully before starting installation. Please feel free to contact your distributor if you have any kind of question about your purchase.

OCCUPIENTS

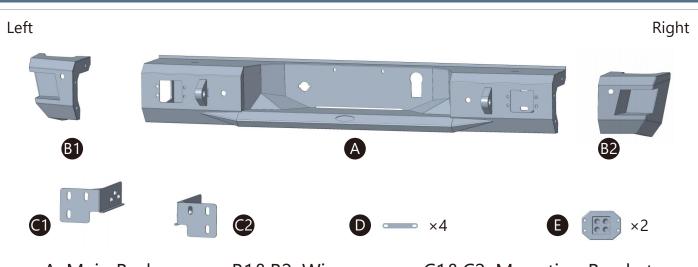

A: Main Body B1&B2: Wings C1&C2: Mounting Brackets E: Lights

Qty	Part Name	Size(mm)	Picture	Qty	Part Name	Size(mm)	Picture
12	Hex Bolt	M12×30		18	Flat Washer	M12×30×2	
8	Button Bolt	M6×16		12	Hex Nut	M12	O
8	Button Bolt	M4×20	<u>(</u>	2	L-Wrench	M4	
12	Split Lock Washer	D12	0	2	EVA	M4	

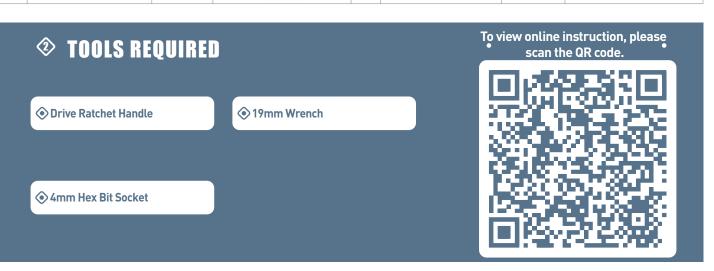

③ INSTALLATION INSTRUCTION

Remove the factory bumper, and retain the factory bolts.



Secure the bumper to the vehicle frame. Adjust the bumper to the desired position.

Step 4

Step 5

Step 6

Repeat this step on the other side of the vehicle.

Finally, tighten all bolts.

•(6) Factory Bolts



Step 2

Step 1


First, stick the EVA to the main body. Assemble your Hooke Road bumper.

Tighten the hardware. Repeat this step on the other side of the bumper.

•(6) M12×30 Hex Bolts

- •(6) M12×30×2 Flat Washers
- •(6) D12 Split Lock Washers •(6) M12 Hex Nuts


•(2) EVA

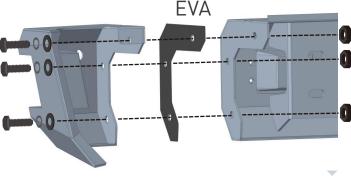

Install the lights to the bumper.

Repeat this step on the other side of the bumper.

•(8) M6×16 Buttom Bolts

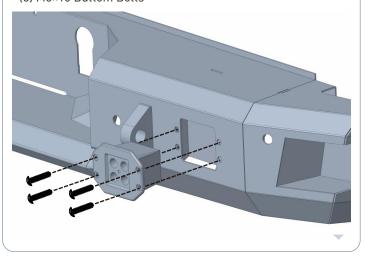


Step 3

Secure the mounting bracket to the bumper. Do not fully tighten to allow adjustability.

Repeat this step on the other side of the bumper.

- •(6) M12×30 Hex Bolts
- •(12) M12×30×2 Flat Washers
- •(6) D12 Split Lock Washers
- •(6) M12 Hex Nuts

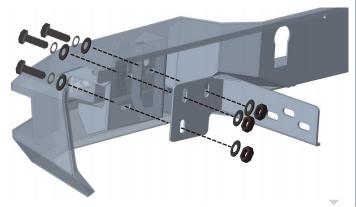

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!



