



MAKE A DIFFERENCE

Rear Bumper

BXG.5303

(INSTALLATION INSTRUCTION)

ATTENTION • Please verify all parts are present and read instructions carefully before starting installation.
• Please feel free to contact your distributor if you have any kind of question about your purchase.

1 CONTENTS

Left

Right

**B1****A****B2****C1****C2****D**

x4

E

x2

A: Main Body

B1&B2: Wings

C1&C2: Mounting Brackets

D: Sensor Brackets

E: Lights

Qty	Part Name	Size(mm)	Picture	Qty	Part Name	Size(mm)	Picture
12	Hex Bolt	M12×30		18	Flat Washer	M12×30×2	
8	Button Bolt	M6×16		12	Hex Nut	M12	
8	Button Bolt	M4×20		2	L-Wrench	M4	
12	Split Lock Washer	D12		2	EVA	M4	

2 TOOLS REQUIRED

◆ Drive Ratchet Handle

◆ 19mm Wrench

◆ 4mm Hex Bit Socket

To view online instruction, please
scan the QR code.



3 INSTALLATION INSTRUCTION

Step 1

Remove the factory bumper, and retain the factory bolts.



Step 4

Secure the bumper to the vehicle frame. Adjust the bumper to the desired position. Repeat this step on the other side of the vehicle.

Finally, tighten all bolts.


- (6) Factory Bolts



Step 2

First, stick the EVA to the main body. Assemble your Hooke Road bumper. Tighten the hardware. Repeat this step on the other side of the bumper.

- (6) M12×30 Hex Bolts
- (6) M12×30×2 Flat Washers
- (6) D12 Split Lock Washers
- (6) M12 Hex Nuts
- (2) EVA

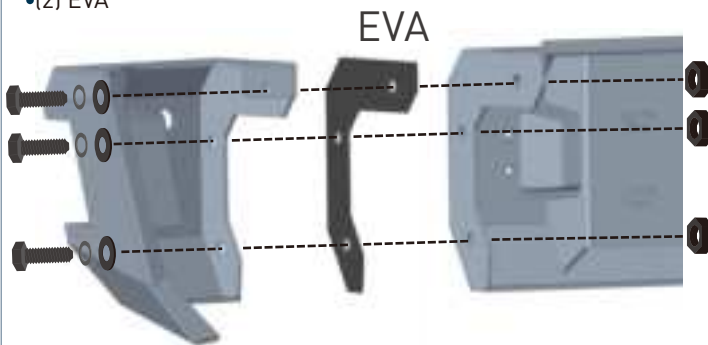


Step 5

Install the lights to the bumper.

Repeat this step on the other side of the bumper.

- (8) M6×16 Bottom Bolts

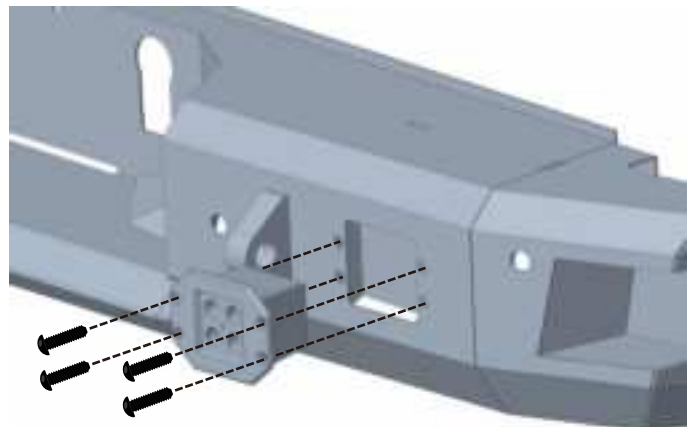


Step 3

Secure the mounting bracket to the bumper.

Do not fully tighten to allow adjustability.

Repeat this step on the other side of the bumper.

- (6) M12×30 Hex Bolts
- (12) M12×30×2 Flat Washers
- (6) D12 Split Lock Washers
- (6) M12 Hex Nuts

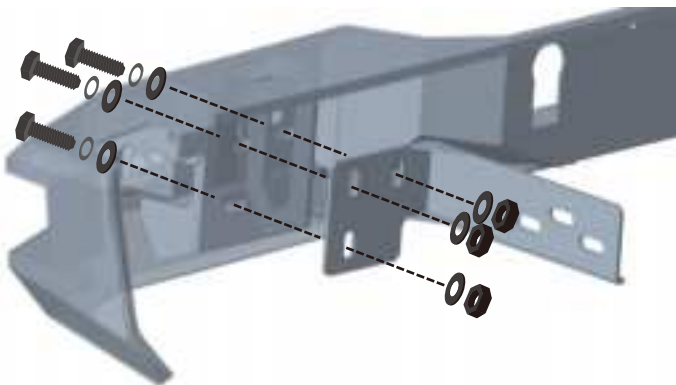

Step 6

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!

