



P-BUA-SILVERADO

Wiring Harness for Backup Alarm 2016-2021 Chevrolet Silverado

INSTALLATION MANUAL





Thank you for purchasing the **P-BUA-SILVERADO**

Table of Contents

Page 3 - Tools Required For Installation

WHAT'S INCLUDED:

- Vehicle Specific Wire Harness (P-BUA-SILVERADO)

COMPATIBLE ACCESSORIES:

- 97dB Backup Alarm (BUA-97C)
- 97dB White Noise Backup Alarm (BUA-97WNC)



TOOLS REQUIRED:




1. 10mm Nut-setter
2. Impact Drill

STEP 1:

Locate the OEM tail lamp connector that is below the truck

- The connector is to the left of the vehicle's spare tire on the cross member

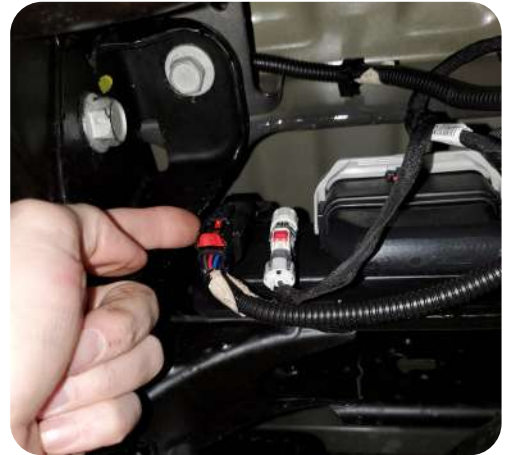

STEP 2:

Unplug the OEM connector



STEP 3:

Install the P-BUA-SILVERADO harness between the two OEM connectors



STEP 4:

Use an impact drill and 10mm nut-setter to install a compatible backup alarm on the metal surface that is below the truck's tail lamp cavity (just outside and above the driver side frame rail).

Note: (2) 10mm TEK screws are provided with the compatible backup alarm



STEP 5:

Plug the backup alarm connector into the mating connector on the P-BUA-SILVERADO harness

STEP 6:

Enter the Vehicle Settings menu through the driver's information center

- Change the remote entry exterior lighting to "off"
 - This will prevent the backup alarm from sounding when the vehicle is unlocked with the OEM keyless entry transmitter

STEP 7:

Test the backup alarm



Phone – 866-766-2267

E-Mail – support@aampglobal.com



EchoMaster is a Power Brand of AAMP Global

EchoMaster.com