

THE THERMOKENNEL


Thank you for purchasing a Kelvin Thermokennel. We hope your Dog enjoys it. The product assembles with a couple of tools. A Screwdriver (Pozi) and a wrench. In keeping with our approach we assume you either have these, or can get them from someone you know. Rather than sending you a single use tool that ends up in the third drawer down collection of ancient relics.

Rosie & the Team

BEFORE YOU START

Before you start get a couple of things organised to make your life easy. You will need a screwdriver and a wrench or spanner (to suit Nylock nut). Also a couple of pieces of 4x2 or timber to sit the kennel on when you put the bolts on.


① WRENCH OR SPANER



③ 4 X 2 TIMBER



② POZI or Phillips SCREW DRIVER



FASTENERS

Ⓚ M8 X 25 PAN POZI SCREW
x 8



Ⓛ M8 FLAT WASHER
x 16



Ⓜ NYLOC NUT
x 8




COMPONENTS


Ⓐ EXTERNAL FLOOR
x 1



Ⓑ INSULATION FLOOR
x 1




Ⓒ INTERNAL FLOOR
x 4



Ⓓ INTERNAL SHELL
x 1



Ⓔ INSULATION WALL
x 1



Ⓕ EXTERNAL SHELL
x 1



Ⓖ DOOR FLAP
x 1



Ⓗ DOOR FLAP STRAP
x 1







 <https://kelvin.dog>

 Kelvin Thermokennel



 info@thermokennel.co.nz

 kelvinthermokennel

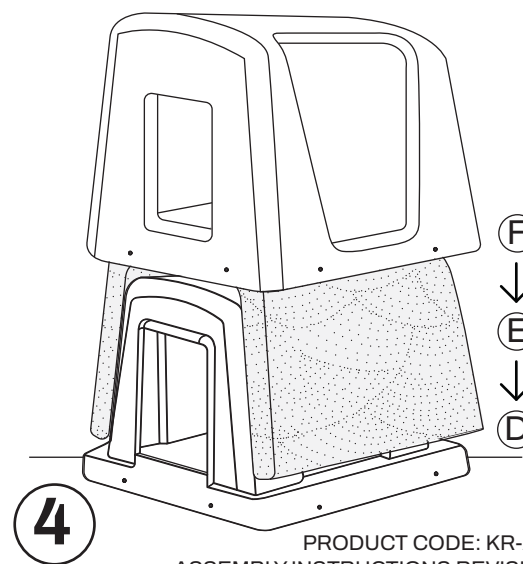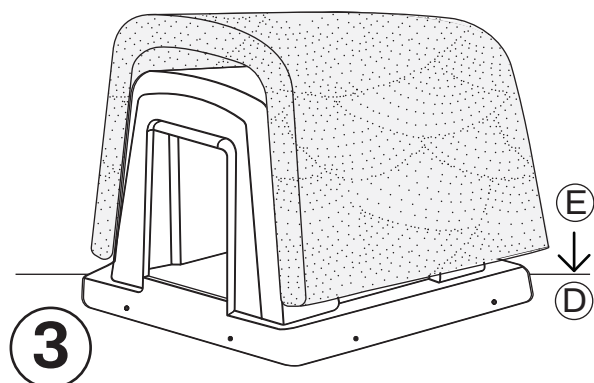
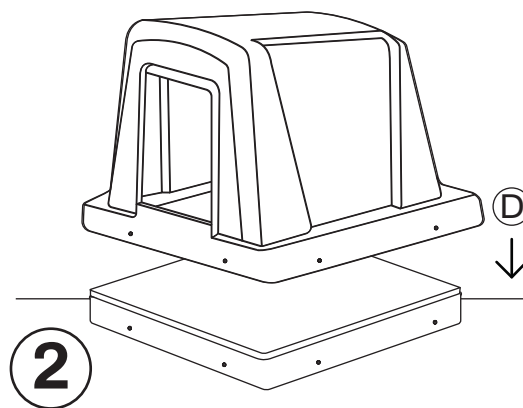
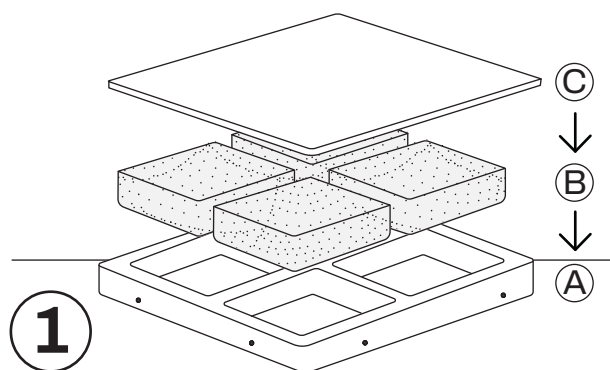


PRODUCT CODE: KR-AP-0-1
ASSEMBLY INSTRUCTIONS REVISION 1.0



5 ALIGN BASE

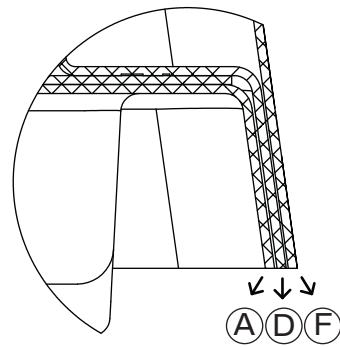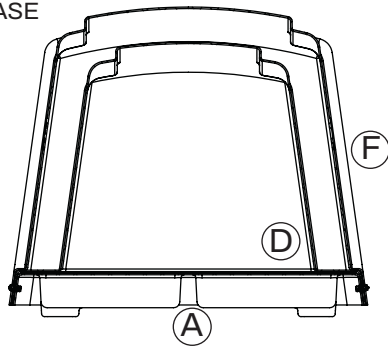


6 INSERT M8X25 + M8 FLAT WASHER

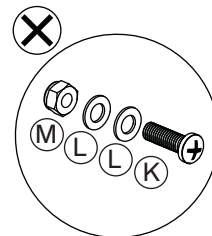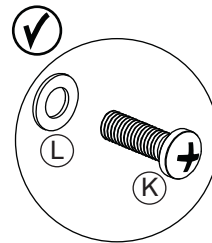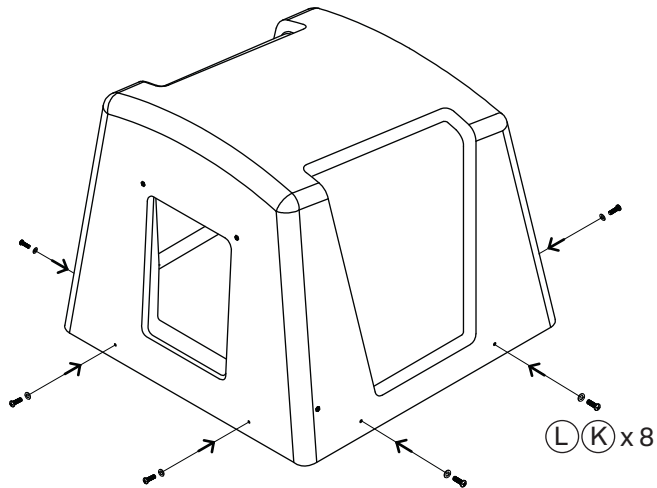

7 ROTATE AND REST ON THE BACK SIDE

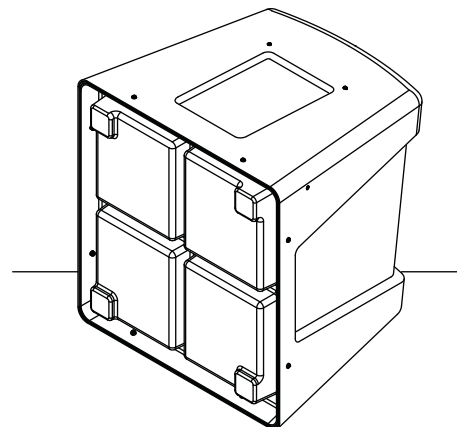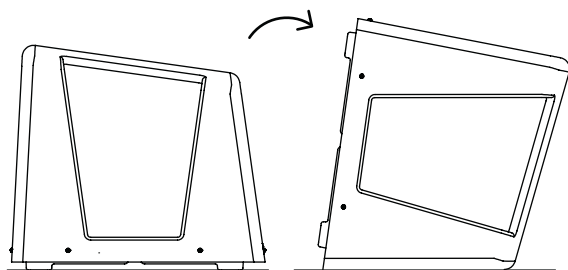

8 ADD M8 FLAT WASHER + NYLOC NUT

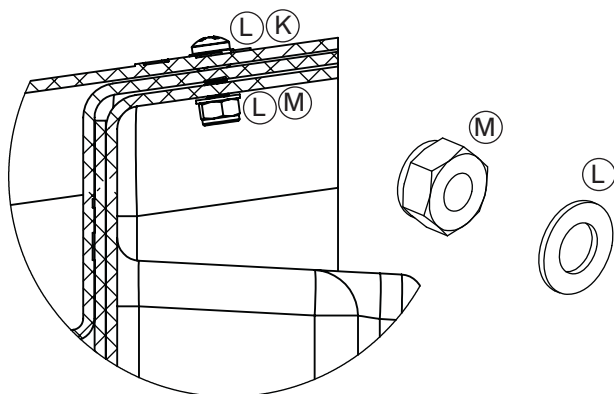

USE TOOLS TO TIGHTEN

