
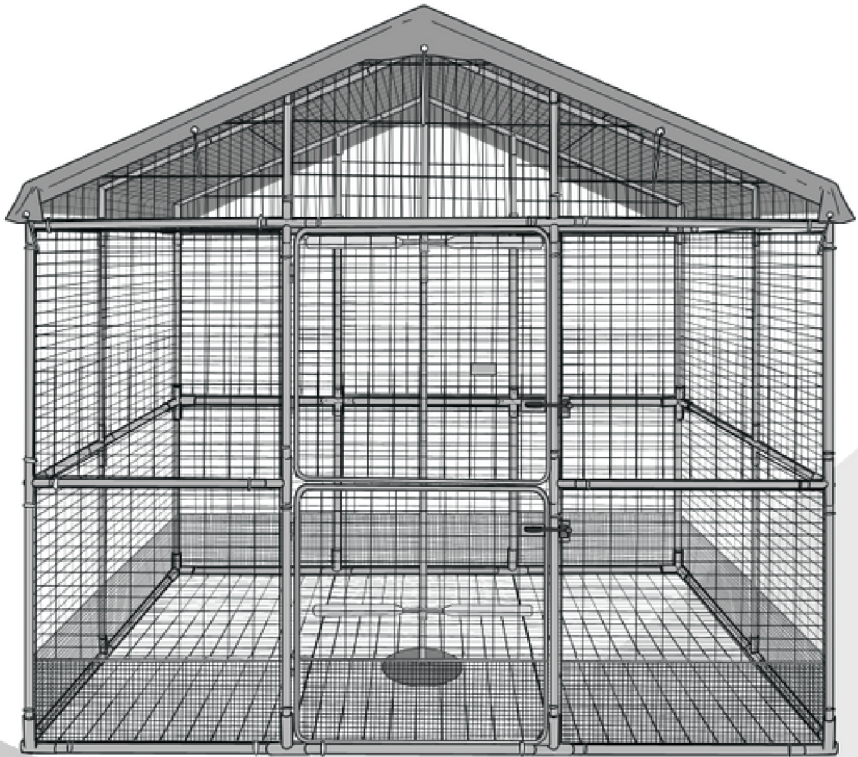



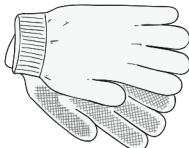


BEAK BOUTIQUE


Installation Instructions

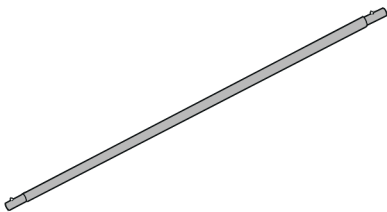

1. Prepare:


BOX 0	BOX 1
 4X Bottom Corner  5X Center T  1X Door Stop  1X Gloves	 10X Snap -In Tubes

2. Lay Out On the Ground

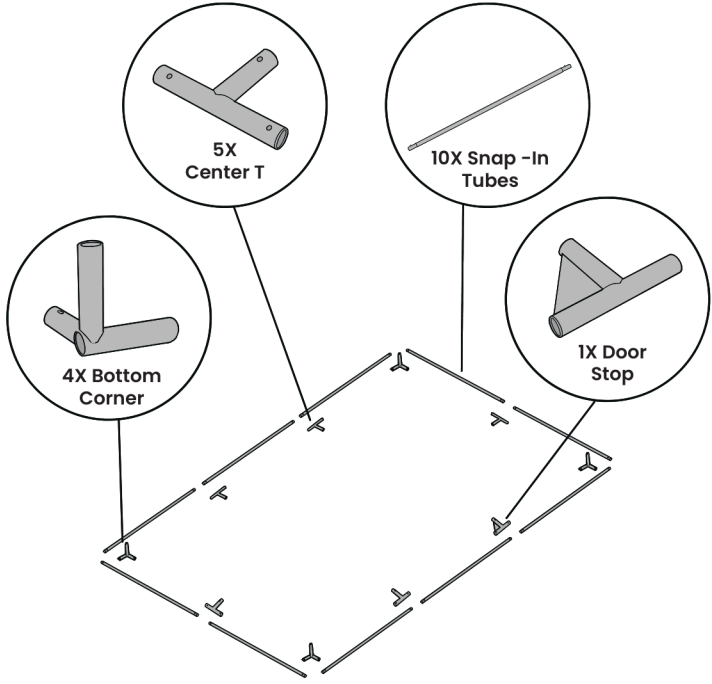


Important! Now is the time to make sure you chose the perfect spot for your chicken run


3. Put on Your Work Gloves

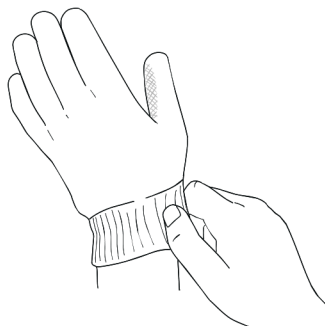




4. Connect the Foundation

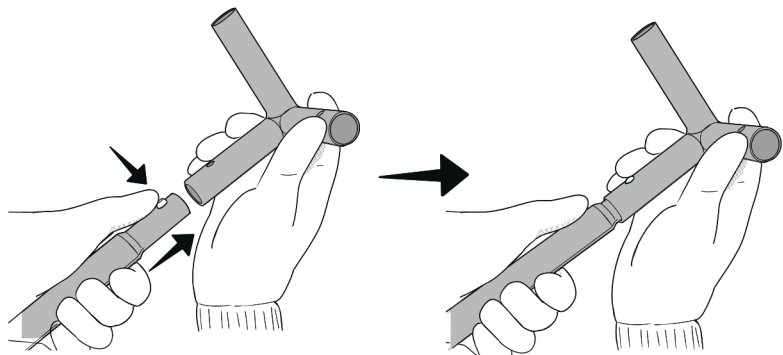


5. Choose Best Location for the Beak Boutique

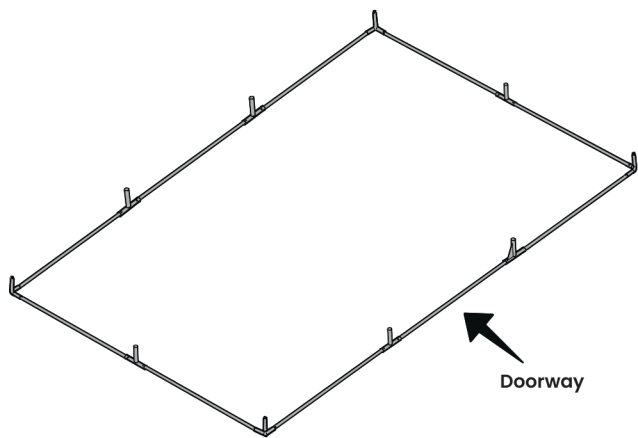


6. Prepare:

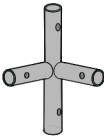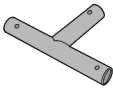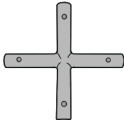BOX 2 – Lower Wall	BOX 0 – Connections				
 17X Snap -In Tubes	 Doorway Lock	 Doorway Hinge	 4X Corner	 2X Center T	 4X Cross
These parts do not have silver pins					



7. Insert Hinge & Door Lock

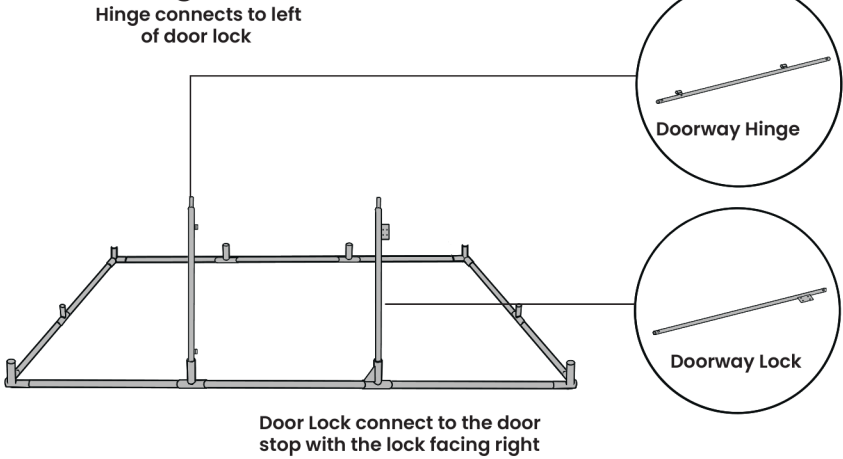



8. Insert 8 Vertical Tubes

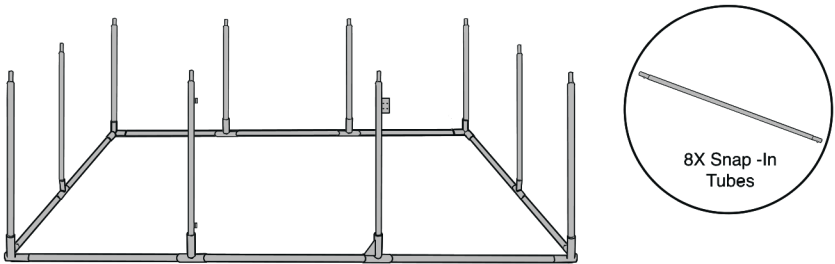



9. Connect T to Hinge and Lock Tubes

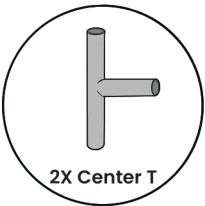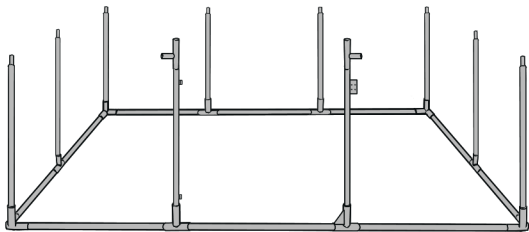



10. Install Corners

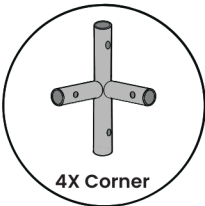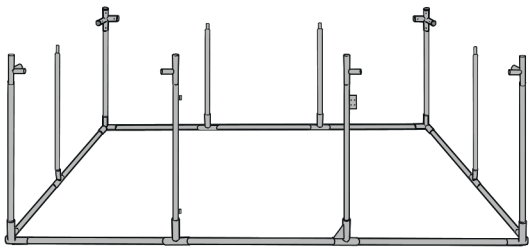

11. Install Crosses

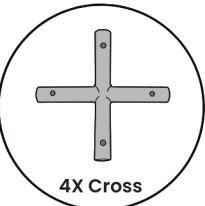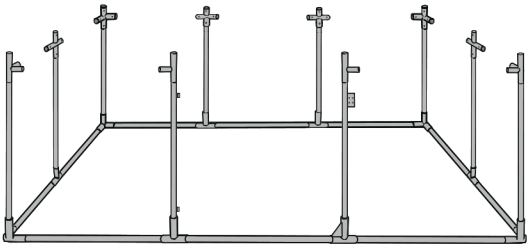


12. Install 9 Horizontal Tubes

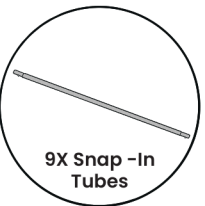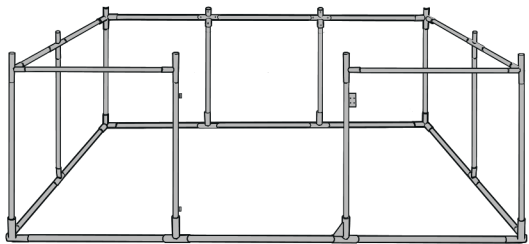

13. Prepare

BOX 3 - Upper Wall

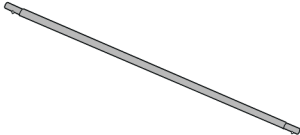

8X Snap-In Tubes




Doorway Lock



Doorway Hinge

14. Insert Hinge & Door Lock

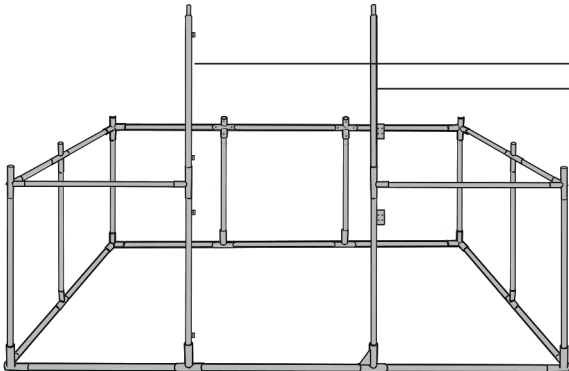





Doorway Hinge



Doorway Lock





15. Insert 8 Vertical Tubes

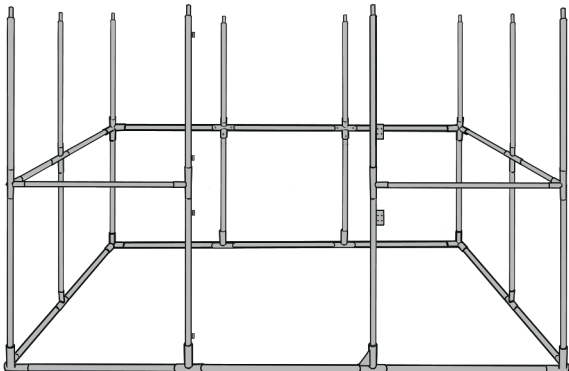

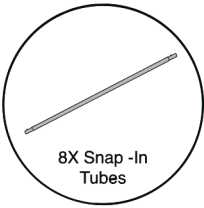


8X Snap-In Tubes


16. Prepare

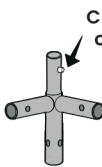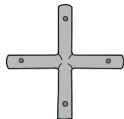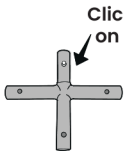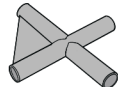BOX 0 - Connectors	BOX 3
 Click Pin on Top   Click Pin on Top  4X Roof Corner 3X Cross 2X Roof Cross 1X Door Stop	 10X Snap-In Tubes


17. Install Door Stop Cross

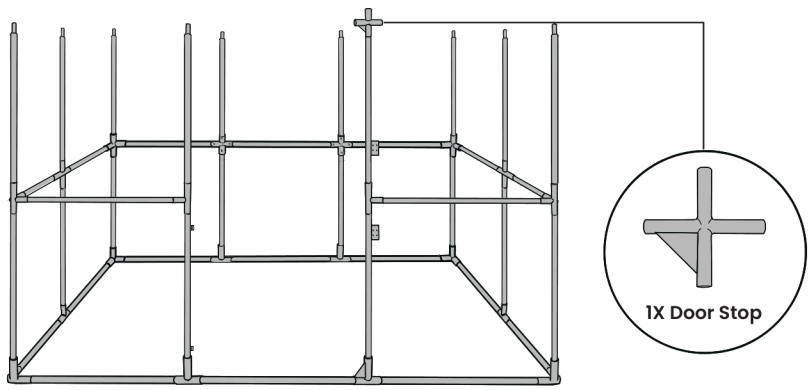



18. Install Cross Connectors

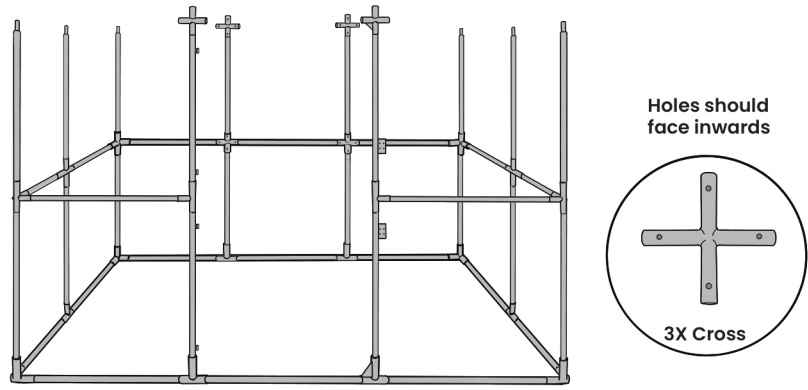



19. Install Roof Crosses

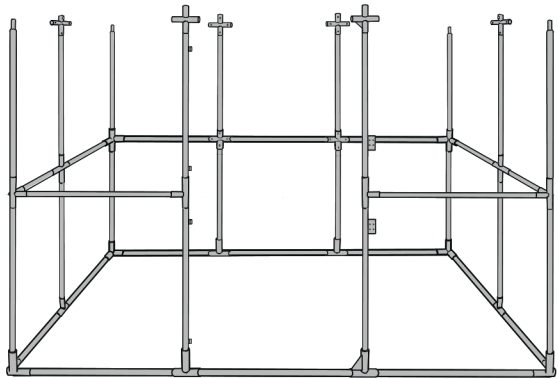

20. Install Corner Connectors

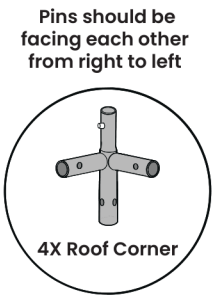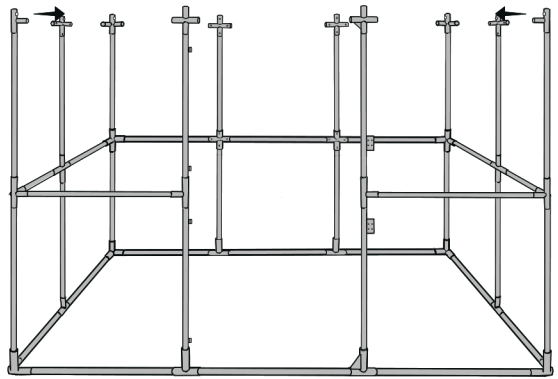


21. Install Snap -In Tubes

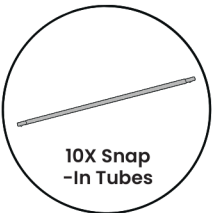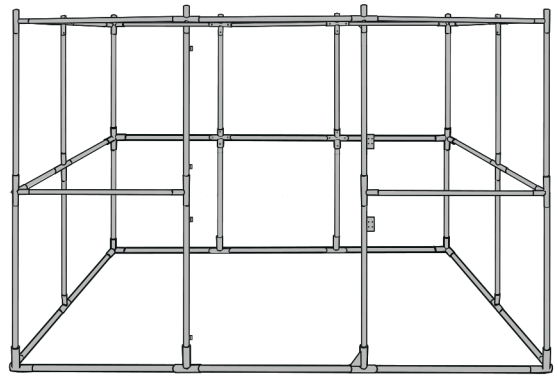


22. Prepare

BOX 4 - Roof

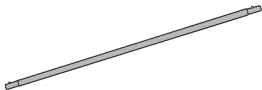


2X Snap-In Tubes

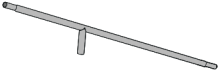

4X Beam Middle Tubes



4X Beam Edge Tubes

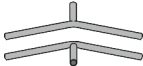

2X Side Beam Cross




1X Center Beam Cross




4X Short Tubes


23. Connect Front Beam

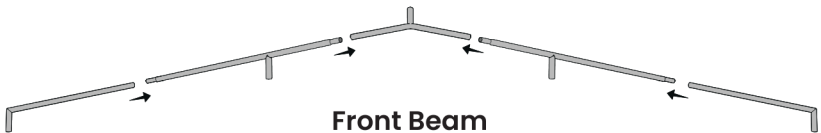



24. Connect Back Beam

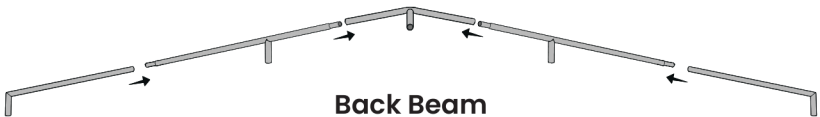



25. Connect Center Beam

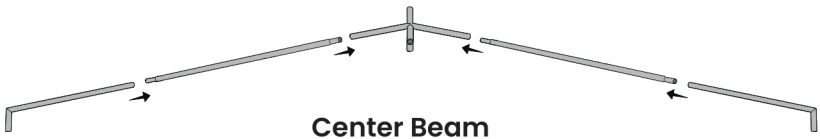



26. Insert Short Tubes

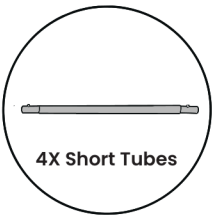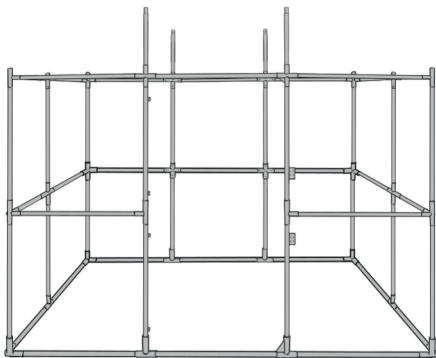


27. Insert 3x Beams

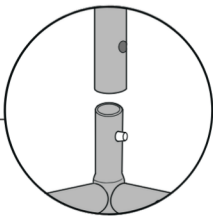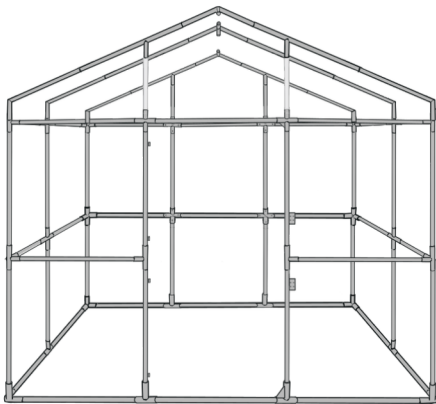

28. Install 2x Crossbeams

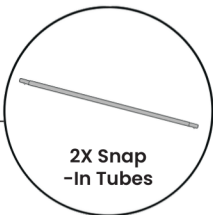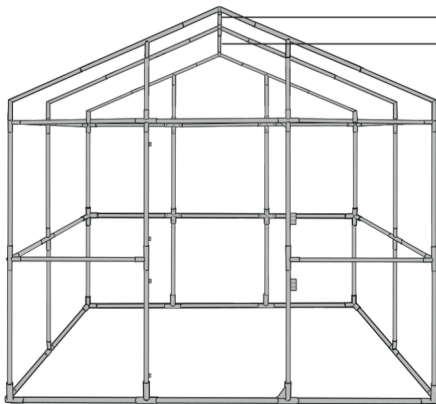

29. Prepare

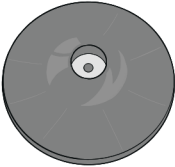

Center Post Base



Support Bar Bolt and Connector

BOX 2



2X Roosting Bar




2X Support Bar




1X Regular Bar


30.Connect Connector to Bolt

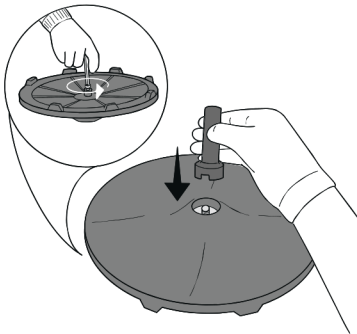


31.Connect Bar to Connector

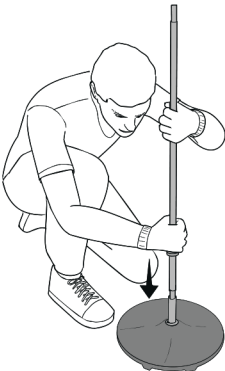


32. Connect First Roost

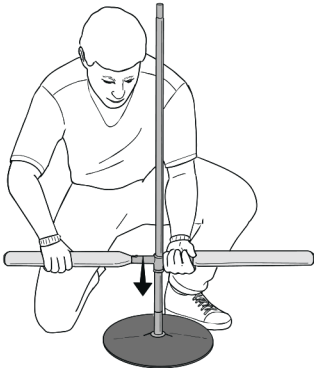


33.Add Short Support Bar

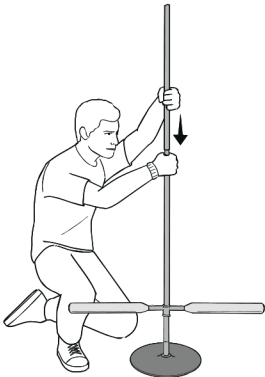


34. Install Roost on 2nd Support Bar

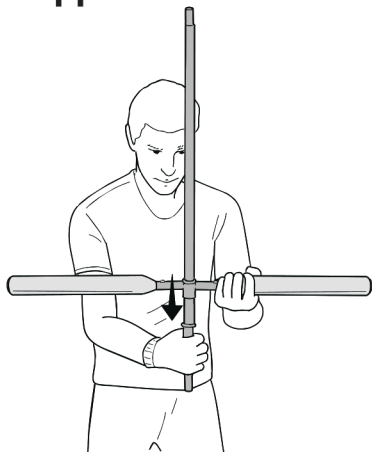



35. Add 2nd Support Bar & Roost

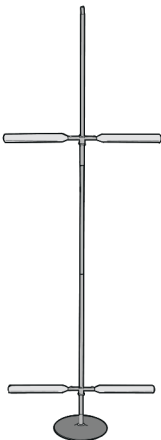


36. Insert Support into Middle Roof Beam

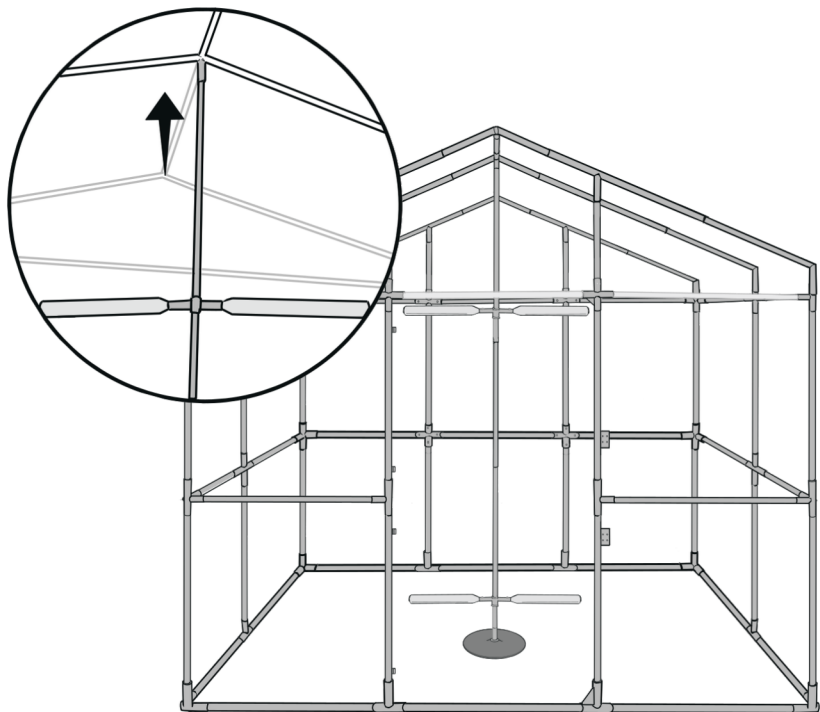


37. Prepare

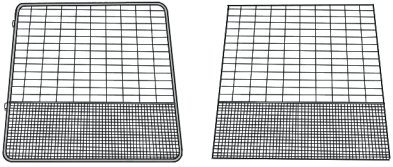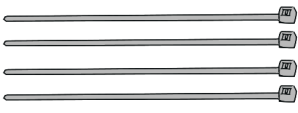BOX 2 – Lower Wall	BOX 0 – Connections
 1X Door Panel 9X Square Panel	 Zip Ties

38. Attach Bottom Door

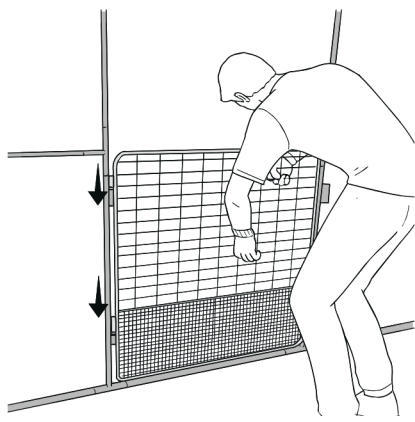


39. Attach Bottom Wall Panels

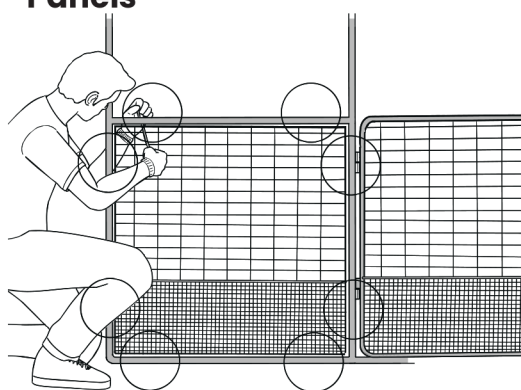


Use 2 zip ties for each side of each panel


First Row Done!

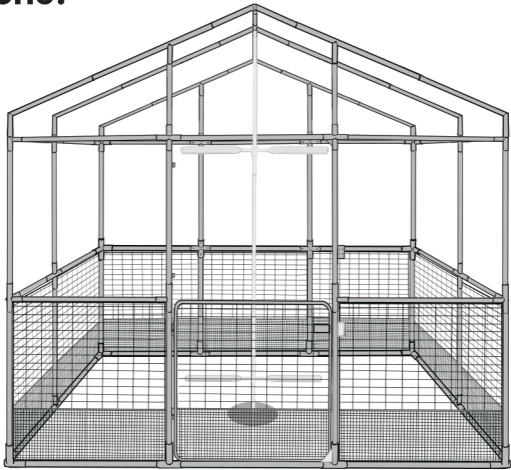


40. Prepare

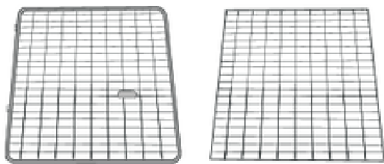BOX 3 – Upper Wall	BOX 0 – Connections
 1X Door Panel 9X Square Panel	 Zip Ties

41. Insert Upper Door

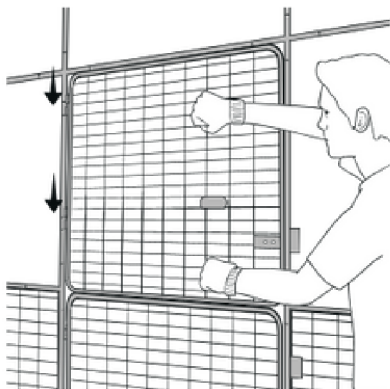

42. Attach Upper Wall Panels with Zip Ties

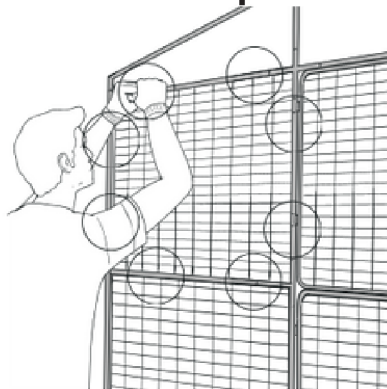


Use 2 zip ties for each side of each panel


Second Row Done!



43. Prepare

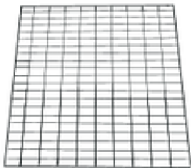
BOX 1 - Flooring	BOX 0 - Connections
 6X Square Panel	 Zip Ties

44.Attach Flooring


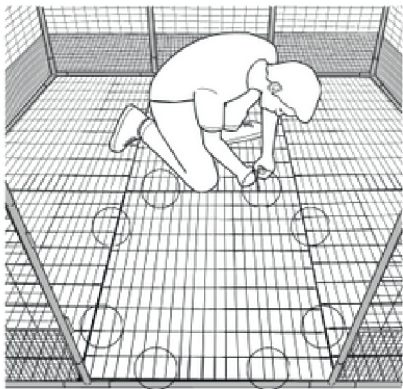


Use 2 zip ties for each side of each panel



Flooring Done!

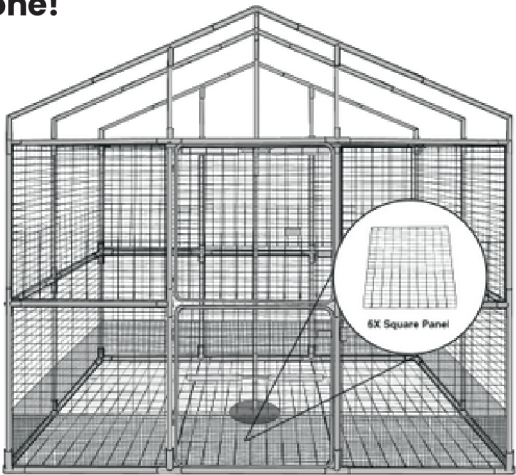



45. Prepare

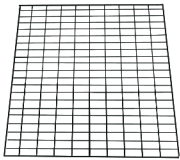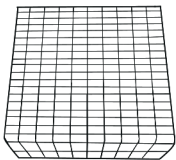BOX 4 – Roof	BOX 0 – Connections
 4X Square Panel  4X "Bent" Panel	 Zip Ties


46. Install 4 "Bent" Panels

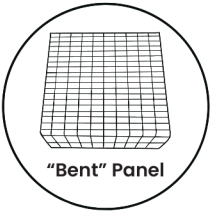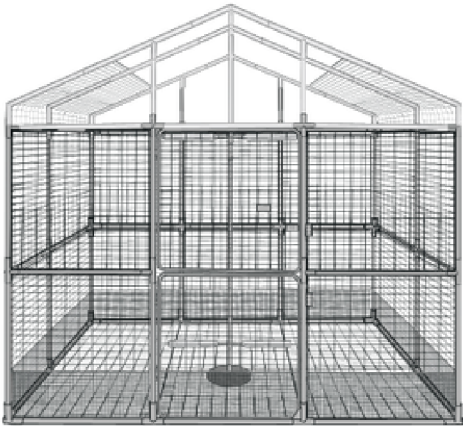

47. Install 4 Square Panels

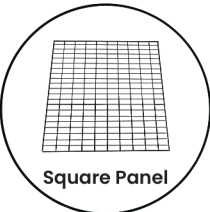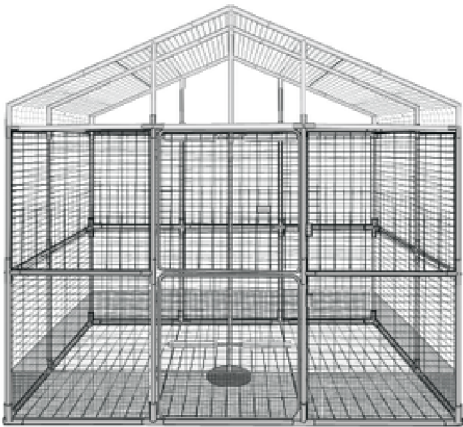



48. Prepare

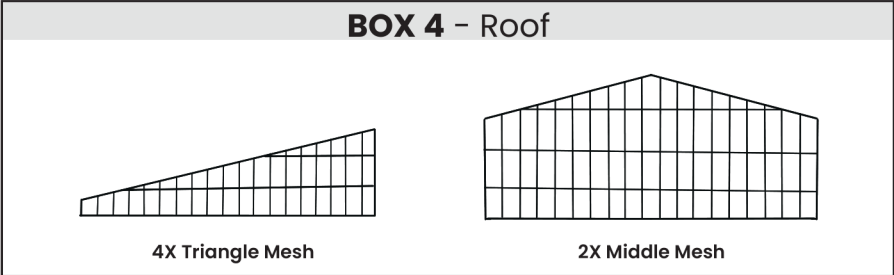


49. Install 4X Triangle Mesh




50. Install 2X Middle Mesh

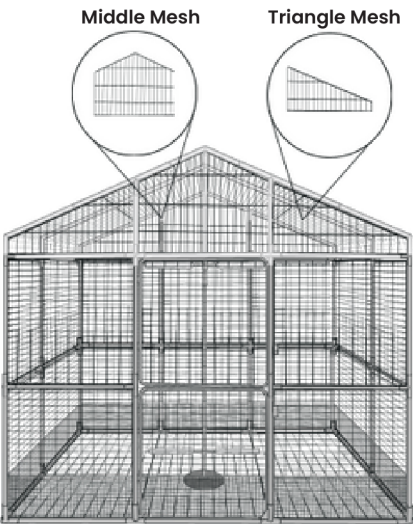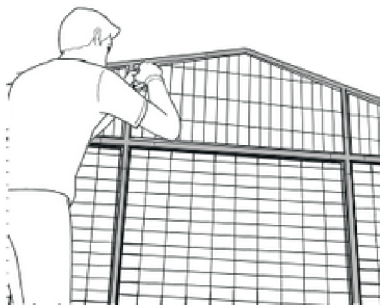

51. Trim Zip Ties

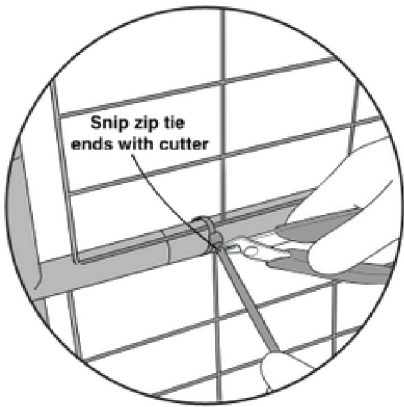


52. Cover Roof with Tarp

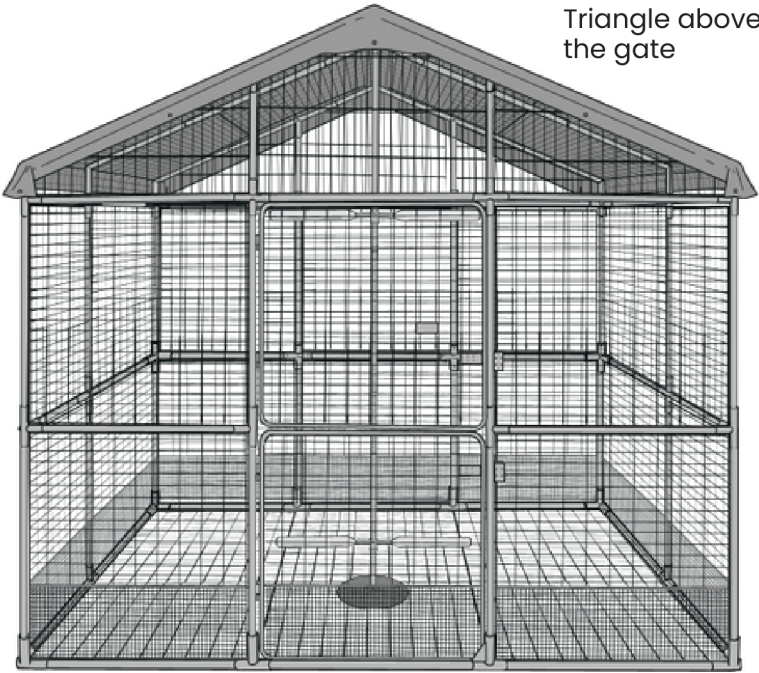


Triangle above
the gate

53. Connect Tarp with Elastic Straps


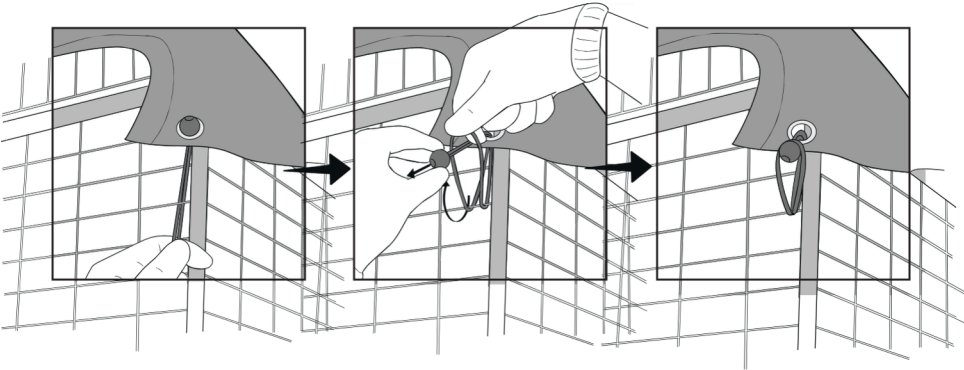


53. Connect 2X Latch

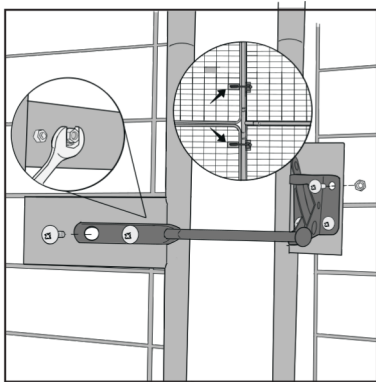


Wrench included
in tool pack

54. Connect 2X Bolt

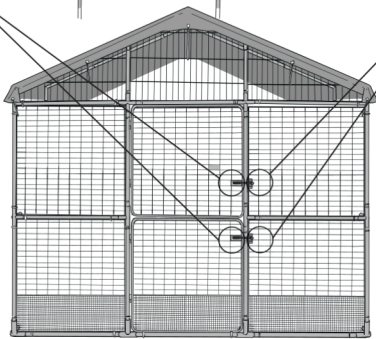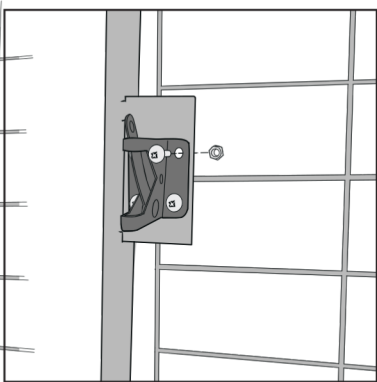

Use bolts
and nuts

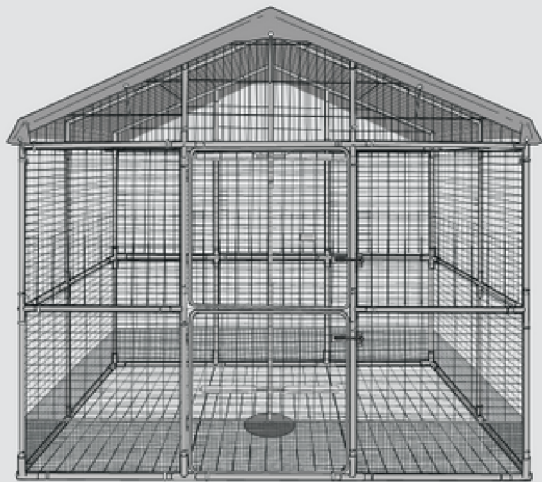

Done!
Just add
chickens

