



Rear Bumper

BXG.2097-S

(1) Contents:

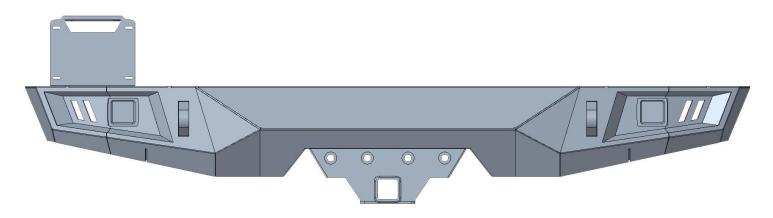

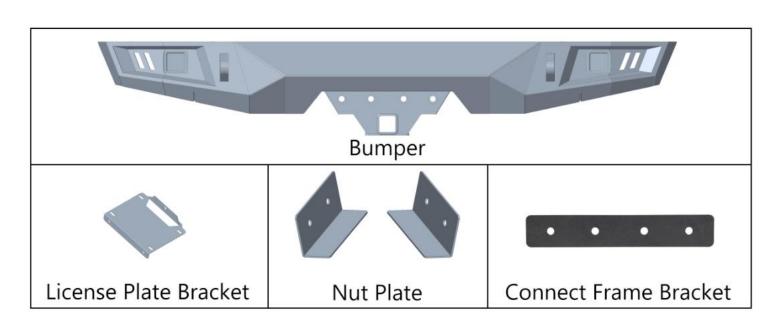

Qty	Part Name	Size(mm)	Picture
4	Hex Bolt	M12*110	
4	Hex Bolt	M12*35	
2	Button Head Socket Cap Bolts Screws	M8*20	
8	Split Lock Washer	D12	0
2	Split Lock Washer	D8	0
12	Flat Washer	M12*30*2	0
2	Flat Washer	M8*16*1.5	0
4	Hex Nut	M12	0
2	Flange Hex Lock Nuts	М8	0
2	D-ring		5

(2) Tools required:

- a. Drive Socket Ratchet Wrench;
- b. 19mm Wrench;
- c. 5mm Hex Bit Socket;

(3) Installation time:

About 1 hour, 2-3 people may be needed. Installation time may differ according to your mechanical skill level.

(PLEASE VERIFY ALL PARTS ARE PRESENT AND READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION!)

To view the electronic version (BXG.2097-S), please scan the QR code.




(4) Installation instruction:

Step 1: Remove the factory rear bumper, ready to install our bumper.



Step 2: To assemble the license plate frame and the bumper, you will need to use M8*20 button head socket cap bolts screw to secure it into the bar.

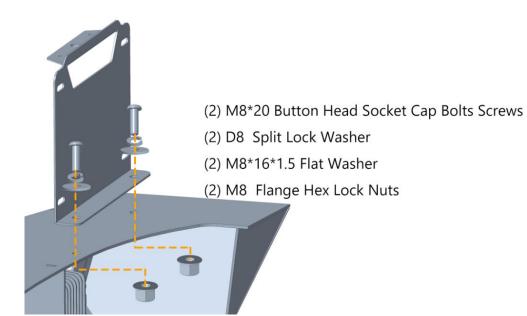




Step 3: Put the Nut Plate Brackets into the vehicle. Repeat the same procedure on the other side.






Step 4: Lift up the bumper into the vehicle frame. Install the bumper with the M12*35 hex bolts. Tighten up those bolts.



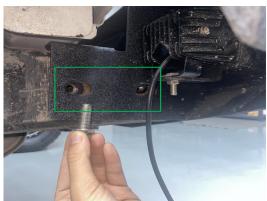

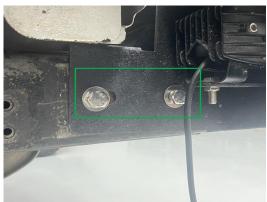

Step 5: After that put the connecting frame bracket into the rear frame gap, and than install the M12*110 hex bolt and nuts.









Step 6: Install the D-ring into the D-ring mount.



Step 7:

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!



Attention:

1. The product parts in this instruction may differ slightly from the actual product contents but generally does not affect the installation of the product.

2.Please feel free to contact your distributor if you have any kind of question about your purchase.

Google Hooke Road to find your parts.

Feel Free To Share Your Vehicle @HookeRoad4x4
With The Hashtag #hookeroad If You'd Like







