# **INSTALLATION GUIDE**

### Camden LED Mirrors



## **Getting Started**

Before installation, check the product for any shipping damages. If you find damages, do not install and contact your dealer or ICO.

#### **Electrical Connections**

All wiring should be done by a qualified licensed electrician

**↑** Caution

Read and follow all instructions before installing this LED mirror.

① Danger

Shut off power before wiring the

mirror.

⟨ Warning

Requires 120VAC 20 Amp GFI protected circuit.

### **IMPORTANT SAFETY INSTRUCTIONS**



#### Warning

To reduce the risk of burns, fire, electric shock or injury to persons. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer. Never drop or insert any object into any opening. Do not use outdoors.

#### **GROUNDING INSTRUCTIONS**



Risk of electric shock. Connect this furnishing to a properly grounded circuit only.

This product must be connected to a grounded metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the product.

For an electrical hardwire option, the LED mirror must be wired to a 20 Amp GFI (Ground Fault Interrupter) protected circuit when used in bathrooms and all other locations as per your respective local Electrical Code.



# **INSTALLATION GUIDE**

### Camden LED Mirrors

# **REQUIRED TOOLS & MATERIALS**

# **PARTS INCLUDED**










x2

# **DIMENSIONS & MEASUREMENTS**

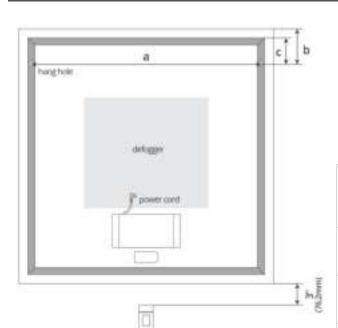

- **a** distance between hang holes
- **b** height top of the mirror to hang hole
- $\boldsymbol{\mathsf{C}}$  height top of the support to hang hole

Power cord length is 39 3/8" (1000mm) but do an actual measurement, especially if the power outlet or junction box is farther than 30" (762mm).

Measure and determine overall mirror dimensions as well as "a", "b" & "c" (see diagram) before installation.

All dimensions and specifications in the table below are approximate and may vary without prior notice.

Use your actual product measurement for accuracy.

Model #	d (distance between hang holes)	b (height - top of the mirror to hang hole)	C (height - top of the support to hang hole)	Product Dimension
IC1030	<b>26 1/2"</b> (672mm)	<b>5"</b> (127.5mm <b>)</b>	<b>3 3/4"</b> (95mm)	<b>30" x 32" x 1 1/8"</b> (762mm x 813mm x 30mm)
IC1124	<b>20 1/2"</b> (520mm)	<b>5"</b> (127.5mm <b>)</b>	<b>3 3/4"</b> (95mm)	<b>24" x 36" x 1 1/8"</b> (610mm x 915mm x30mm)
IC1130	<b>26 1/2"</b> (672mm)	<b>5"</b> (127.5mm <b>)</b>	<b>3 3/4"</b> (95mm)	<b>30" x 36" x 1 1/8"</b> (762mm x 915mm x 30mm)
IC1136	<b>32 1/2"</b> (825mm)	<b>5</b> " (127.5mm <b>)</b>	<b>3 3/4"</b> (95mm)	<b>36" x 36" x 1 1/8"</b> (915mm x 915mm x 30mm)
IC1148	<b>44 1/2"</b> (1130mm)	<b>5"</b> (127.5mm <b>)</b>	<b>3 3/4"</b> (95mm)	<b>48" x 36" x 1 1/8"</b> (1220mm x 915mm x 30mm)
IC1160	<b>56 1/2"</b> (1434mm)	<b>5"</b> (127.5mm <b>)</b>	<b>3 3/4"</b> (95mm)	<b>60" x 36" x 1 1/8"</b> (1524mm x 915mm x 30mm)


<sup>\*</sup>Download the specific model's tech spec sheet on our website for other measurements



# **INSTALLATION GUIDE**

# Camden LED Mirrors

# POWER OUTLET OR JUNCTION BOX LOCATION

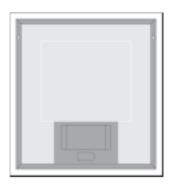


IC1030 - Camden 30"x32"




IC1124 - Camden 24"x36"




IC1130 - Camden 30"x36"

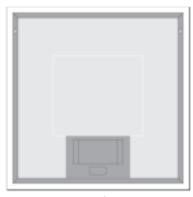

IC1136 - Camden 36"x36"

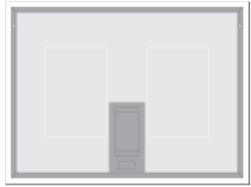

IC1148 - Camden 48"x36"

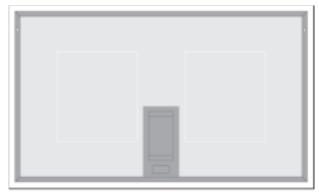

IC1160 - Camden 60"x36"

#### **Color Shading Guide**

Ideal location of the electrical outlet or junction box.

Location not advisable! Moreover, power cord must not cross or be over any part of this shaded part.

<sup>\*</sup>For this model, electrical outlet must ONLY be located behind the mirror.




# **INSTALLATION GUIDE**

# Camden LED Mirrors


### **Mirror Installation**

- Unpack your mirror and set it on the floor ensure you lay out floor protection cardboard, towel etc.
- Measure mirror dimensions before proceeding with installation.
  - \* All dimensions in the Technical Specifications Sheet are approximate and may change without notice.
- Mark the position of the mirror on the wall.


Keep at least 3" distance between the bottom end of the mirror and the top of the faucet (if installed over a sink or vanity top).

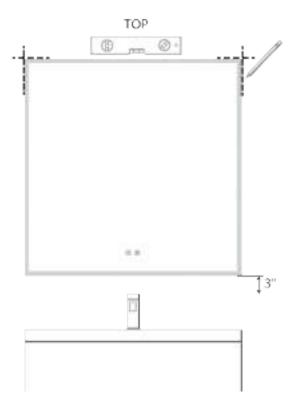

Measure the center of the holes (A) and mark the drilling locations. Ensure the mirror is level (B).

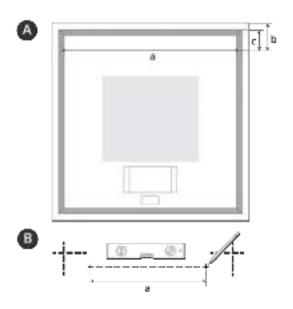

Predrill and install drywall anchors.
Screw the supplied screws into the anchors.
Leave a gap of 6-8mm between the head of the screw and the wall.

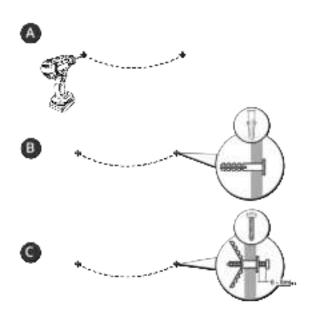




# **INSTALLATION GUIDE**


## Camden LED Mirrors

6

For plugin installation - plug in the mirror to the grounded outlet.

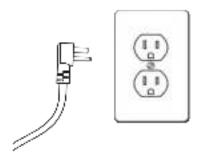


For hardwired installation - cut off the power plug, then use the wire connector to connect to external power supply.

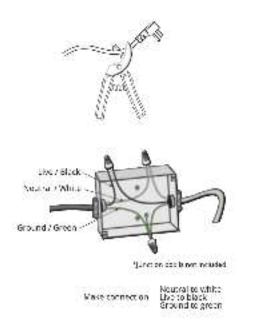

Both installation options can be connected and controlled with a light switch.



Place the mirror against the wall (and the screws) and slide down as shown in B.

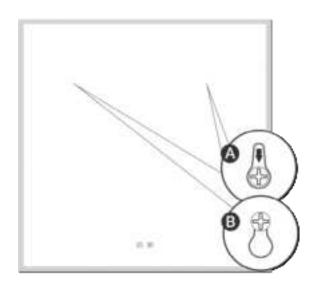

# **Operating Instructions**

- Touch to turn light and defogger on/off. (The heating pad/defogger auto turns off after one hour).
- Press and hold to adjust color temperature.
- Press and hold to adjust the brightness.
  Touch will increase/decrease (with 4 preset brightness levels).

This LED mirrror has brightness and color temperature memory settings capability. Turning off (whether through touch or light switch) saves the last settings used.

