
ASSEMBLY INSTRUCTION

SOFA SET

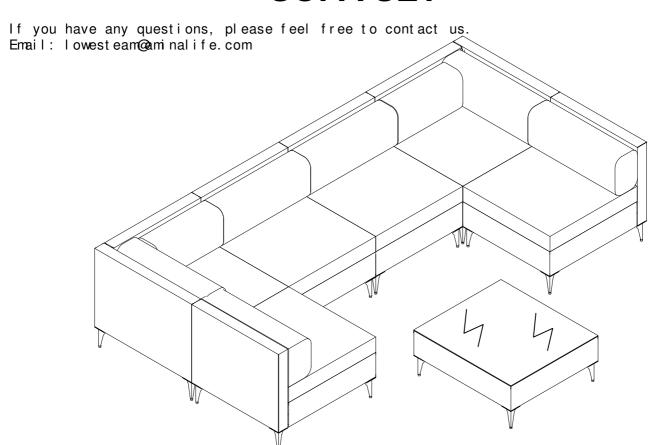



N707P210155 N707P210156 N707P210157


Notice:


- 1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
- 2. Place the item on a flat ground to adjust and make sure it remains stable.
- 3. Tighten up all screws with tools gradually.
- 4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
- 5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
- 6. Note: If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.



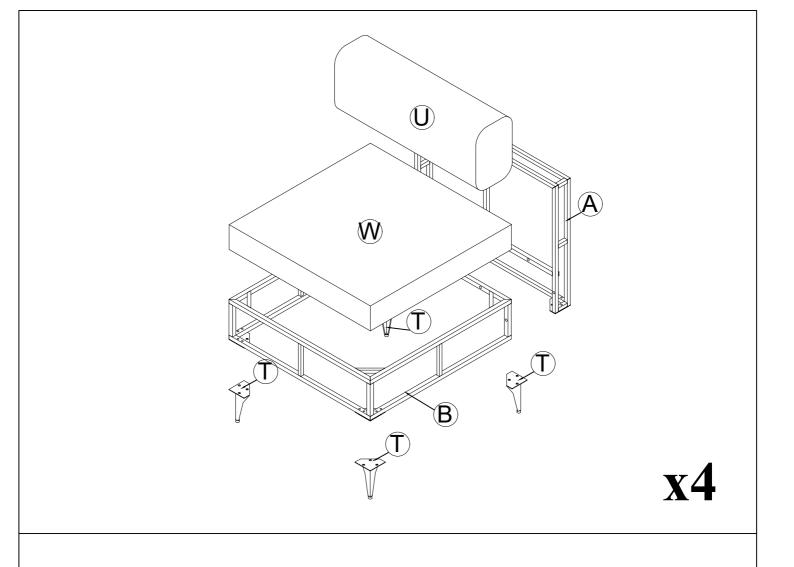


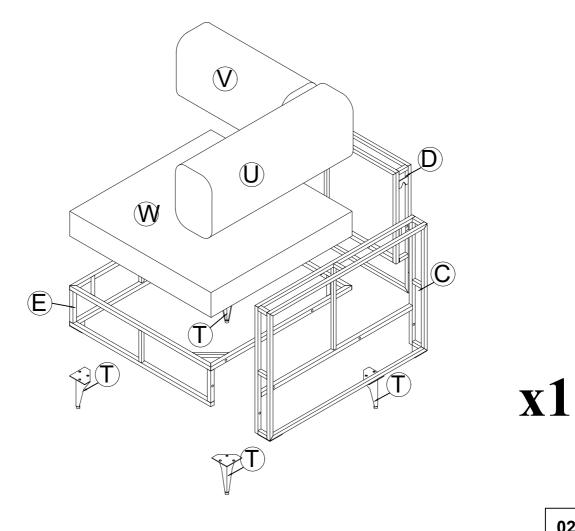


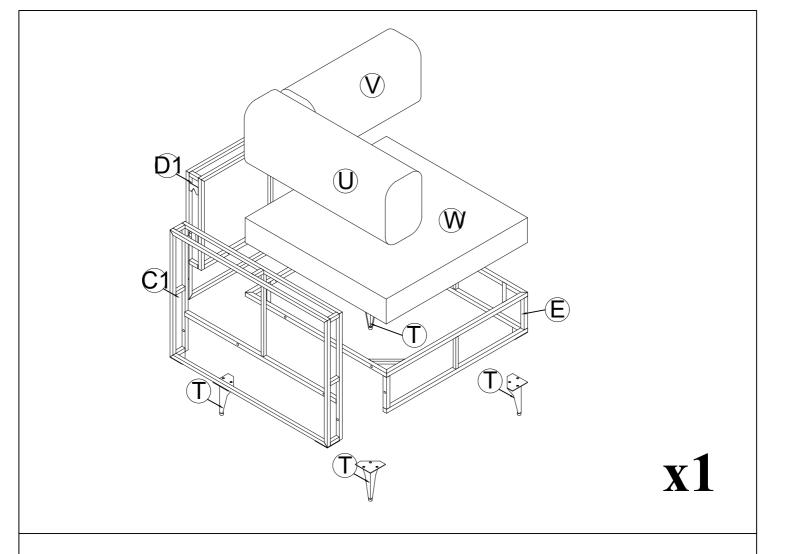


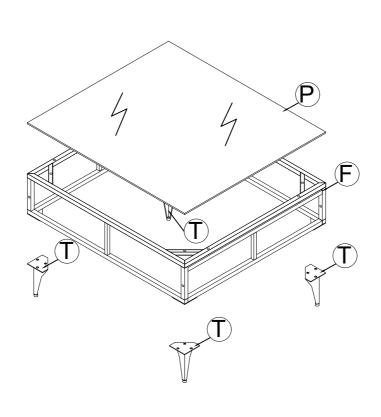


x1

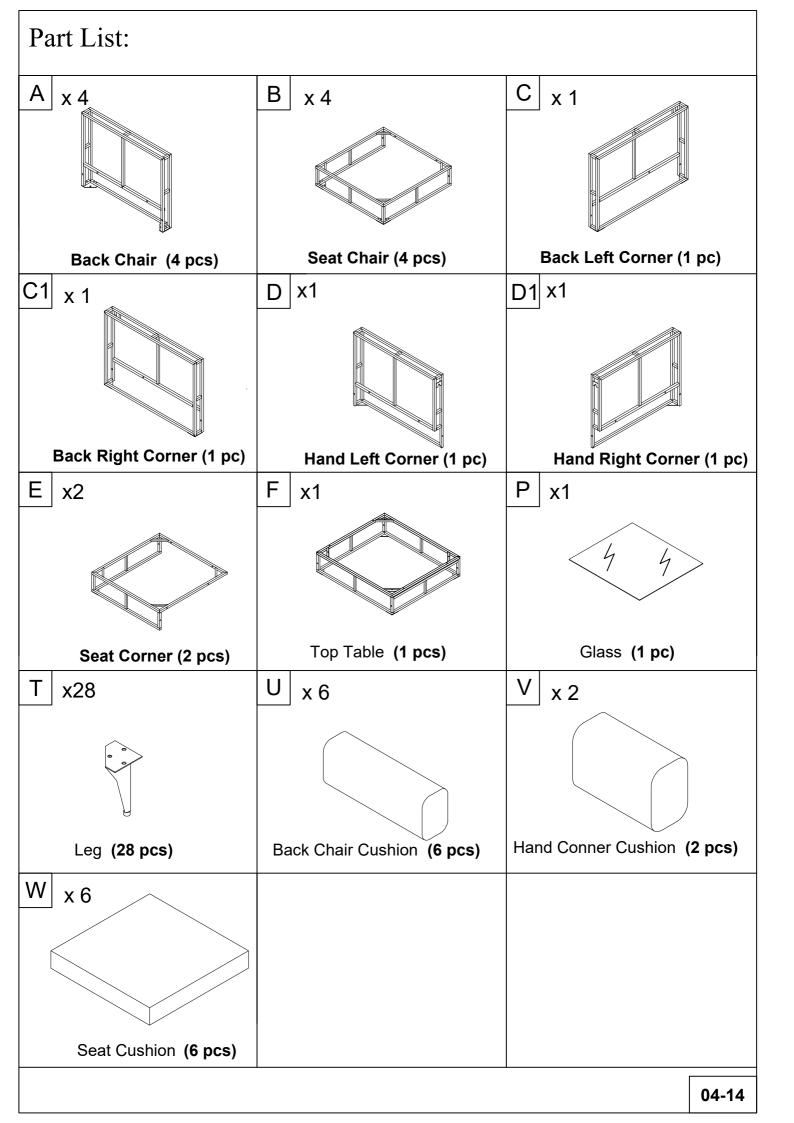

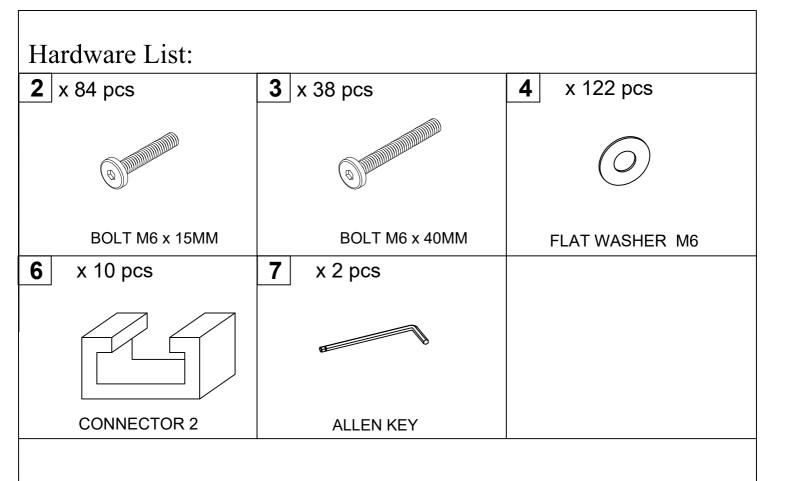


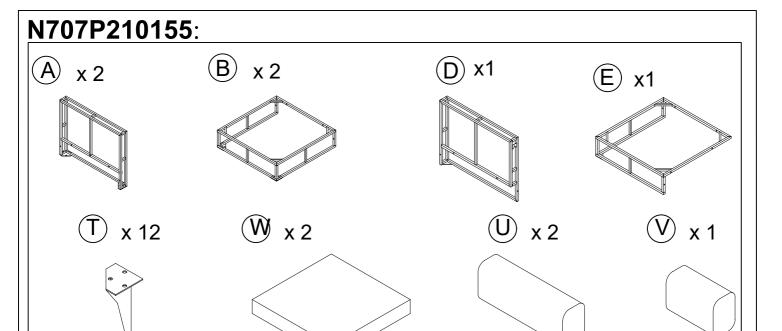


N707P210156:

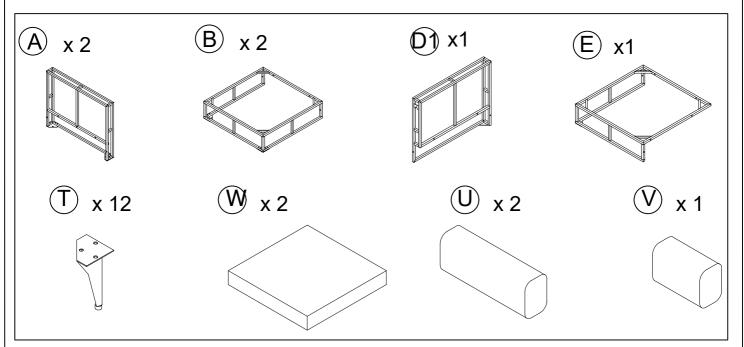


N707P210157:

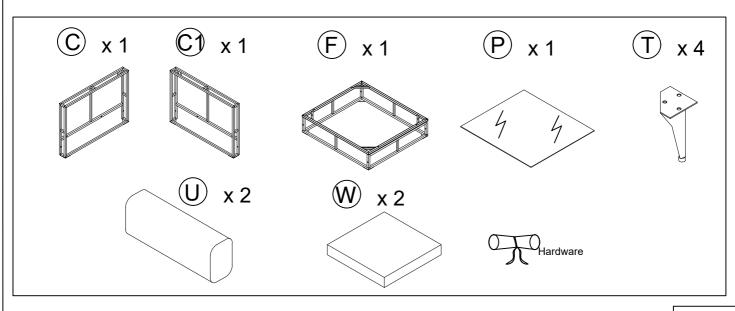


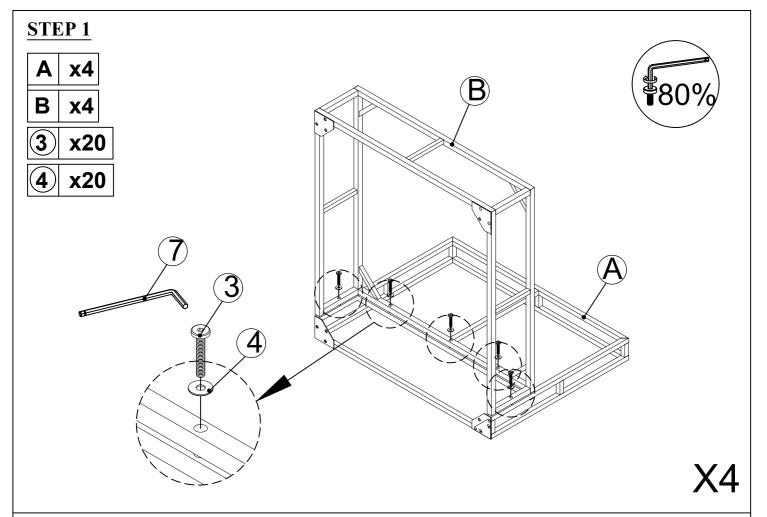


Connect Seat Chair (B) & Back Chair (A), Tighten Bolt (3) & Flat Washer (4) with Allen Key (7).

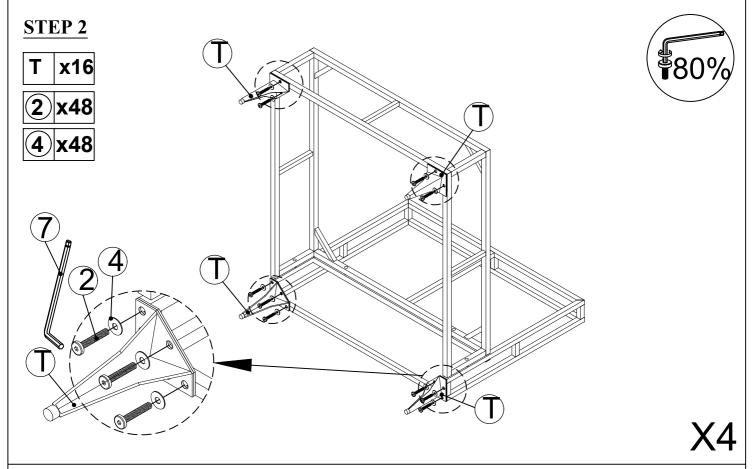


Connect the part from step 1 with Leg (T), Tighten Bolt (2) & Flat Washer (4) with Allen Key (7).

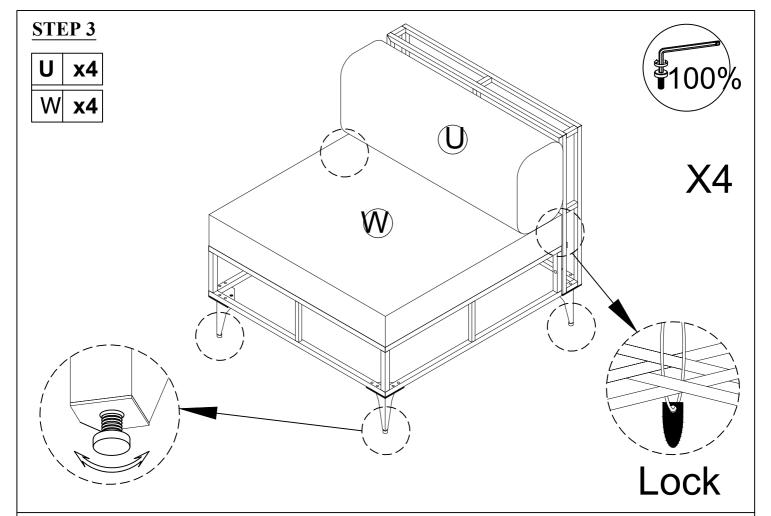


Put on Back Chair Cushion (U), Seat Cushion (W). Stick string to Conner. Finish Conner. to finish Chair.

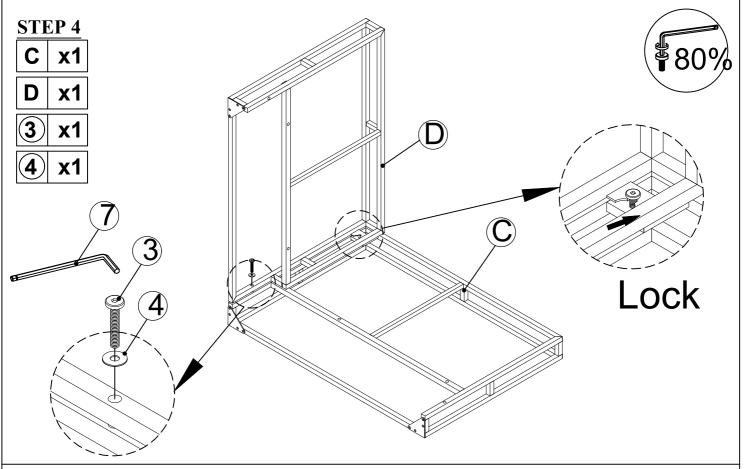


Connect Back Left Conner (C) & Hand Left Conner (D), Tighten Bolt (3) & Flat Washer (4) with Allen Key (7).

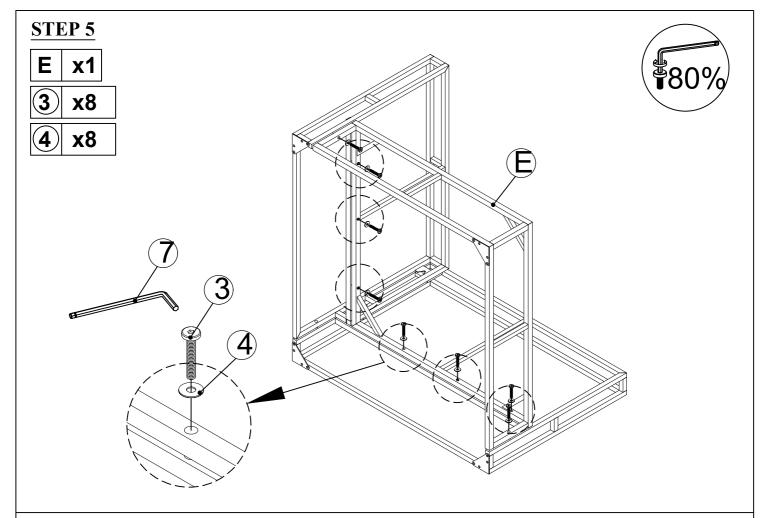


Connect Connect the part from step 4 with Seat Conner (E), Tighten Bolt (3) & Flat Washer (4) with Allen Key (7).

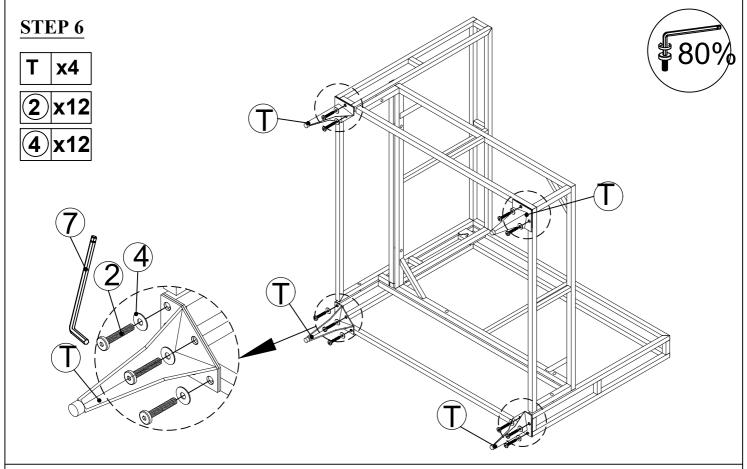


Connect Connect the part from step 5 with Leg (T), Tighten Bolt (2) & Flat Washer (4) with Allen Key (7).

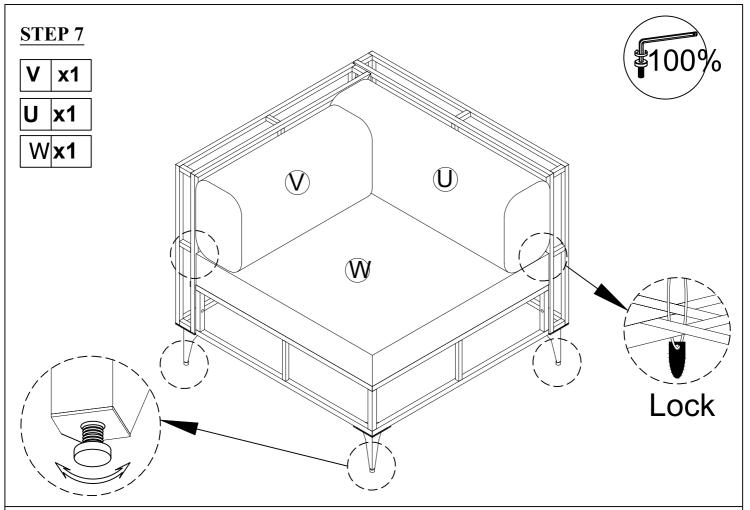


Put on Hand Conner Cushion (V), Back Chair Cushion (U), Seat Cushion (W). Stick string to Conner. Finish Conner.

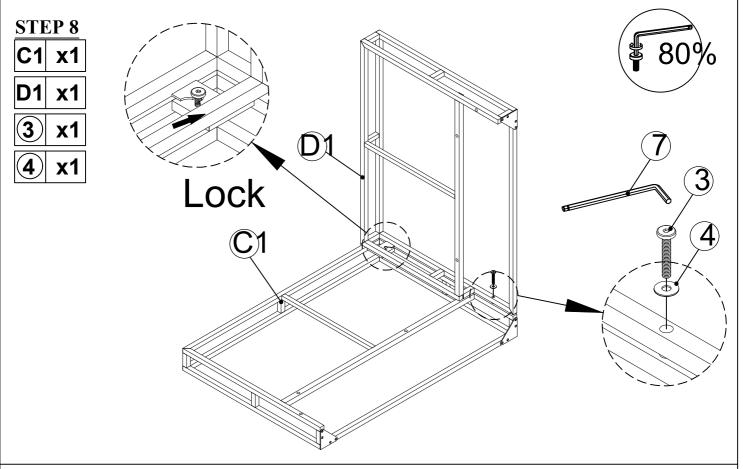


Connect Back Right Conner (C1) & Hand Right Conner (D1), Tighten Bolt (3) & Flat Washer (4) with Allen Key (7).

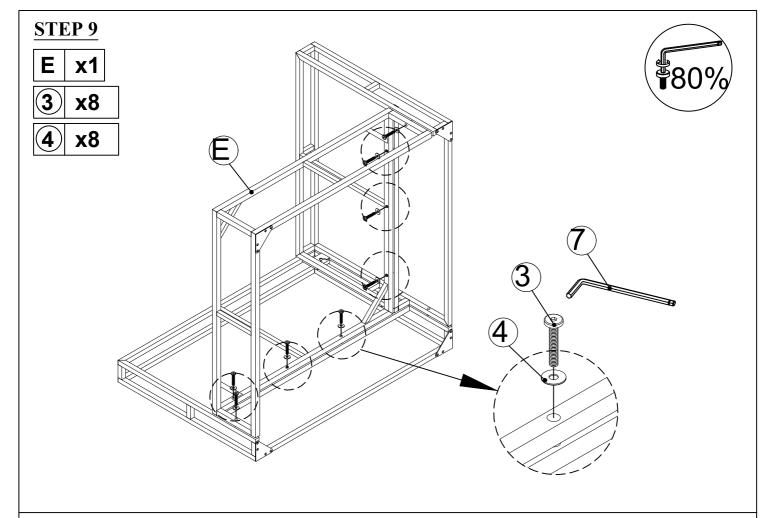


Connect Connect the part from step 8 with Seat Conner (E), Tighten Bolt (3) & Flat Washer (4) with Allen Key (7).

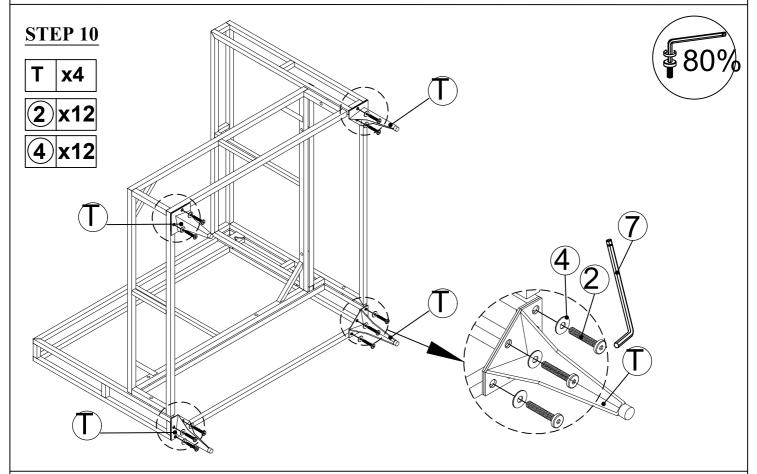

Connect Connect the part from step 9 with Leg (T), Tighten Bolt (2) & Flat Washer (4) with Allen Key (7).

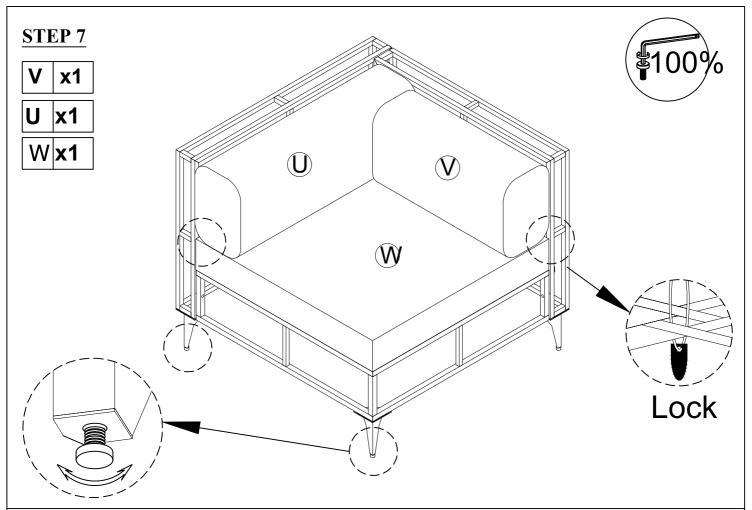

Put on Hand Conner Cushion (V), Back Chair Cushion (U), Seat Cushion (W). Stick string to Conner. Finish Conner.

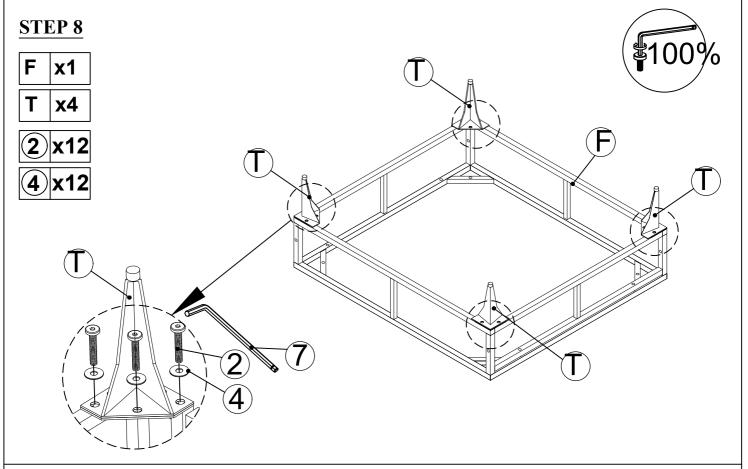


Connect Top Table (F) with Leg (T), Tighten Bolt (2) & Flat Washer (4) with Allen Key (7).








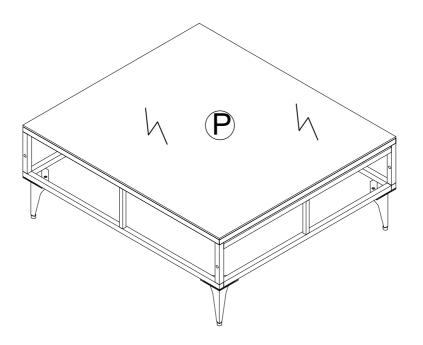

Put on Glass (P) to finish Table.

STEP 10



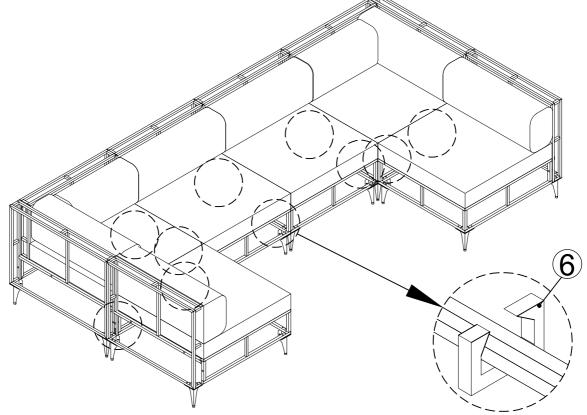

Connect all the part with Connector (6).

