

LIVING ROOM **CHAIRS** 6151-4233 NOTE: Please read carefully before use and keep for future reference

Tell Free(US): 3235971109

Website: www.mcombo.com Amazon sold by: MCombo

Warranty Claim: sales@mcombo.com

Sales & Technical Questions: sales@mcombo.com sales@exacme.com




CONGRATULATIONS!


Mcombo Living Room Chairs - a name synonymous with classic design and the carrier of value and quality. Our products are directly from factory and eliminated the cost of middlemen. The Living Room Chairs is a high-quality shading solution to enhance comfortable feelings as you try to enjoy the nice day.

WARRANTY


- All warranties are to the original purchaser from MCOMBO ONLY ®
- MCOMBO [®] will replace the defective parts or send replacement item provided that the warranty parts have not been subjected to misuse, abuse or improper service by the consumer, for example, damaged wire arising in consequence of negligence or improper operation.
- MCOMBO [®] All of recliners come with a 30-day return/replace policy. During this time, we will cover the shipping cost of return and replacement for defective and damaged item, through provide pre-paid return label or pick up service for customer's convenience.


PARTS LIST

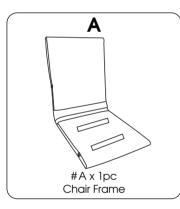


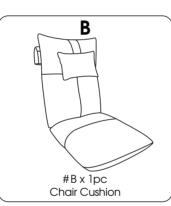





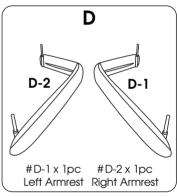


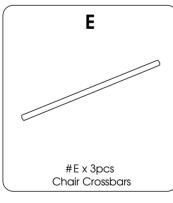


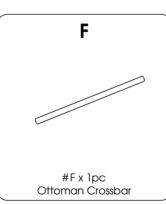


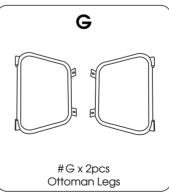

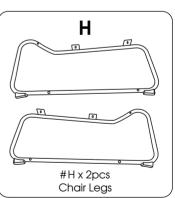


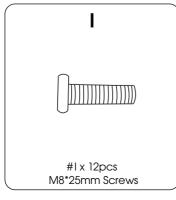

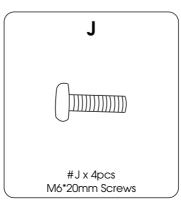

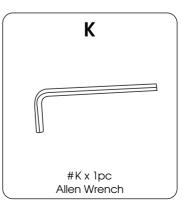

Please remove all protective foam

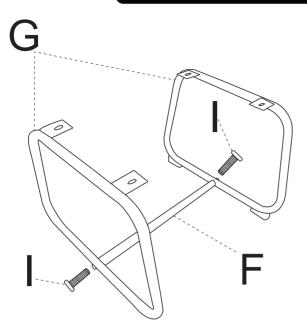


Step 1

Use 2 Screws **#I** to fix Ottoman Crossbar **#F** to Otto man Legs **#G** with Allen Wrench **#K**.

Step 2

Use 4 Screws **#J** to attach Ottoman Cushion **#C** to Ottoman Legs **#G** with Allen Wrench **#K**.

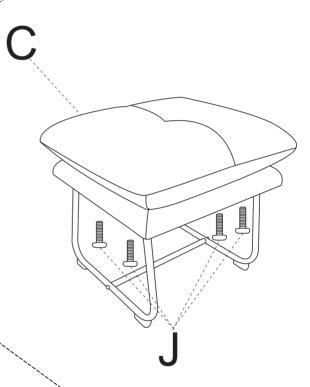



H E E

Step 3

Use 6 Screws **#I** to fix 3 Chair Crossbars **#E** to Chair Legs **#H**.

Step 4
Use 4 Screws #I to attach Chair Frame
#A to Chair Legs #H.

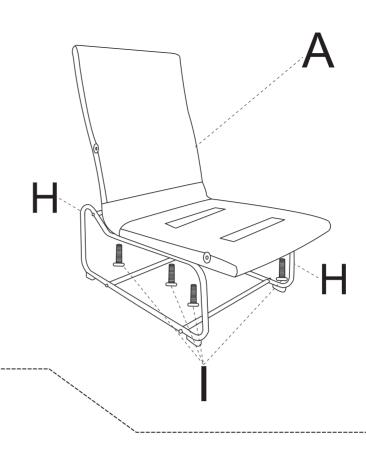

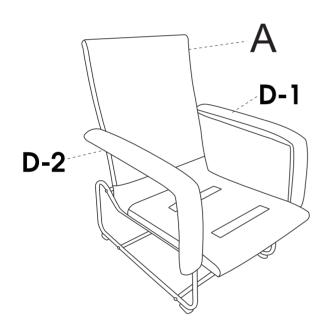

Step 5

Insert the long bolts on Armrests **#D** into the holes in Chair Frame **#A**.

Step 6

Put the top part of the chair back frame into the cover at the back of Chair Cuhion **#B** and fix Chair Cushion **#B** to Chair Frame **#A** with Velcros on Chair Frame **#A**.

Congratulations!

Now you can relax your body on this chair!

