





STEEP SLOPE INSTRUCTIONS

ROOF SCAFFOLDING SYSTEM

FAILURE TO READ AND FOLLOW INSTRUCTIONS ON THE USE OF THIS PRODUCT COULD RESULT IN SERIOUS PERSONAL INJURY. THIS PRODUCT MUST BE USED IN STRICT COMPLIANCE WITH LOCAL, STATE AND FEDERAL OSHA REGULATIONS.

Complete set contains (2) fully assembled rails, (2) ridge mount brackets, and (8) plank mount brackets.

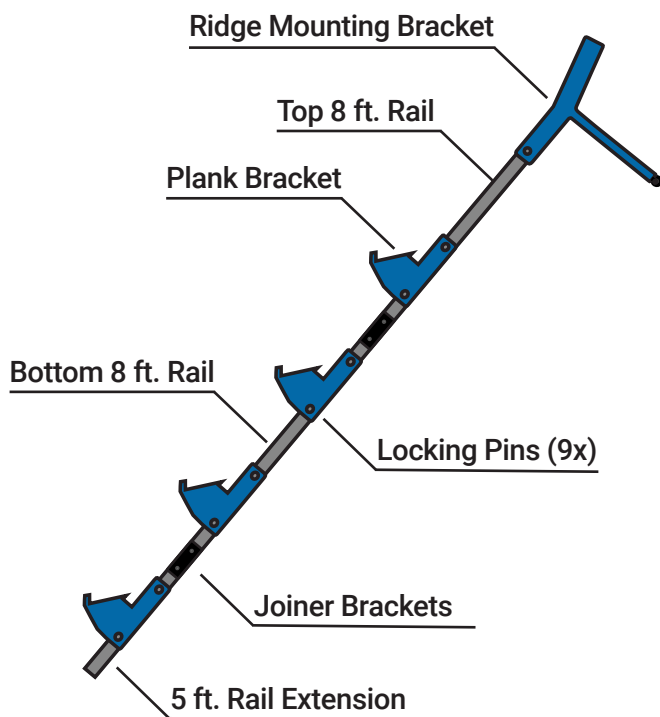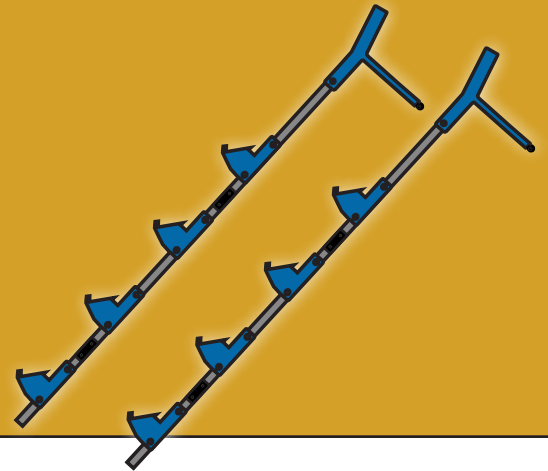

Configure length of system based on the desired workspace. Additional rails and brackets can be purchased separately on our website.

Please watch our SteepSlope Scaffold Demonstration Video at SafetyHoistCompany.com by scanning the below QR code.



SCAN ME

Contact Us With Any Questions

Phone: (610) 941-4333

Email: info@safetyhoistcompany.com

Directions for SteepSlope Scaffold Assembly

Step 1:

Insert roof mounting bracket onto top 8 ft. rail and insert the locking pin. **Note:** The ridge mount bracket has two mounting tubes. Insert rail into the appropriate tube for the roof's pitch.

Step 2:

Slide 1st plank bracket onto the top 8 ft. rail and up to the 2nd hole from the top and insert a locking pin.

Step 3:

Place a joiner bracket on the top rail's last hole and insert the locking pin.

Step 4:

Slide the 2nd 8 ft. rail into the joiner bracket connected to the top rail, and insert the next locking pin.

Step 5:

Slide the next plank bracket up to the hole under the joiner bracket and insert the locking pin.

Step 6:

Slide the next plank bracket up to the hole under the joiner bracket and insert the locking pin.

Step 7:

If the 5 ft. extension rail is needed, attach the 2nd joiner bracket and locking pins as described above to add it.

Step 8:

Slide the 4th plank bracket onto the 5 ft. rail extension and use the locking pin to affix it to the desired hole.

Step 9:

Watch demo instruction video at safetyhoistcompany.com/pages/steepslope-scaffold-instructions (or scan QR code)