




## PANDUIT WIRE BASKET TEE-INTERSECTION BRACKETS

Part Numbers: PWBPF2X4\*\*, PWBPF2X6\*\*, PWBPF2X8\*\*, PWBPF2X12\*\*, PWBPF2X18\*\*,  
PWBPF2X24\*\*, PWBPF4X4\*\*, PWBPF4X6\*\*, PWBPF4X8\*\*, PWBPF4X12\*\*, PWBPF4X18\*\*,  
PWBPF4X24\*\*, PWBPF6X6\*\*, PWBPF6X8\*\*, PWBPF6X12\*\*, PWBPF6X18\*\*, PWBPF6X24\*\*


©Panduit Corp. 2021

### INSTALLATION INSTRUCTIONS


FS178A

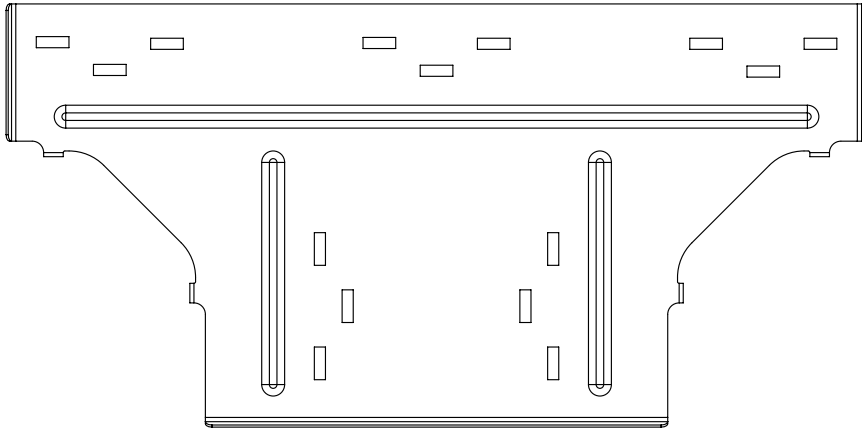

Connection Plate  
(1) Provided

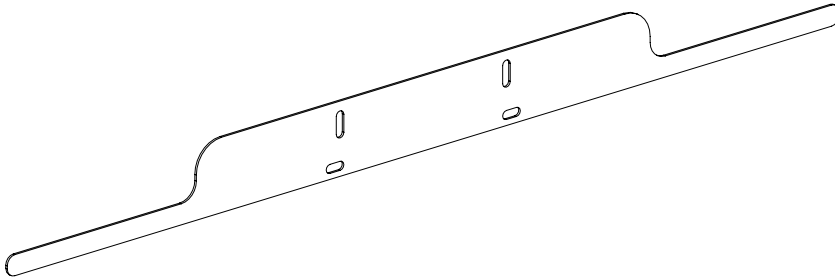



Protective Radius Sheet  
(2) Provided

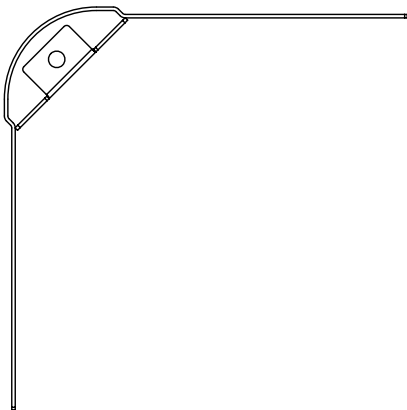


Radius Support Bracket  
(2) Provided


Mounting Hardware Included.

**For Technical Support: [www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)**

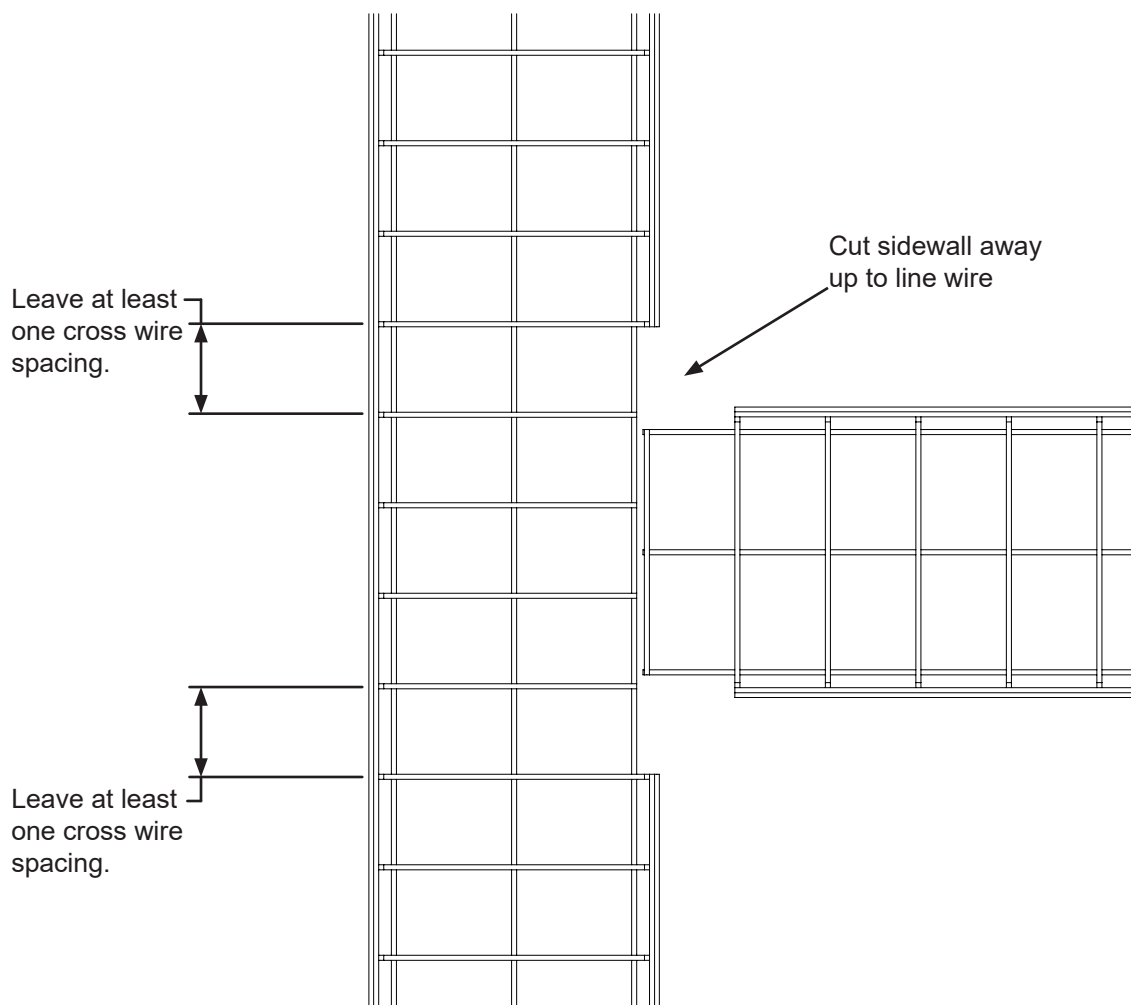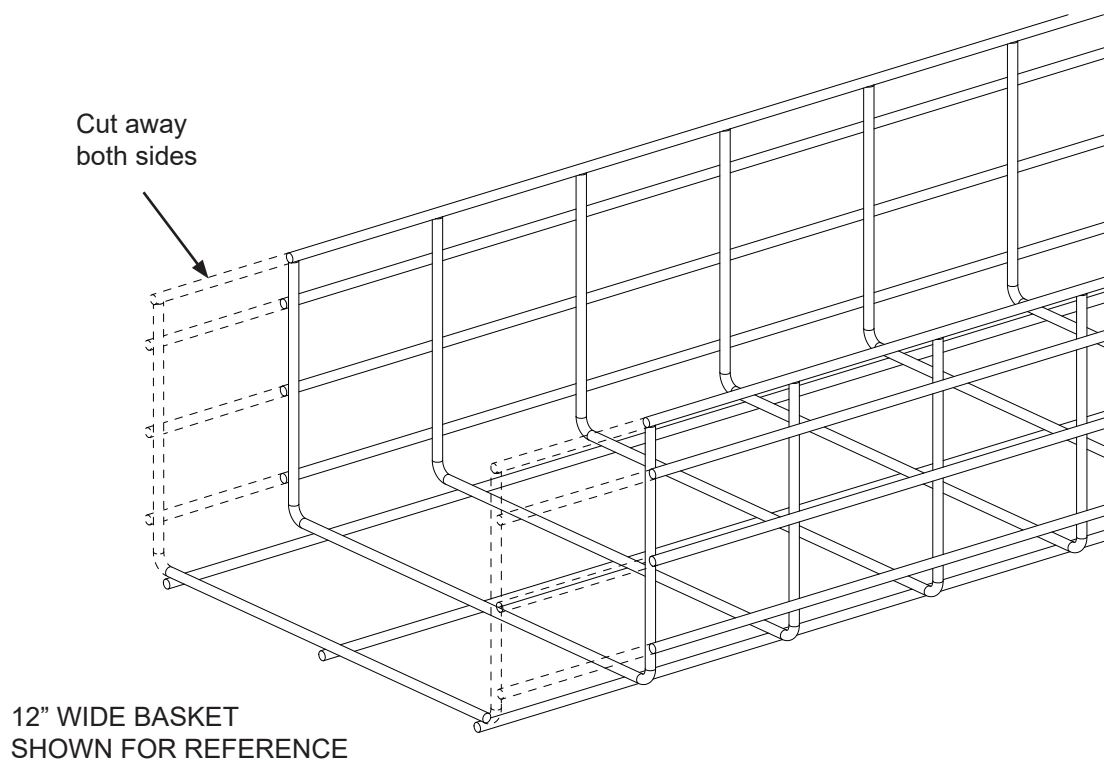


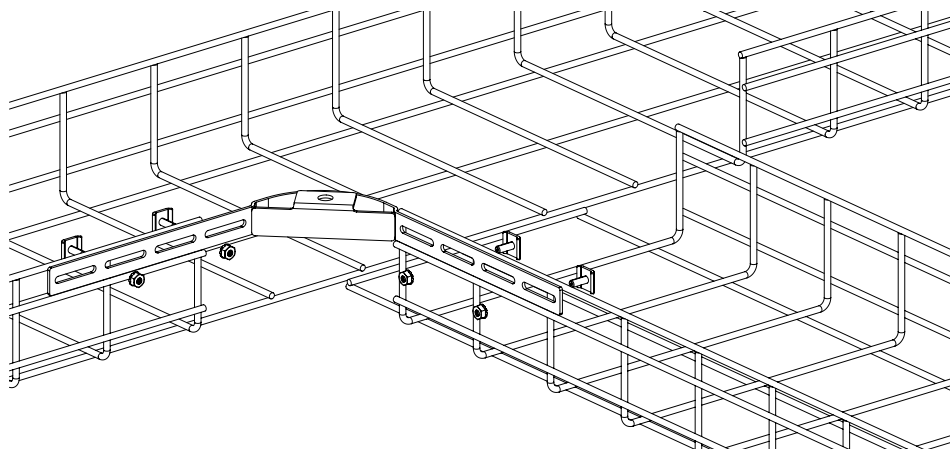


Assemble (1) radius support bracket to baskets. Keep supplied fasteners loose.

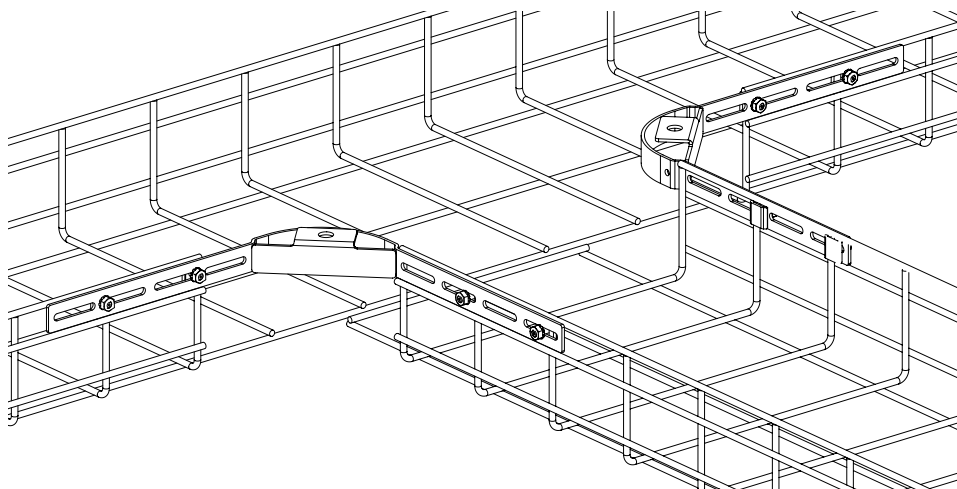


Assemble (1) radius support bracket to other side of basket. Keep supplied fasteners loose.

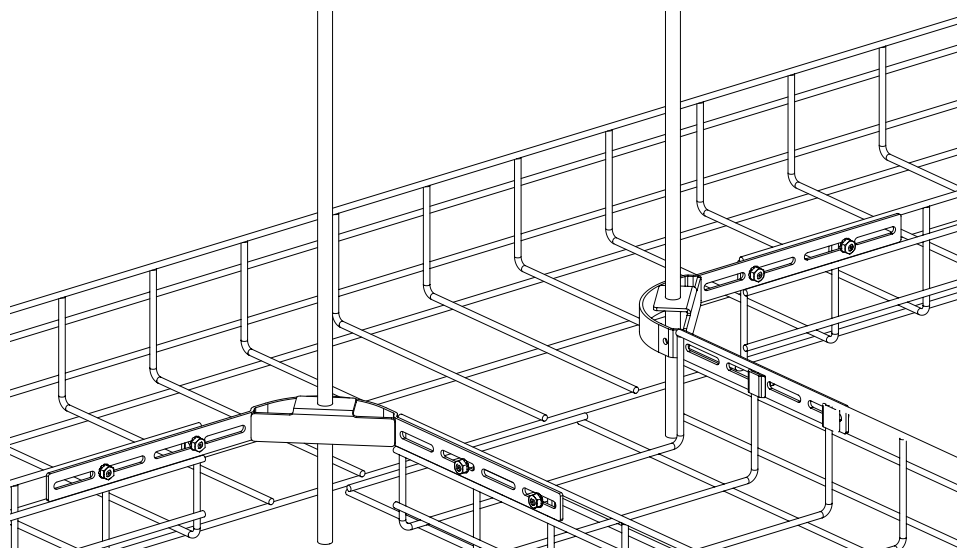


Hang basket. Assemble to customer supplied threaded rods. All trapeze brackets to be within 2 feet from intersection.

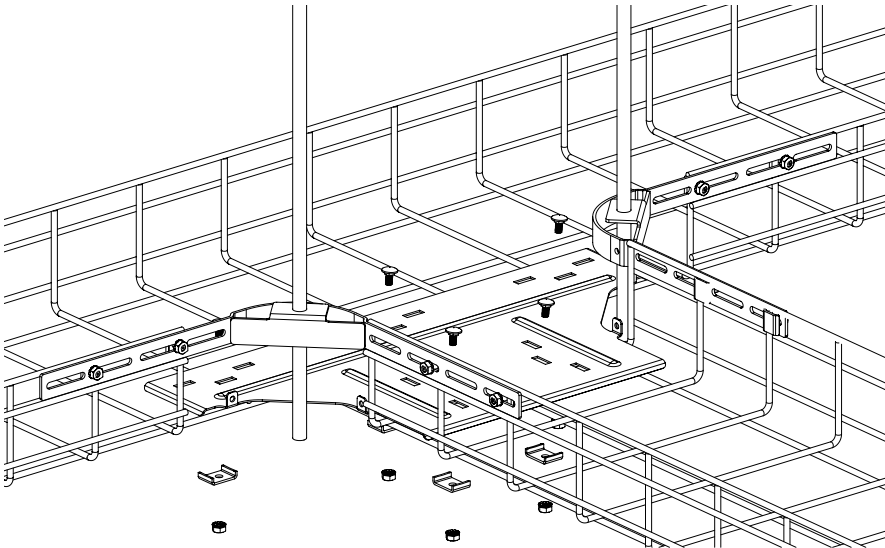


Add (1) connection plate to cover the gap between the baskets. Loosely attach with supplied fasteners.

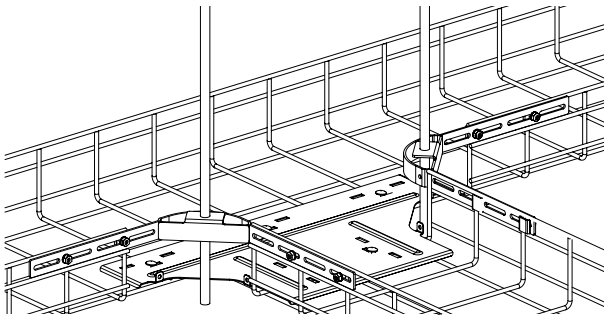

Tighten all fasteners.

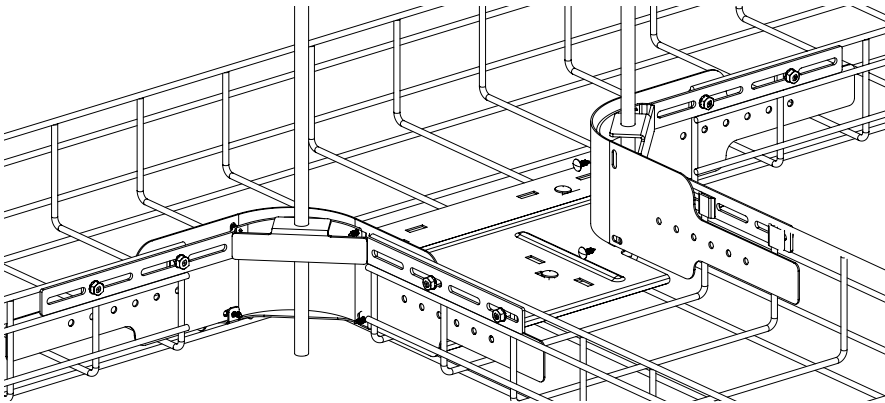

Place the (2) protective sheets along the radius of the corner. Attach with push-in fasteners and cable ties if desired.

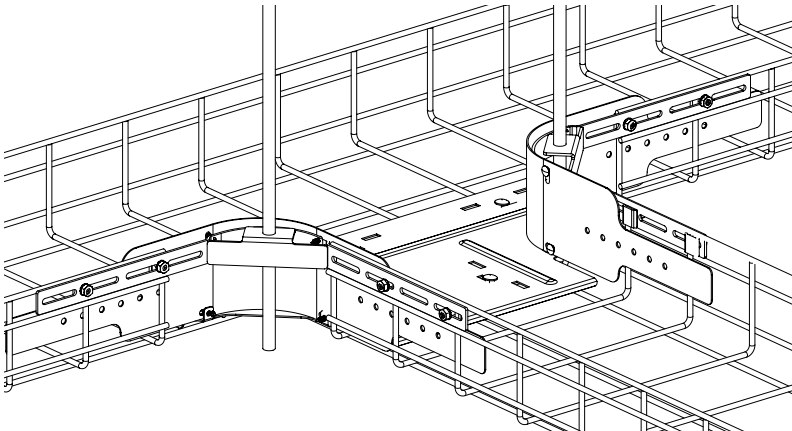

Assembly complete.