Standard Speed Ball Platform


Tools Required

Plastic or Wooden Mallet 10 MM Masonry Drill Bit Philips Screw Driver

Parts List

| A - M6 x 30 C/Sunk Screws | 4 |
|-------------------------------|---|
| B - M6 Washers | 4 |
| C - M6 Nylock Nuts | 4 |
| D - M4 x 30 C/Sunk Screws | 4 |
| E - M4 Washers | 4 |
| F - M4 Nylock Nuts | 4 |
| G - 1 ^{1/4} End Caps | 3 |
| H - M8 x 60 Coach Screws | 6 |
| I - 10 x 50 Nylon Plugs | 6 |
| J - M8 x 50 Cup Square Bolts | 2 |
| R - M8 Hand Wheels | 2 |



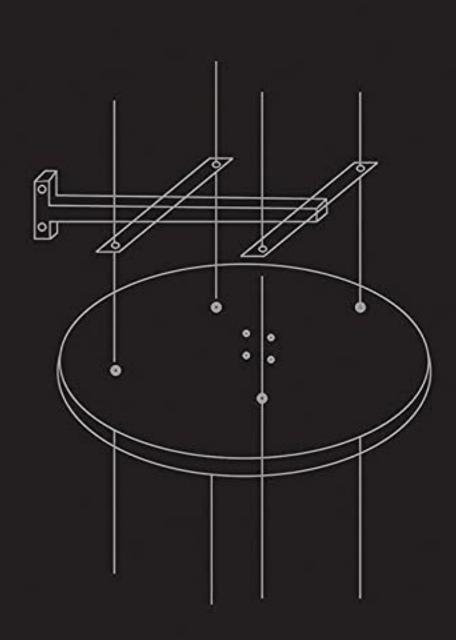

Important Notice

- The bracket must be fixed to a solid surface and not to a cavity or plaster board wall.
- Use Mallet to Insert G.
- Drill Holes 65MM deep to insert I.
- Check all fixing before use .

DISCLAIMER

MAKE SURE TO ASSEMBLE THIS PRODUCT ACCORDING TO THE INSTRUCTIONS. FAILURE TO DO SO MIGHT TRANSLATE INTO HARMFUL CONSEQUENCES. MAKE SURE THAT THE WEIGHT OF THE EQUIPMENT DOESN'T EXCEED THE WEIGHT CAPACITY OF THIS PRODUCT. IF YOU LACK THE NECESSARY EXPERTISE TO ATTACH THIS PRODUCT TO THE WALL STRUCTURE THAT YOU'RE USING, CONTACT A CONSTRUCTION PROFESSIONAL TO INSTALL THE WALL MOUNT OR TO PROVIDE SPECIFIC MOUNTING INSTRUCTIONS FOR YOUR WALL STRUCTURE. BRACKET MUST BE FIXED TO A SOLID SURFACE NOT TO A CAVITY OR PLASTER BOARD WALL.

Folded Position

