


STAR & ART BLACK ECOLINE DOUCHECABINE

Installation instructions

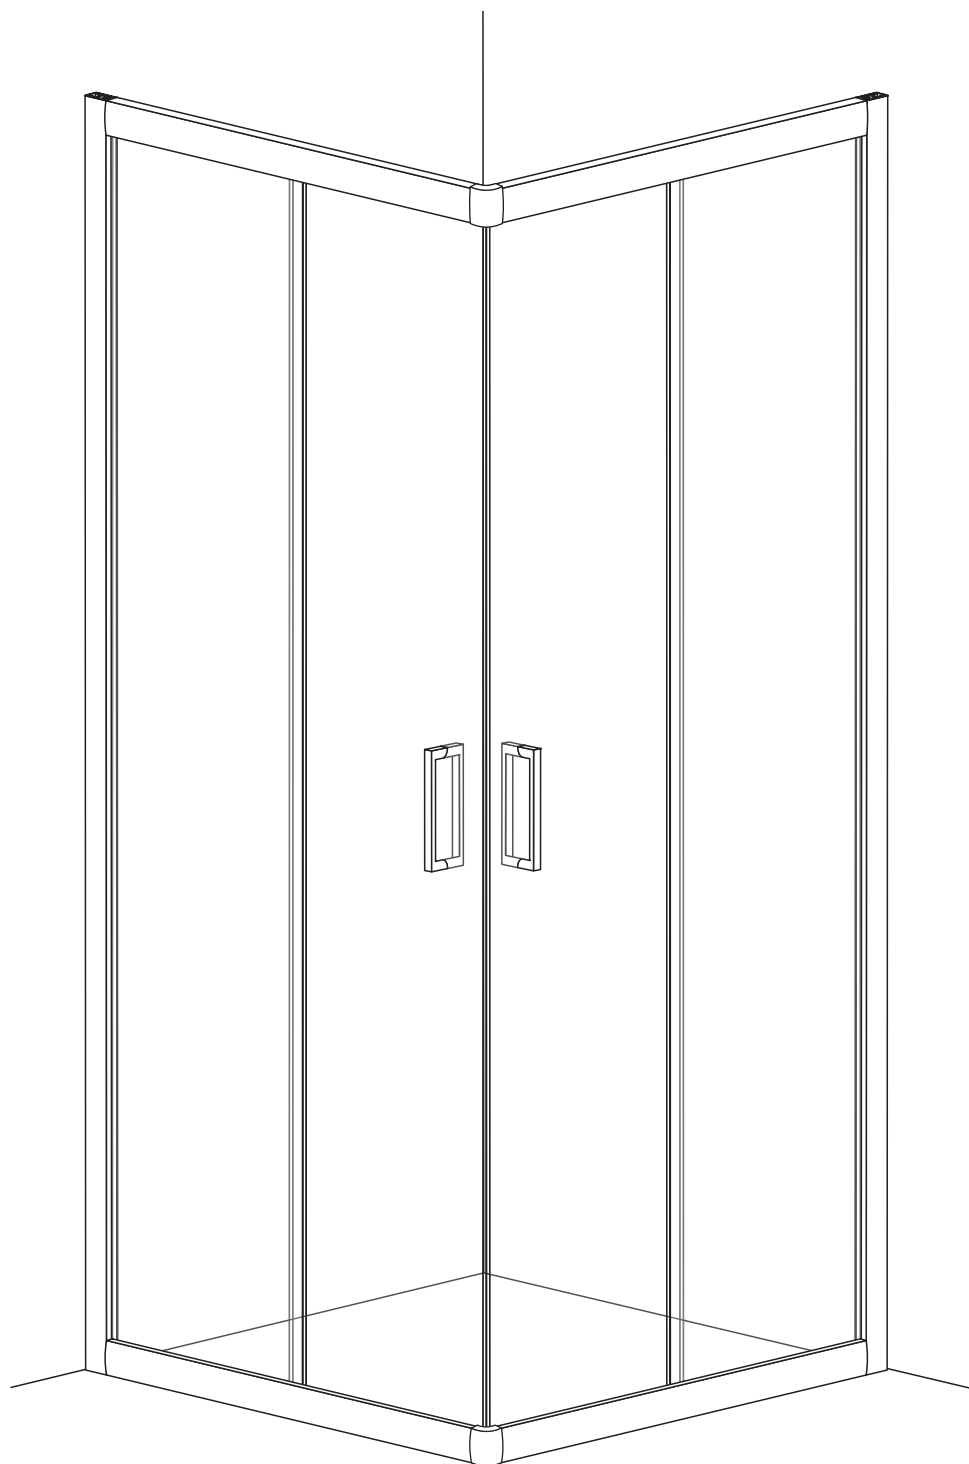

SIZE:90*90*200 cm


SIZE:100*100*200 cm

Installation instructions


TOOLS REQUIRED(NOT SUPPLIED)

when you're ready to start. make sure that you have the following tools to hand, plenty of space and a clean dry area for assembly.


Two people are needed. Please note: Although these instructions are comprehensive, We always recommend that a technically competent installer should undertake installation.

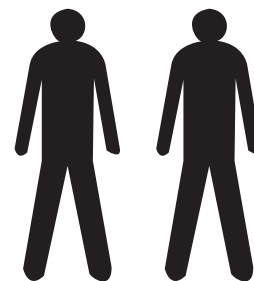


Drill bit to suit wall type
5.5mm

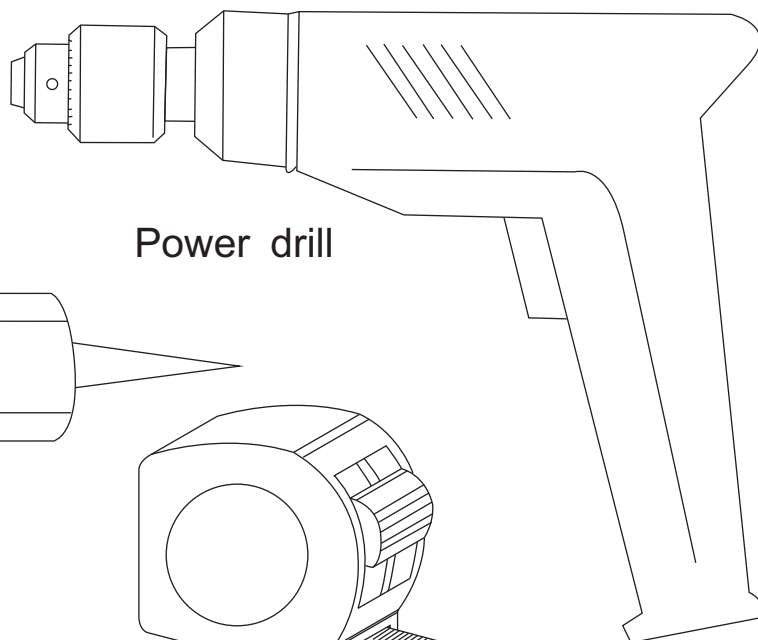


Power drill

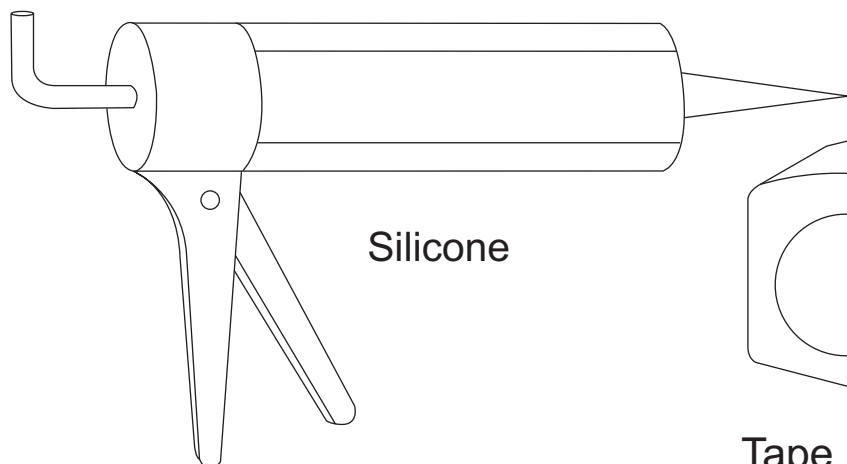


Silicone

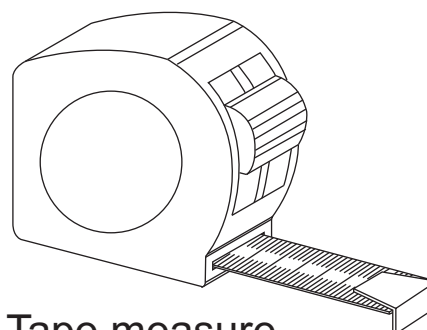


Tape measure

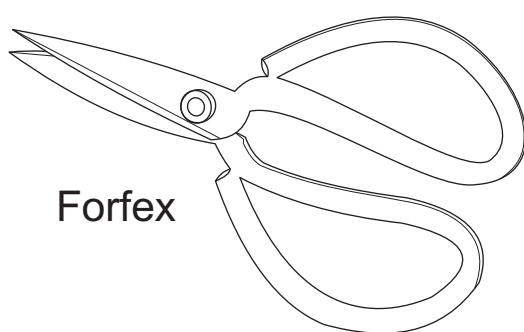


Forfex

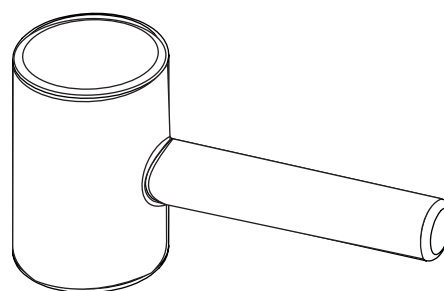


Rubber Mallet



Pencil




Magnetic cross head screw driver

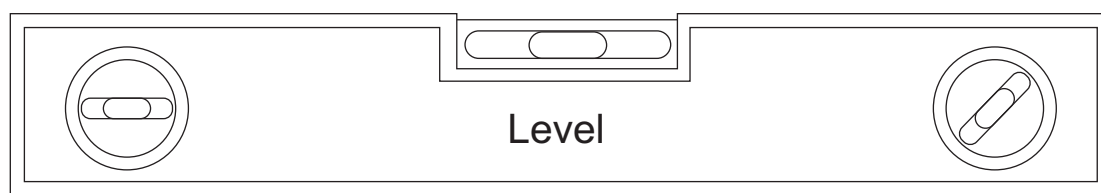



Level

Installation instructions







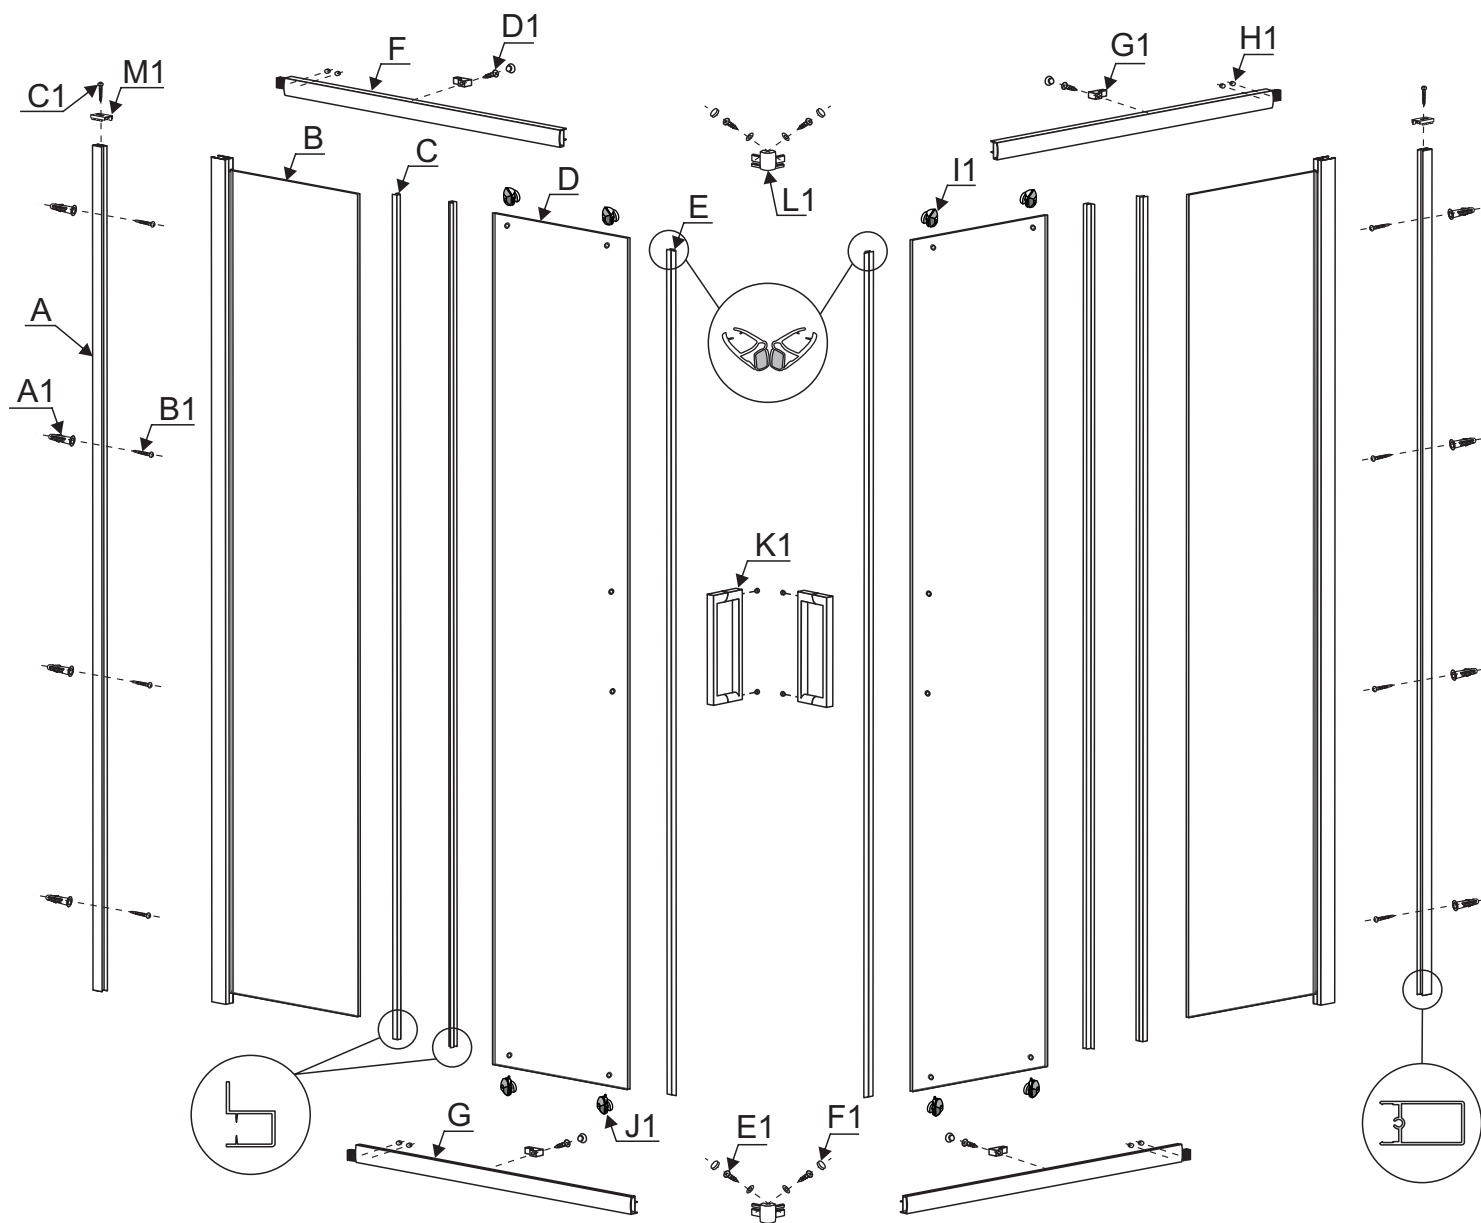


A1 8PCS	B1 4x25mm 8PCS	C1 4x20mm 2PCS	D1 4x10mm 4PCS	E1 4x8mm 4PCS	F1 4PCS
G1 4PCS	H1 8PCS	I1 4PCS	J1 4PCS	K1 2PCS	L1 2PCS
M1 2PCS	N1 Φ3mm 1PCS				









Installation instructions

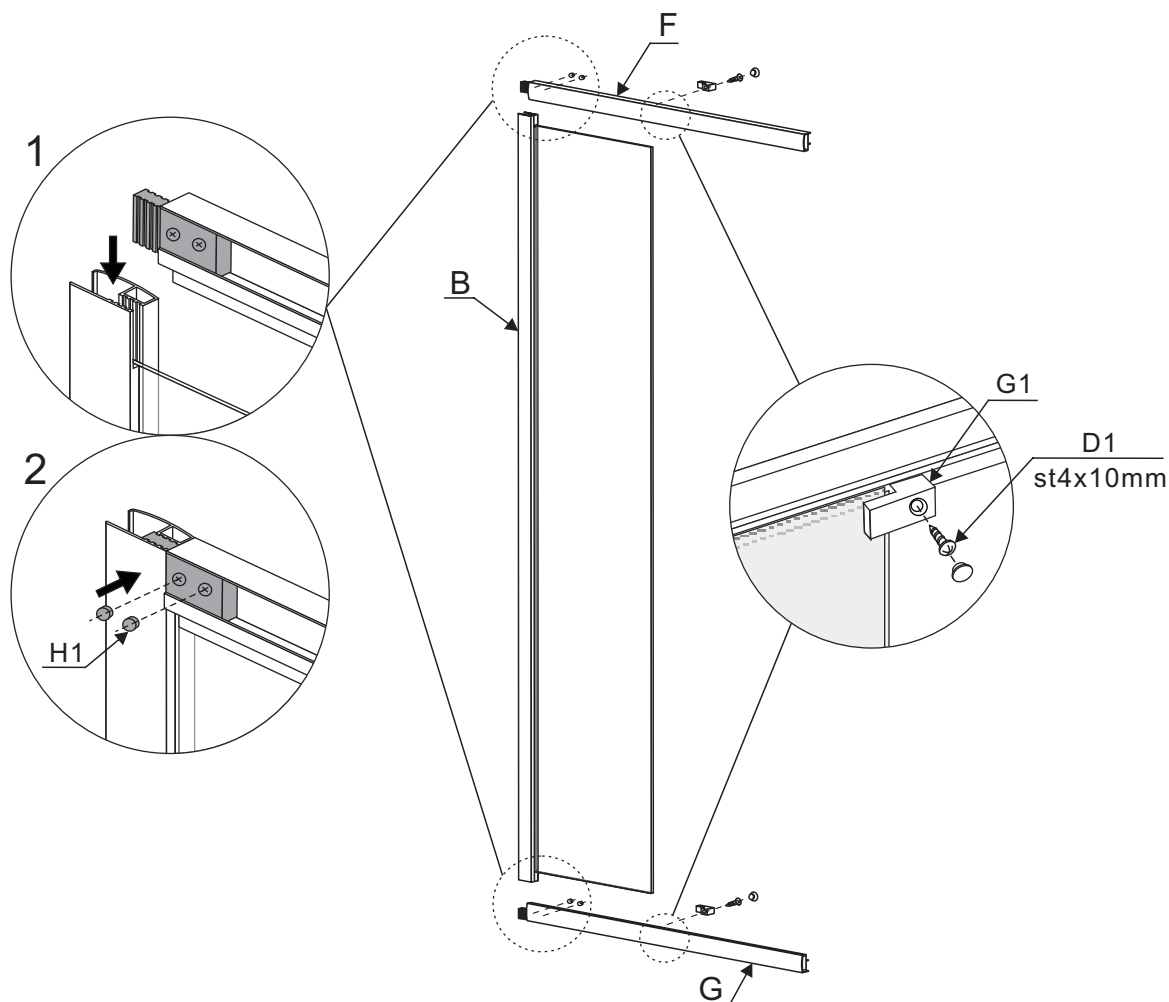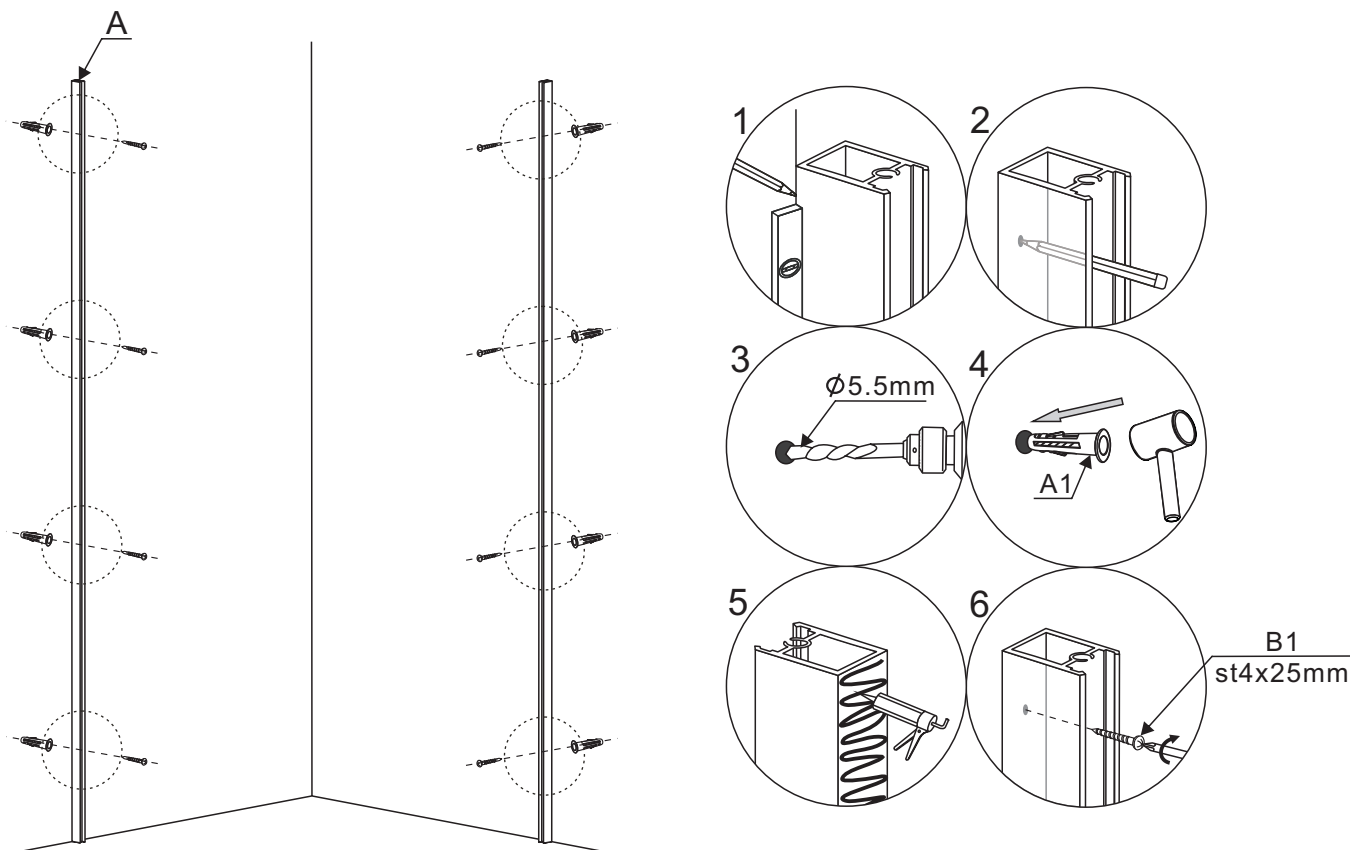

Installation instructions

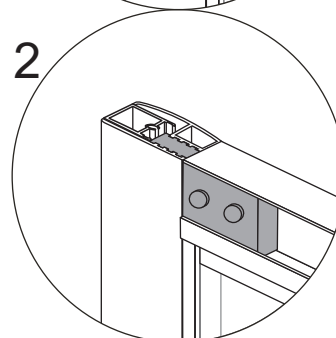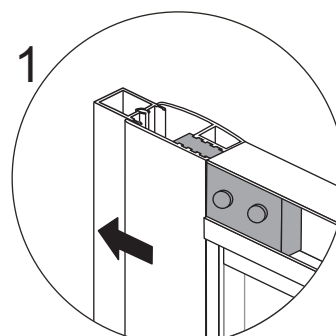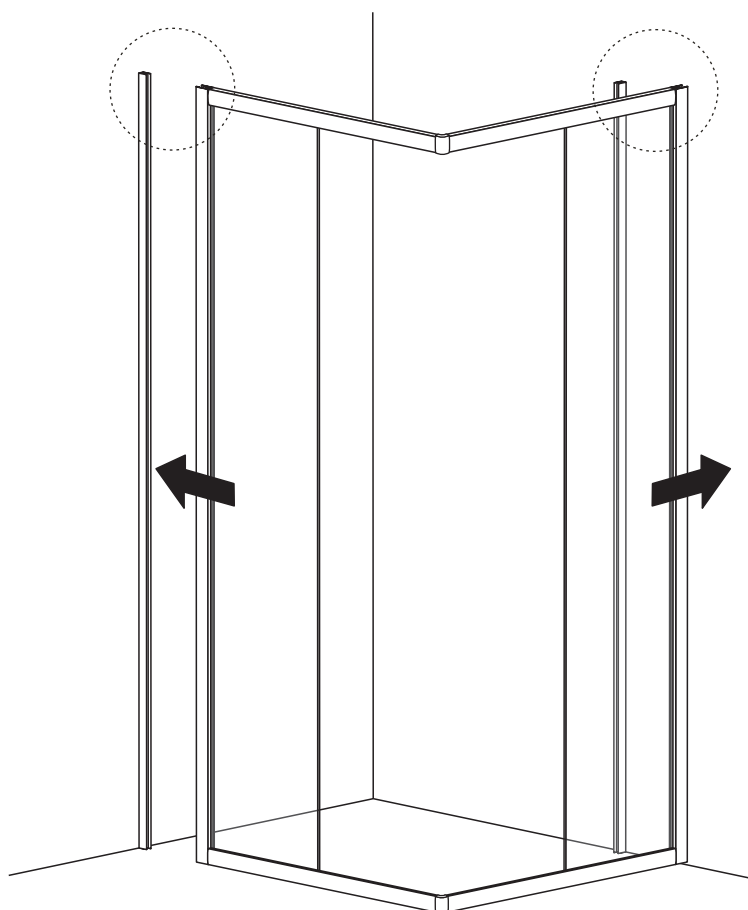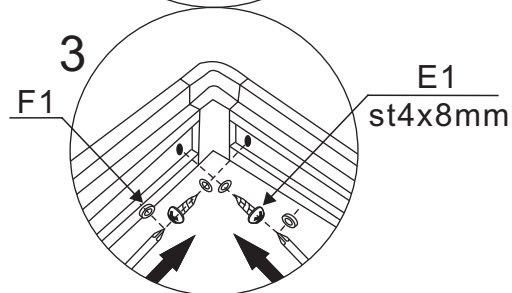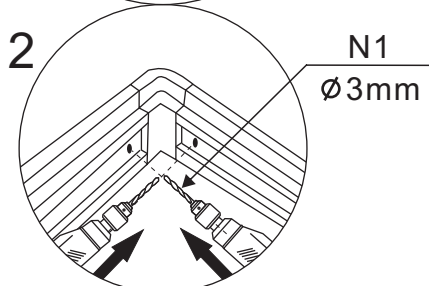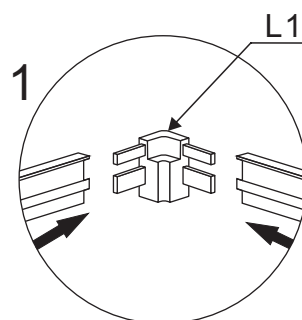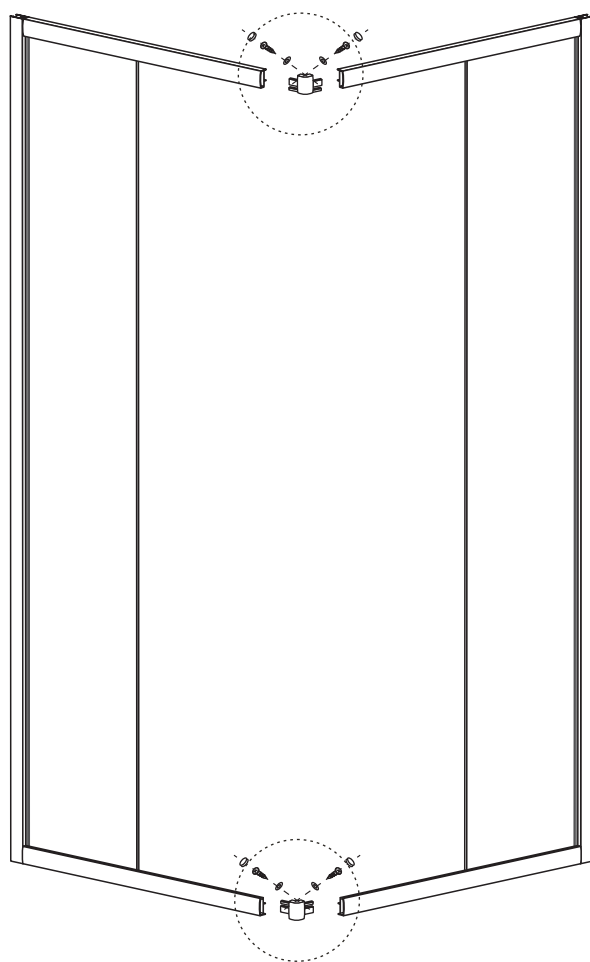

Installation instructions

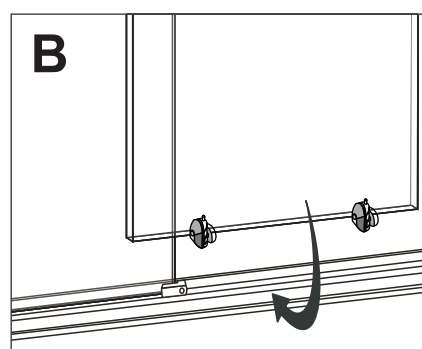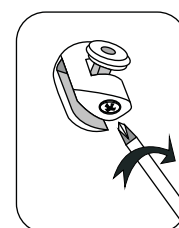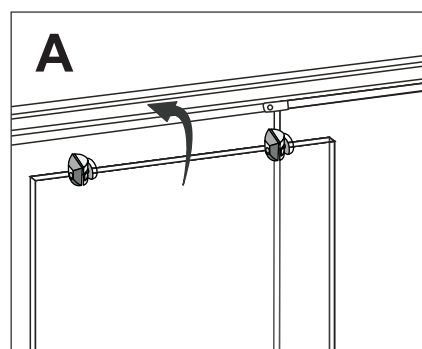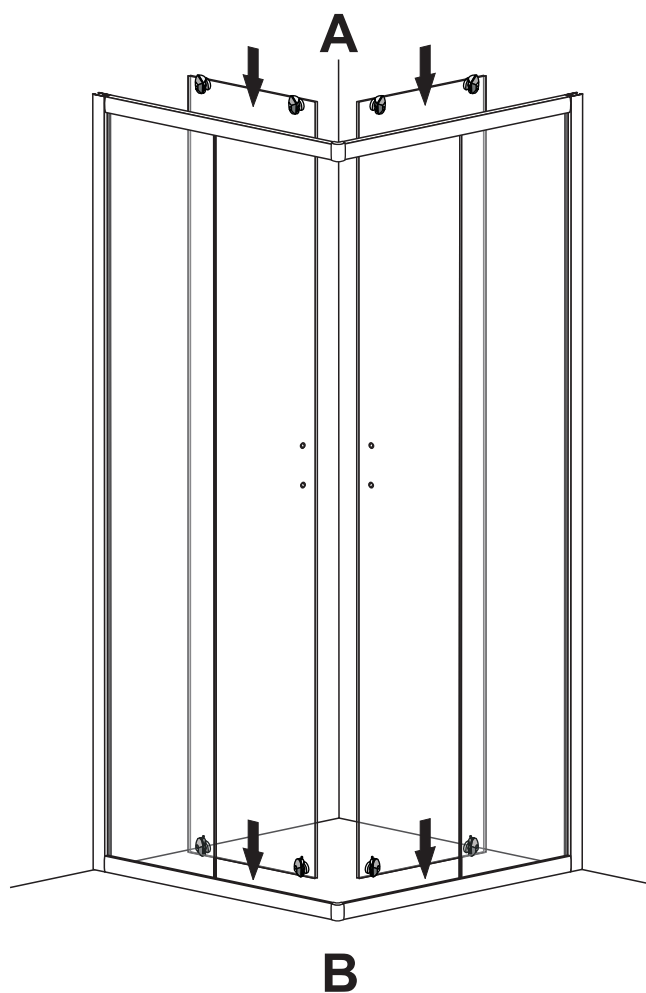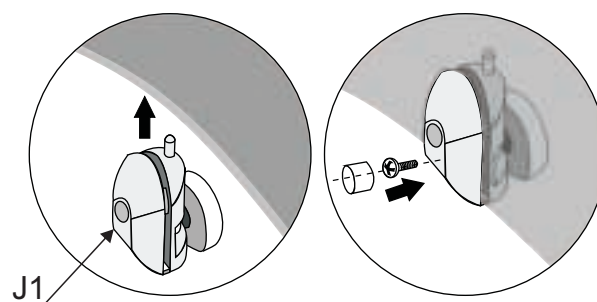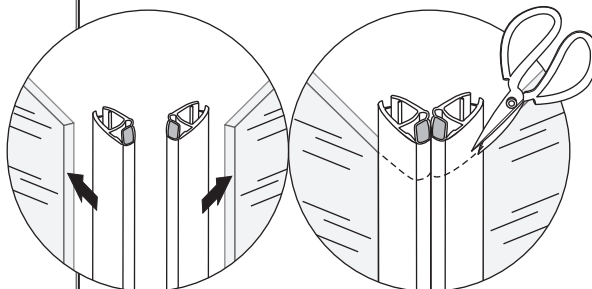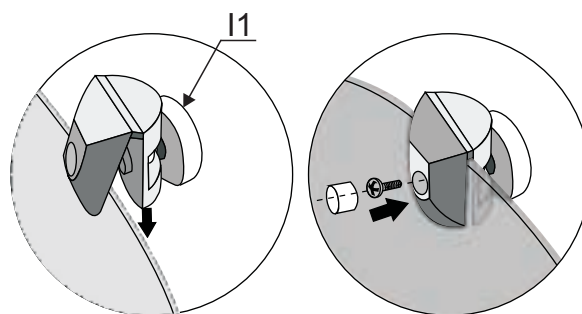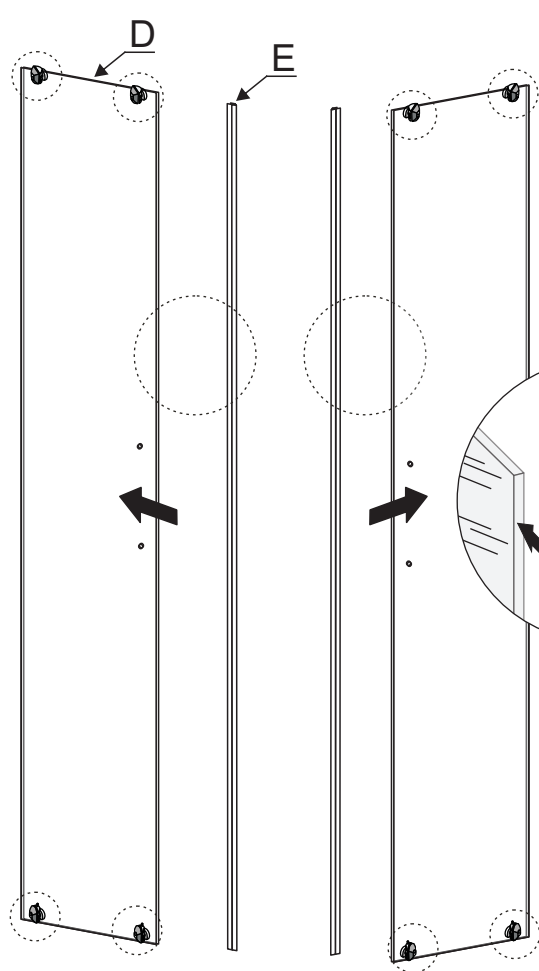

Installation instructions

