

Raingler

NETS & GRIPS

2007 - 2011 Honda CR-V Behind 2nd Row Seats Rear Barrier Divider Net Installation

NOTE: Many newer models have B-pillar handles and even overhead on the ceiling that can be used for some of the top mounting locations. Check to see if you prefer to use these factory locations as the nets typically have enough adjustment to allow for this option. If your vehicle does not have handles in desired locations or you prefer to install mounting points for better fitment, please follow the below steps.

IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING

Time: About 1 ½ to 2 hours



Paw Level:

Tools: (may vary by vehicle)

Tools:

Metric Sockets and wrench set

Drill & bits

Punch

Small hammer

Phillips bits for power drill

panel removal tool.

May need:

Small marker

Dremel or plastic trimming tool such as saw or snips

Please watch this preliminary video for detail on C100 Mount kit: <https://vimeo.com/321352161>

Step 1

Fold down and then forward the back seats to make working easier. Pop off by hand or use panel removal tool to gently lift and remove upper seat belt roller cover



Step 2

Unbolt the bolt and drop the seat belt assembly out of the way



Raingler
NETS & GRIPS


Step 3

Carefully grasp and pop the lower, darker colored plastic housing covering the wheel well. Watch for any hidden screws and go slowly. Model years can be slightly different from example shown. The lower panel just needs to be loosened, not completely removed from car. Then loosen and remove the top lighter section as shown:



Step 4

Exposed C pillar area where the C100M mounts will be installed for the top of the barrier net

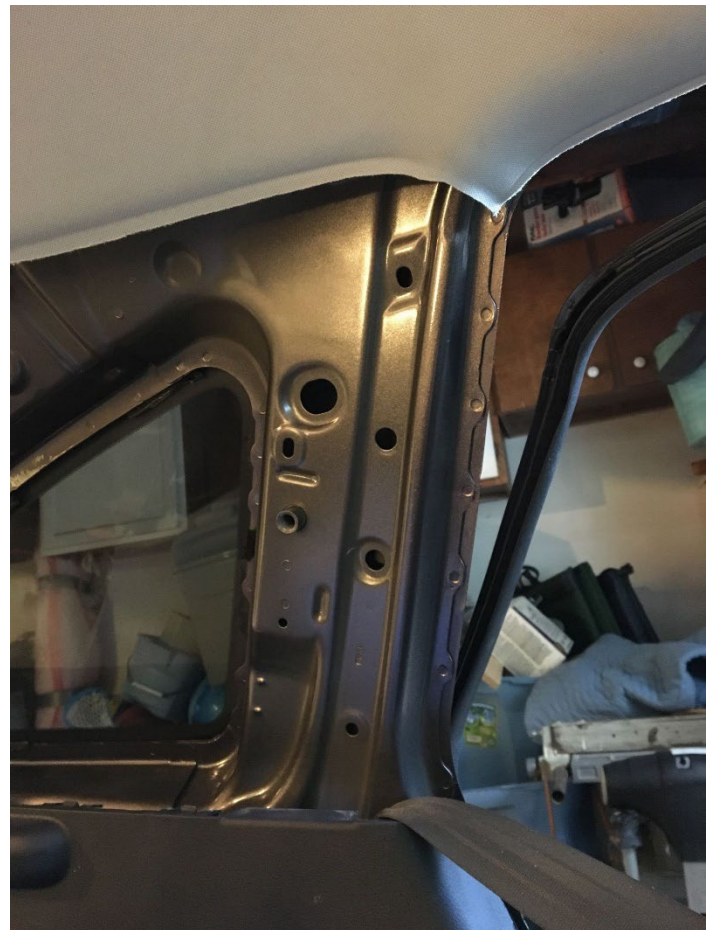

Step 5

If you have not already, we recommend watching the C100M video for detail on installing these type mounts: <https://vimeo.com/321352161>



Step 6

Following guidelines outlined in video regarding double checking depth and avoiding wires and washer lines, Install the C100M just above the leading top corner of the side quarter windows

Driver's side:



Passenger side:



Step 7

Once the C100's are installed, test fit the lighter panels and mark and trim (if necessary) inner plastic for strap clearance

(passenger side shown):



View from inside of the panel:



Raingler
NETS & GRIPS

Step 8

Reassemble trim panels with strap and D ring over top of trim



Step 9


Install the upper seat belt bolts with the C1015 brackets installed as shown on the driver's side



Step 10



Install the net loosely, working top to bottom. Top straps to the C100M D rings, middle straps to the C1015 brackets and then lowest straps under the pivot point for the rear seat back upright

Lower Area:

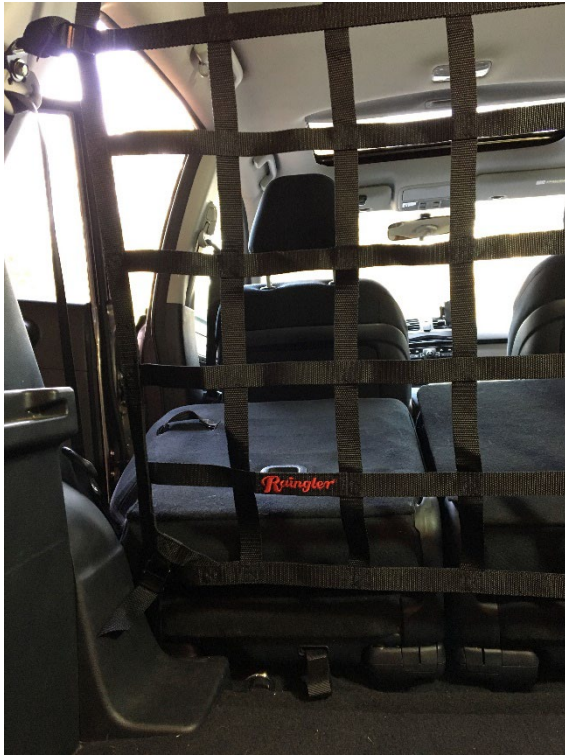

Step 11

Do final tensioning from top, then lower (check that the rear seat can raise and lower)

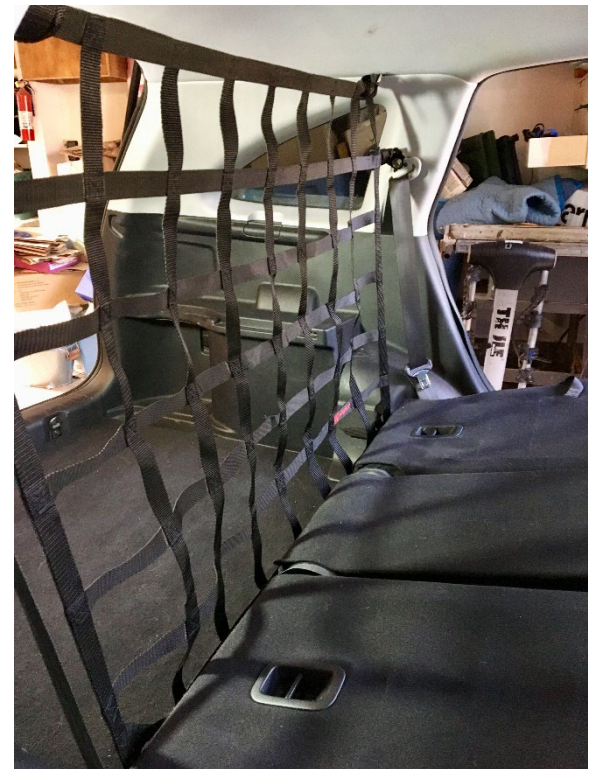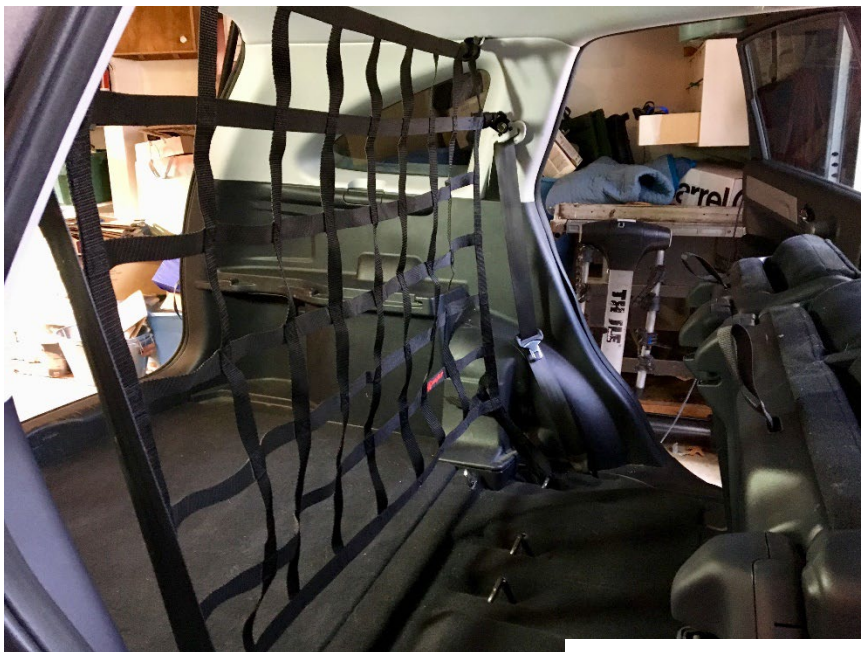

Raingler
NETS & GRIPS

Step 12

Once net is centered, wrap and tie up the excess ends:

Video showing detail of process: <https://vimeo.com/316588617>



Step 13

Check out our dog training and introduction tips for success: [Click here to learn more about dog training and safety when using these nets.](#)

Raingler
NETS & GRIPS

Enjoy your Raingler Net. Keep your gear stowed safely in back and your pups in place! Let us know if any comment or questions and tag us when you've got your net in use and action!



Thank you for purchasing Raingler Nets.
If you have any questions please contact us,
we are here to help!

See all our install videos on Vimeo!
<https://vimeo.com/raingler>

Raingler
NETS & GRIPS

866-905-7625 | Tech@RAINGLER.com | Raingler.com