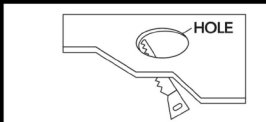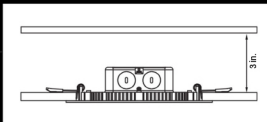# J-Box Installation

1 Ensure space above the installed fixture is at least 3 in.

3 in.

2 Cut a hole in the ceiling using the template provided.

HOLE

3 Make all connections inside the junction box using the wago connectors

3/8" Clamp connector (not included)

4 Hold spring clips against fixture and gently guide into the ceiling until clips snap into place.