





INSTALLATION INSTRUCTION FOR A2200 SERIES NON-RATED EXIT DEVICE

1. BEFORE INSTALLING DEVICE, PLEASE CHECK:

1. IF DOOR FITTED AND HUNG
2. SIZE OF EXIT DEVICE, FUNCTION AND DESIGN.
 - 2.1 36" DEVICES CAN BE CUT TO FIT DOORS DOWN TO 30" WIDE.
 - 2.2 48" DEVICES CAN BE CUT TO FIT DOORS DOWN TO 36".
 - 2.3 HAND OF DEVICE AGAINST APPLICATION.

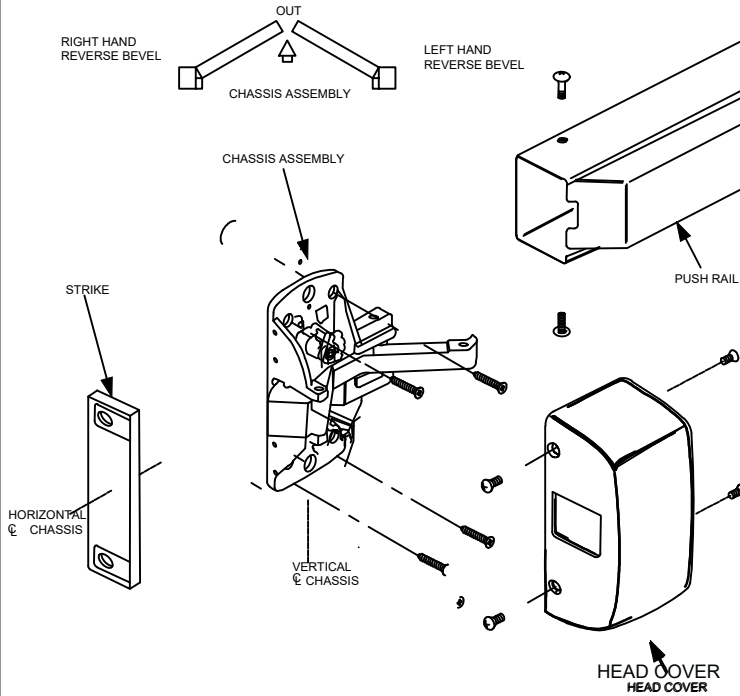


2. APPLY HARDWARE:

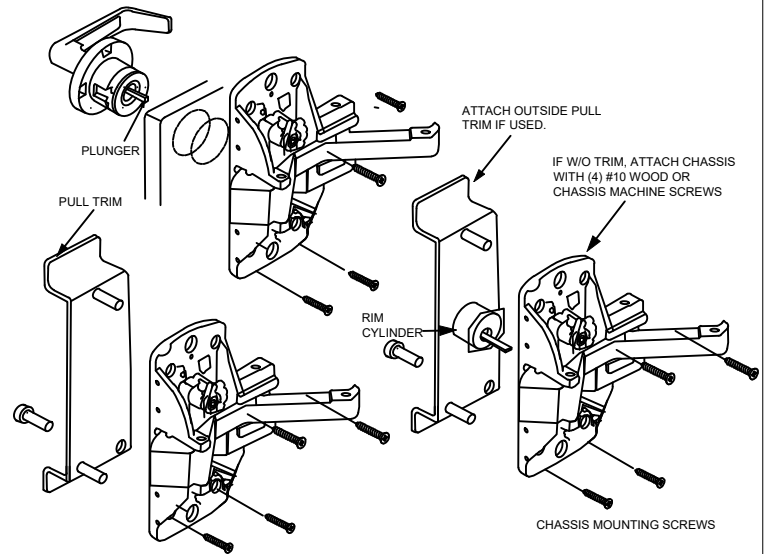


5. PREPARE DOOR

1. FOR 2-1/8" Ø BORE PREP POSITION TEMPLATE OVER EXISTING HOLE AND MARK FOR TWO CHASSIS MOUNTING SCREW HOLES.

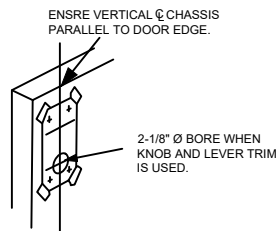


2. FOR DOOR W/O BORE PREP, MARK VERTICAL CHASSIS AND HORIZONTAL CHASSIS USING DIMENSIONS BELOW.

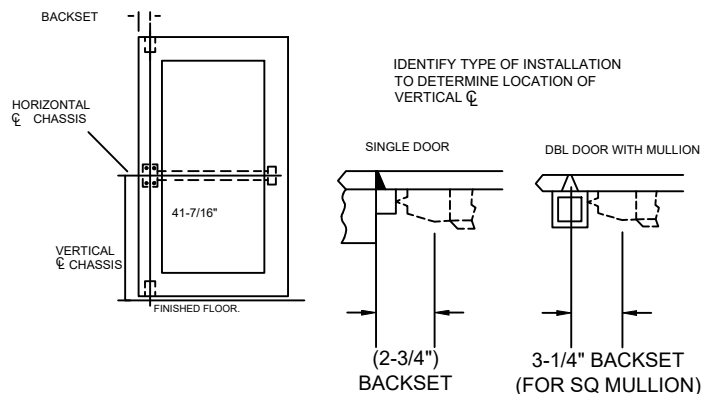

3. APPLY RAIL ASSEMBLY:

1. CHECK THE SIZE OF DEVICE, IF CUTTING LENGTH REQUIRED.
2. DETERMINE CUT OFF LENGTH "X" BY SUBTRACTING 1-3/4" FROM "Y". MARK CUT OFF POINT ON MOUNTING RAIL.
3. DEPRESS ARM INTO RAIL OPENING AND SLIDE RAIL ONTO CHASSIS. LEVEL RAIL AND FASTEN CHASSIS AND MOUNTING PLATE.

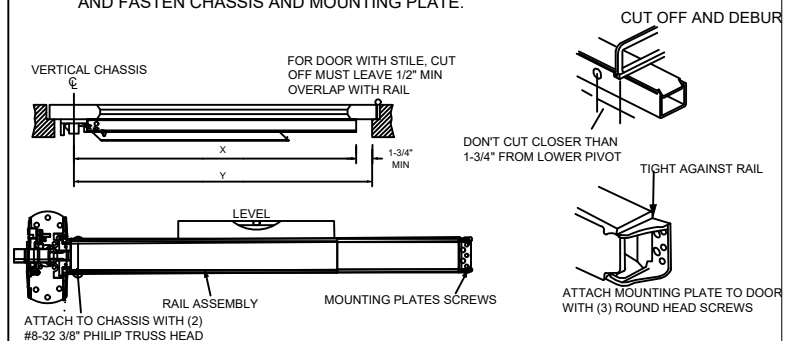

4. APPLY COVER AND STRIKES:

