


# Assembly Instructions

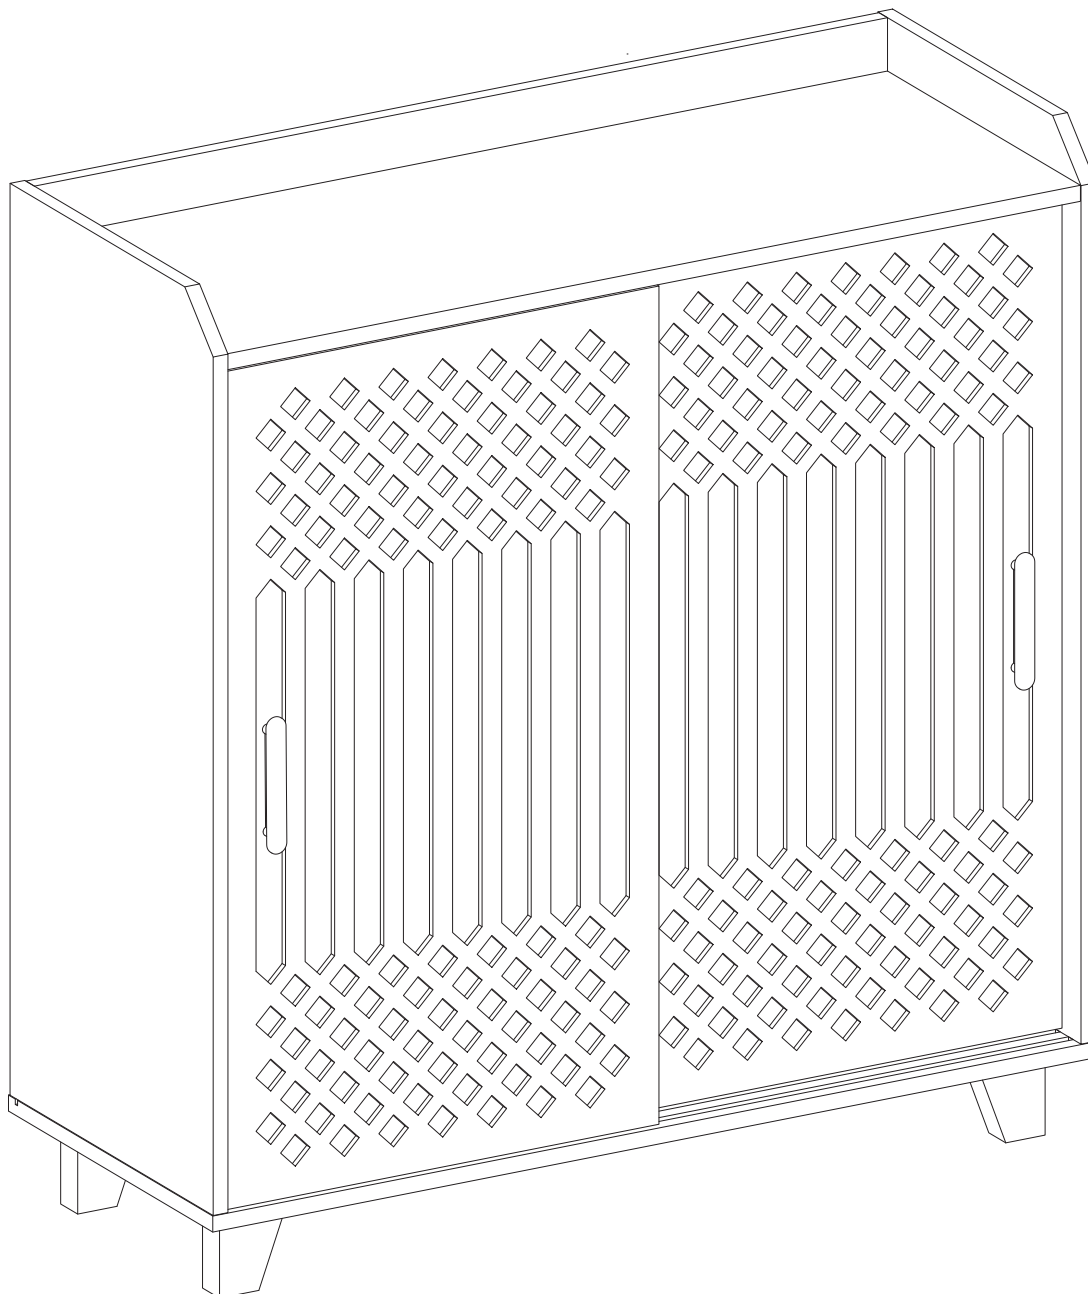

---


**Shoe Cabinet**

Model No.  
**HOGA-HL0229**

---

# Contact Us




## We're here to help you.

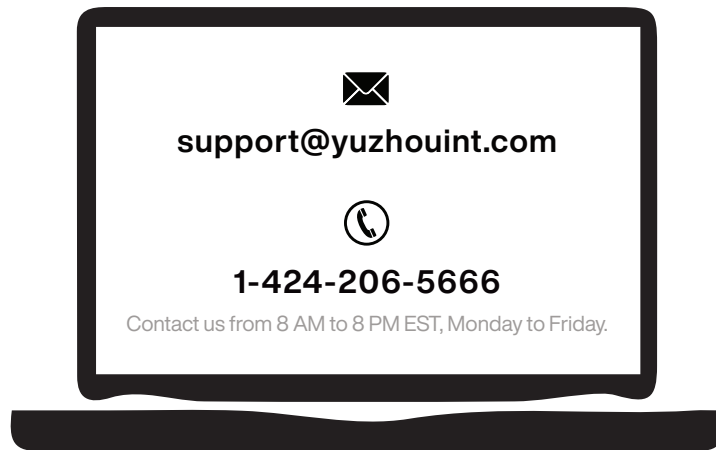

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


### Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

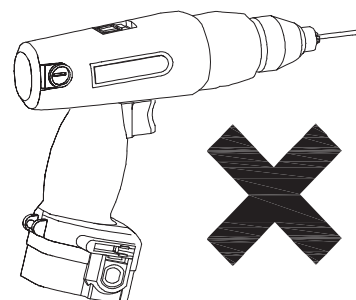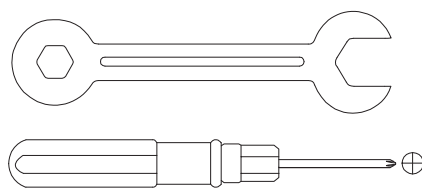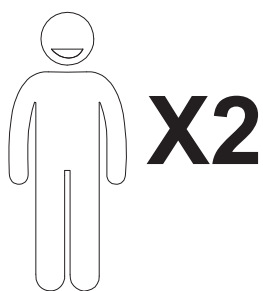



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

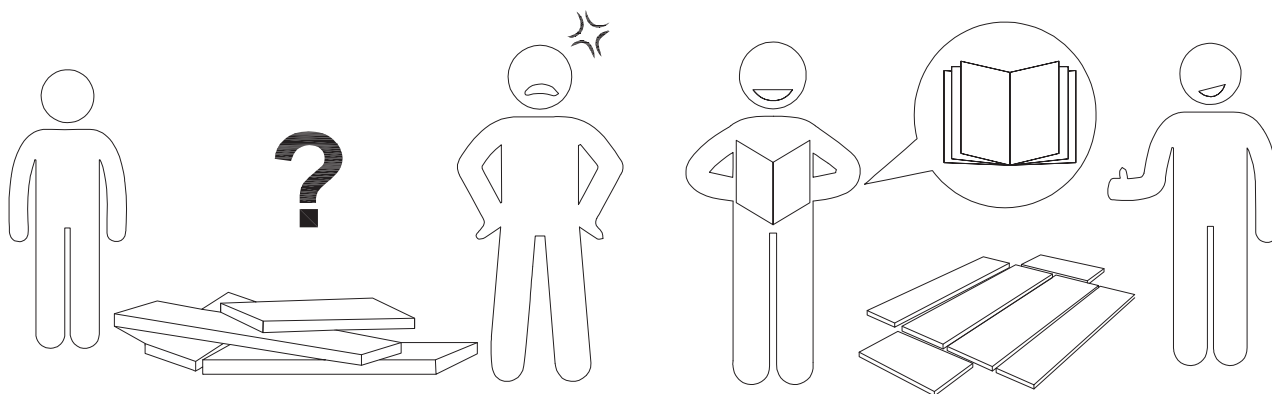

## AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

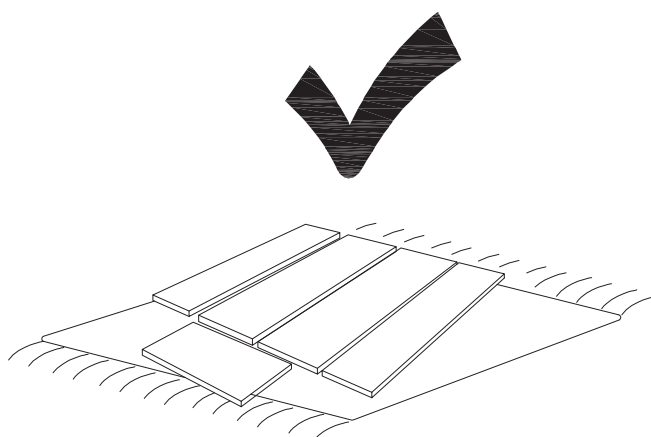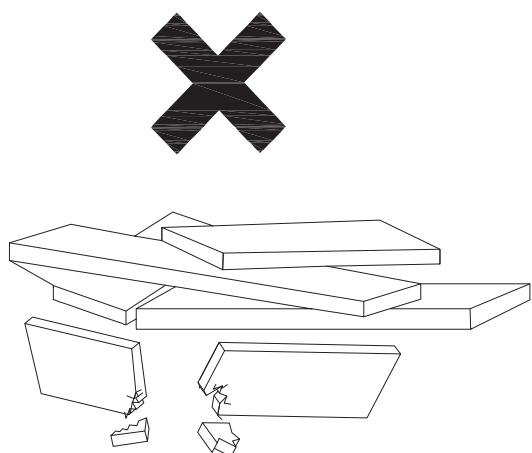



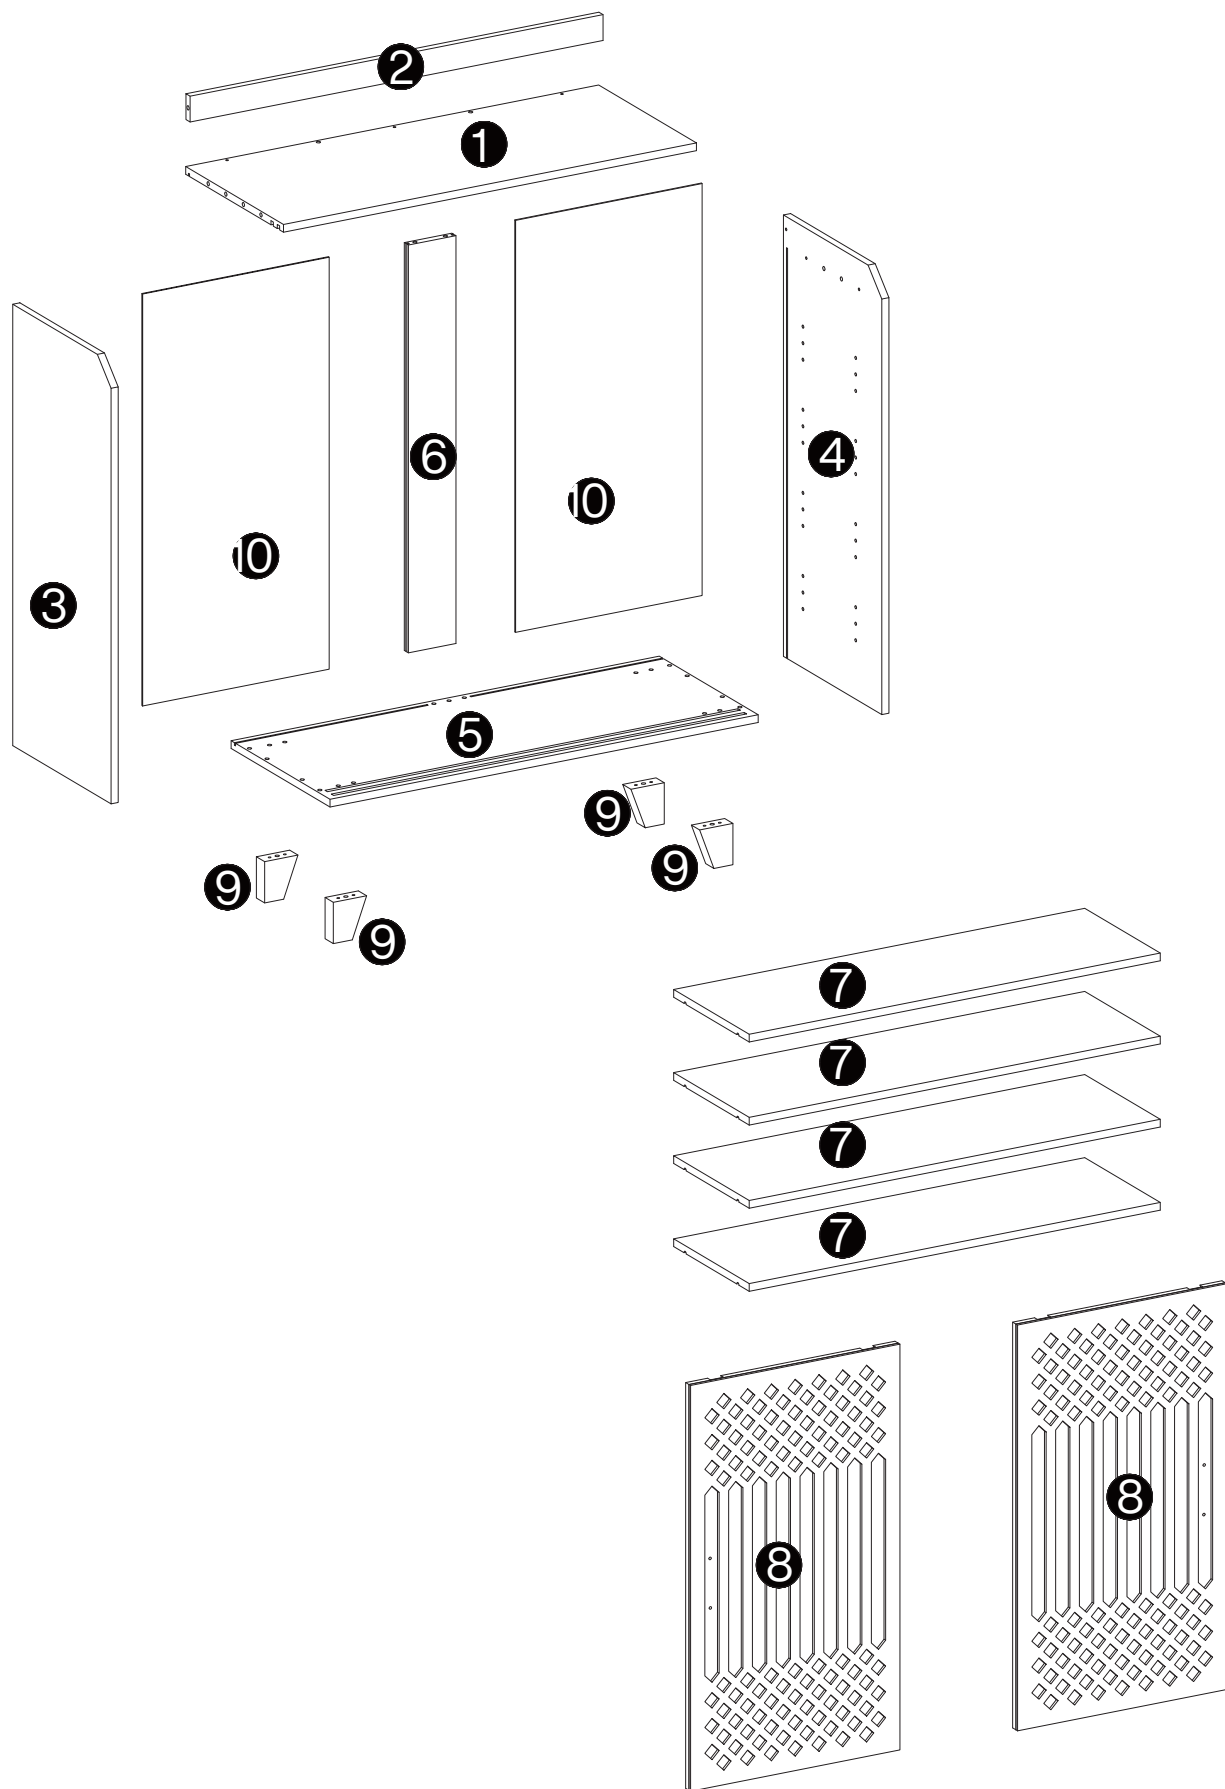


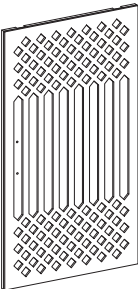












**⚠ Caution**






Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.  
Contact us for a free replacement if you encounter any damaged or missing parts.


Parts List

<div>1</div> <div></div> <div>1pc</div>	<div>2</div> <div></div> <div>1pc</div>	<div>3</div> <div></div> <div>1pc</div>	<div>4</div> <div></div> <div>1pc</div>
<div>5</div> <div></div> <div>1pc</div>	<div>6</div> <div></div> <div>1pc</div>	<div>7</div> <div></div> <div>4 pcs</div>	<div>8</div> <div></div> <div>2 pcs</div>
<div>9</div> <div></div> <div>4 pcs</div>	<div>10</div> <div></div> <div>2 pcs</div>		

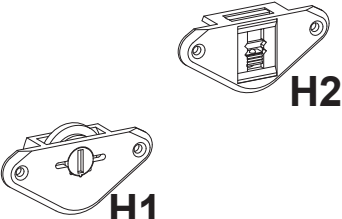Hardware List



A	B	C	D	E	F
					
ST6x40mm	Ø15x11mm	M4x16mm	Ø8x35mm	ST7x40mm	ST3x14mm
11 pcs	11 pcs	4 pcs	14 pcs	14 pcs	16 pcs

H	J	K		
 H1 H2			 3#	 4#
4 pcs	16 pcs	2 pcs		


					

# Installation of Cams and Pins



Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

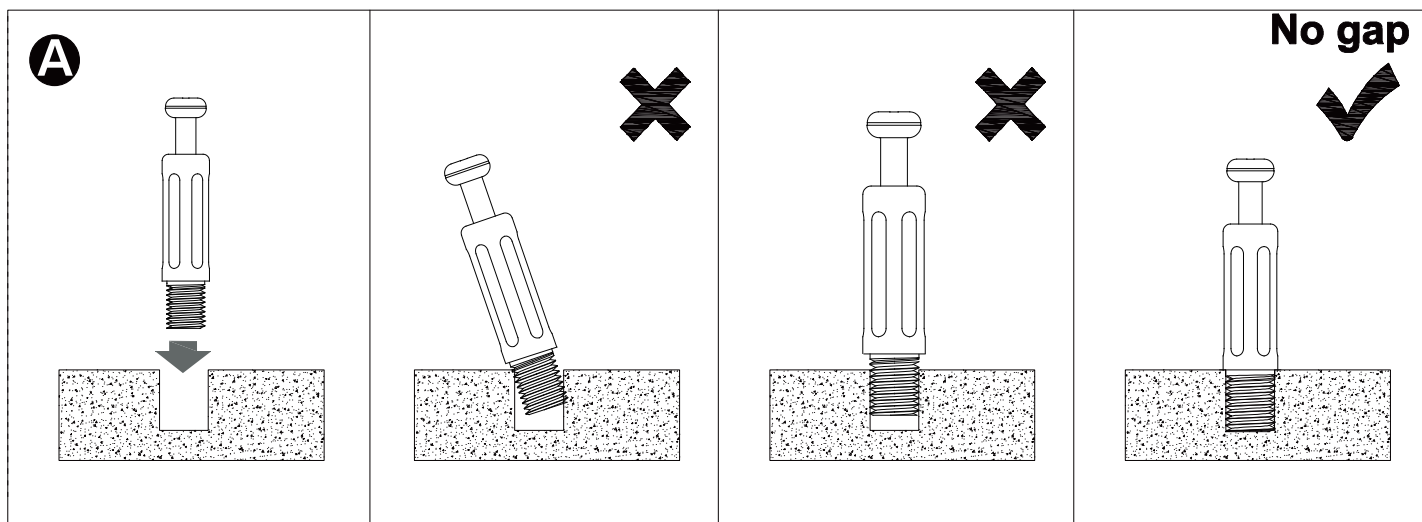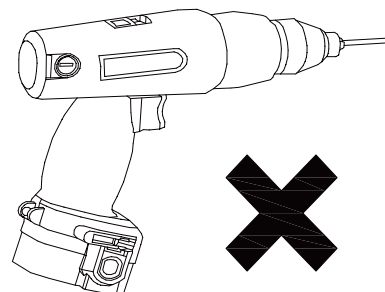


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

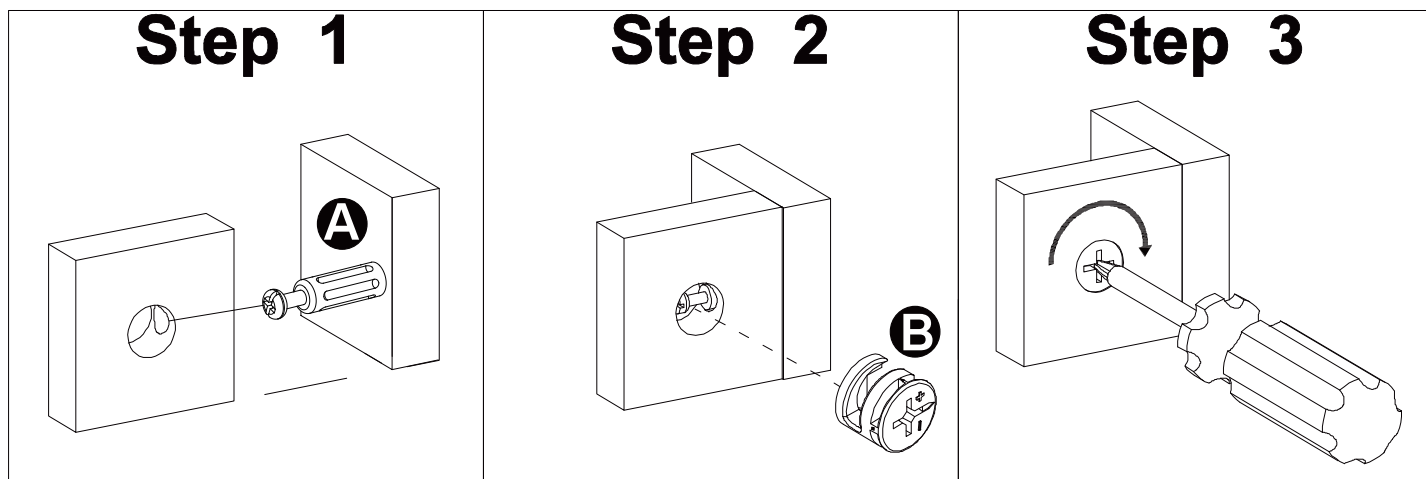



1

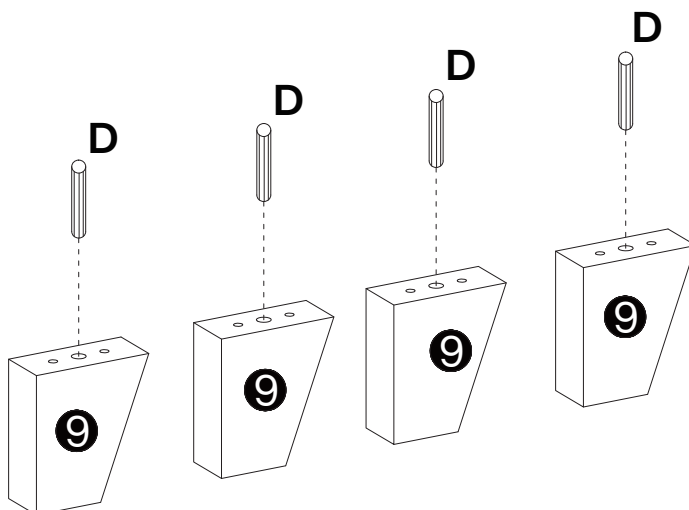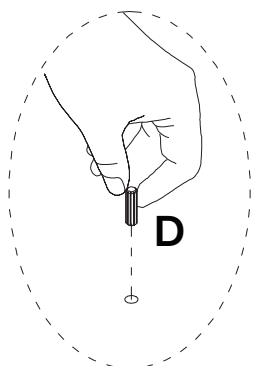

D

Ø8x35mm
4 pcs

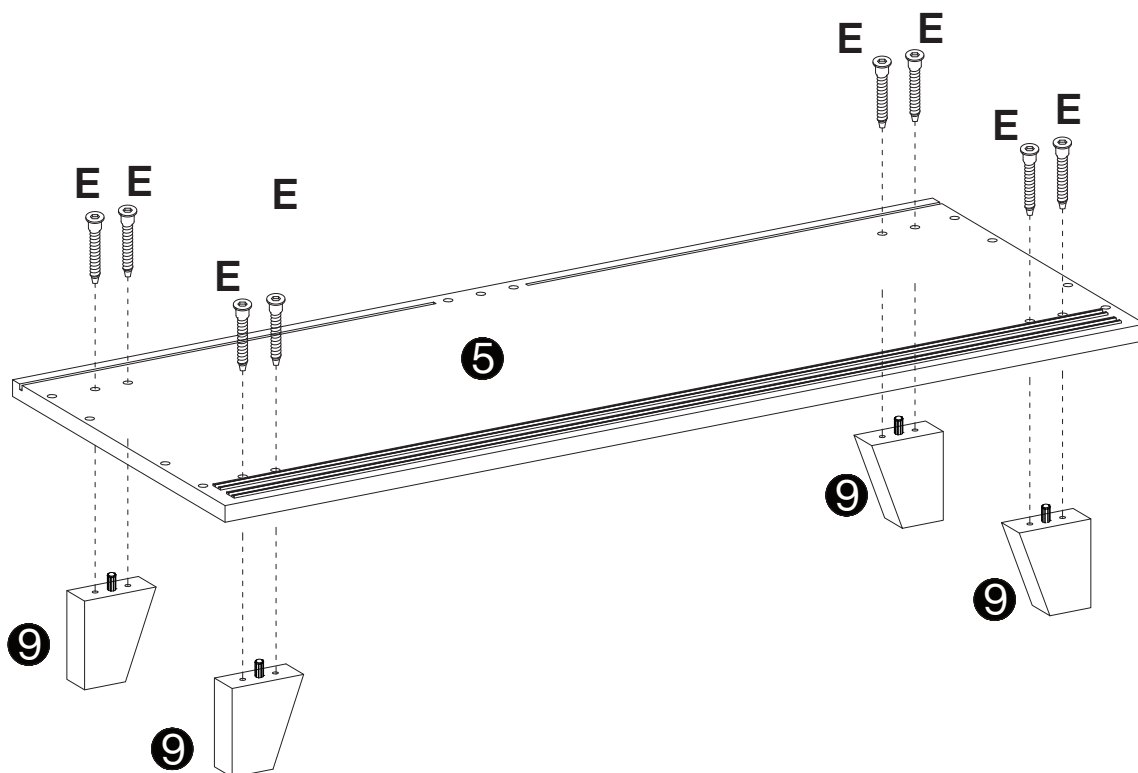

2




E

ST7x40mm
8 pcs




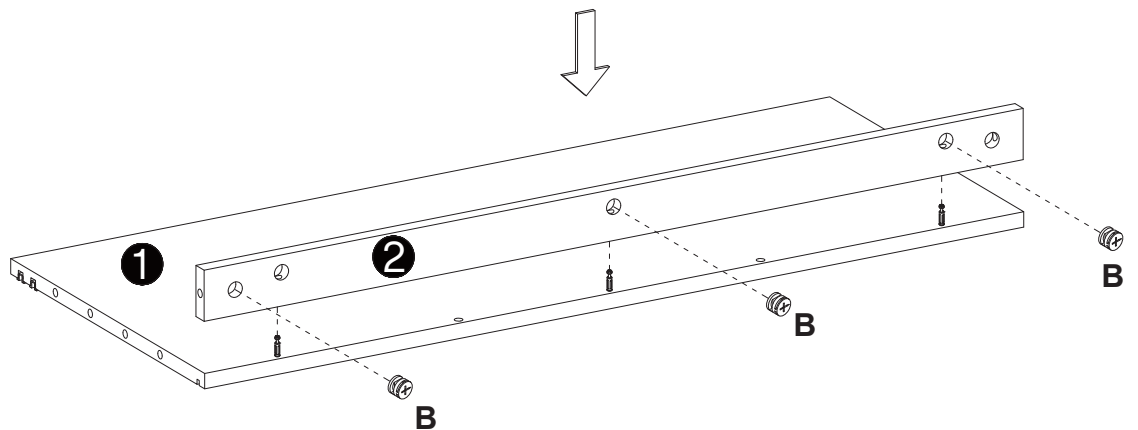
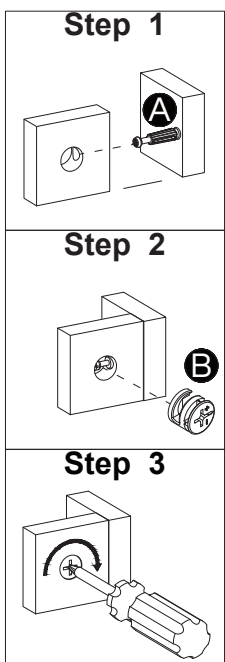
3

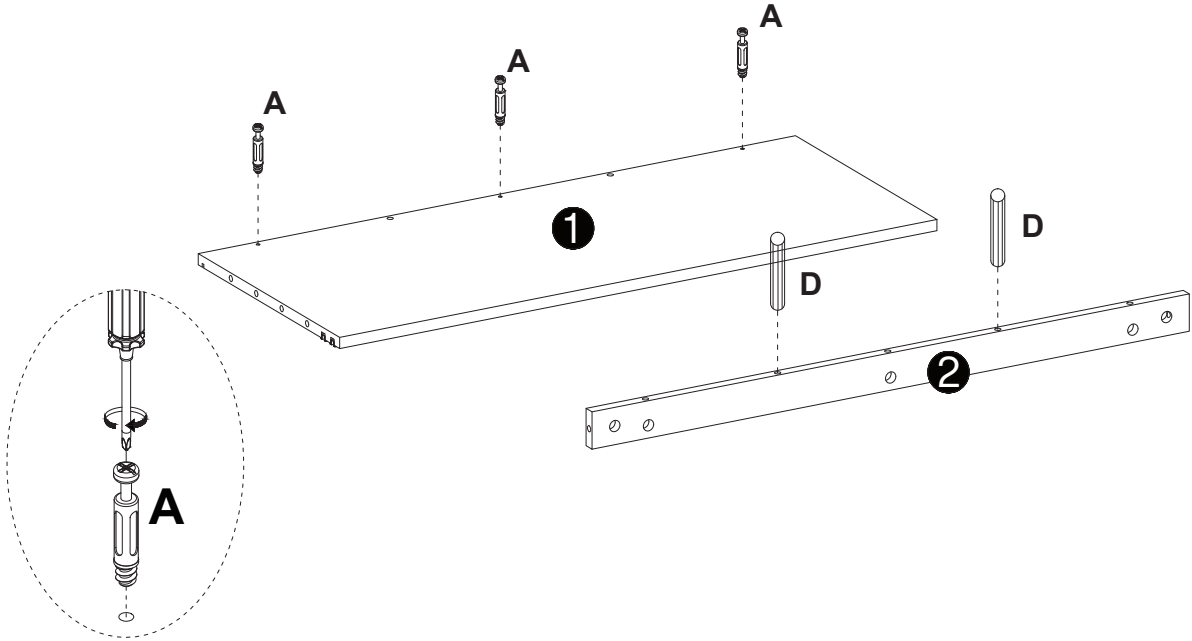A	D
	
ST6x40mm	Ø8x35mm
3 pcs	2 pcs






4


B

Ø15x11mm
3 pcs

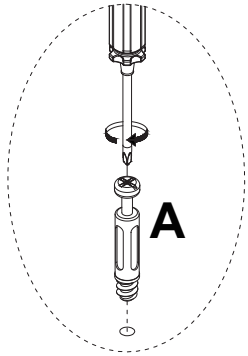


5


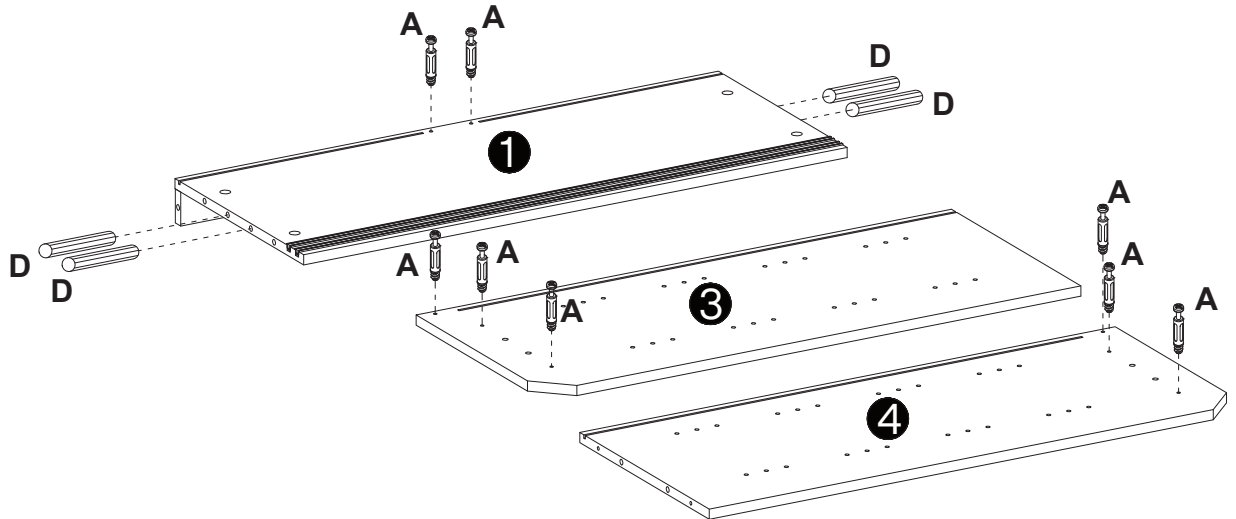


A	D
	
ST6x40mm	Ø8x35mm
8 pcs	4 pcs





6

B

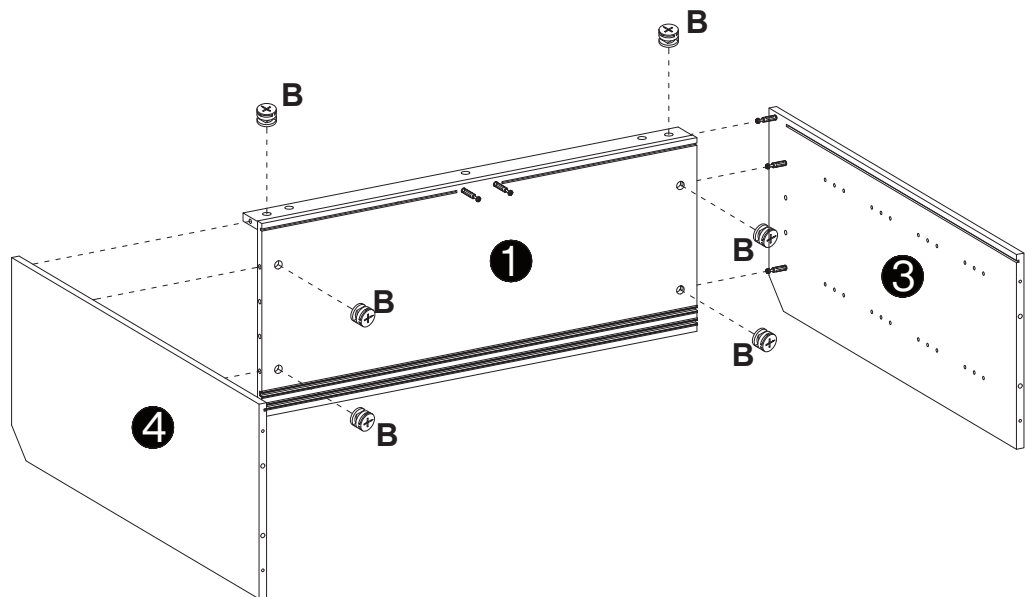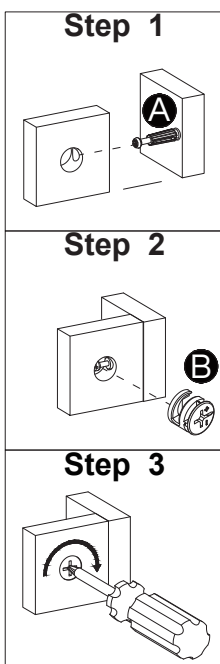Ø15x11mm
6 pcs

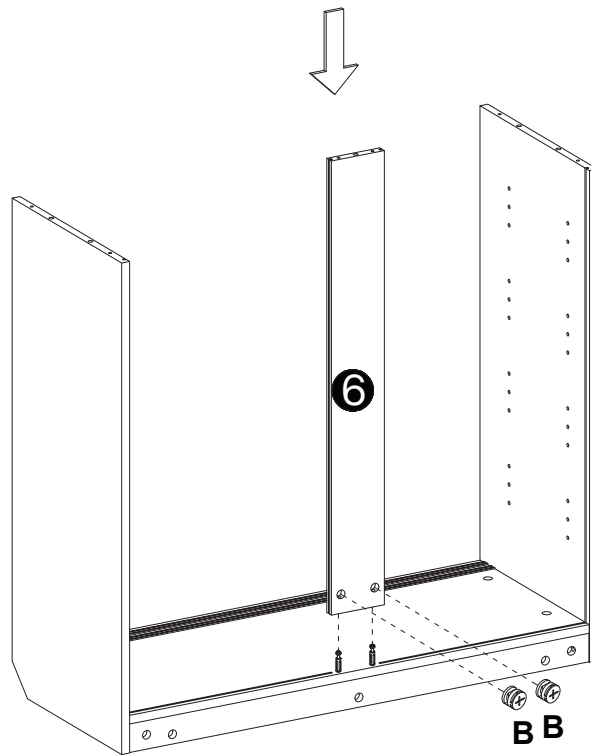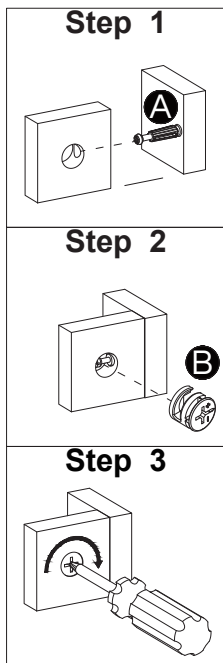


7




B


Ø15x11mm
2 pcs

8

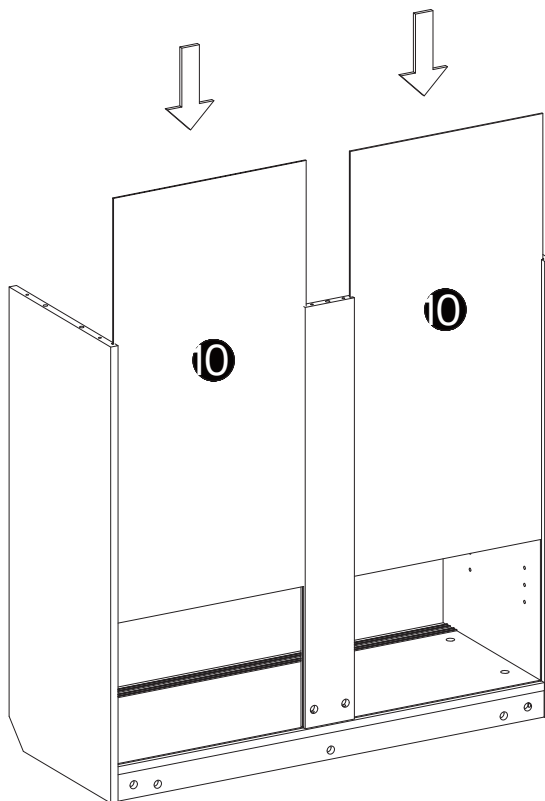



9

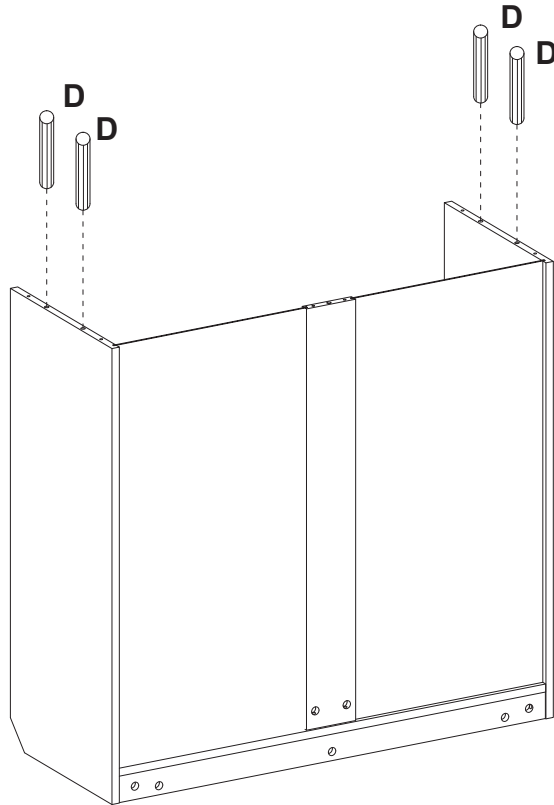


D

Ø8x35mm
4 pcs

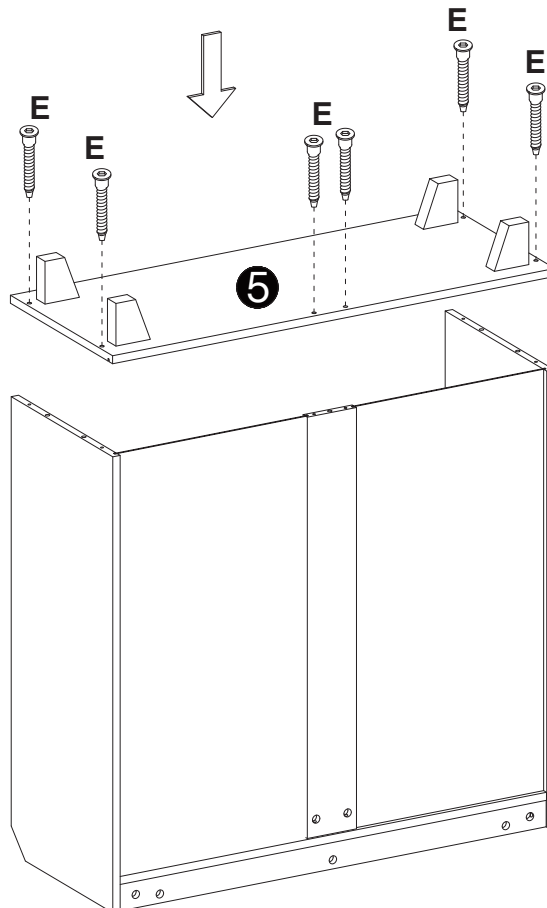
10




E

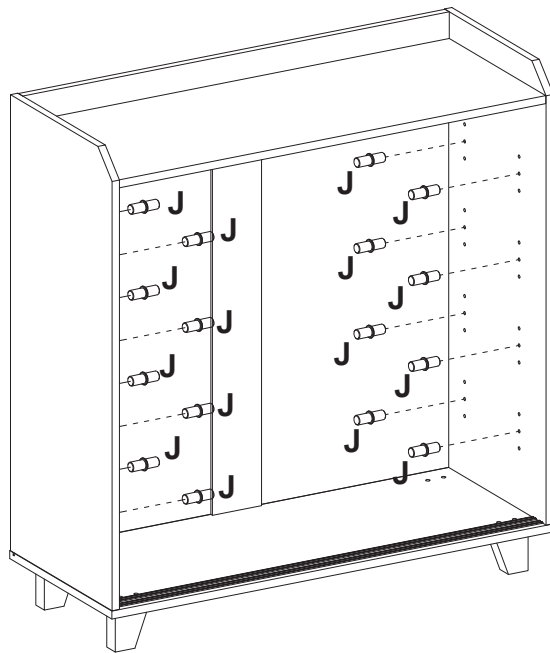ST7x40mm
6 pcs

11




J

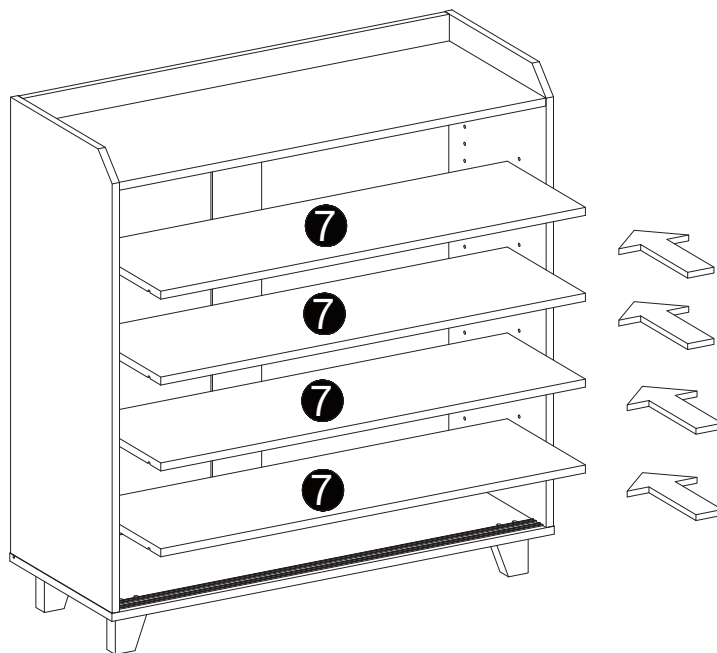16 pcs

12

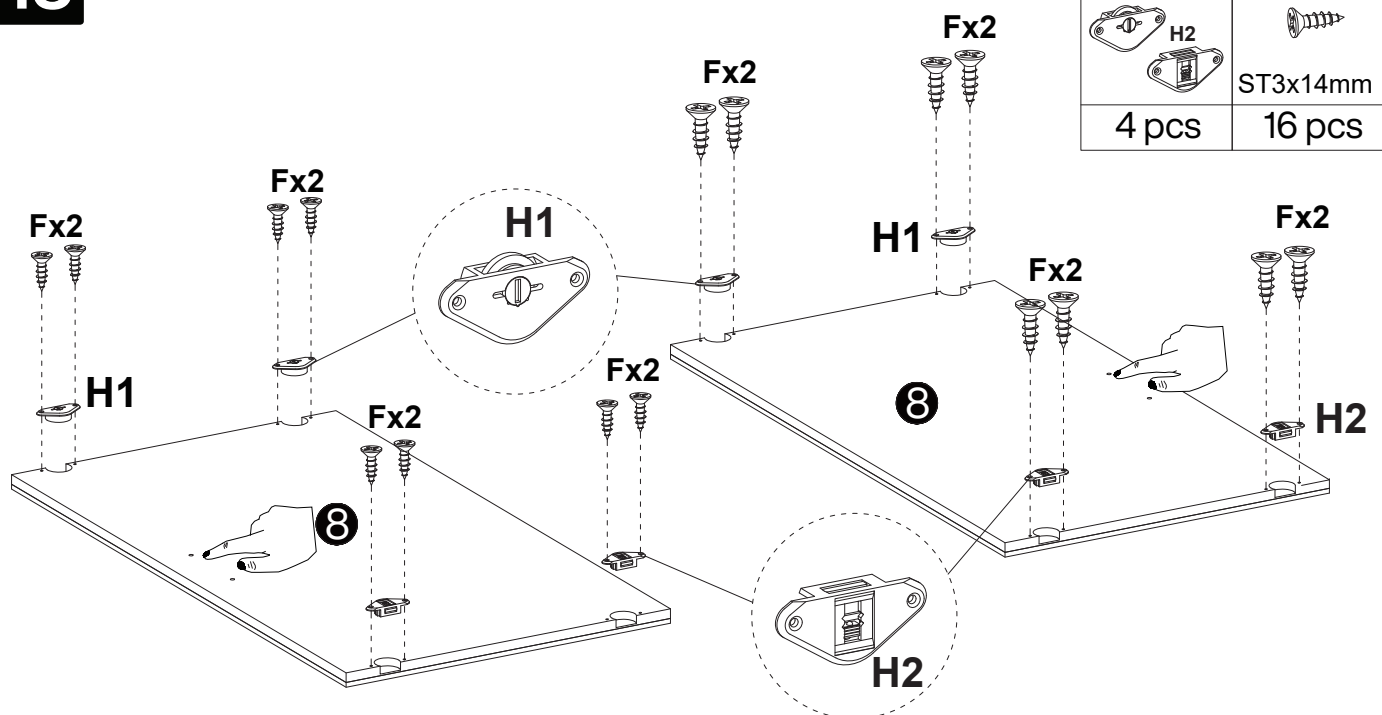


# 13



When installing, pay attention to the left and right directions of the handle holes.

# 14

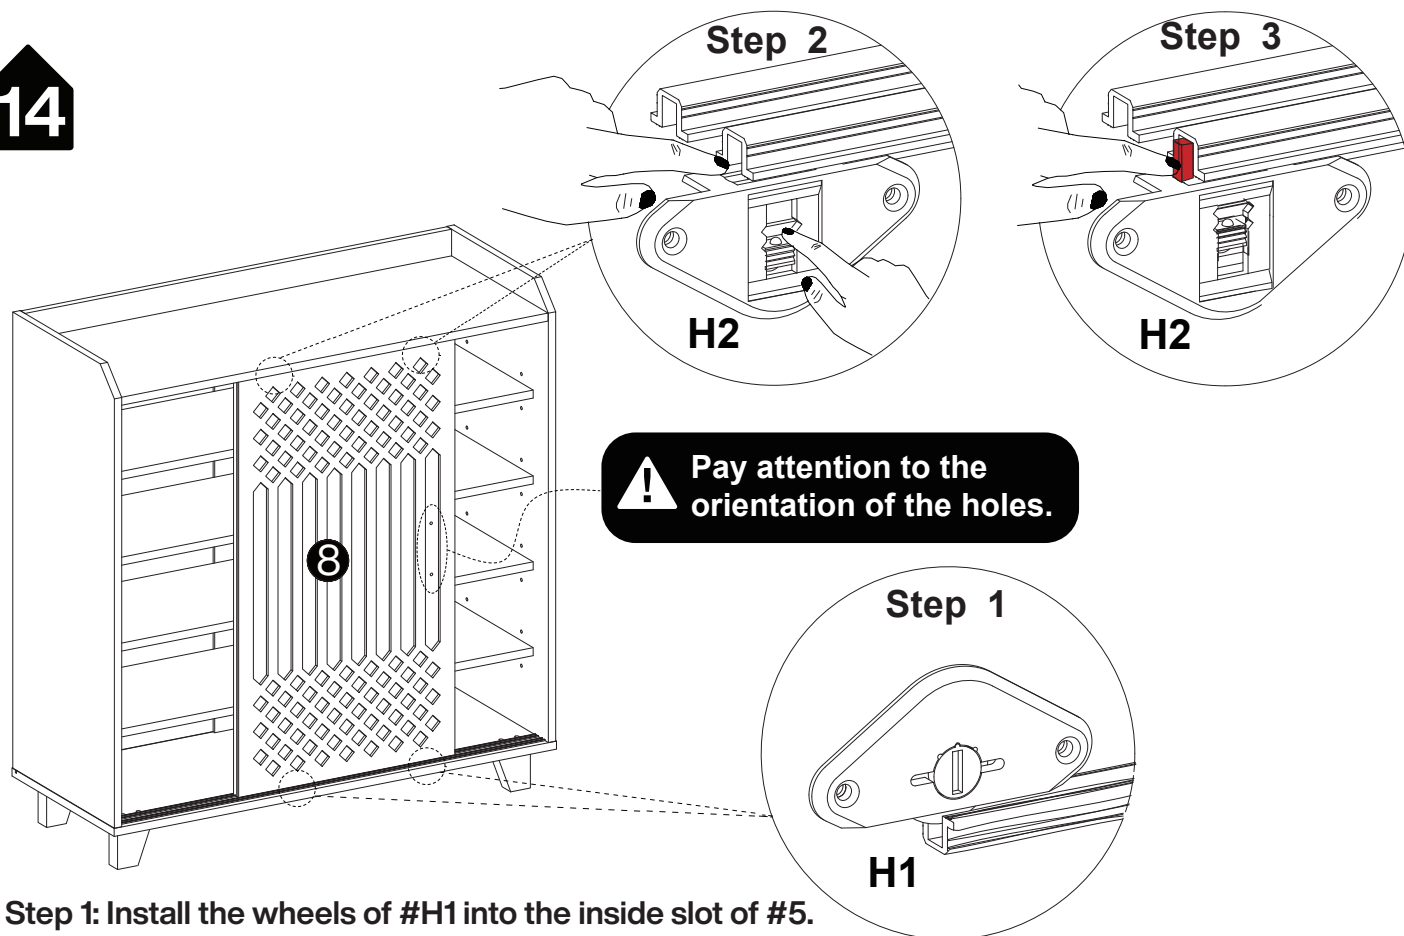


Step 1: Install the wheels of #H1 into the inside slot of #5.

Step 2: Press the limit spring of #H2 down, and then align the corresponding stopper with the inner slot of #1.

Step 3: Once aligned, release the limit spring.

15

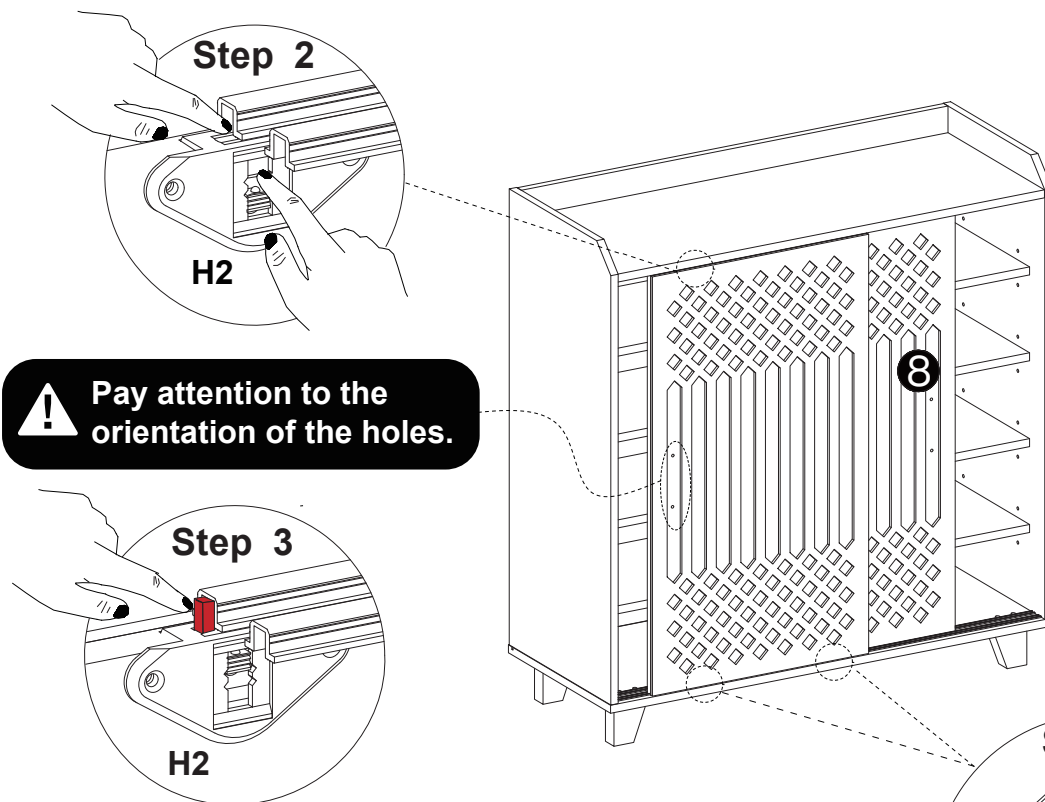


Step 1: Install the wheels of #H1 into the outer slot of #5.

Step 2: Press the limit spring of #H2 down, and then align the corresponding stopper with the outer slot of #1.



Step 3: Once aligned, release the limit spring.

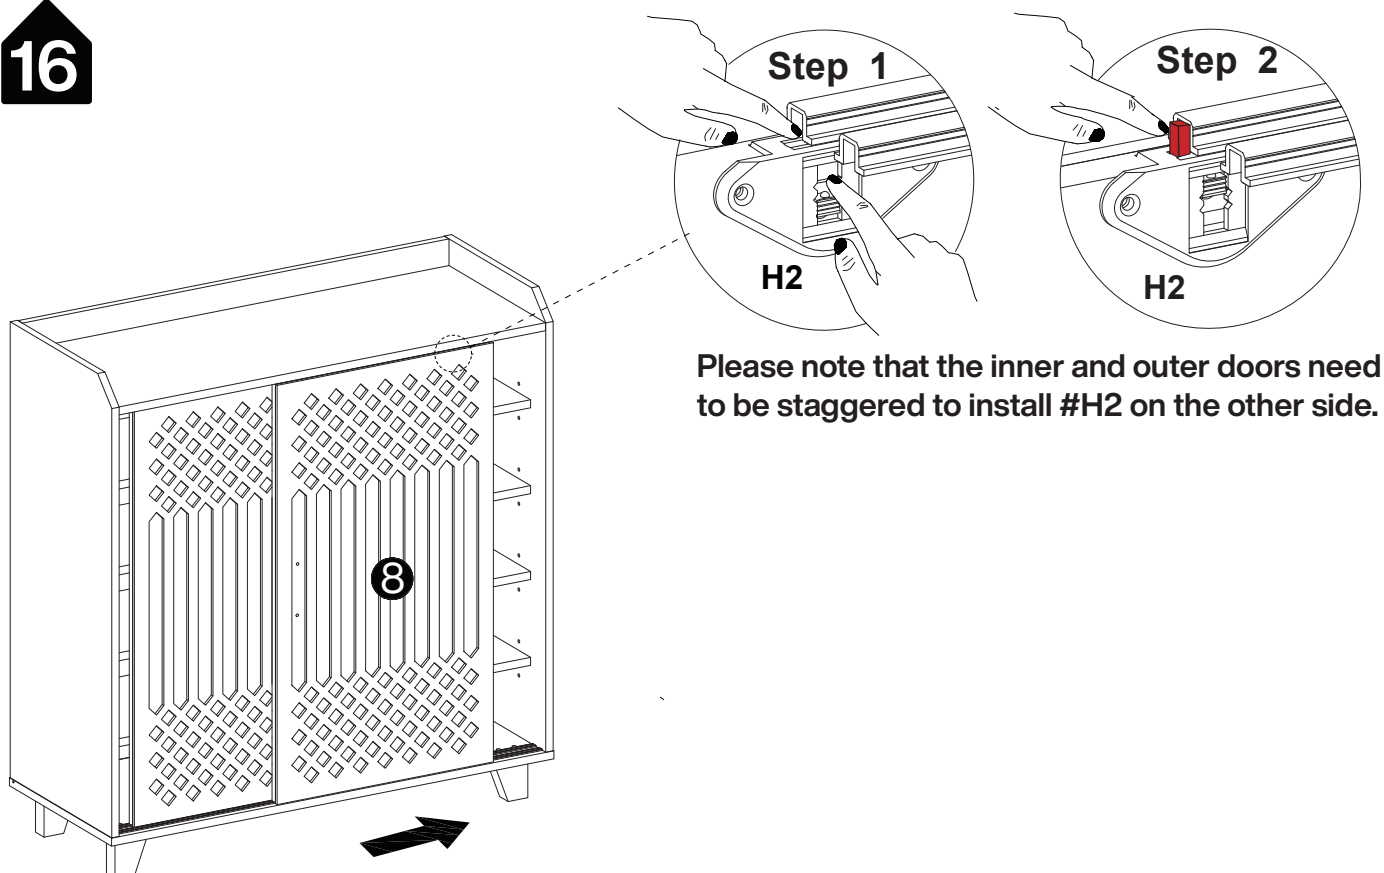
16





Please note that the inner and outer doors need to be staggered to install #H2 on the other side.


17

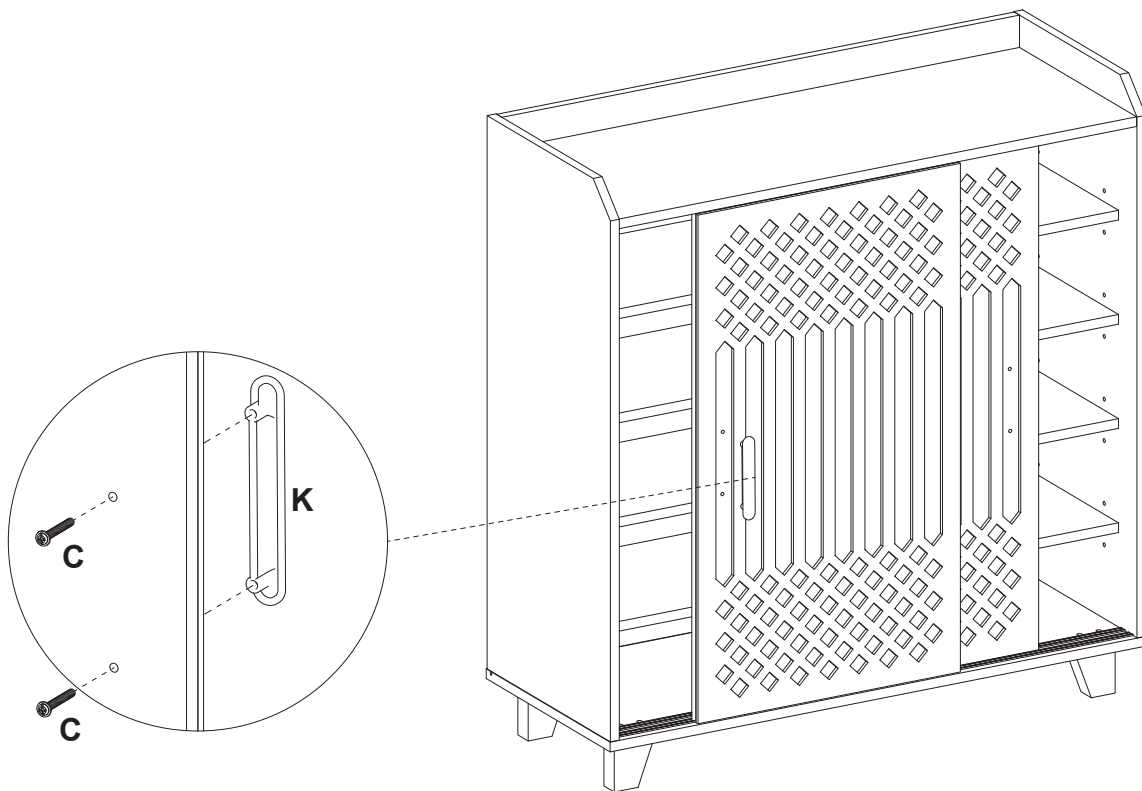K	C
	 M4x16mm
1pc	2 pcs



18

K	C
	 M4x16mm
1pc	2 pcs

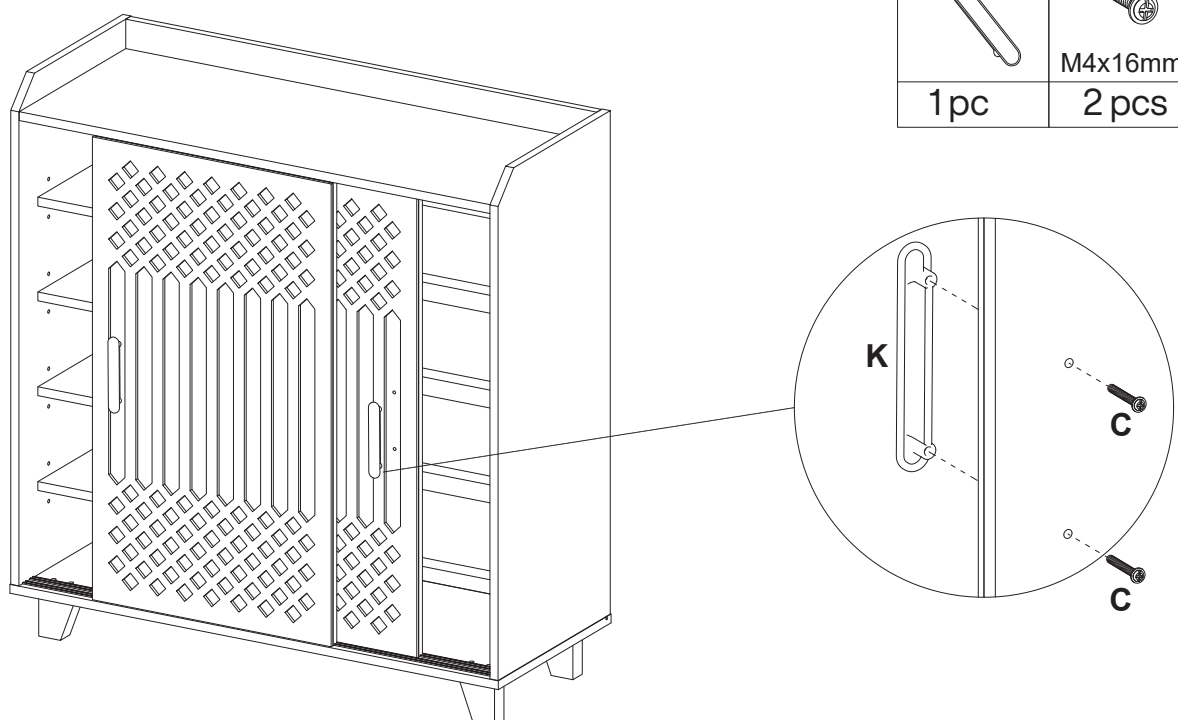



**Thank you for your support!**

