

# Hanging Your Dispenser.



[WWW.FEMMEORGANIC.COM](http://WWW.FEMMEORGANIC.COM)


# Gather Your Tools.

## What's Included:

Femme Organic  
Bathroom Dispenser




Two Hooks  
With Adhesive Tape

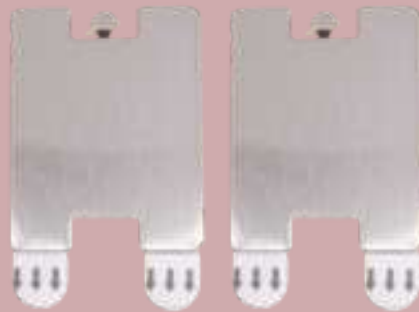

## What You'll Need

Measuring Tape or Ruler

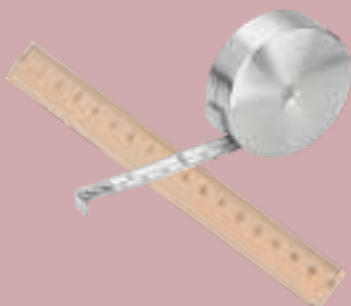

Pencil or Whiteboard  
Marker



Spirit Level (Optional)



# Choosing The Right Spot.

- Select a flat, clean wall where the box will be easily accessible.
- For best adhesion, ensure the surface is free of dust and grease.
- Place the box at chest height for convenient access to the products inside.

Whiteboard Marker - Tiles



Pencil - Painted Walls



# Marking The Hook Placement.

- Locate the two pre-cut holes on the back of the box.
- Hold the box against the wall and use a whiteboard marker (for tiles) or a pencil (for painted walls) to mark the spots through the holes where the hooks will go.
- Pro Tip: Use a level to ensure the box will hang straight.

Whiteboard Marker - Tiles



Pencil - Painted Walls



# Attaching The Hooks.

- Peel the backing off the adhesive tape on each hook.
- Carefully align each hook with the marks on the wall and press firmly for about 30 seconds to secure.
- Allow the adhesive to set for at least 10 minutes before hanging the box to ensure maximum hold.
- Note: Adhesive hooks work best on smooth, non-porous surfaces like tiles, glass, or painted walls.

Remove the protective film from the adhesive strip on each hook.



# Hanging The Dispenser.

- Once the hooks are securely in place, align the two pre-cut holes on the back of the box with the hooks.
- Gently slide the box down onto the hooks until it feels stable.



# Hanging In Style.

