




1 Plug in and turn on the UV light to check if it works properly.

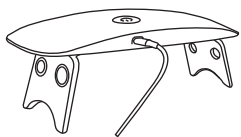


2 Turn off your device and apply the leveling pads to the back of your phone. Clean the screen with the wet wipes and cleaning cloth.

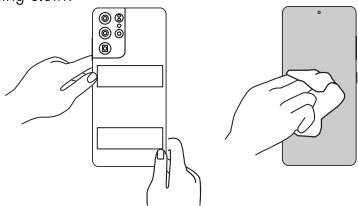


3 Use the Screen-Prep cloth to wipe the surface of device screen a few times. Then use the cleaning cloth to clean the screen again. This will help to prevent the bubbles during application.

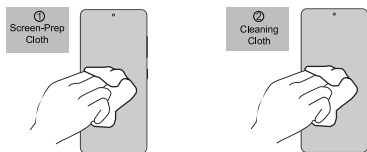


4 Place the application tray on your phone. Make sure to align the side labelled "top" with the top of the phone. Press firmly into place. Then insert the pins on each end of the application tray.

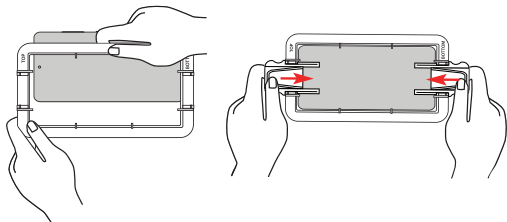


5 Make sure the phone is 100% level by using the included bubble level. Set it in the middle of the phone's screen. The bubbles will be centered when surface is flat.

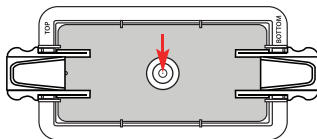


6 Place absorption pads in the side slots located on the longer edges of the application tray. Re-clean the screen using dust removal stickers if needed.

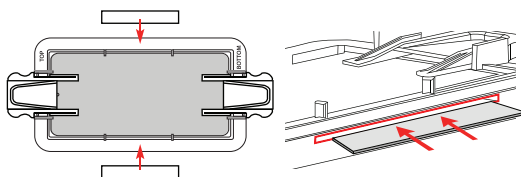


7 Unscrew the **RED** cap of the first adhesive tube. Hold the tube over the left set of pegs on the application tray with the opened end facing down. Unscrewing the black cap will release the adhesive in the tube.

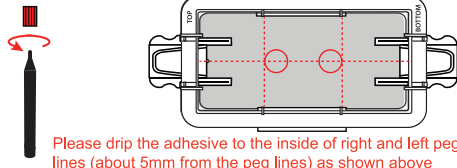


8 Drip all the adhesive to the left circle as shown above. Repeat step 7 with second adhesive and drop all the adhesive to the right circle as shown above.

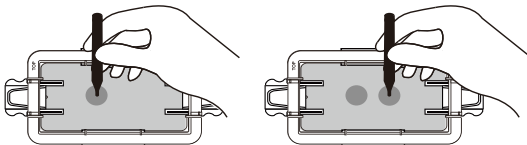


9 Peel off the mask film of the screen protector, and set it within the tray, resting it on the pins on either edge of the phone. Make sure the camera cutout is aligned with the top of the phone, where the device's front-facing camera is located.

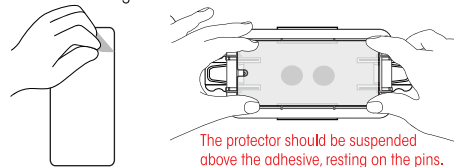


10 **SLOWLY** pull both pins outward to allow the protector to lower onto the adhesive. Once the protector touches BOTH adhesive puddles, pull the pins out the rest of the way **AT THE SAME TIME**.

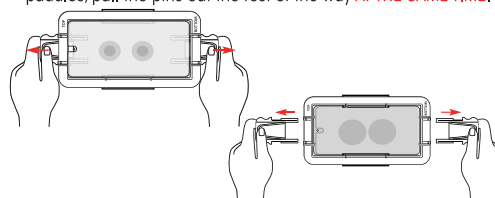


11 The adhesive will begin spreading on its own. While it is spreading, place the metal cylinder on the fingerprint scanner sticker.

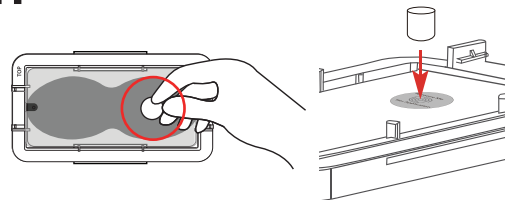


12 Wait for the adhesive to fully spread to all edges of the phone. **DO NOT TOUCH** the screen protector during this time.

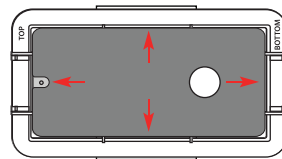


13 Plug in the UV Light and prop it up on its legs. Then turn it on. Place the UV Light over the top, middle, and bottom of the tray, and cure for 20 seconds each.

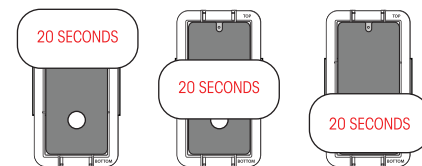

14 Remove the installation tray (by pushing on the screen protector gently), metal cylinder and scanner sticker.

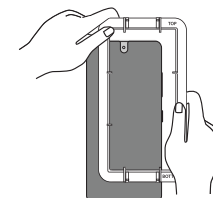

15 Use the UV Light again on the top, middle and bottom of the phone for an additional 60 seconds each.

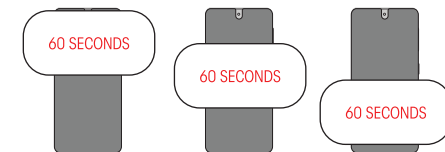

16 Rescan your fingerprints into the phone system if needed, and enjoy the screen protector!



Q & A

Q: I got an air bubble during installation. What now?

A: If the Screen Protector is already on the phone with the adhesive spread, you will need a replacement Protector. Cure the Protector with the UV light, then remove it and discard. Please send us an email for a free replacement.

Q: The Gel didn't spread evenly during application, and it's been more than 3 minutes. What do I do?

A: Tilt the phone in the direction that the Gel needs to go. DO NOT TOUCH THE PROTECTOR.

Q: How do I reset my fingerprint after installing the screen protector?

A: Navigate: Settings > Lock screen > Looking for something else? > Fingerprints > Add Fingerprint

Q: How do I remove the Screen Protector?

A: Once the UV gel is cured, it becomes a solid adhesive gel. You can peel the screen protector off, starting with one corner and carefully lifting up.

Q: The adhesive came out of the tube, but a small amount splashed into its own puddle.

A: Tilt the phone so the larger pool will absorb the smaller one, and then tilt so the adhesive will return to center. Or, use the adhesive tube to drag the small puddle into the larger one.



24/7 Customer Support

 support@techmatte.com

www.techmatte.com

STAY CONNECTED



Installation Guide

Damaged or Arrived Broken?

Try our 1-Click Warranty Claim

Go to TechMatte.com/WarrantyClaim

OR

Scan the QR Code Below.



Want More Coverage?

Unlock our Lifetime Warranty

Go to TechMatte.com/Register

OR



ULTRA

Watch Demo



www.TechMatte.com/install/S22U-UV