



VeriMark Windows 10 Optional Driver Install

Install the driver through Windows 10 Optional Windows Update


1. Go to **Device Manager** and right click on the unknown device and select **Update driver**.

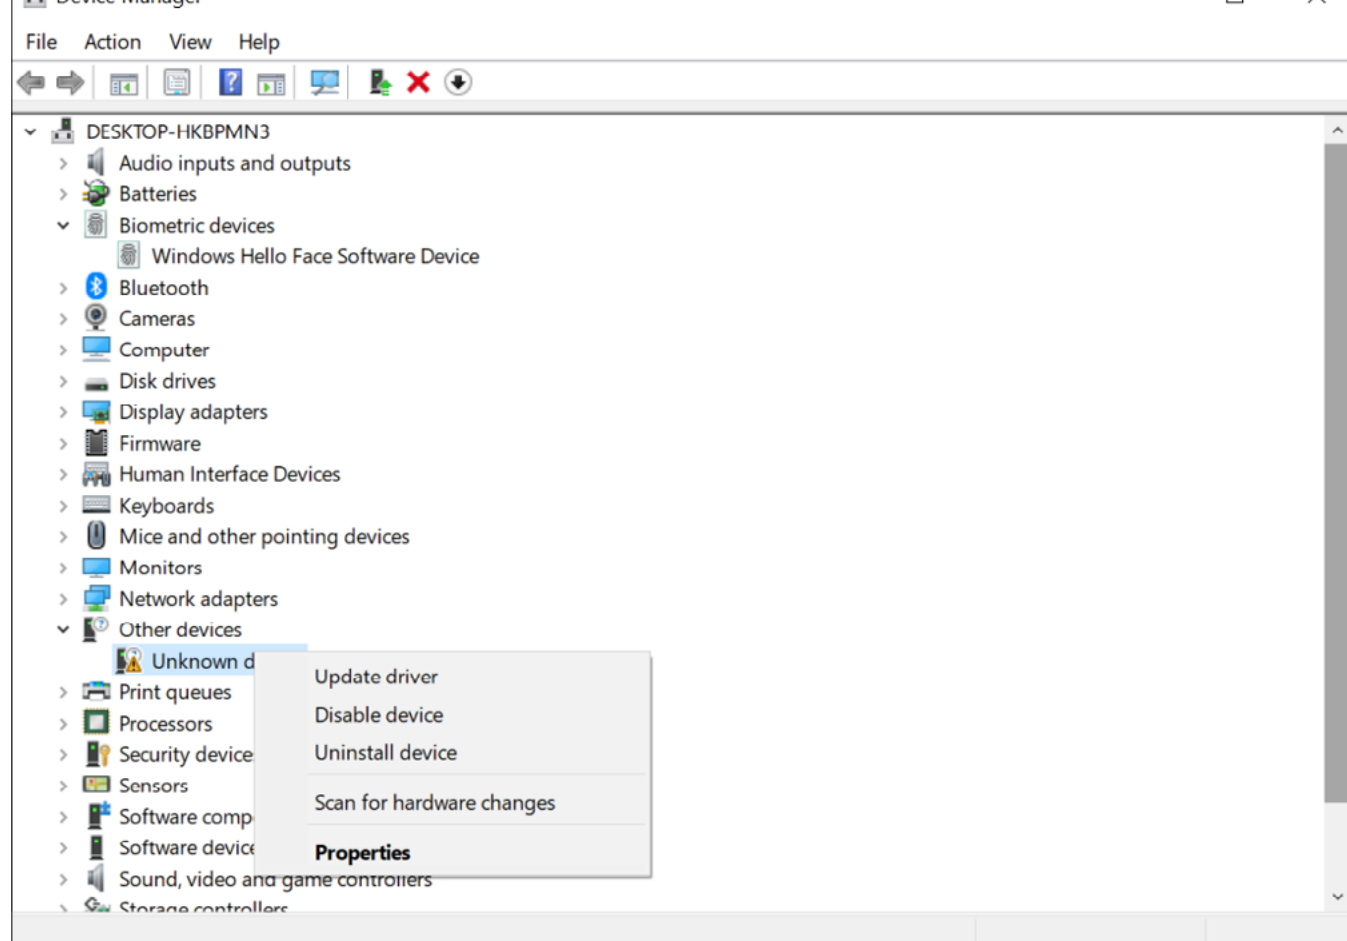

2. Click on **“Search automatically for drivers”**.

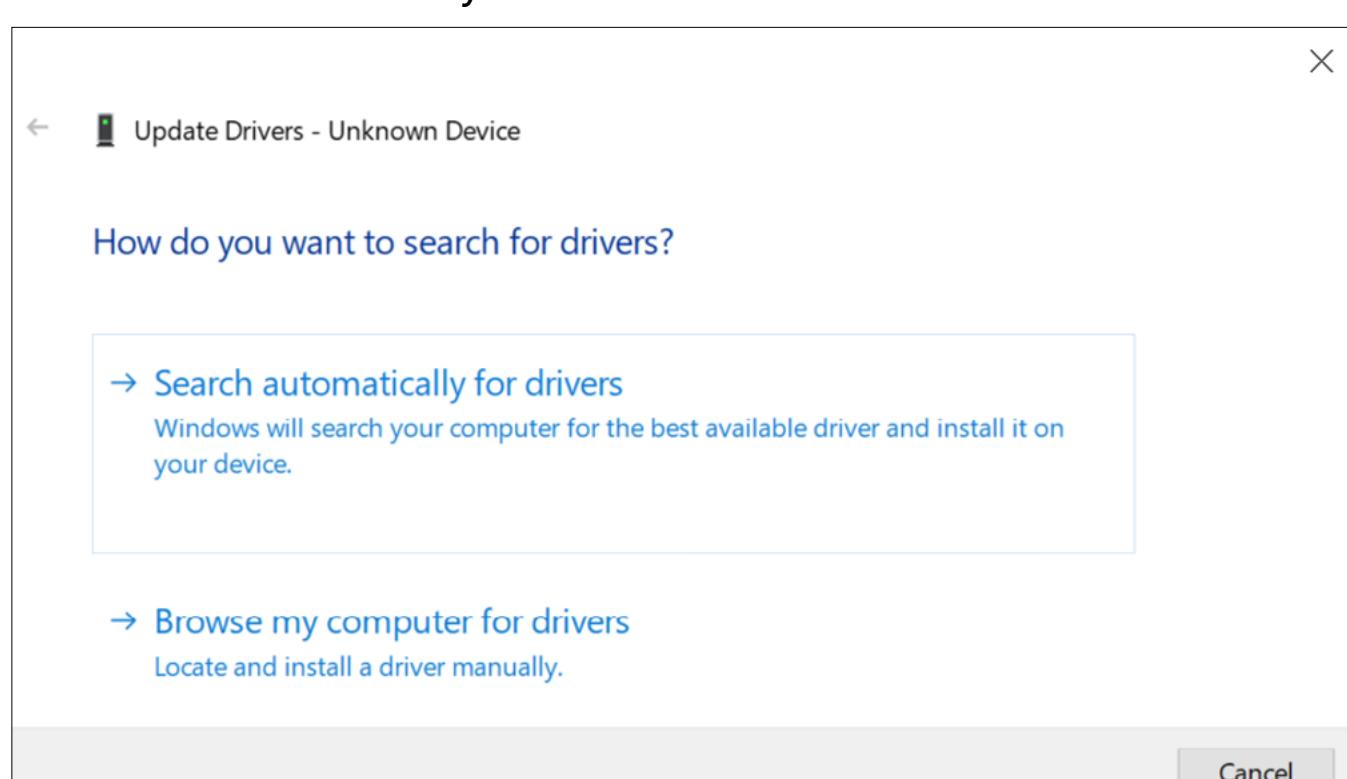


3. Click on **“Search for updated drivers on Windows Update”**.

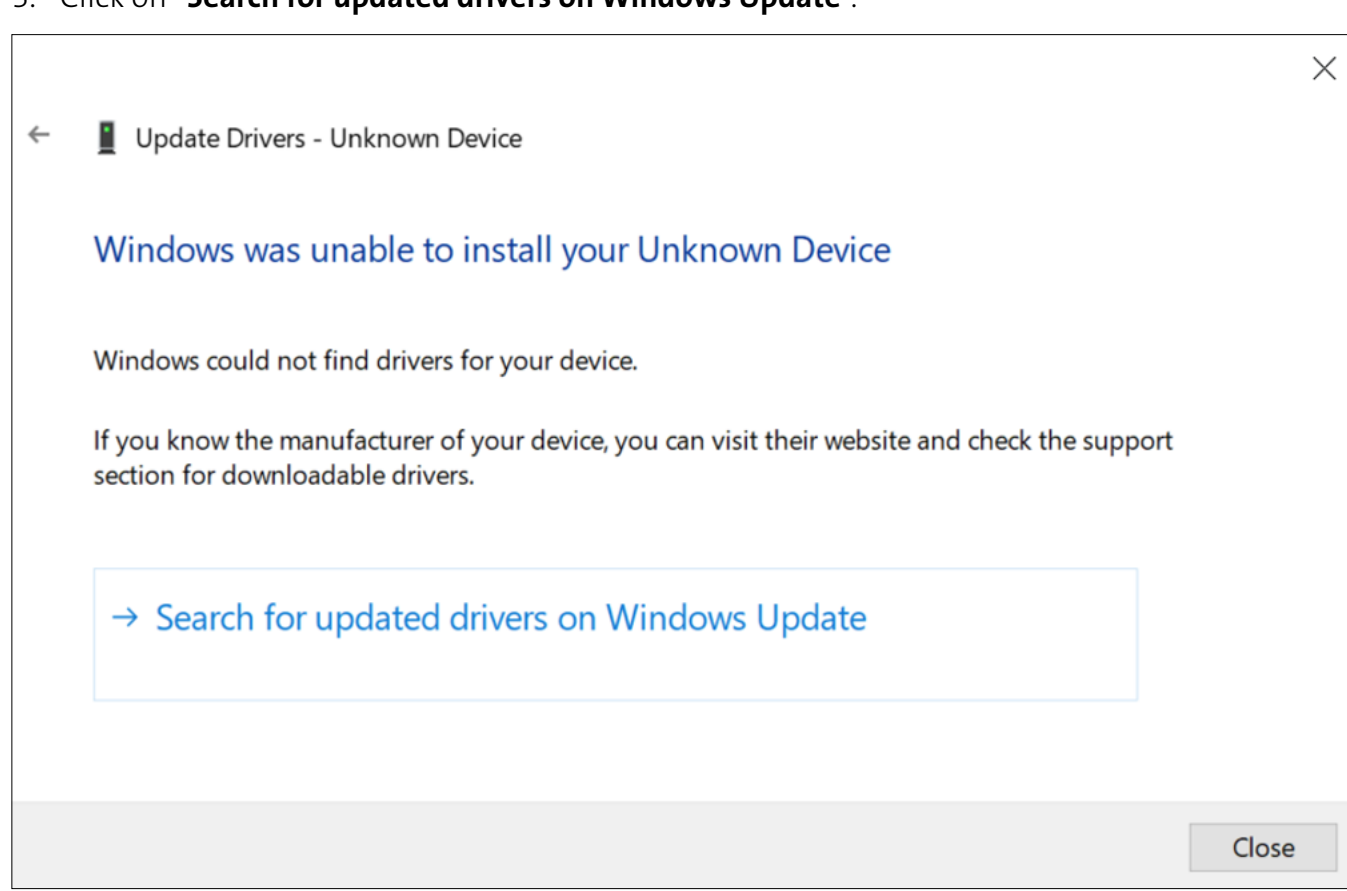

4. **Make sure your Windows 10 is up to date.** If not, please install all updates first or you might not see the VeriMark driver appear on the update list.


5. Click on **“View optional updates”**.

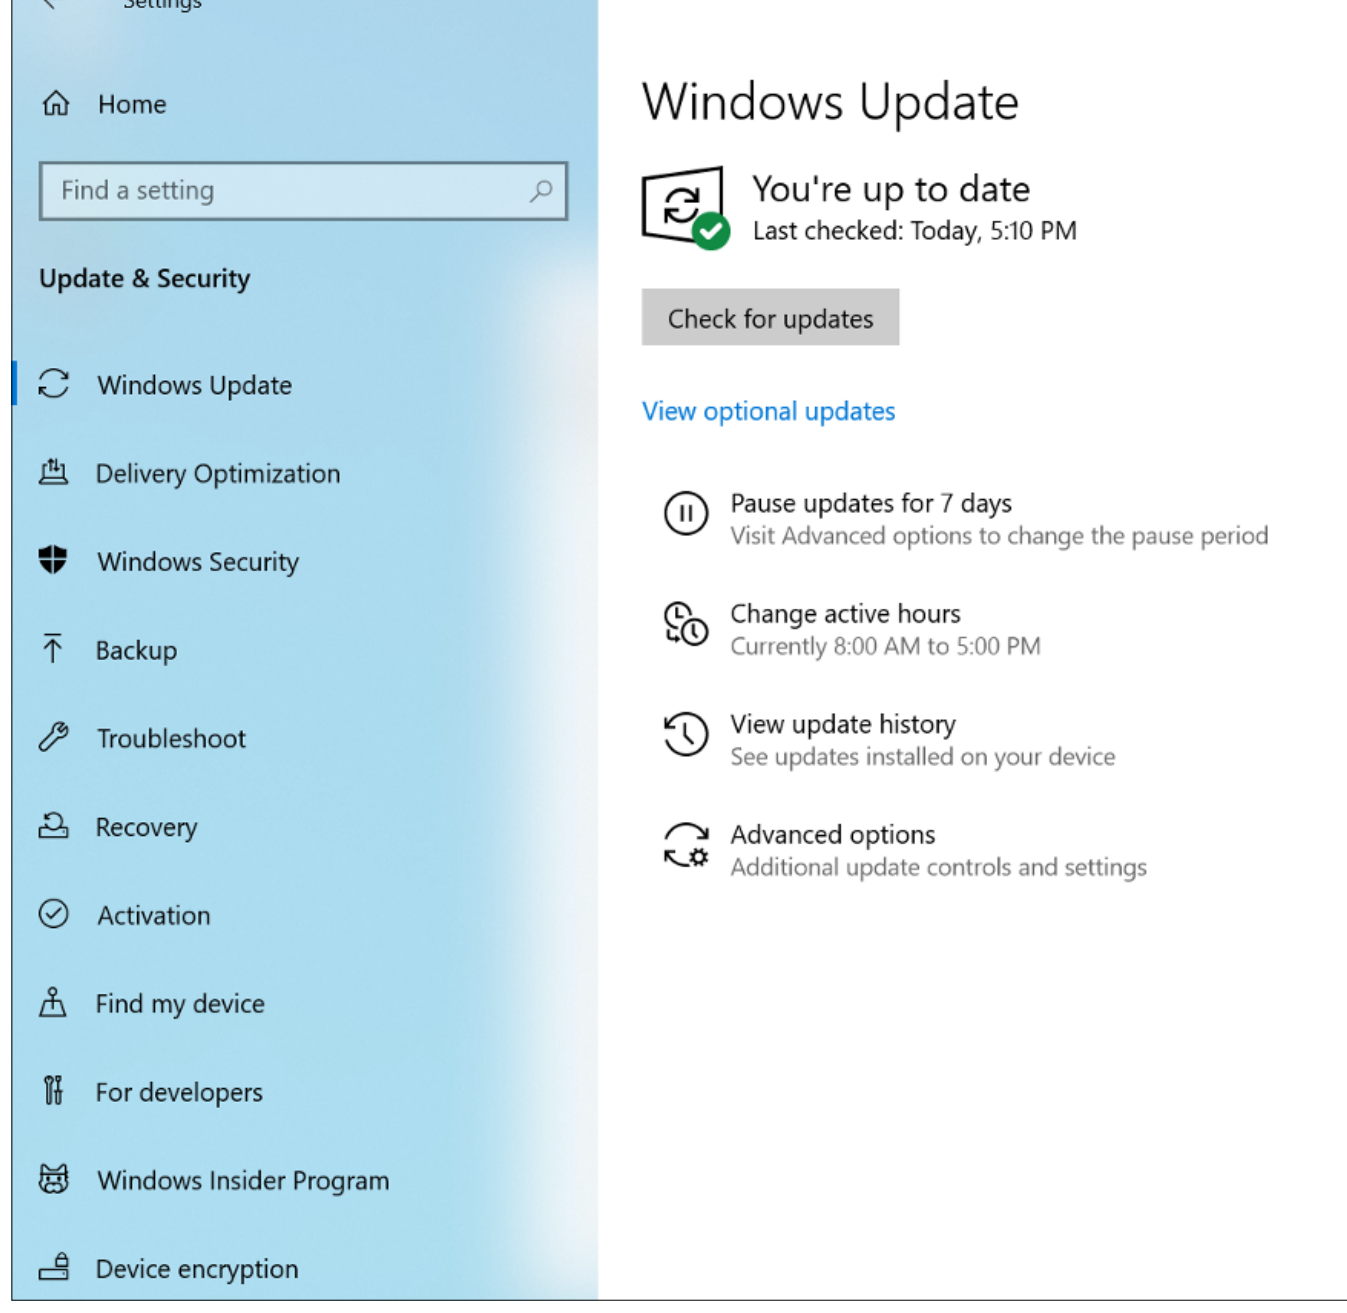

6. Select **“Synaptics Incorporated – Biometric”**, and click on the button **Download and install**.



7. System will show progress and install the driver.

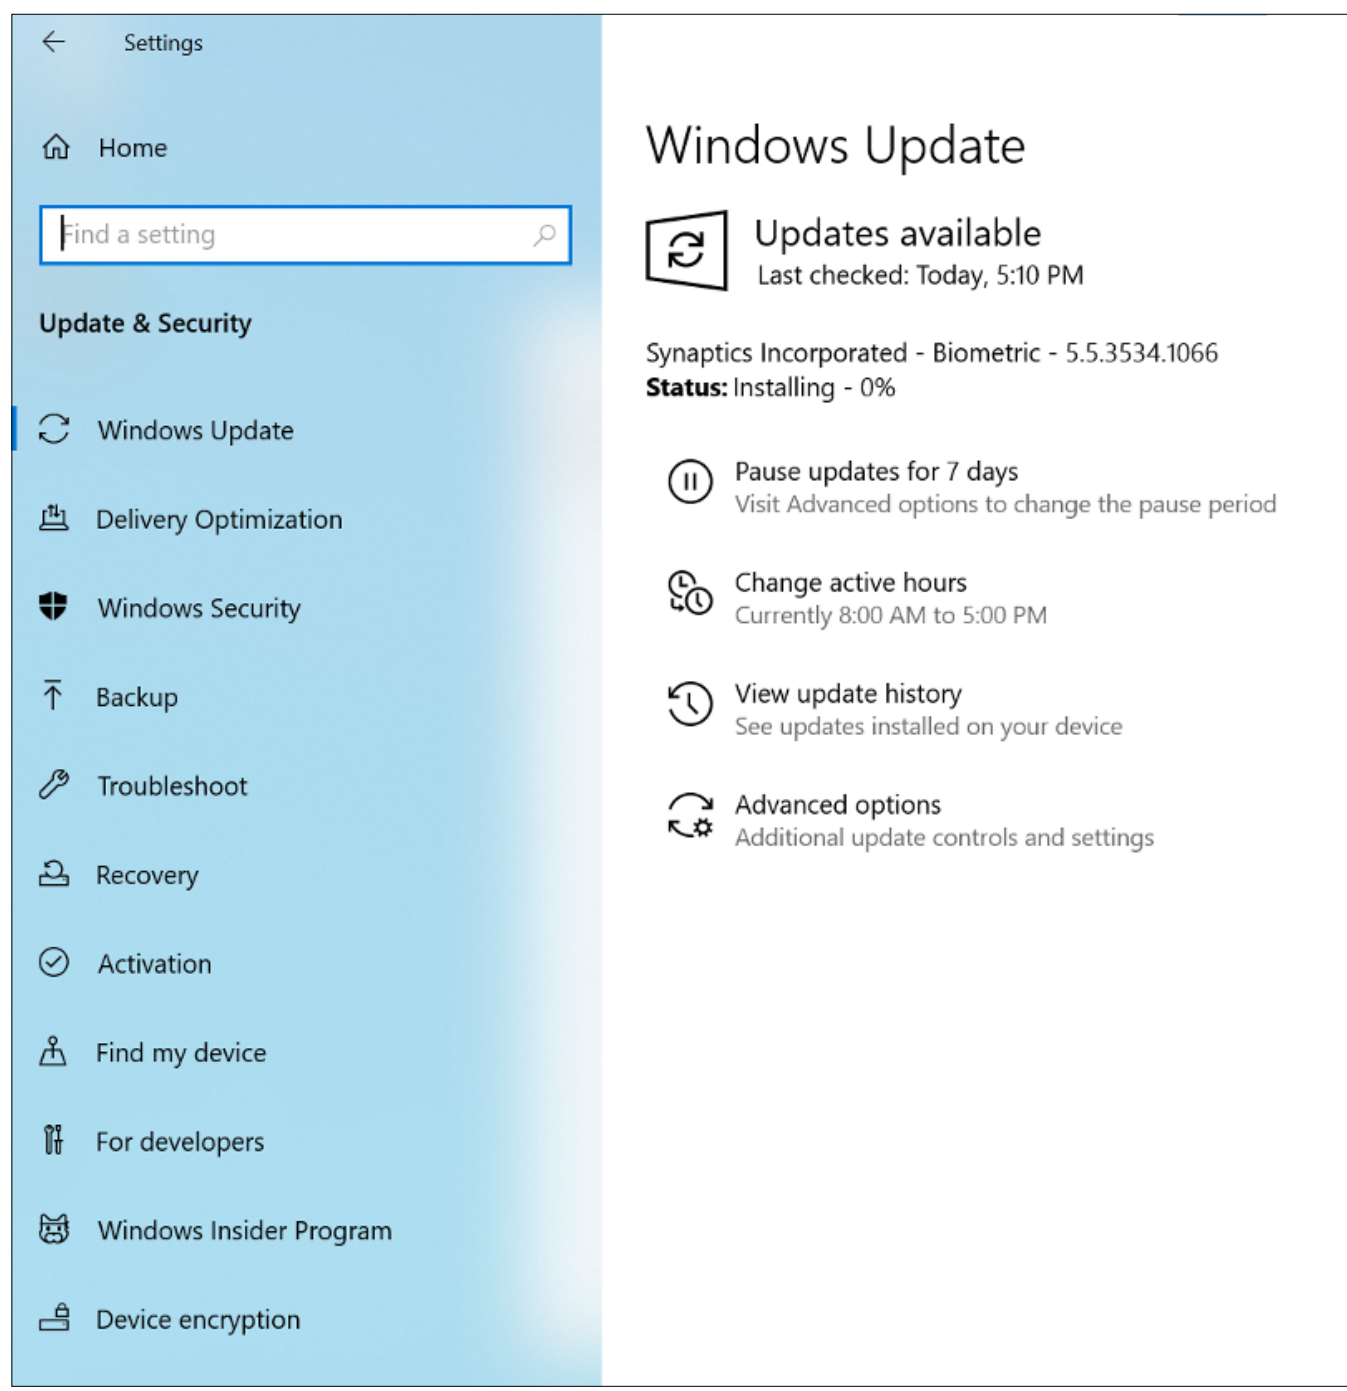

8. Kensington fingerprint key will show on device manager.

