



Windows 11 Setup Guide for VeriMark™ Guard

1. Click on **Start** on the taskbar and click on **Settings**

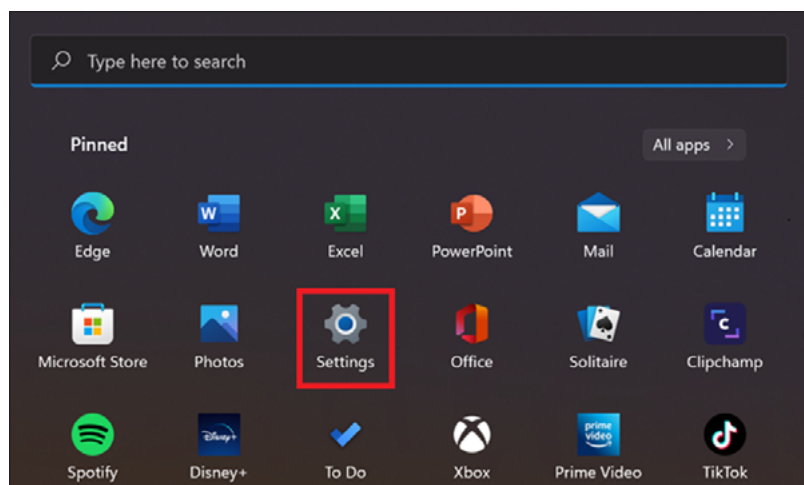


2. Click on **Accounts** to show sign in options.


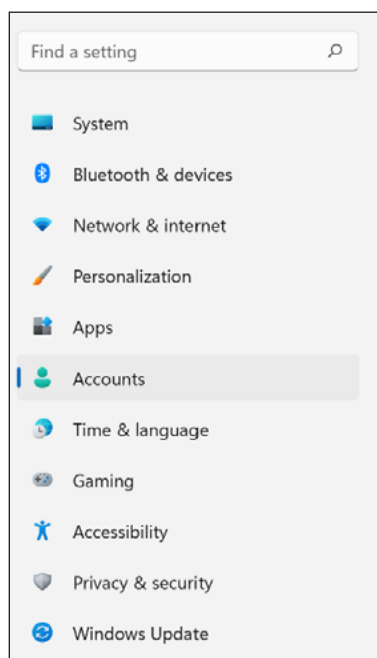


Windows 11 Setup Guide for VeriMark™ Guard


3. Click on Sign-in options

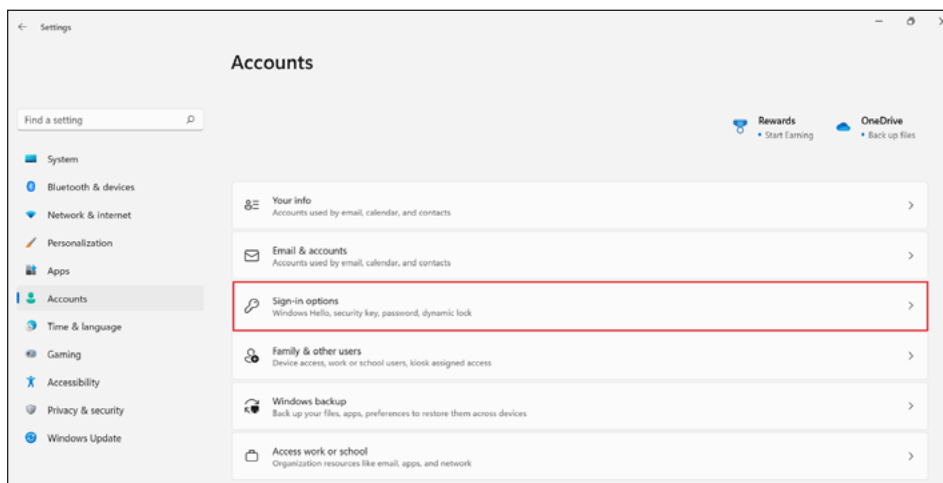


4. Alternatively, you can click on the magnifier glass on the taskbar and search for “Set up security key”

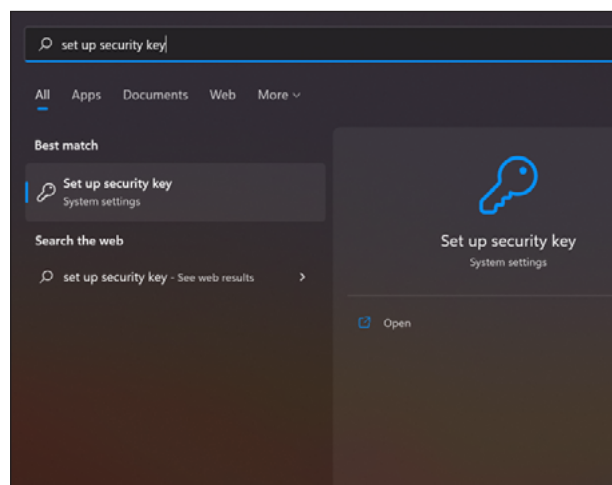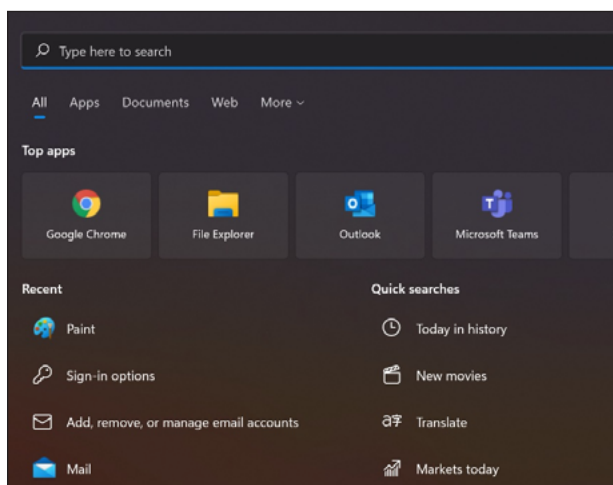


5. Click on Security Key and Manage

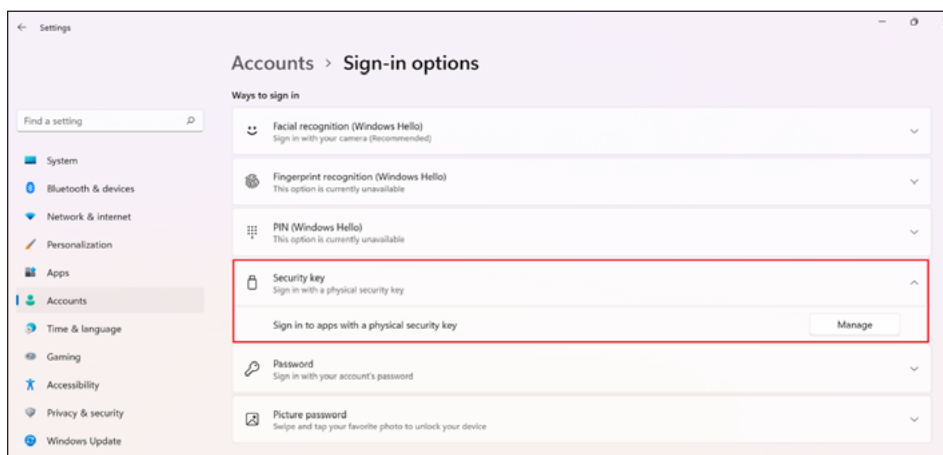


6. Under Manage touch the **USB dongle** to access features

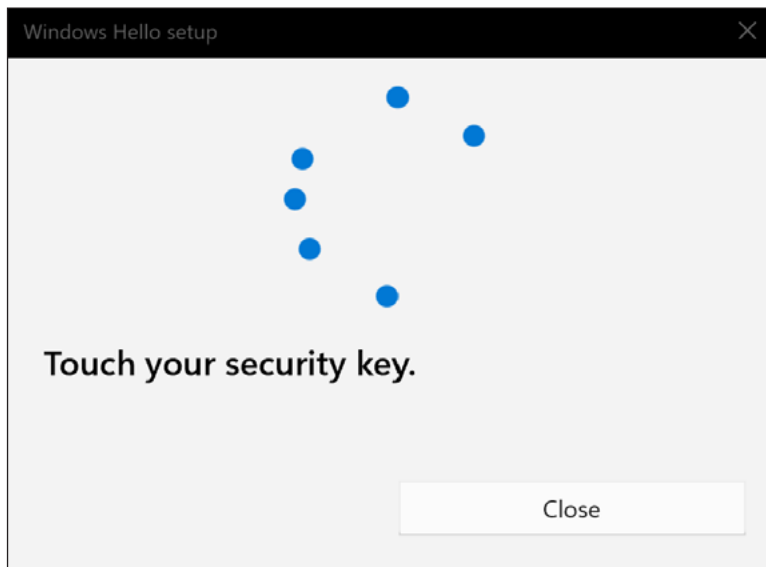


7. If it is the first time using a security key, you need to add a **security PIN**. Click on **add** under Security Key

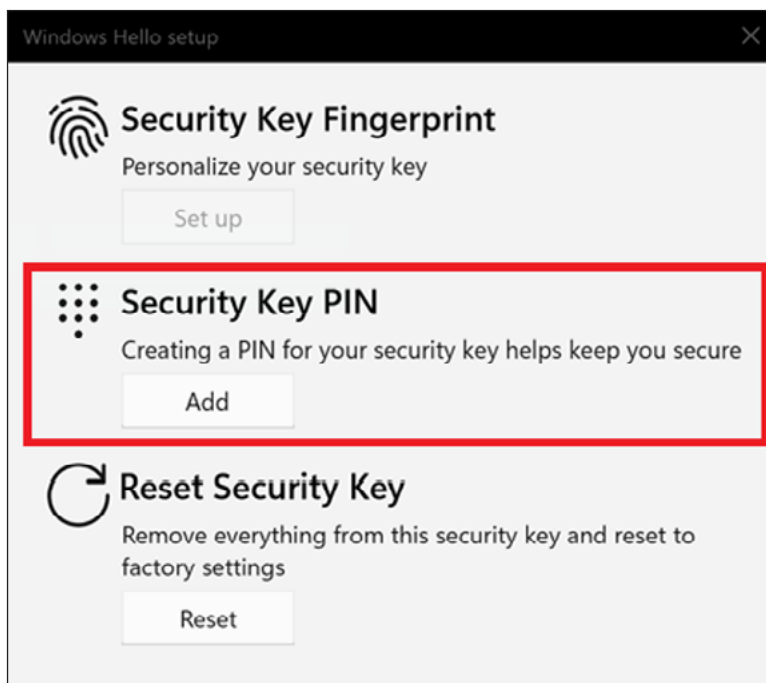


8. Enter a security key PIN then click **OK** for next step

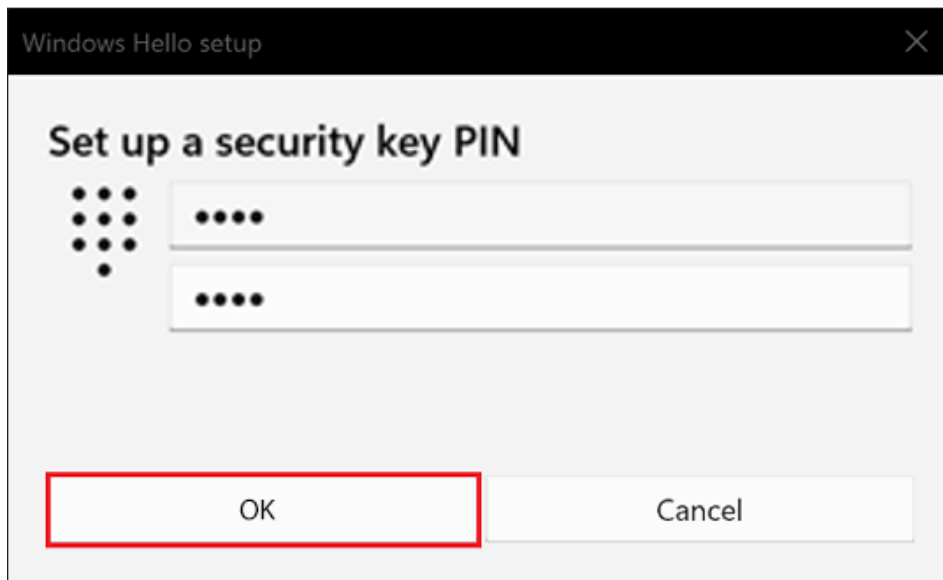


9. Once PIN has been entered **Set Up fingerprint** on the following window

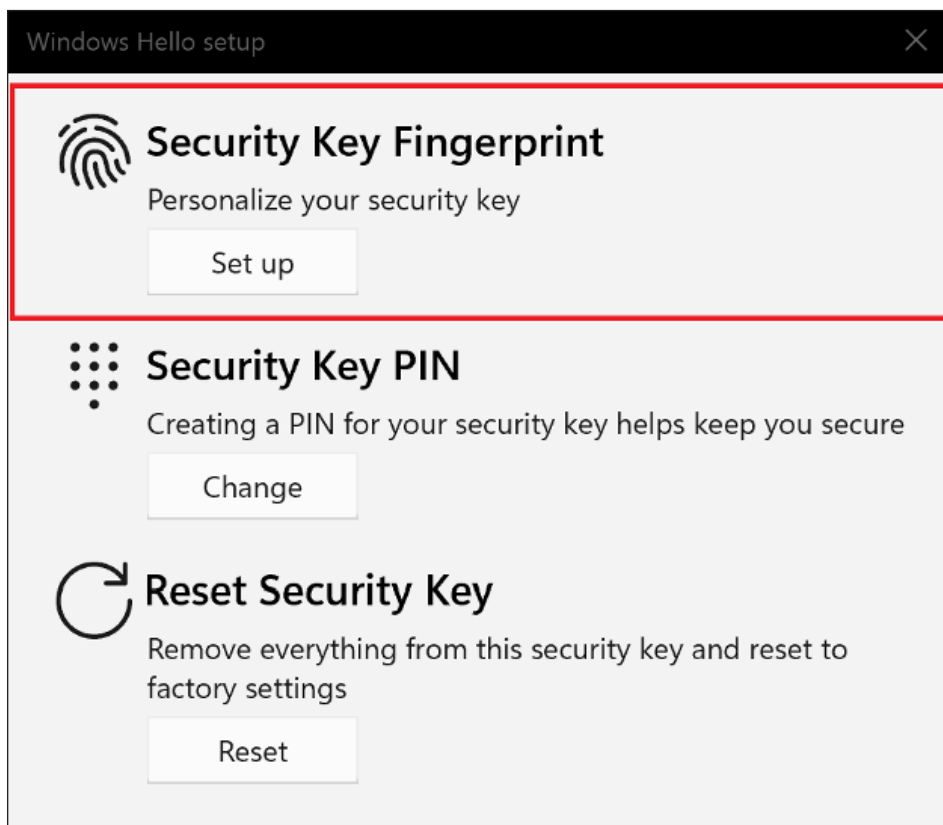


10. Enter PIN previously set up and click **OK** to proceed

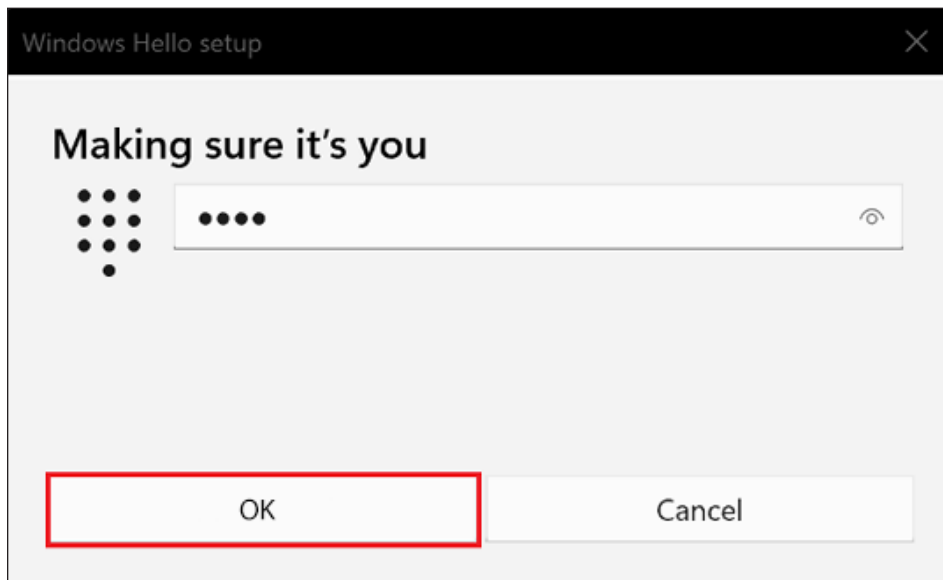


11. Touch the fingerprint sensor area repeatedly

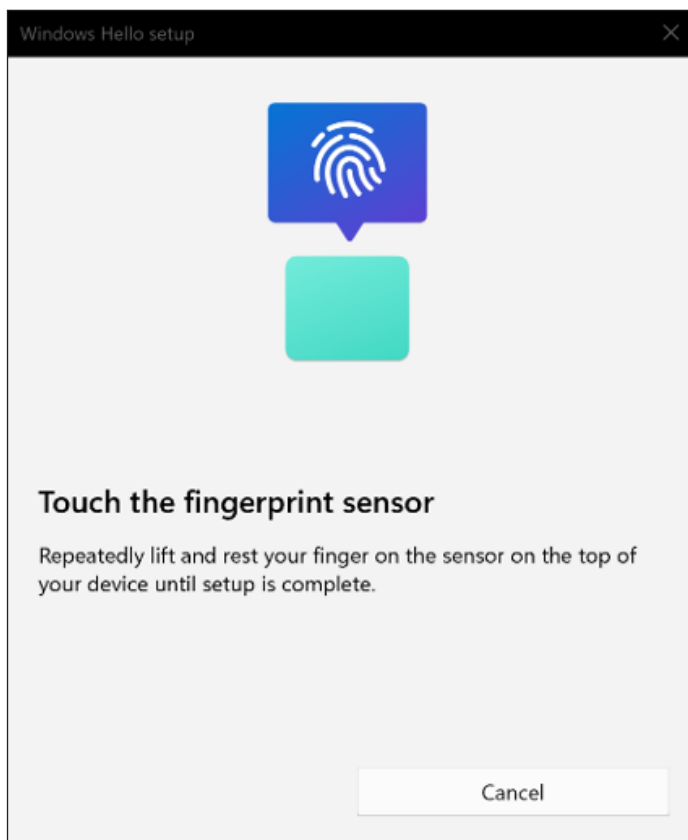


- 12.** Enter PIN previously set up and click **OK** to proceed

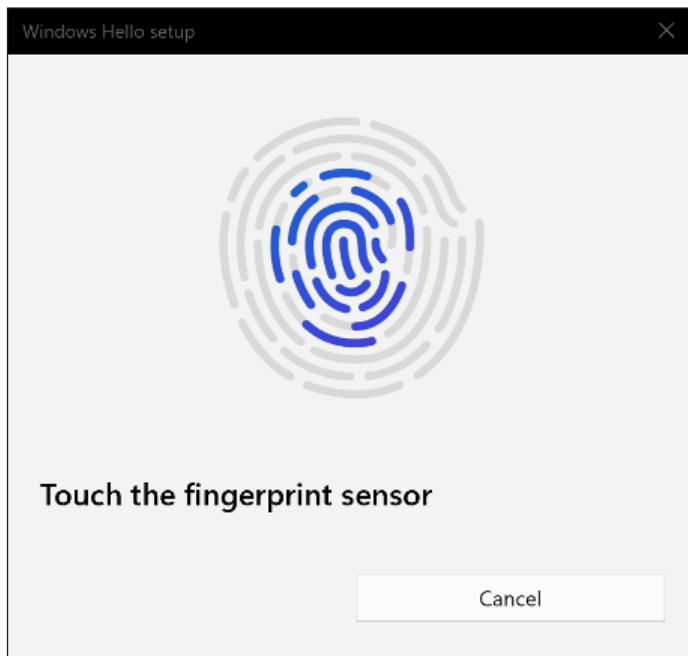


- 13.** Click **Done** to finish fingerprint enrollment or **Add another finger** to set up another fingerprint

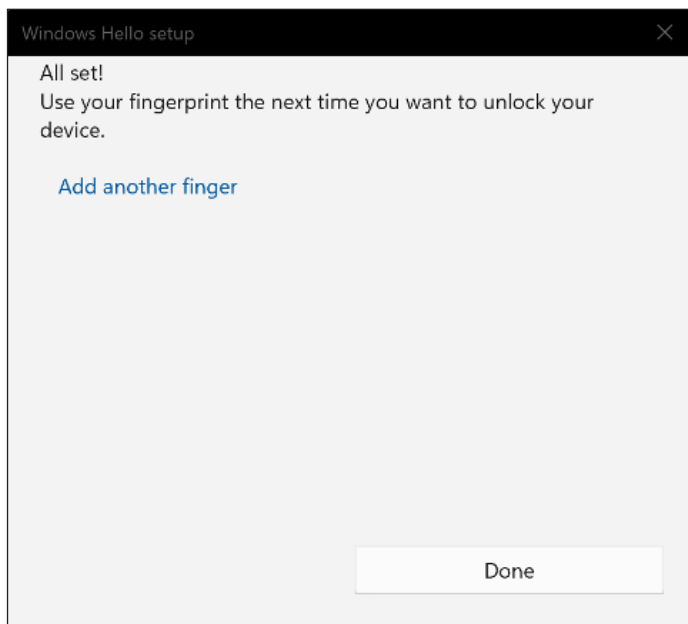

14. On the main window you can also **add another fingerprint** or **remove** the fingerprint as well as **change the PIN**

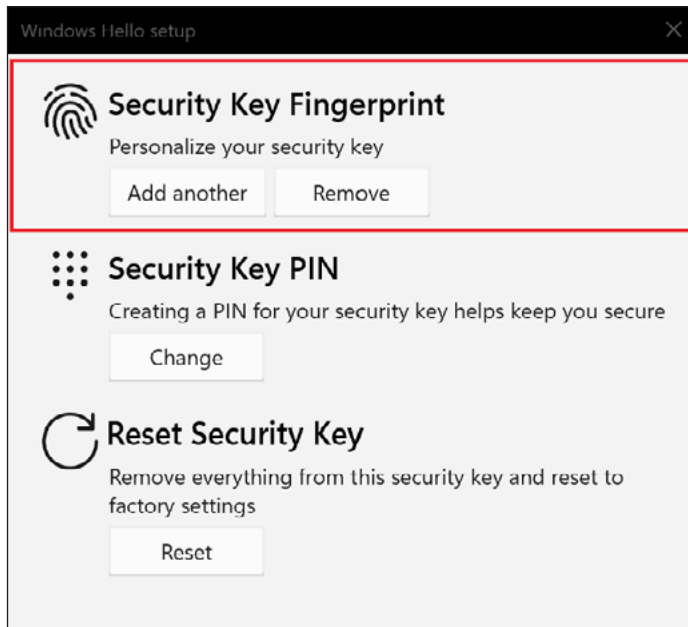


15. To reset the USB dongle and erase all the fingerprints click on **Reset Security Key**

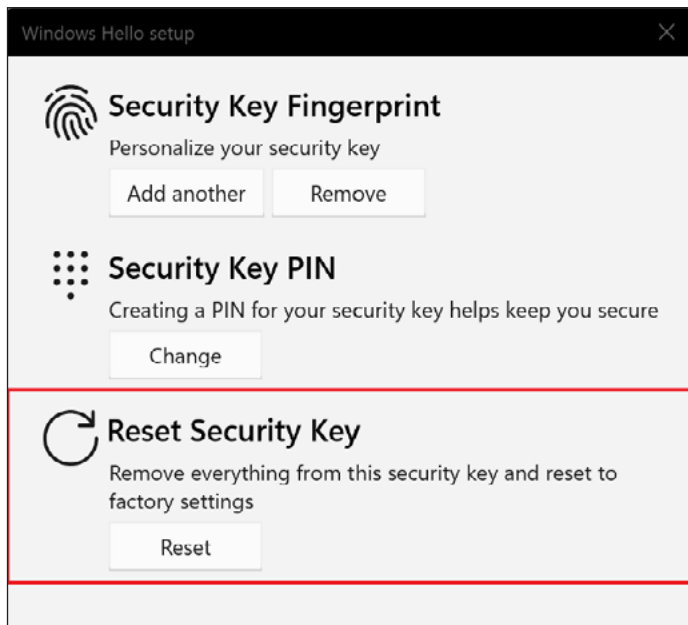


16. Click **proceed** and follow the instructions to **reset** the USB dongle



17. Disconnect and reconnect the USB dongle

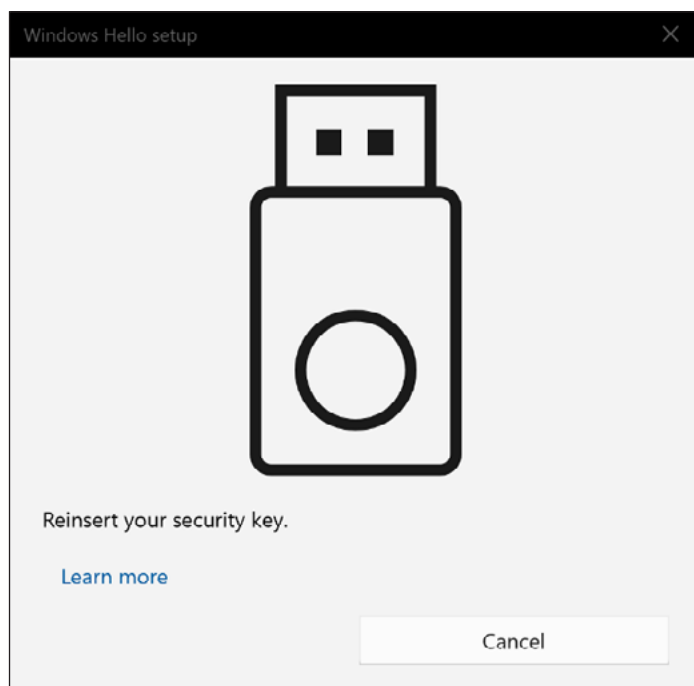

18. Touch the security key twice

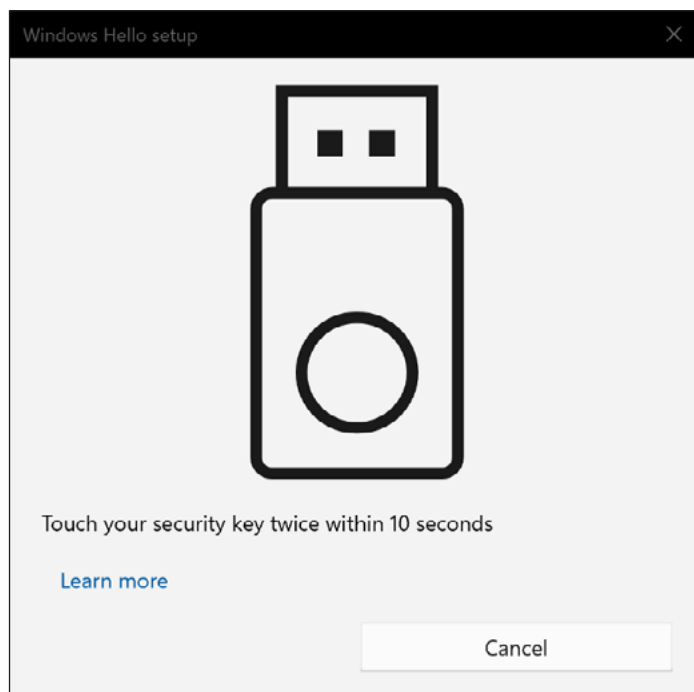

19. Click done to finish reset

