




SCHLAGE DEADBOLT INSTALLATION INTRUCTIONS

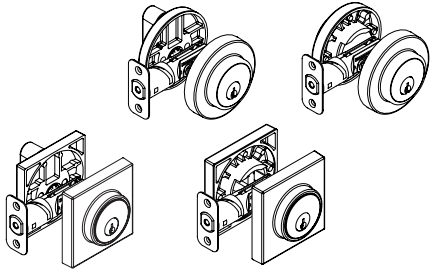


1. SAFETY INFORMATION

Read the precautions and instructions in this manual before installing and using this lock. Save this manual for future reference.

WARNING If the door needs to be drilled, be familiar with how to use your drill safely and understand all the door preparation steps before proceeding.

NOTE To ensure a long lasting finish, remove the locks, or do not install the locks, prior to painting your door. Periodically clean locks with mild soap and a soft cloth. Do not use abrasives or harsh chemicals and avoid sharp or scratching objects.

2. TOOLS REQUIRED / HARDWARE INCLUDED


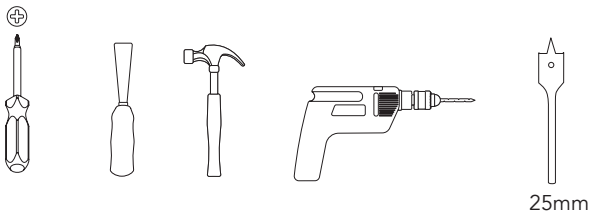


Part	Description	Quantity
AA	Mounting Screws	2
BB	Latch/Strike Plate Screws	4
CC	Mounting Screws	2



NOTE Not to scale.

Part	Description	Quantity
A	Key	2
B	Exterior Assembly	1
C	Deadbolt Latch	1
D	Interior Assembly	1
E	Faceplate	1
F	Strike Plate	1

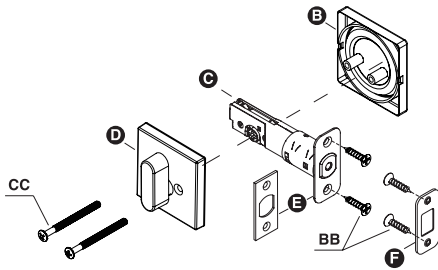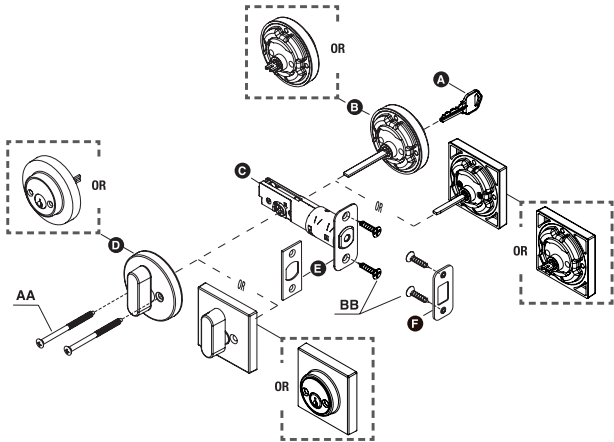


3. DOOR PREPARATION

NOTE If your door already has holes, skip to step 4 for installation


3.1

Using the template over the page, mark the door, drill holes, and chisel out a mortise. Drill from both sides to avoid wood splitting.

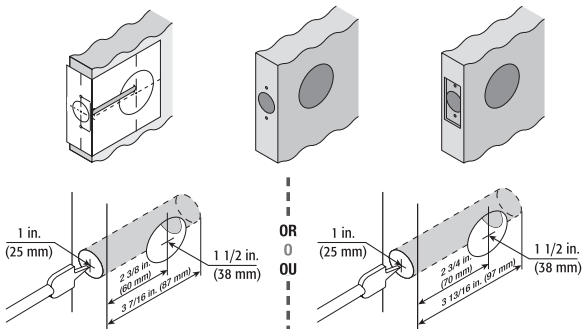

3.2

Prepare the door jamb - using the strike plate as a pattern, drill the latch and screw holes, and chisel out a mortise until the strike plate fits flush. To assure proper lock function, the holes in the door jamb must be drilled 28mm deep.

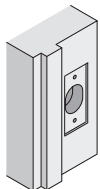

TEMPLATE

Drill a 1" (25 mm) diameter hole at the center of the door edge.

Fold here.
Place on the door edge.

Ø 2-1/8" (54 mm)

Ø 1-1/2" (38 mm)

Backset

2-3/8" (60 mm)

Backset

2-3/4" (70 mm)

1-3/4"
(45 mm)

1-9/16"
(40 mm)



1-3/8"
(35 mm)

NOTE: Double check your product for the correct hole sizes.

4. INSTALLATION


4.1 INSTALL THE LATCH

A) Attach the correct faceplate

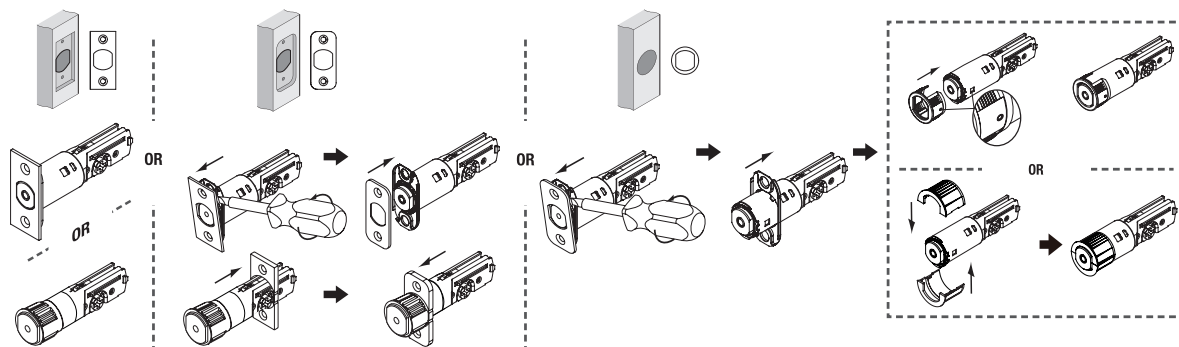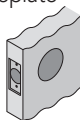


B) Set the latch backset

CAUTION Be sure the latch cam is upright before making any backset adjustment.

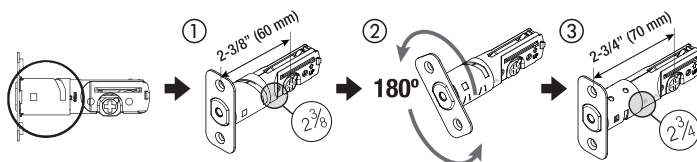

C) Install the latch

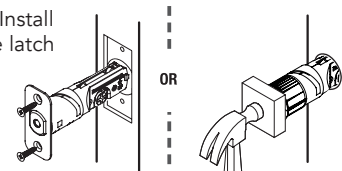


4.2 INSTALL THE CYLINDER DEADBOLT


Single cylinder deadbolt

Double cylinder deadbolt

Thumbturn inside and plain rose outside

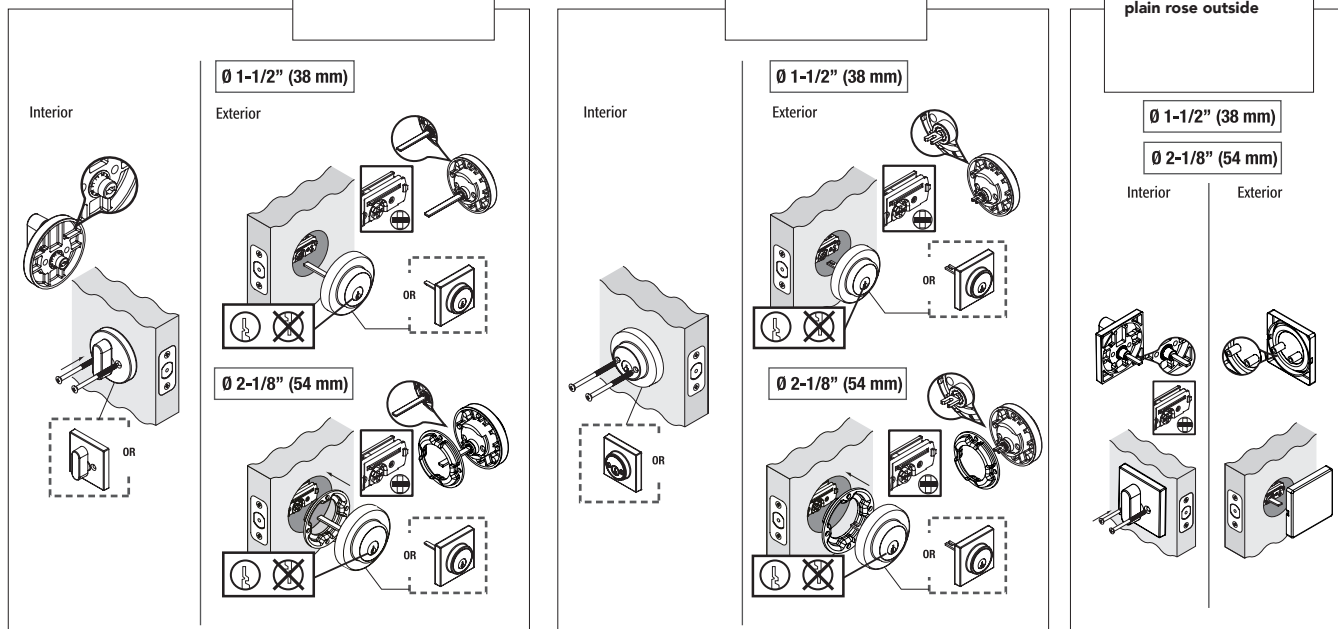

4.3 INSTALL THE STRIKE PLATE

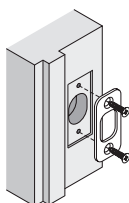

Allegion (Australia) Pty Ltd
Freephone 1800 098 094
Email info.au@allegion.com
www.allegion.com.au

Allegion (New Zealand) Pty Ltd
Freephone 0800 477 869
Email nzinfo@allegion.com
www.allegion.co.nz

