




Mcombo

ACCENT CHAIR

with OTTOMAN

6151-4123

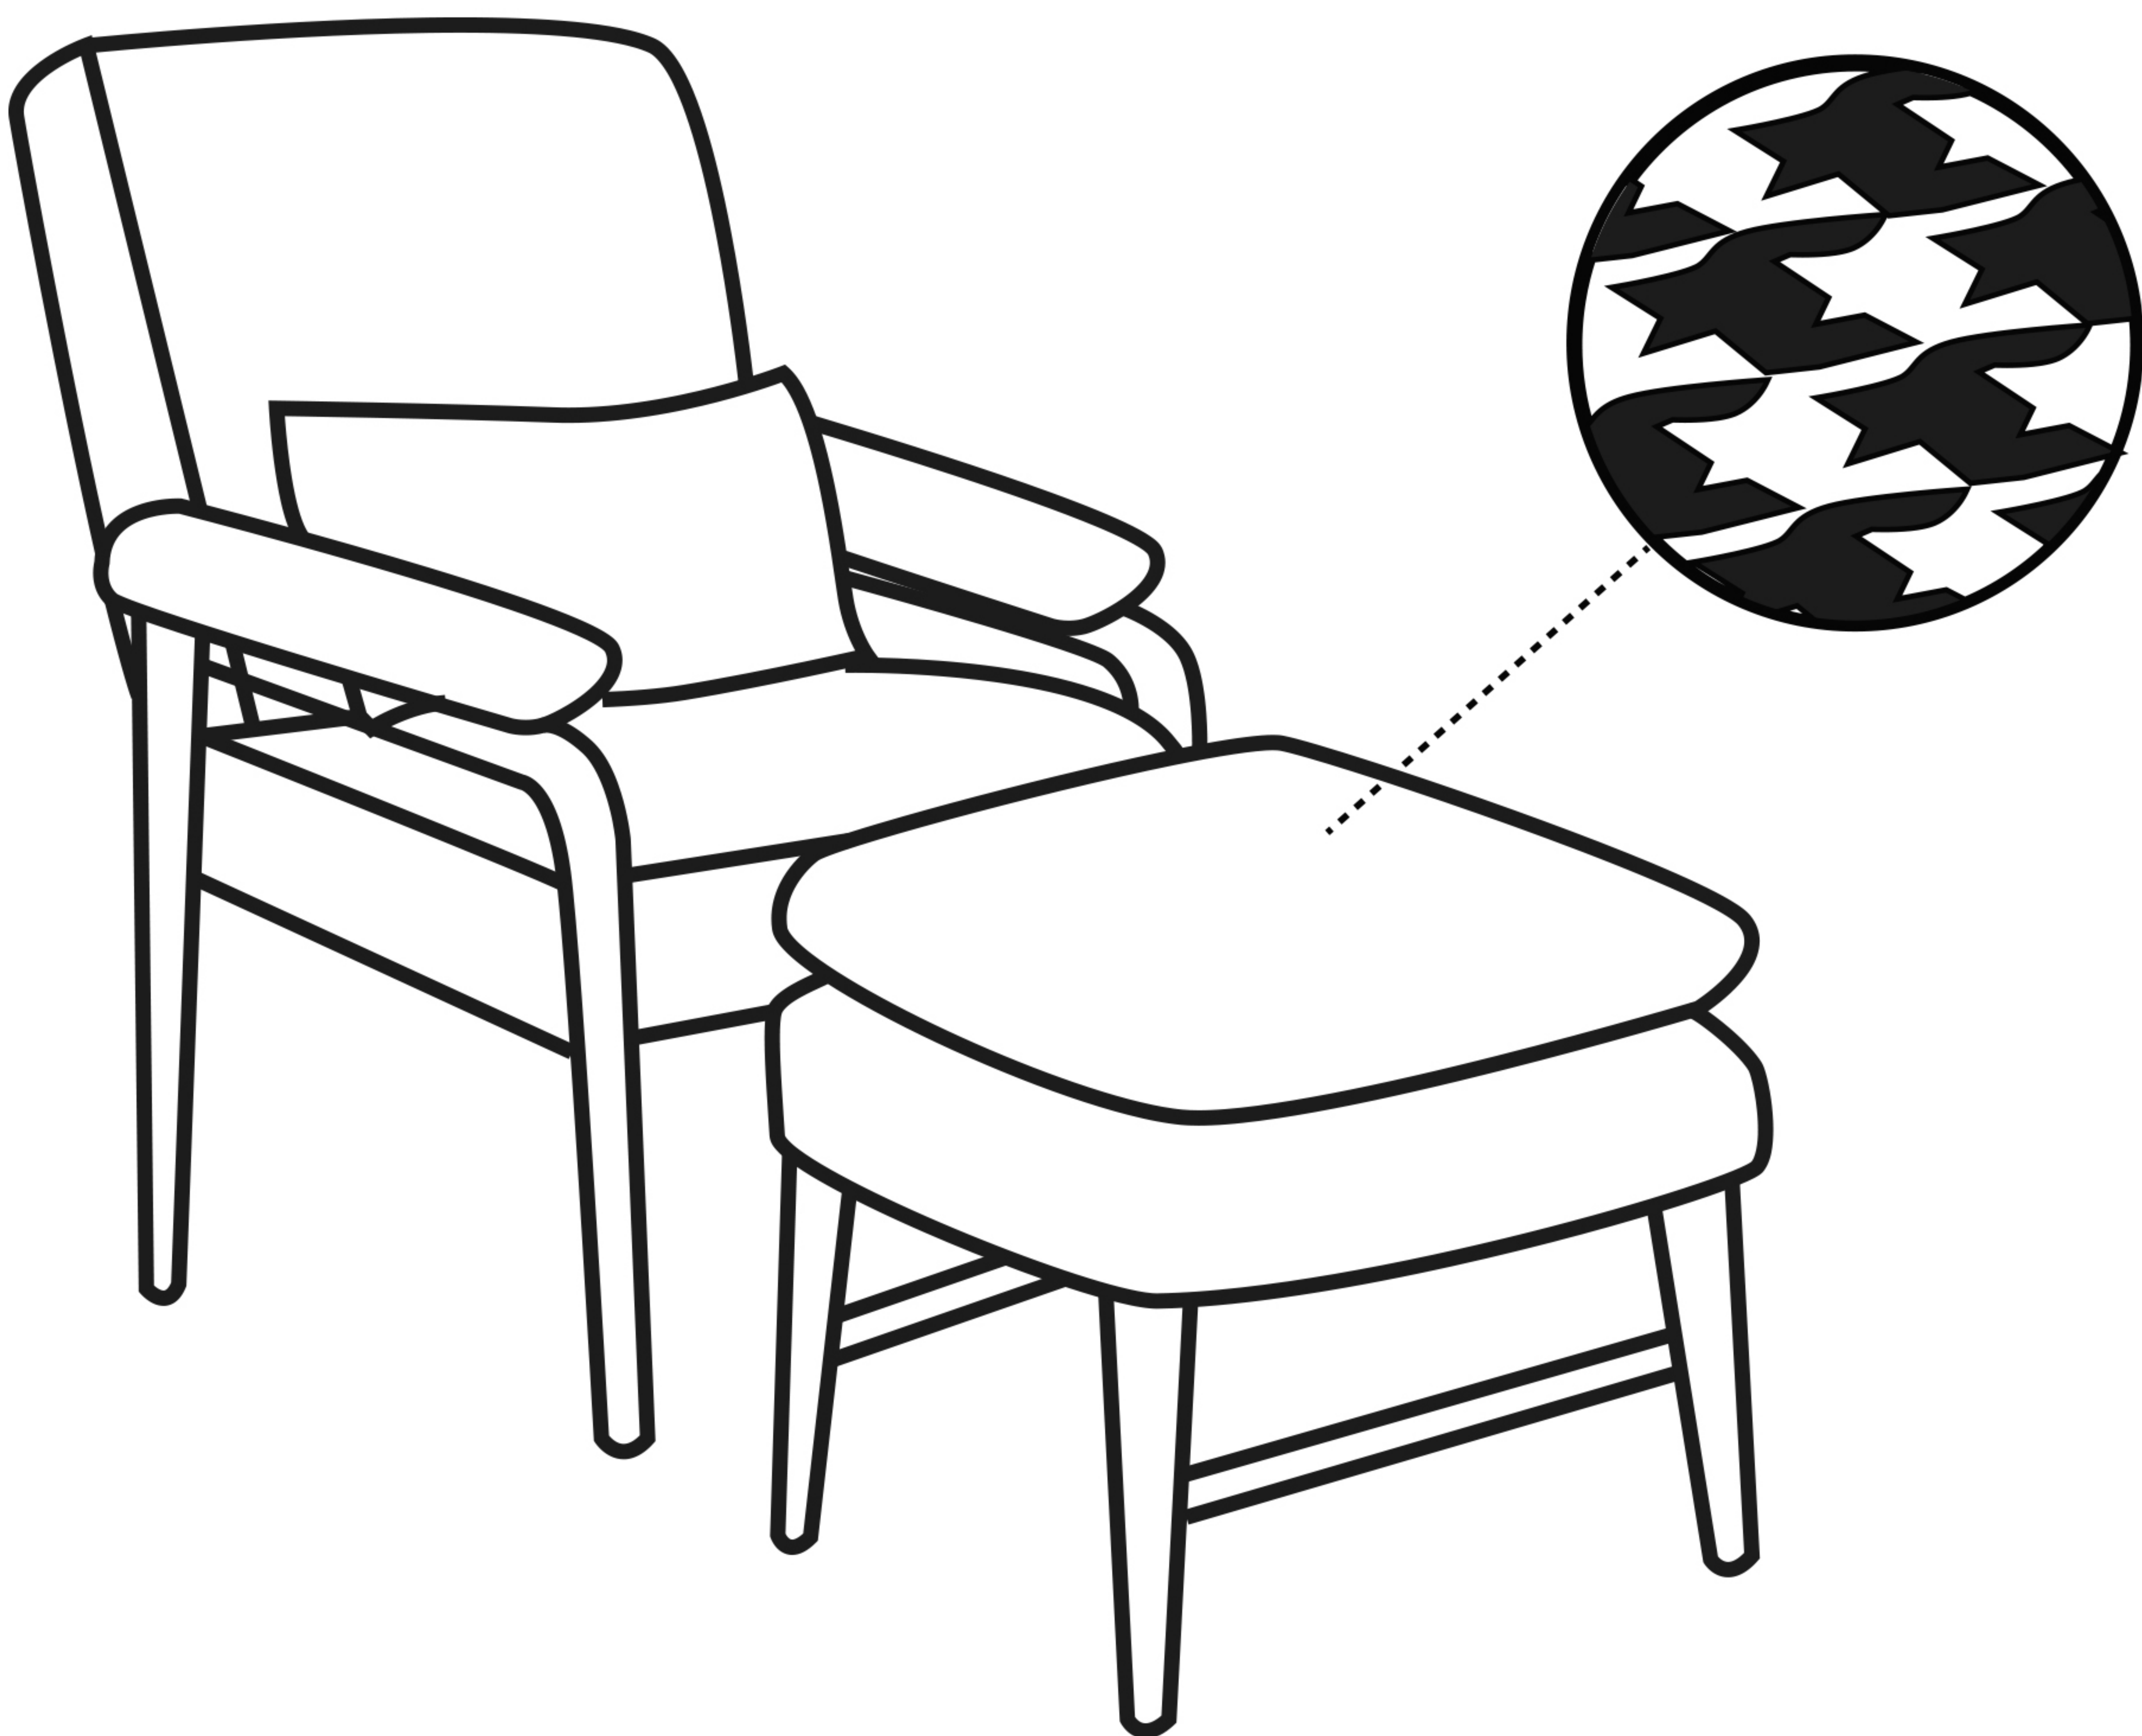

Toll Free(US) : 3235971109

Website : www.mcombo.com Amazon sold by: MCombo

Warranty Claim : sales@mcombo.com

Sales & Technical Questions : sales@mcombo.com sales@exacme.com

CONGRATULATIONS!


Mcombo Accent Chair with ottoman - a name synonymous with classic design and the carrier of value and quality. Our products are directly from factory and eliminated the cost of middlemen. The Accent Chair with ottoman is a high-quality shading solution to enhance comfortable feelings as you try to enjoy the nice day.

WARRANTY

- All warranties are to the original purchaser from **MCOMBO ONLY**®
- **MCOMBO**® will replace the defective parts or send replacement item provided that the warranty parts have not been subjected to misuse, abuse or improper service by the consumer, for example, damaged wire arising in consequence of negligence or improper operation.
- **MCOMBO**® All of chairs come with a 30-day return/replace policy. During this time, we will cover the shipping cost of return and replacement for defective and damaged item, through provide pre-paid return label or pick up service for customer's convenience.


PARTS LIST

A

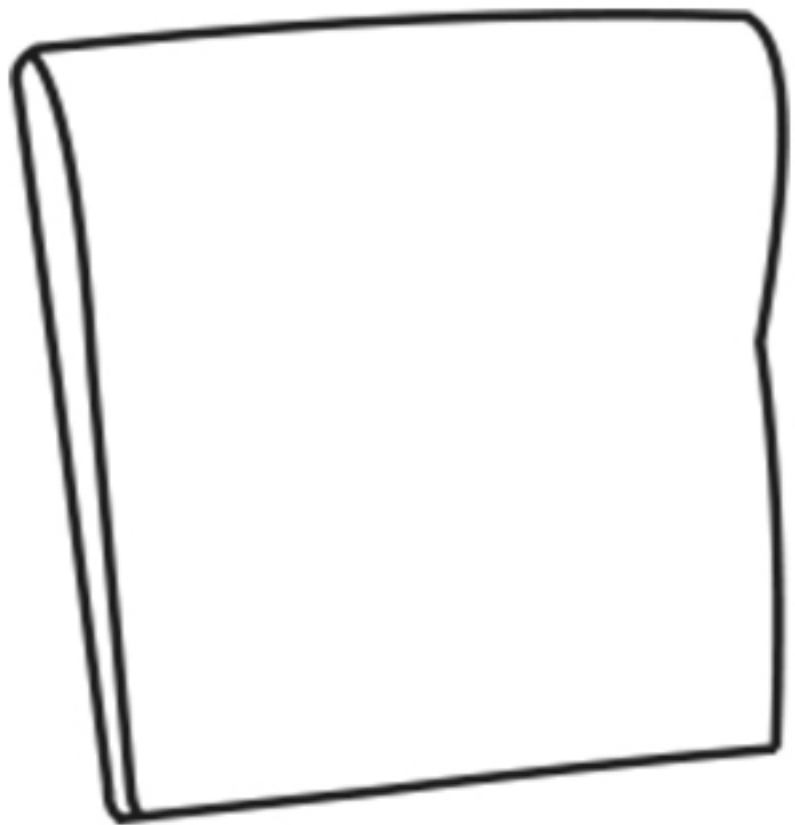

A*1 Back Cushion

B

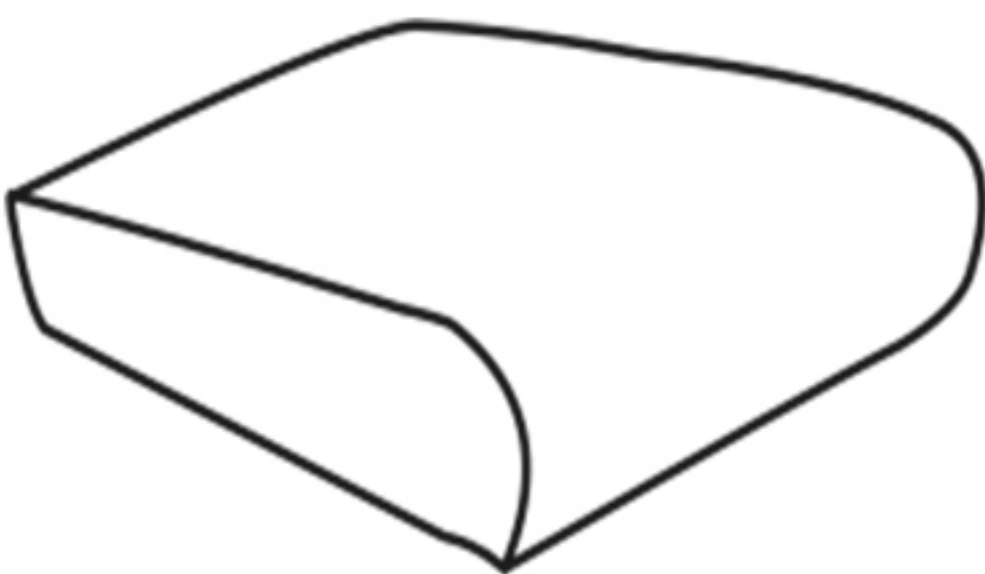


B*1 Seat Cushion

C



C*1 Chair Leg Frame

D

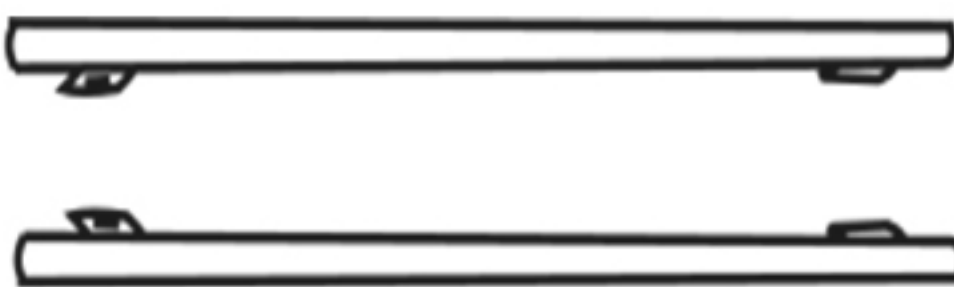

D*1 Chair Connecting Bar

E



E*2 Arms

F




F*1 Ottoman Cushion

G



G*1 Ottoman Leg Frame

H

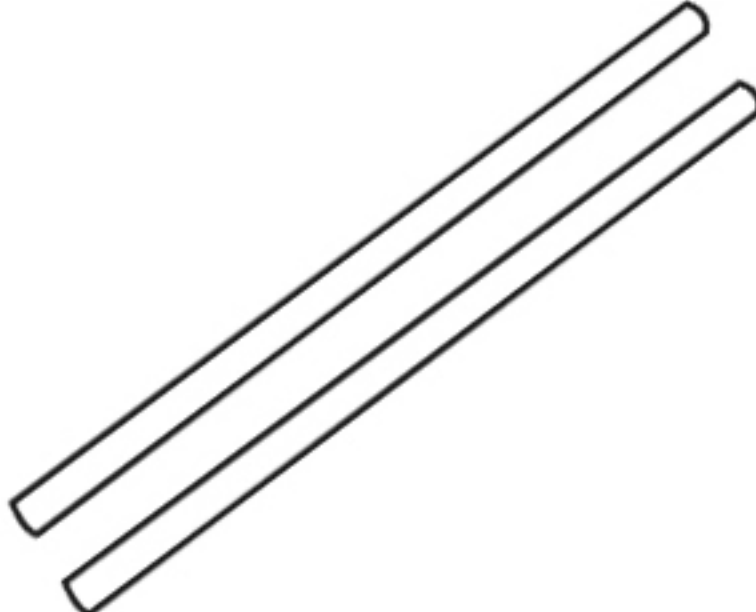

H*1 Ottoman Connecting Bar

I



I*8 Screws (M6*20mm)

J



J*2 Screws (M6*40mm)

K



K*10 Screws (M8*45mm)

L



L*4 Screws (M6*16mm)

M




M*1 Allen Key

N



N*2 Extra Cushion

Please remove all protective foam.


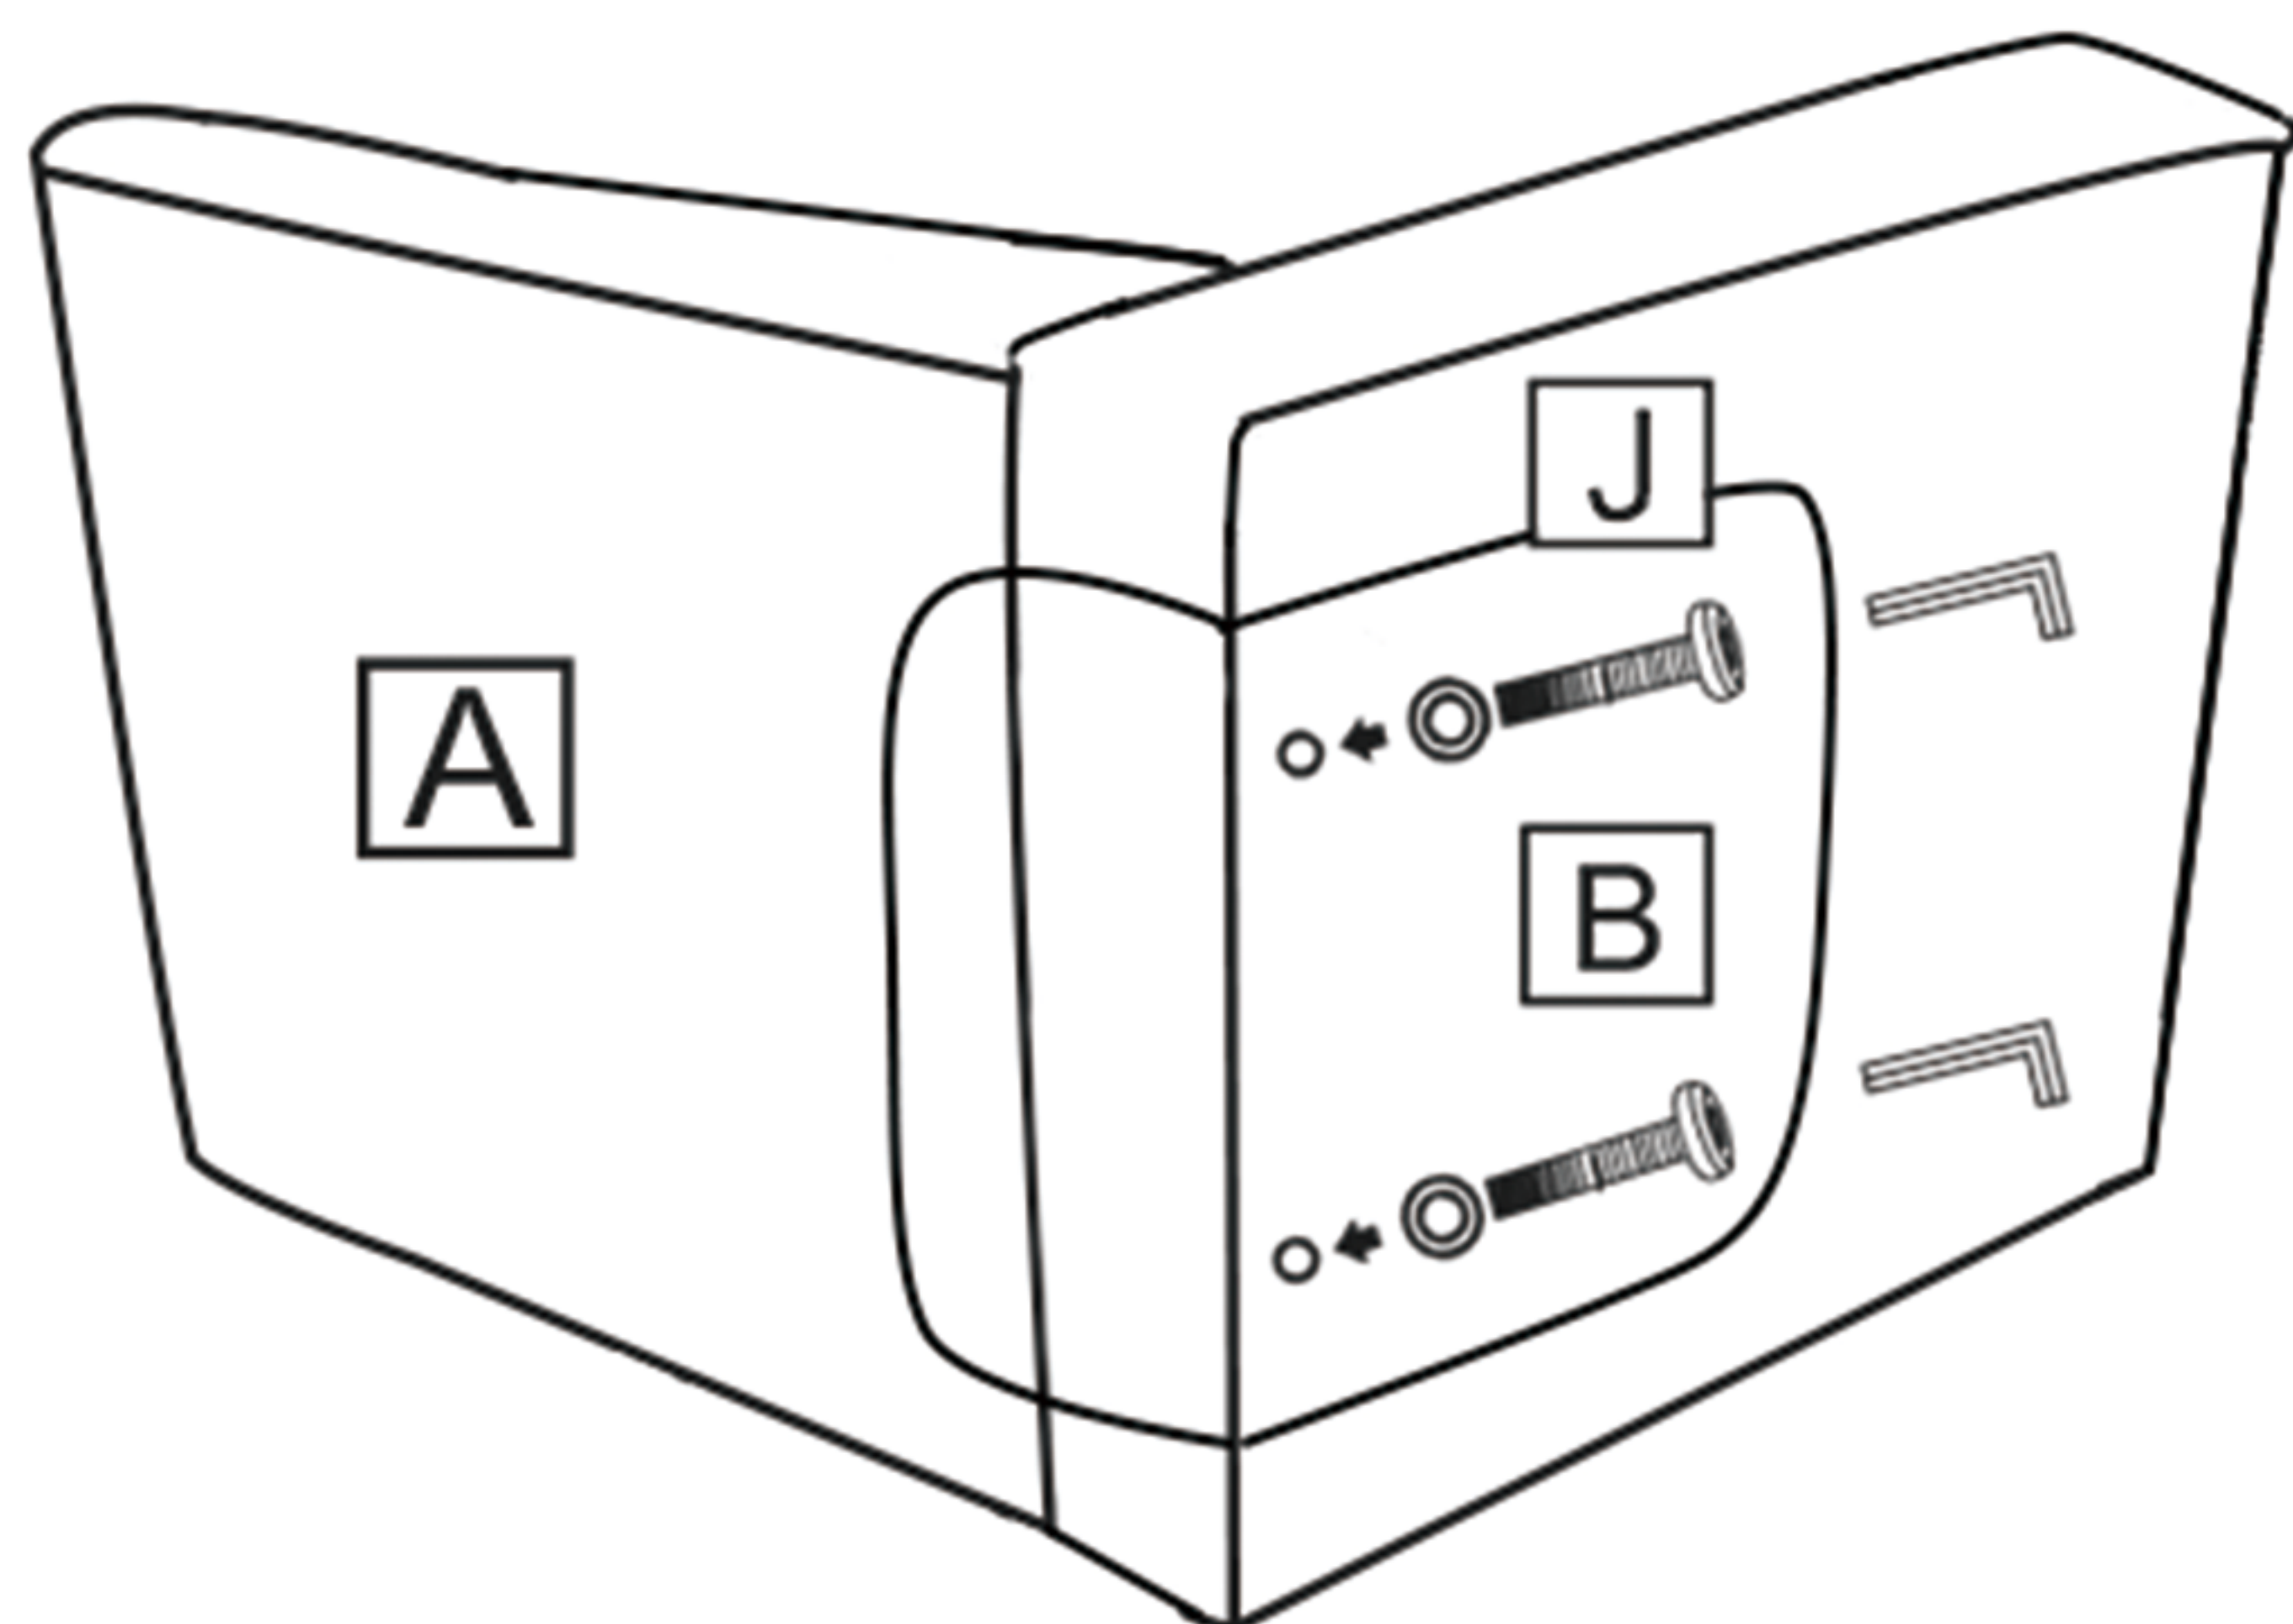


Step 1

First unzip the seat cushion **(B)** and connect the back to the seat from inside. Align the back **(A)** with the holes in the seat cushion **(B)**, and tighten the screws **(J)** on both sides.


Step 2

Align the holes of chair connecting bar **(D)** and leg frame **(C)** and fix them with screws **(K)**

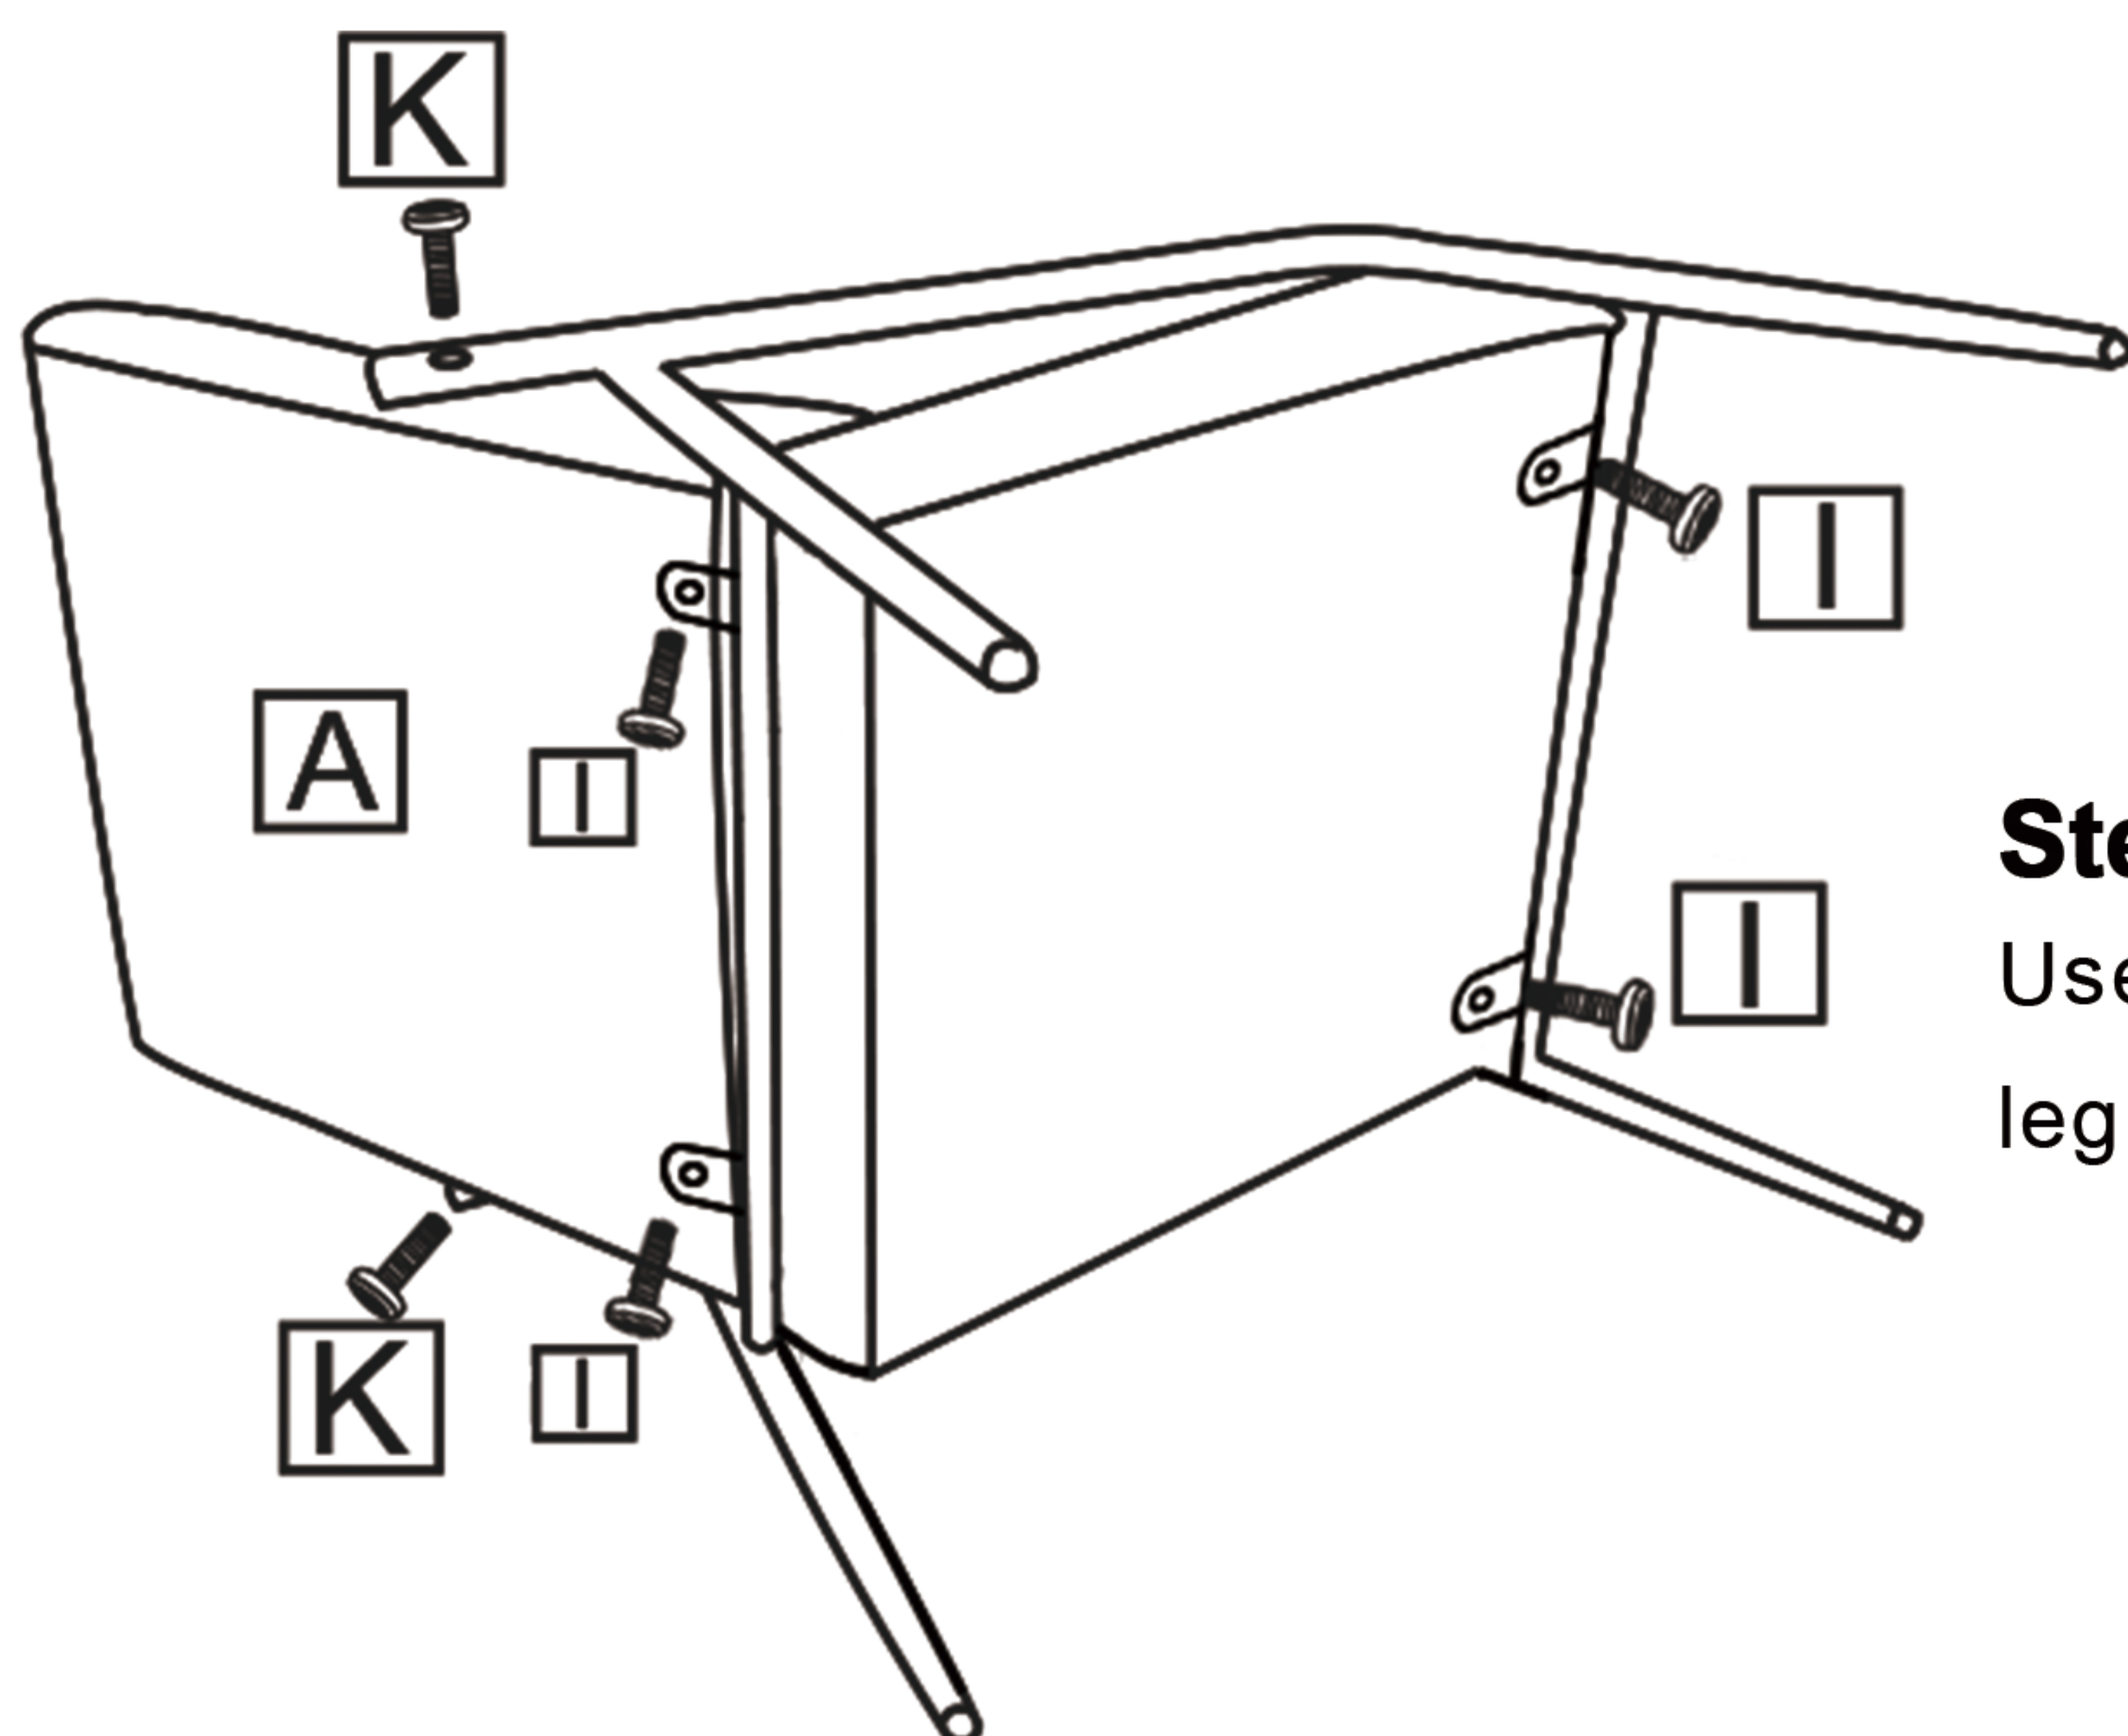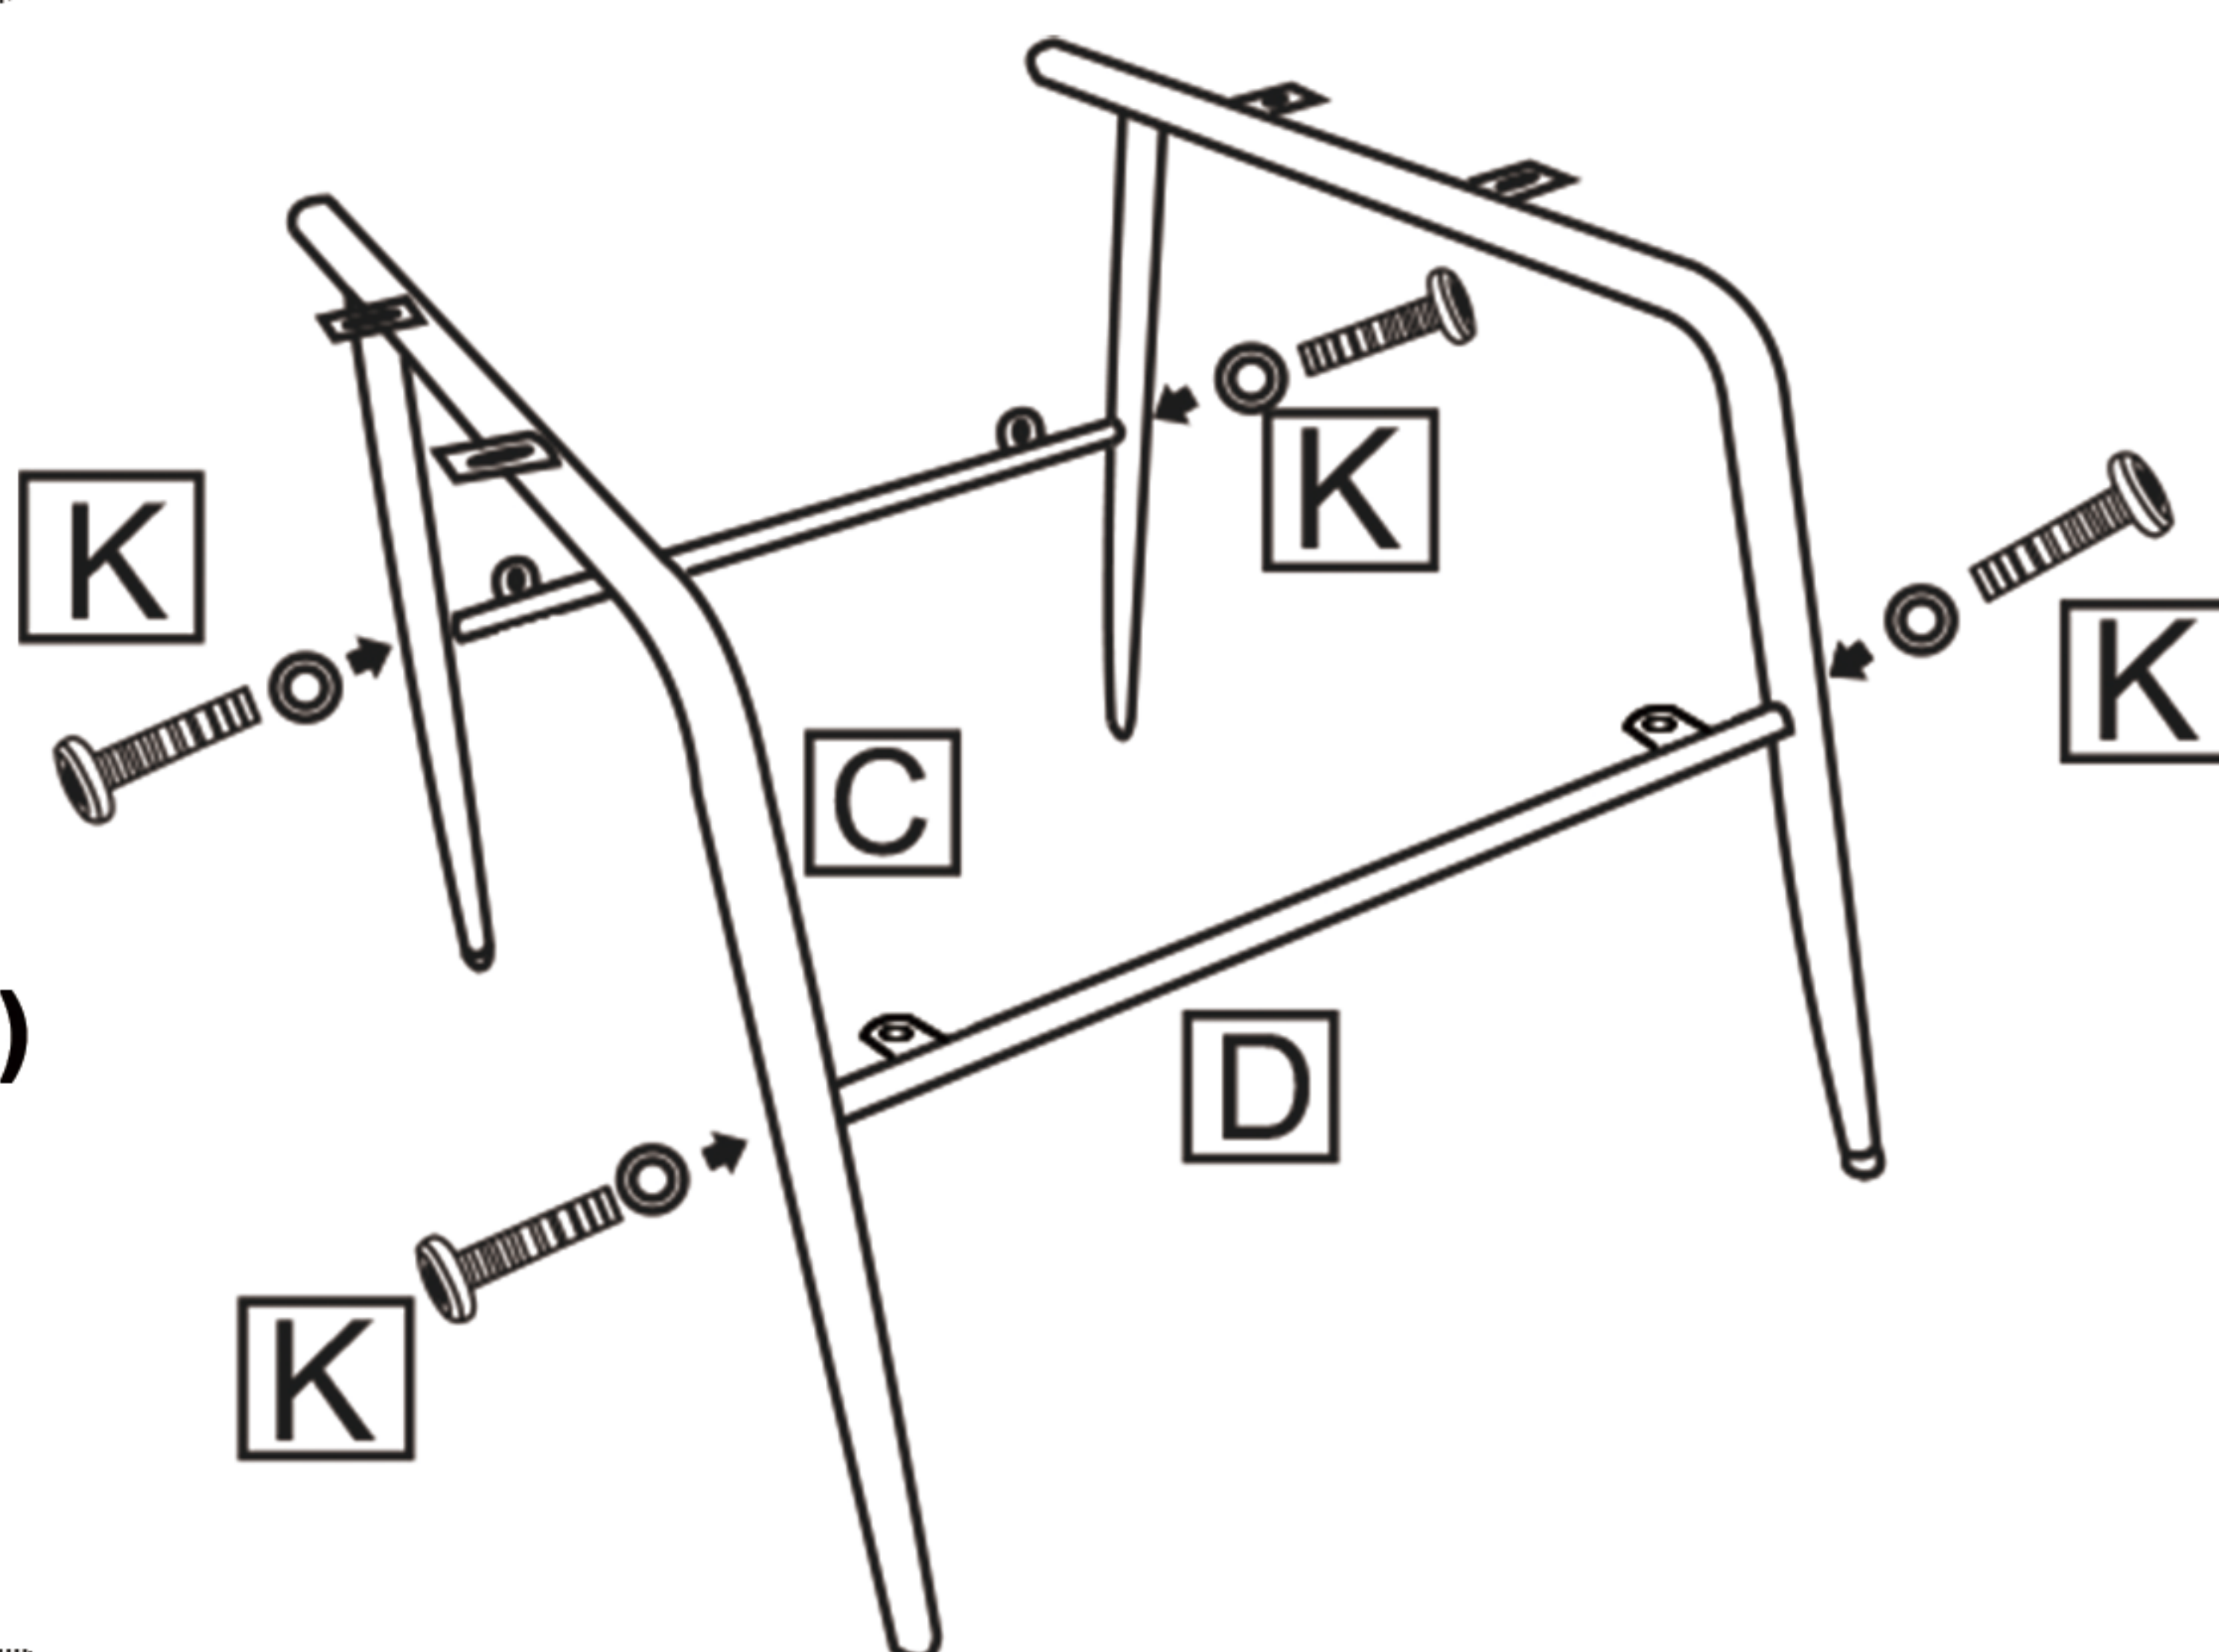

Step 3

Use Screws **(K, I)** to screw the installed leg frame to the back and cushion


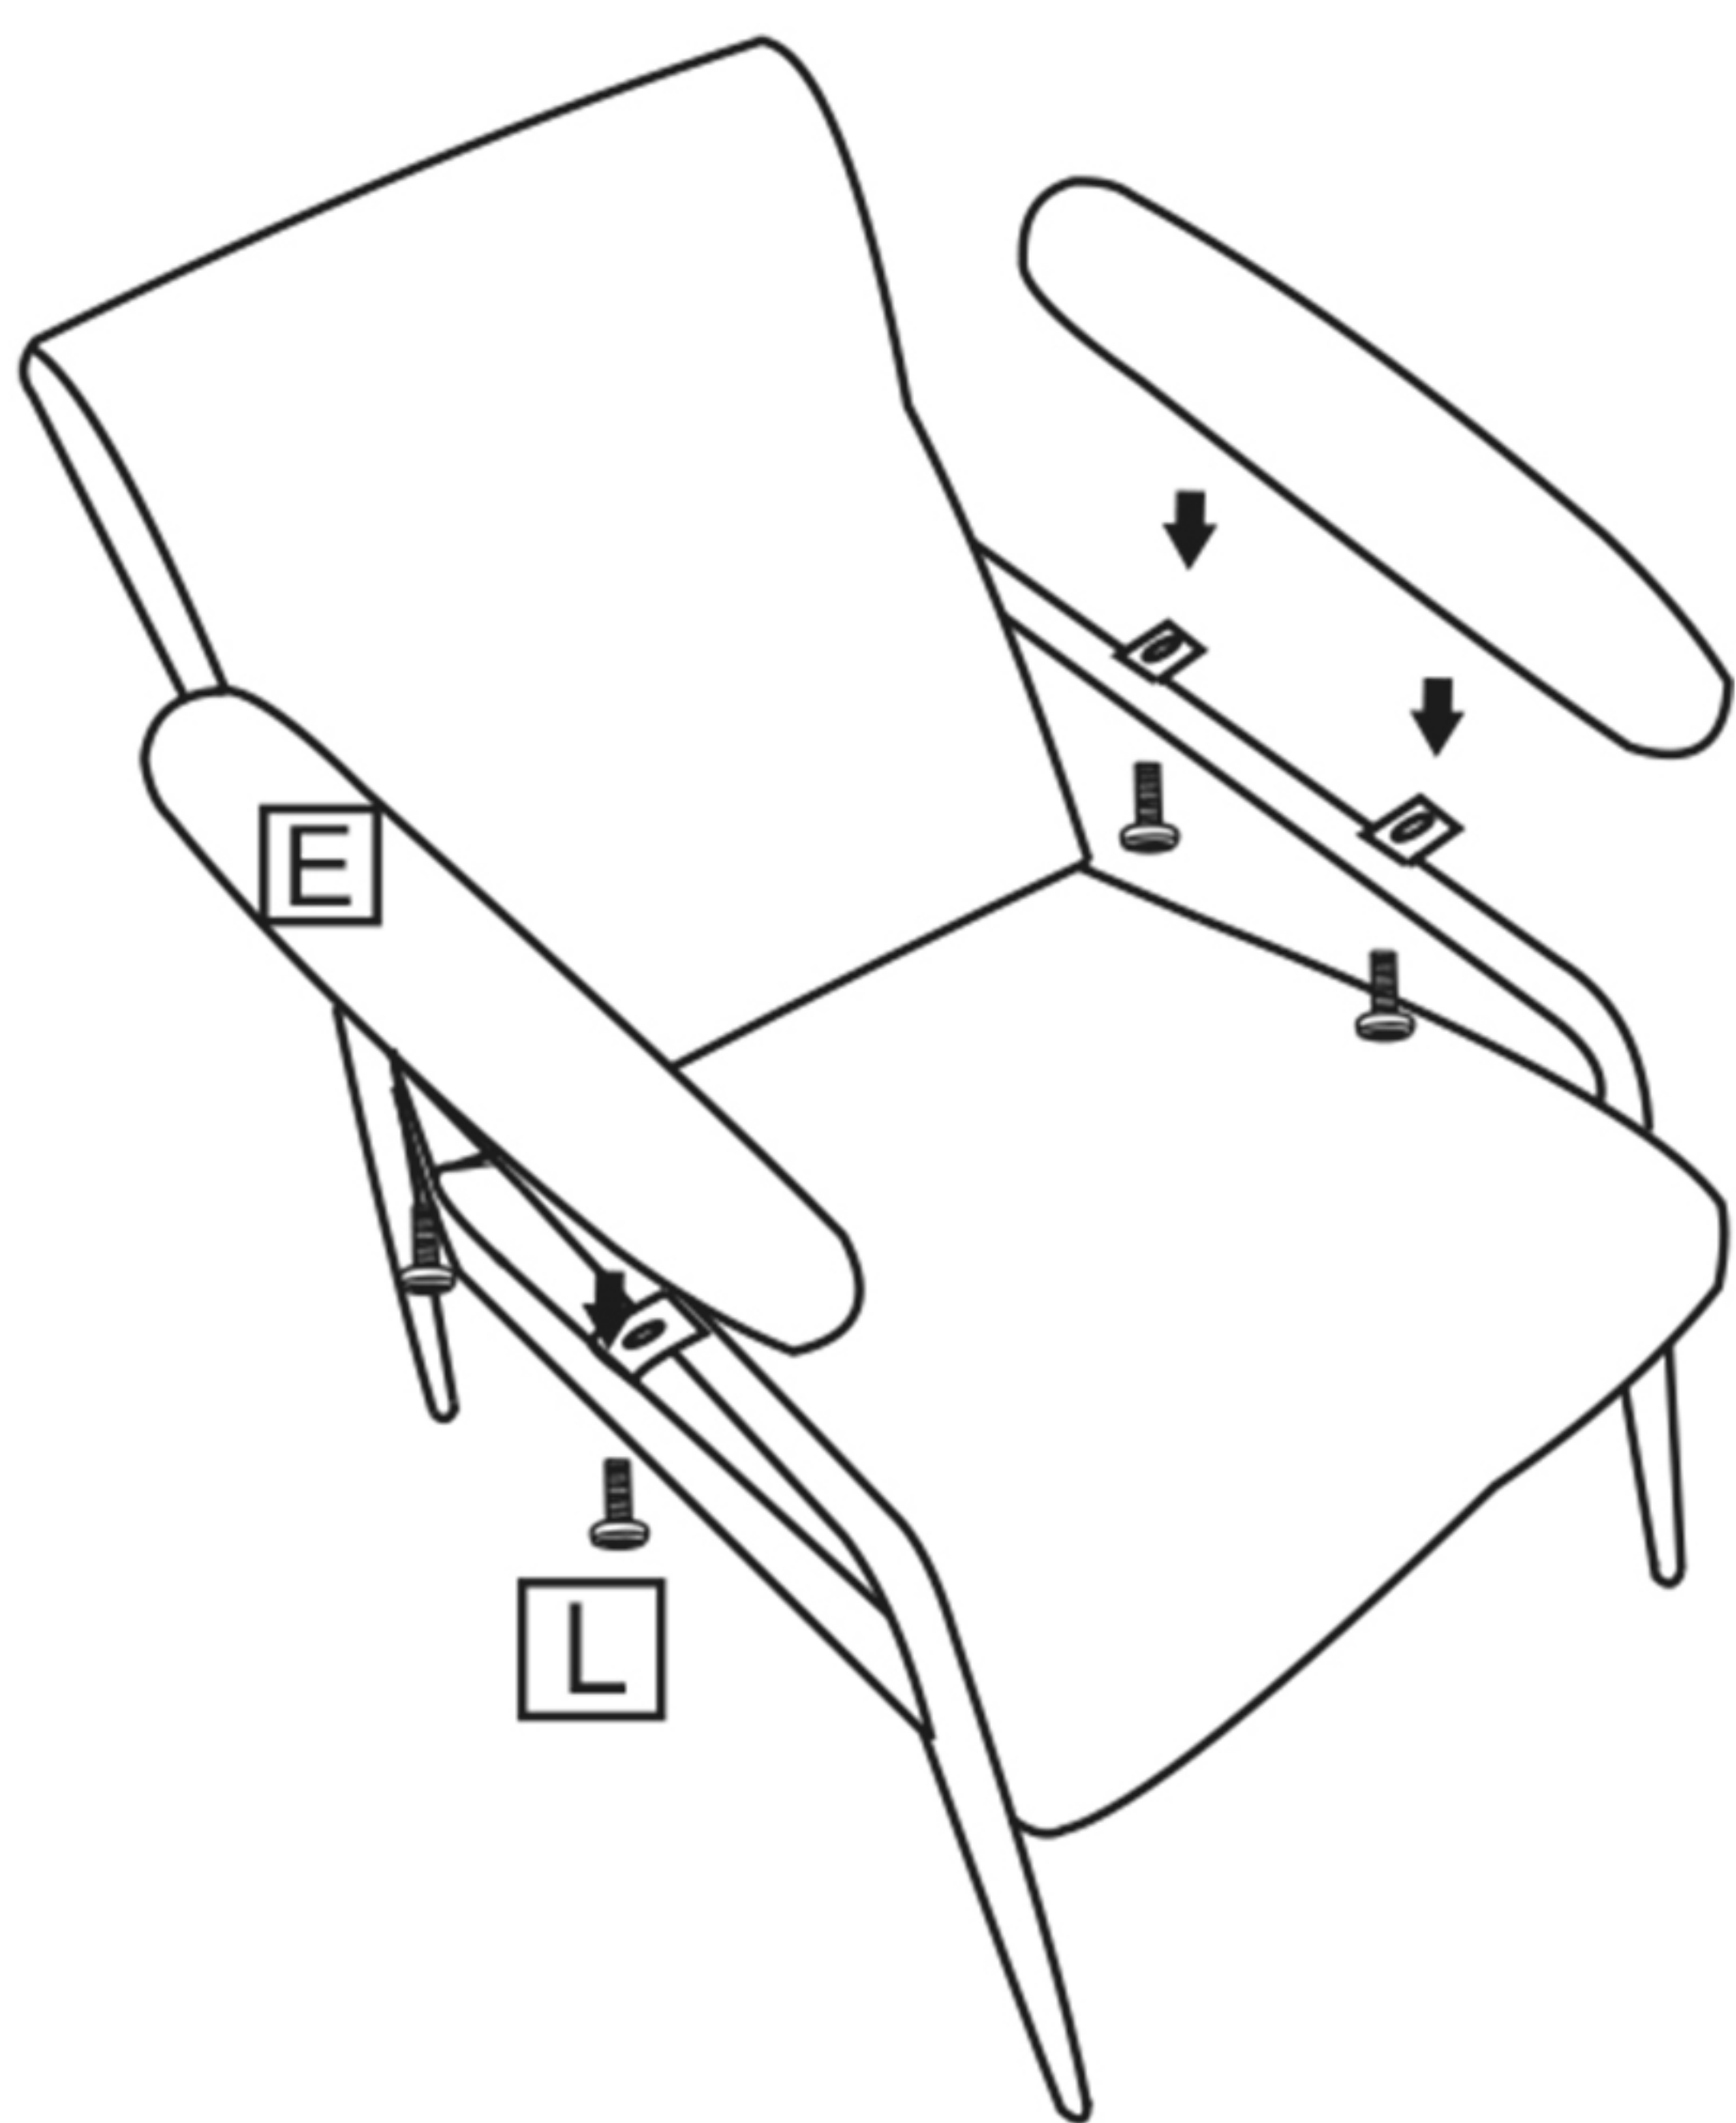


Step 4

Place arms **(E)** on the leg frame and fix it with screws **(L)**

Step 5

Align the holes of ottoman connecting bar **(H)** and ottoman leg frame **(G)** and fix them with screws **(K)**, then use screws **(I)** to fix ottoman cushion **(F)**.

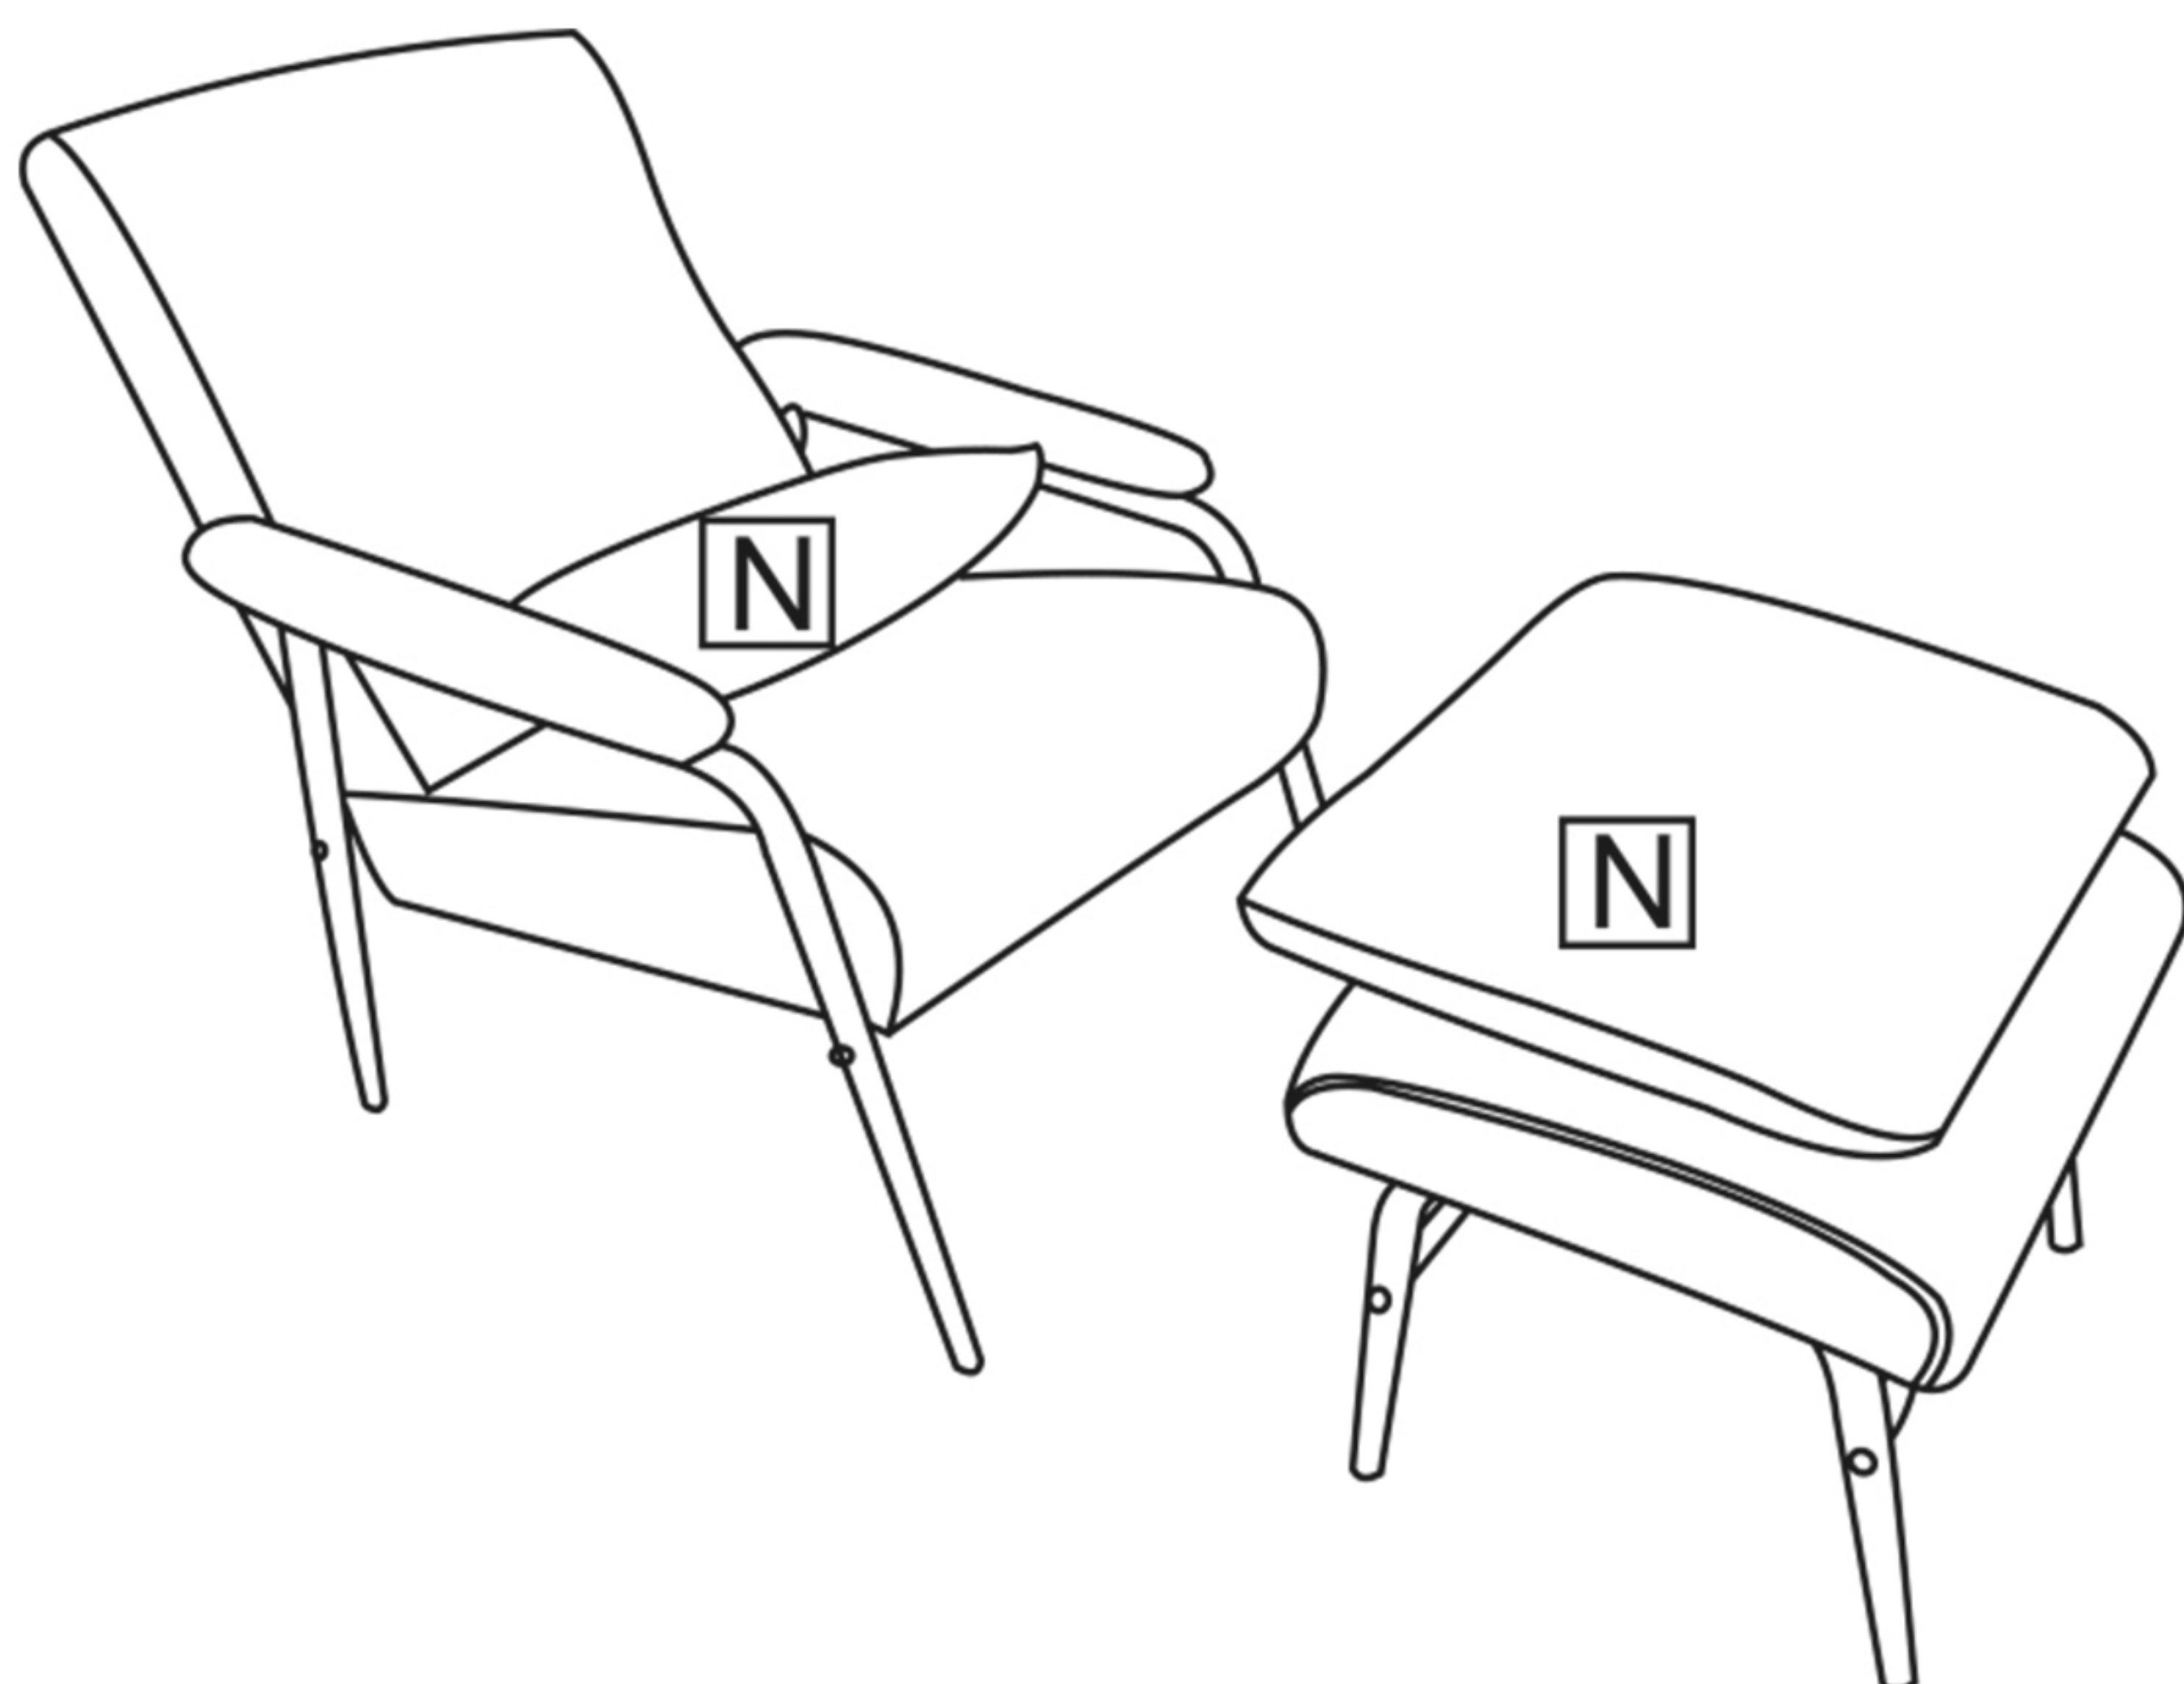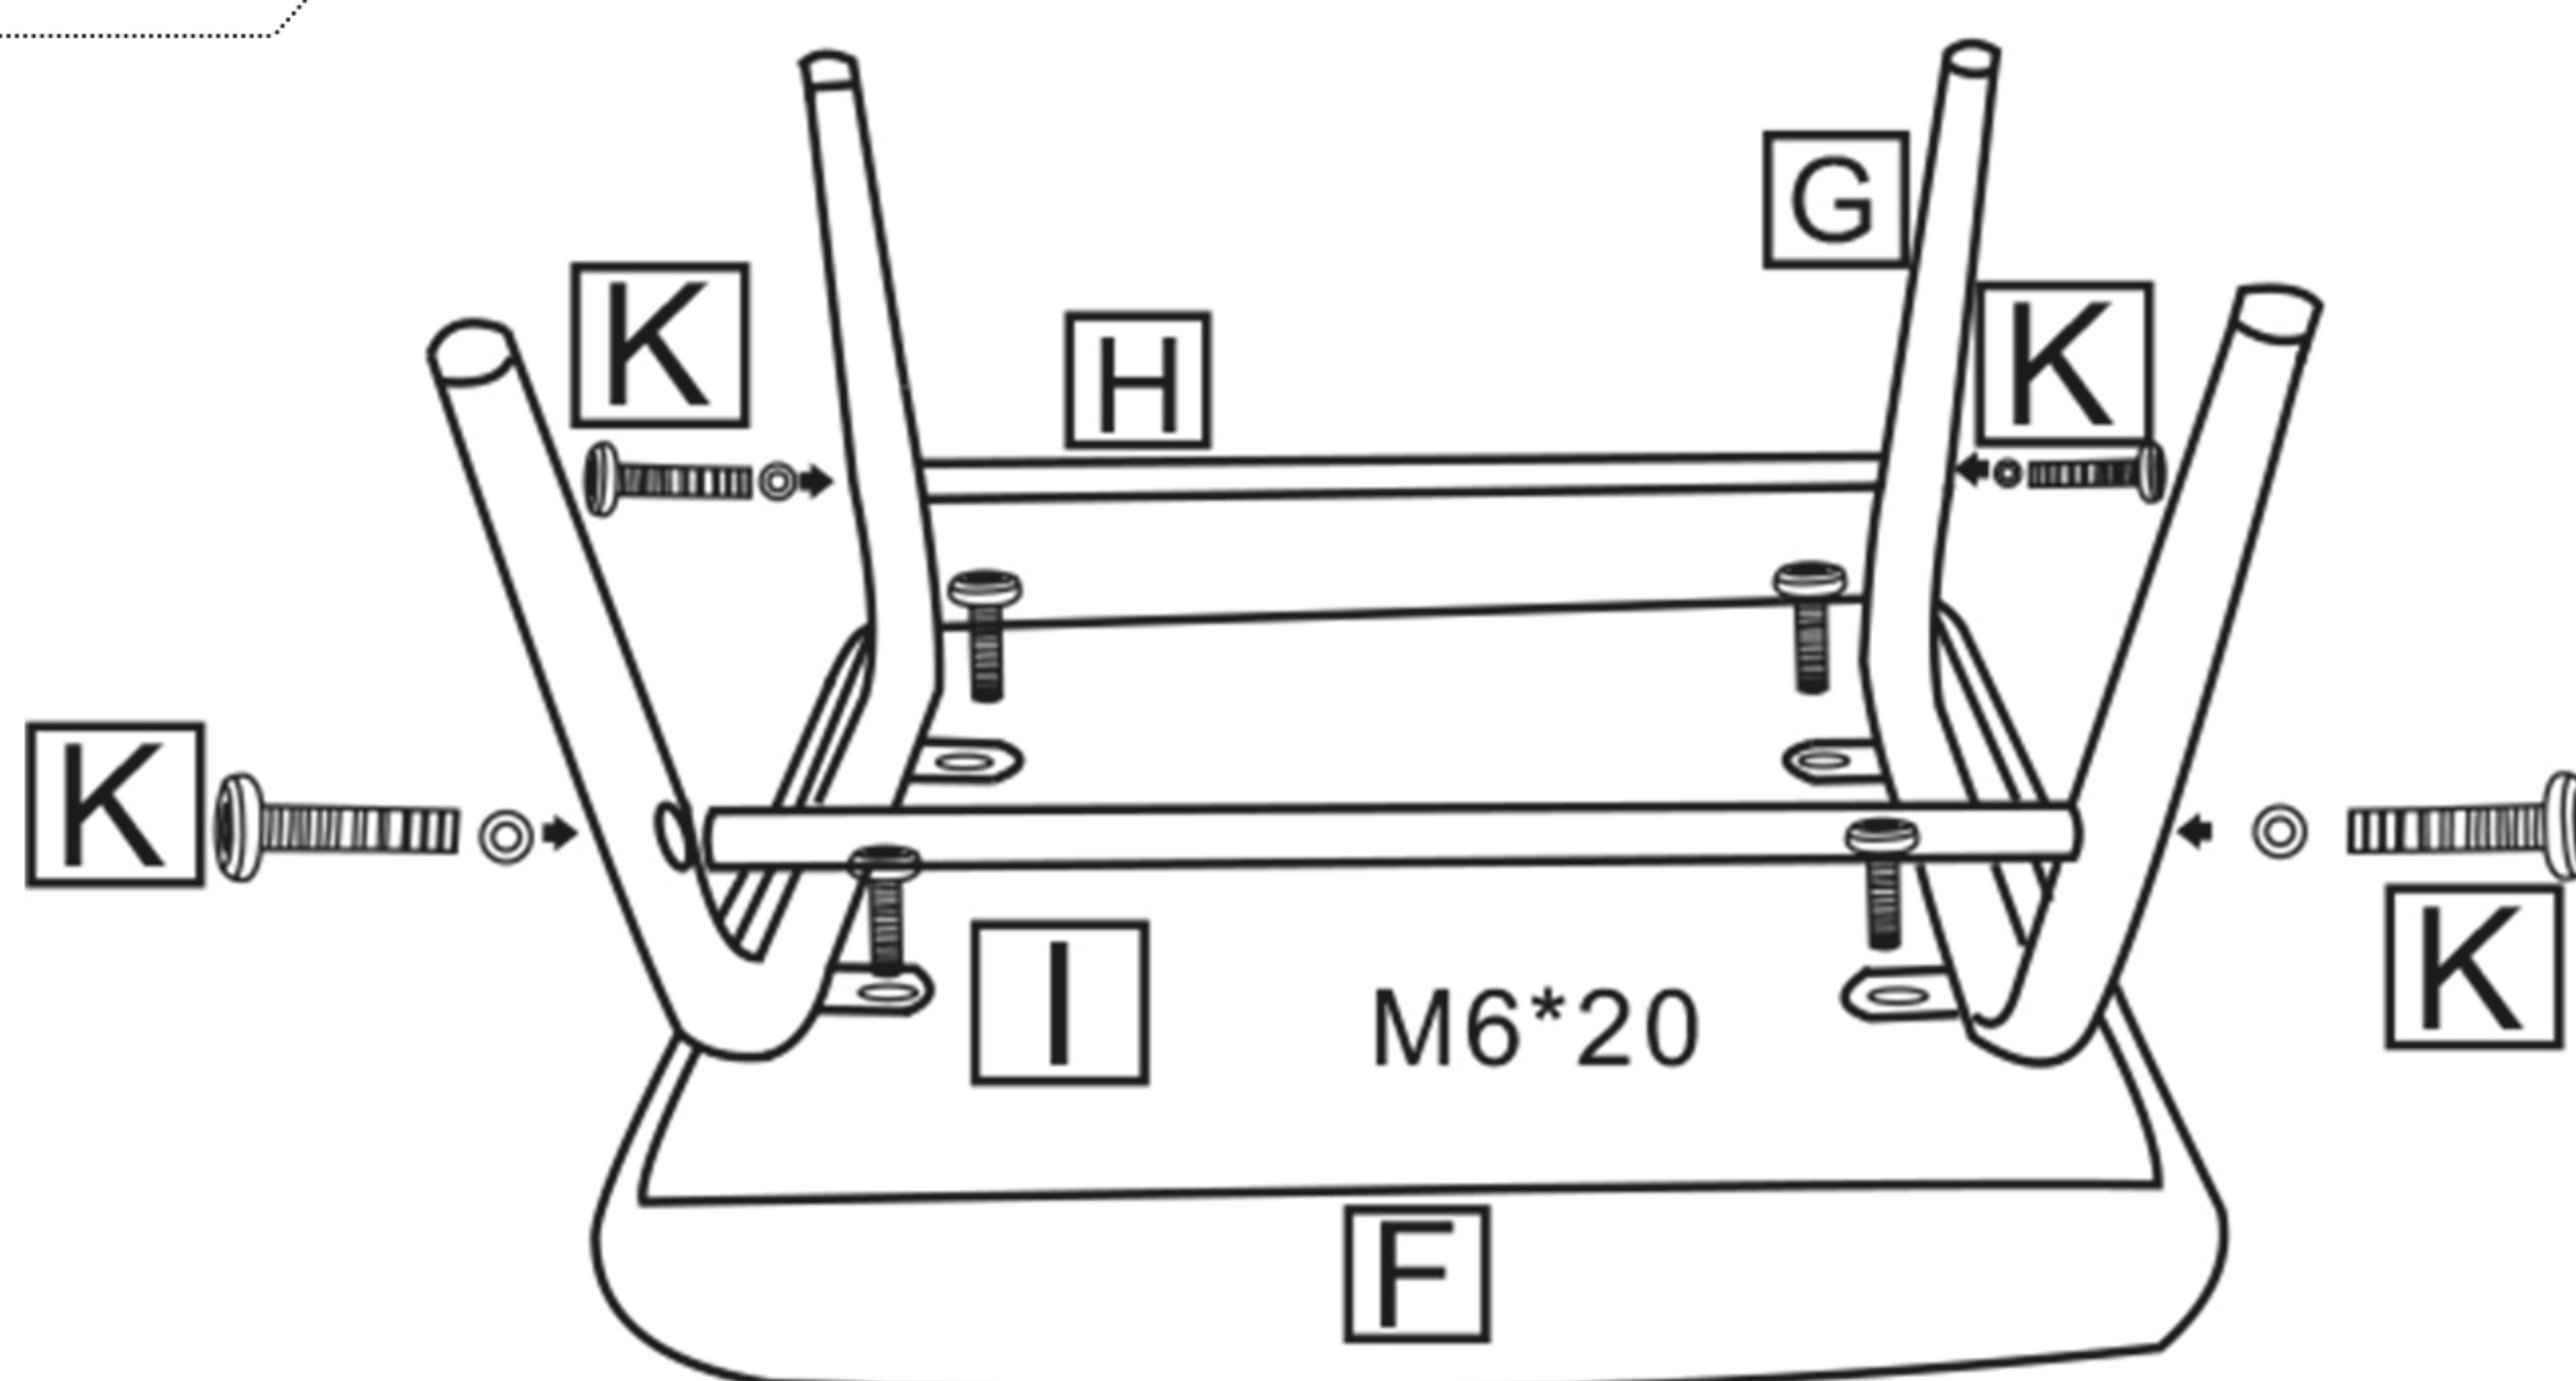

Step 6

Place the extra cushions **(N)** on the chair and ottoman respectively.

KINDLY REMINDER

If you have any questions about the product or use, please feel free to contact sales@mcombo.com