


# EVERBILT

TM

Item # 1002 782 619  
Model # 9236059

## INSTALLATION INSTRUCTION

### 15 IN. UNDERMOUNT RUNNER

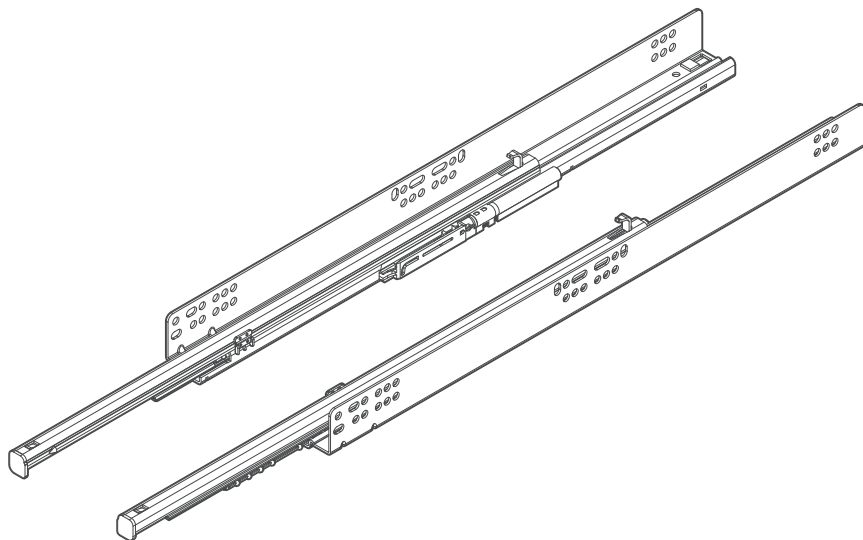

Questions, problems, missing parts? Before returning to the store,  
call Everbilt Customer Service  
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

**1-800-305-1726**

**HOMEDEPOT.COM**

#### THANK YOU

*We appreciate the trust and confidence you have placed in Everbilt through the purchase of this Undermount Runner. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Everbilt!*

# Table of Contents

|                                               |   |                                            |   |
|-----------------------------------------------|---|--------------------------------------------|---|
| Safety Information .....                      | 2 | Face Frame Installation .....              | 6 |
| Warranty .....                                | 2 | Preparing the slides .....                 | 6 |
| Installation Options .....                    | 3 | Face frame application .....               | 6 |
| Is this the right drawer for my project?..... | 3 | Metal rear attachment set (screw-on) ..... | 7 |
| Pre-Installation .....                        | 4 | Frameless Installation .....               | 8 |
| Planning Installation .....                   | 4 | Frameless application .....                | 8 |
| Tools Required .....                          | 4 | Installing the drawer slides .....         | 8 |
| Package Contents .....                        | 4 | Drawer Installation and Removal .....      | 9 |
| Dimensions .....                              | 5 |                                            |   |
| Cabinetry Dimensions .....                    | 5 |                                            |   |
| Drawer Dimensions .....                       | 5 |                                            |   |

# Safety Information

Please read and understand this manual before installing this product.



**CAUTION:** Always be cautious when using power tools.

# Warranty

Subject to the terms of this warranty, the Manufacturer warrants to the original consumer purchaser that the product will be free from defects in material and workmanship. If the product does not comply with this warranty, the Manufacturer will repair or replace the product or, at the Manufacturer's option, refund the purchase price. Repair, replacement, or refund of the original purchase price is your sole remedy under this or any other warranty on the product, whether expressed or implied.

For additional details and questions, please contact Everbilt Customer Service at 1-800-305-1726.


# Installation Options

## 1 Is this the right drawer for my project?

### Please check the following points


- ☐ Drawer dimensions need to be met to fit slides
- ☐ Fits 15 in. deep drawers
- ☐ These slides can be installed in frameless and face frame cabinetry. Instructions for both options are provided in this manual
- ☐ The drawer side thickness must be 1/2 in. (13 mm) or 5/8 in. (16 mm)

Face Frame

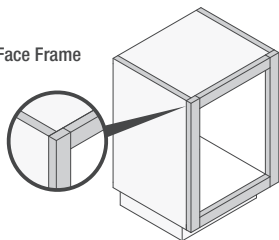

|                                                                                   |          |                                                                                   |                |
|-----------------------------------------------------------------------------------|----------|-----------------------------------------------------------------------------------|----------------|
|  |          |  |                |
| Drawer box length                                                                 |          | Minimum / maximum inside cabinet depth<br>with metal rear attachment bracket      |                |
| inch                                                                              | mm       | inch                                                                              | mm             |
| 15"                                                                               | (381 mm) | 15 7/8" - 17 3/4"                                                                 | (402 - 452 mm) |

Frameless

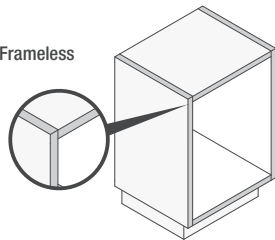

|                                                                                   |          |                                                                                   |          |
|-----------------------------------------------------------------------------------|----------|-----------------------------------------------------------------------------------|----------|
|  |          |  |          |
| Drawer box length                                                                 |          | Minimum inside cabinet depth                                                      |          |
| inch                                                                              | mm       | inch                                                                              | mm       |
| 15"                                                                               | (381 mm) | 15 43/64"                                                                         | (398 mm) |

# Pre-Installation


## PLANNING INSTALLATION

Ensure all parts listed in the Package Contents section are included and that you have the listed Tools and Materials Required on hand. If any part is missing or damaged, contact customer service.


## TOOLS REQUIRED



Pencil



Drill with  
3/32" Drill bit for screws  
1/4" Drill bitt for rearhole




Measuring Tape




Phillips  
screwdriver


## PACKAGE CONTENTS

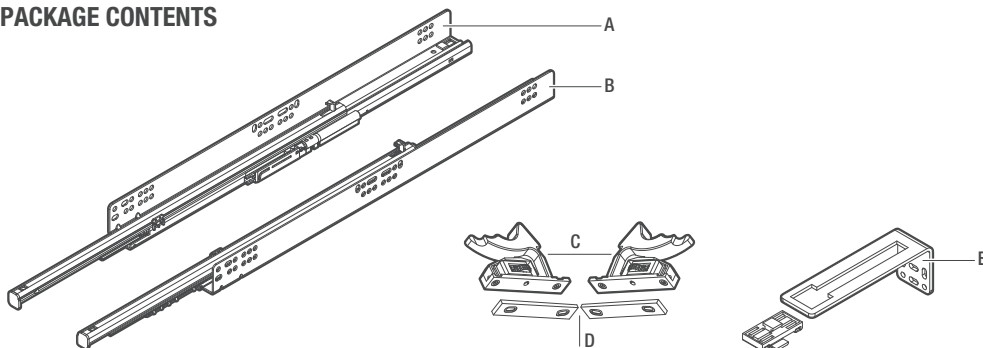

| Part | Description                                                              | Quantity |
|------|--------------------------------------------------------------------------|----------|
| A    | Left Drawer Slide                                                        | 1        |
| B    | Right Drawer Slide                                                       | 1        |
| C    | Front fixing clips left/right for 5/8" (16 mm) drawer subfront thickness | 2        |
| D    | Optional spacers for 1/2" (13 mm) drawer subfront thickness              | 2        |
| E    | Face Frame Bracket                                                       | 2        |
| F    | Panhead #6 x 1/2 in. (3,5 x 13 mm)                                       | 8        |
| G    | Countersunk #6 x 5/8 in. (3,5 x 16 mm)                                   | 16       |
| H    | Countersunk #6 x 3/4 in. (3,5 x 20 mm)                                   | 4        |
| I    | Countersunk #6 x 1 in. (3,5 x 25 mm)                                     | 4        |



F



G


H

I


# Dimensions

Please review these diagrams and measure and mark your installation location before you begin the installation procedures.

## CABINETRY DIMENSIONS

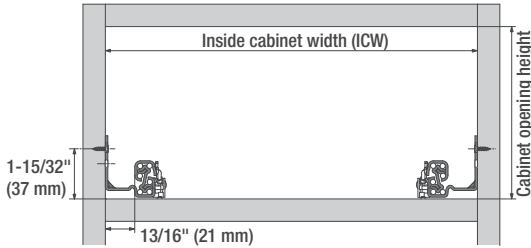

## DRAWER DIMENSIONS

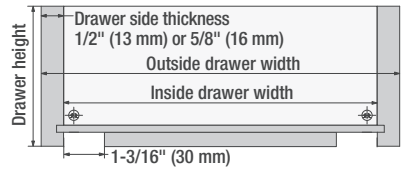

- Drawer depth: 21 in. (533 mm) outside length of drawer sides, without decorative front, for a four sided box
- Drawer slides will not work with 3/4 in. (19 mm) drawer slides. Max. drawer side thickness = 5/8 in. (16 mm)
- Drawer side thickness must be 

|                 |
|-----------------|
| 1/2 in. (13 mm) |
|-----------------|

 or 



|                 |
|-----------------|
| 5/8 in. (16 mm) |
|-----------------|
- Outside drawer width = Inside cabinet width minus 

|                 |
|-----------------|
| 5/8 in. (16 mm) |
|-----------------|

 or 

|                 |
|-----------------|
| 3/8 in. (10 mm) |
|-----------------|
- Inside drawer width = Inside cabinet width minus 1-21/32 in. (42 mm)
- Maximum drawer height = cabinet opening height minus 13/16 in. (20 mm)
- Minimum cabinet opening height = drawer height plus 13/16 in. (20 mm)
- Dimensions in millimeters (inch approximations as noted)


## MOUNTING DIMENSIONS

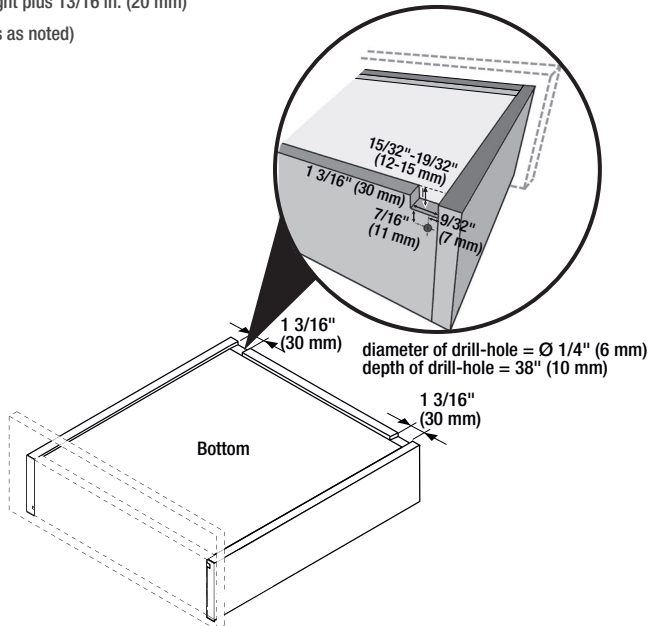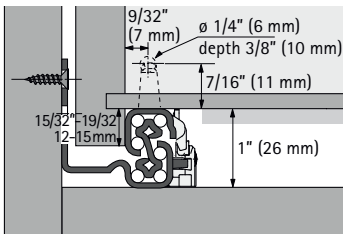


# Face Frame Installation

## 1 Preparing the slides


- Slide plastic connector from rear bracket into the notch on the left and right drawer slides (A and B) forward, as shown.

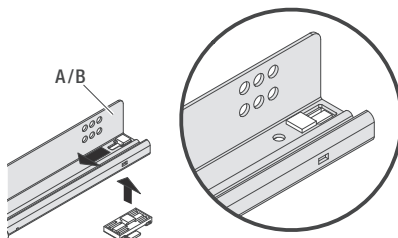

## 2 Face frame application

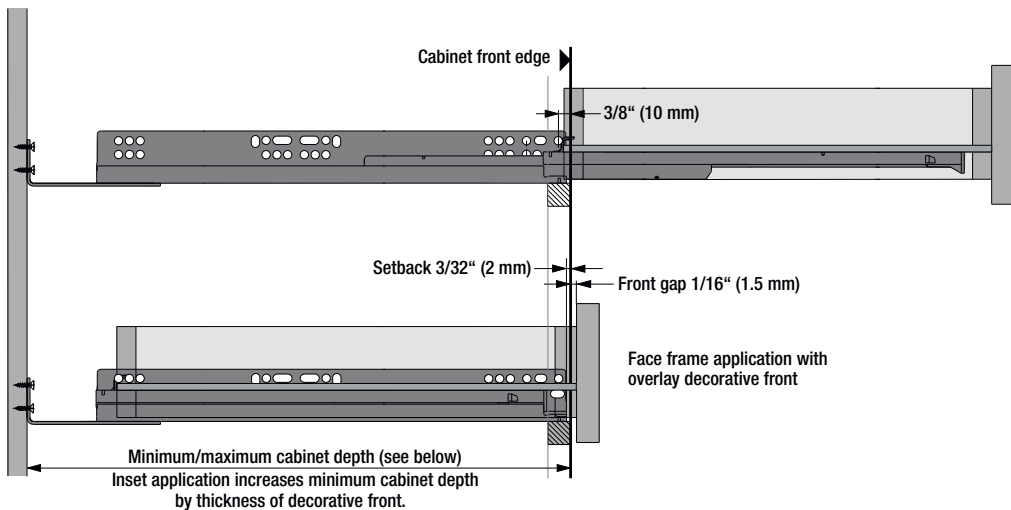




- Minimum / maximum inside cabinet depth

|                                                                                     |          |                                                                                     |                |
|-------------------------------------------------------------------------------------|----------|-------------------------------------------------------------------------------------|----------------|
|  |          |  |                |
| Drawer box length                                                                   |          | Min-Max inside cabinet depth with metal rear attachment bracket                     |                |
| inch                                                                                | mm       | inch                                                                                | mm             |
| 15"                                                                                 | (381 mm) | 15 7/8" - 17 3/4"                                                                   | (402 - 452 mm) |




## Face Frame Installation

### 3 Metal rear attachment set (screw-on)

- Set contains 2 metal rear mount brackets and 2 plastic connectors
- Non-handed, two-piece design
- For up to 50 mm (1 15/16") depth adjustment and  $\pm 1,5$  mm (1/16") side adjustment
- Additional adjustment via oblong holes
- Installation recommended with min. four panhead screws (F)

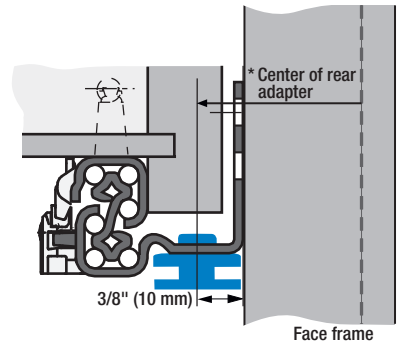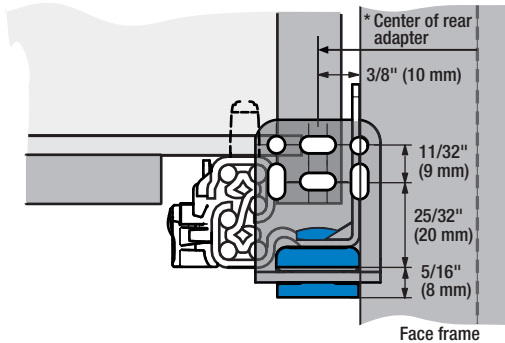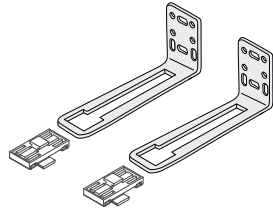


\* Center of the metal rear adapter = Width of the face frame - Thickness of the cabinet side panel + 3/8" (10 mm)

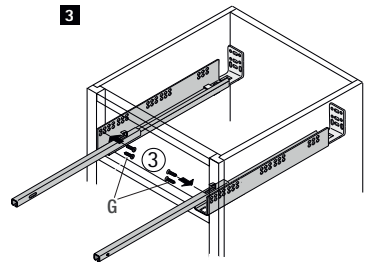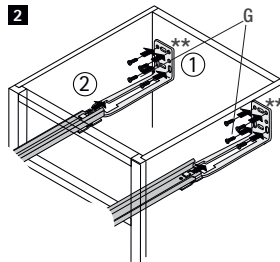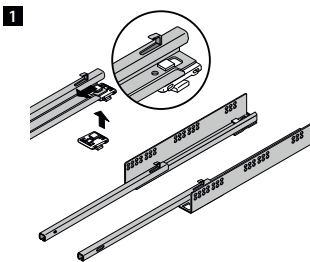

\*\* The Face Frame Bracket can also be placed upside down

# Frameless Installation

## 1 Frameless application

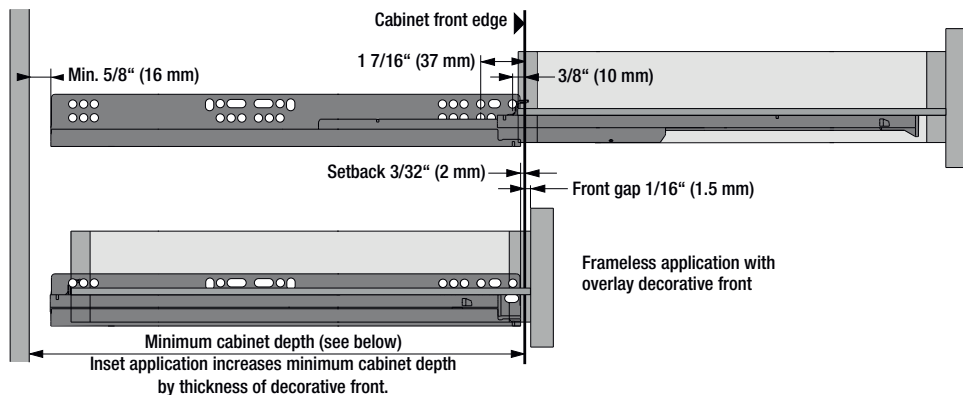


### Minimum / maximum cabinet depth

| Drawer box length |          | Min inside cabinet depth |          |
|-------------------|----------|--------------------------|----------|
| inch              | mm       | inch                     | mm       |
| 15"               | (381 mm) | 15 43/64"                | (398 mm) |

## 2 Installing the drawer slides


- Attach the left and right drawer slides (A and B) to the inside of the cabinet using #6 x 5/8 in. screws (G). Ensure you leave a 1/16 in. (2 mm) space between the face of the cabinet and the start of the drawer slides.
- Proceed to Drawer Installation and Removal when finished.

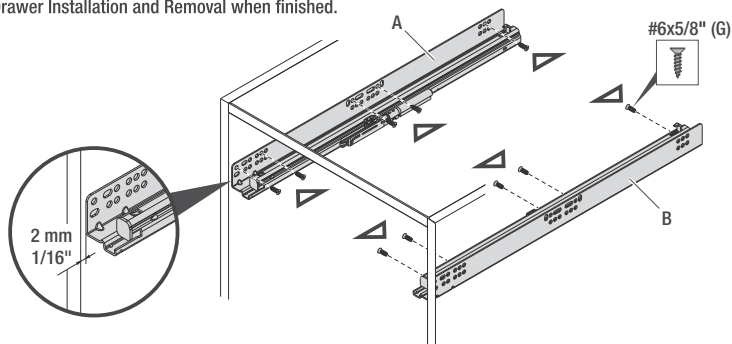


# Drawer Installation and Removal

## 1 Installing the drawer catches

- Install each drawer catch (C) into the two front corners of the drawer using #6 x 3/4 in. screws (H) or #6 x 1 in. screws (I). If you need to install the screws at an angle, do not angle the screws more than 30°. If your door subfront is 1/2 in. (13 mm) use the optional spaces (D).


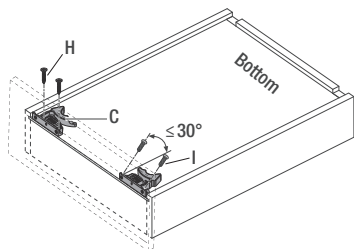


### DRAWER CATCH DIMENSIONS

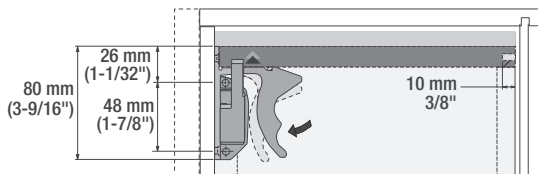


## 2 Installing the drawer

- Insert the drawer onto the glides inside the cabinet and push inside until the drawer catches click.

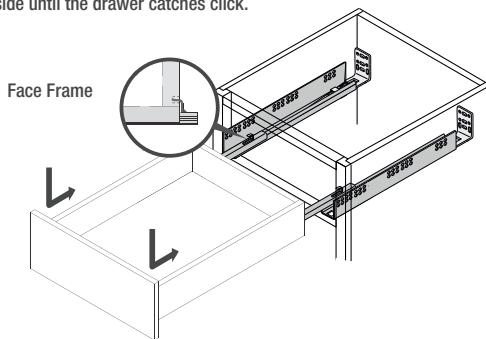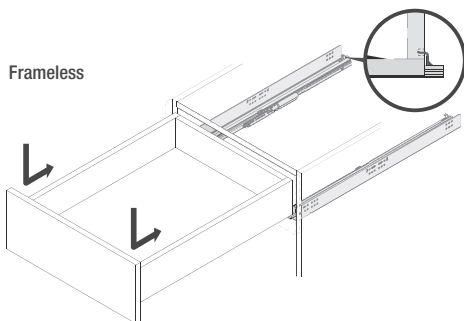

## 3 Removing the drawer

- Gently pull each drawer catch lever and slide the drawer out to remove.

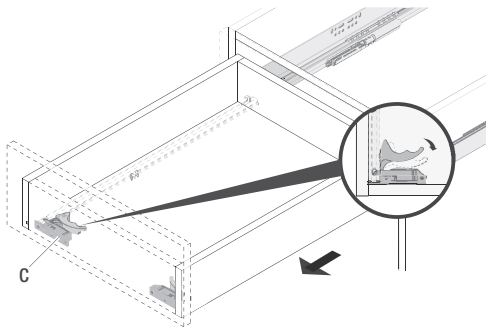



Questions, problems, missing parts? Before returning to the store,  
call Everbilt Customer Service  
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

**1-800-305-1726**

**HOMEDEPOT.COM**

Retain this manual for future use.