


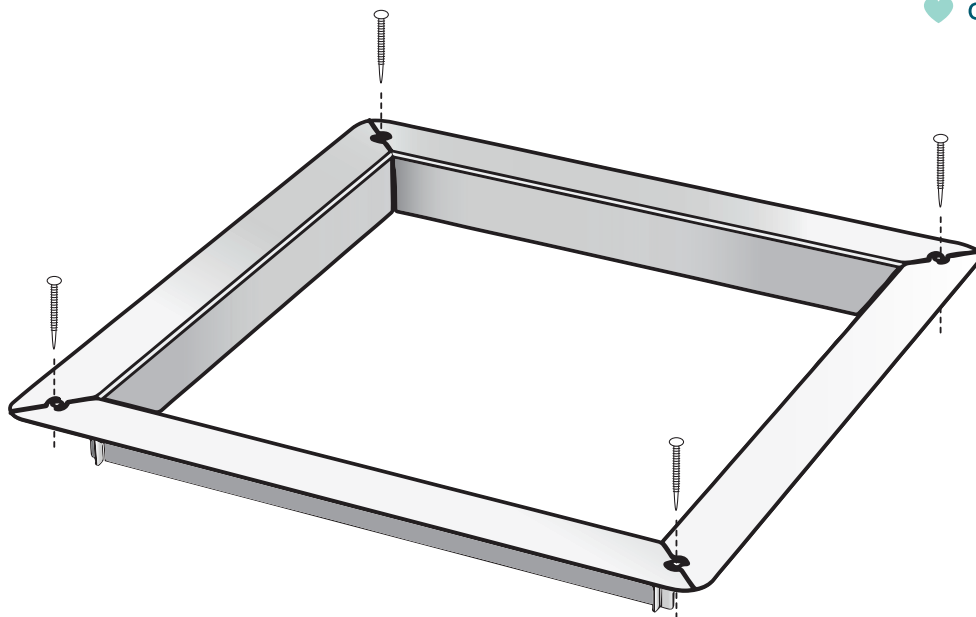

EN Embedding Flange


- Prepare an opening for the embedding flange. See the figure below.
- It is essential that you don't cut off the corners of the opening.
- Place the slats so that they fit into the opening.
- Pre-drill $\varnothing 1/8"$ in / 3.0 mm holes according to the screw holes of the slats.
- Fasten the corners using screws. Done!

Find the latest updates on our website www.huumsauna.com

FR Rebord de fixation

- Faites une ouverture pour le rebord de fixation (voir la figure ci-dessous).
- Taillez en biseau les coins de l'ouverture, ce qui permettra d'y fixer les vis.
- Insérez bien les lattes dans l'ouverture.
- Percez les trous de $\varnothing 1/8"$ in / 3.0 mm pour les vis au milieu des points de fixation des lattes.
- Fixez les lattes avec les vis fournies. Ça y est, c'est fait!

Les informations mises à jour sont publiées sur notre site www.huumsauna.com

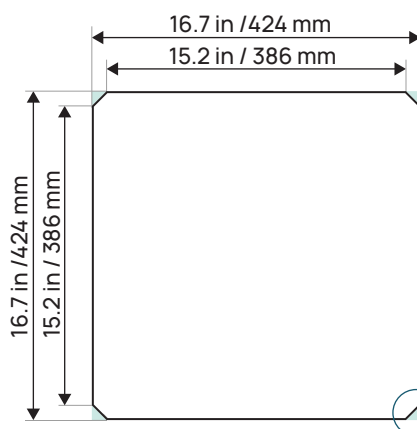

NB! Don't cut the corners!
ATTENTION! Ne coupez pas les coins!

0.75 in / 19 mm
0.75 in / 19 mm

Figure to cut the opening / Ouverture pour rebord de fixation



Made in Estonia, EU

info@huum.eu
huum.eu
#huumsauna

HUUM Sauna OÜ
Vahi tee 9, Tartumaa
60534, Estonia