


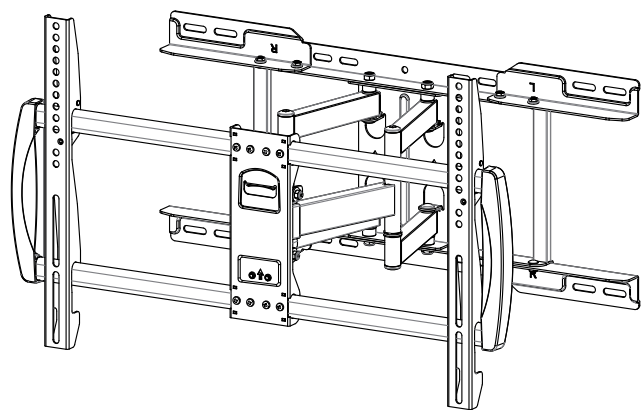

If you have any questions, please contact us.


Safety Caution

Please read this instruction carefully before installation.
If you do not understand these instructions or have doubts about the safety of the installation, assembly or use of this product, please contact us.


- This product is designed for use in wood stud and solid concrete wall.
- **- DO NOT install into drywall alone.**
- The wall must be capable of supporting five times the weight of the TV and mount combined.
- Do not apply this product to any purpose not indicated by MOUNTUP.
- Incorrect installation may result in product damage or body injury. MOUNTUP shall bear no responsibility for any damage or injury resulted from incorrect installation, incorrect assembly or misuse.

WARNING: This product contains small items that could be a choking hazard if swallowed.
Before starting assembly, verify all parts are included and undamaged. For parts shortage or damage, please contact us.


Must Check Before Getting Started

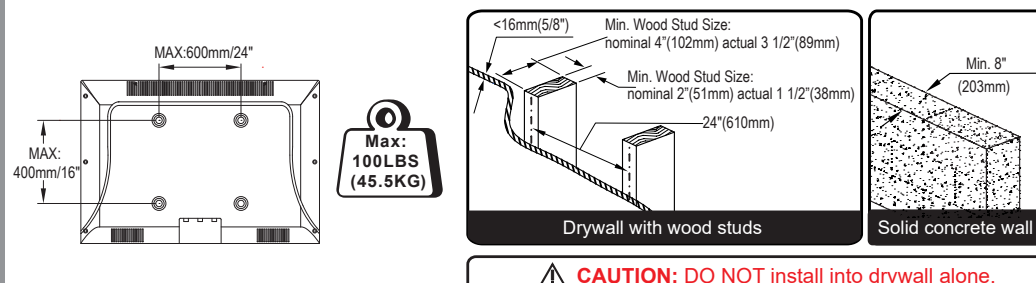


Installation Tools (Not Included)

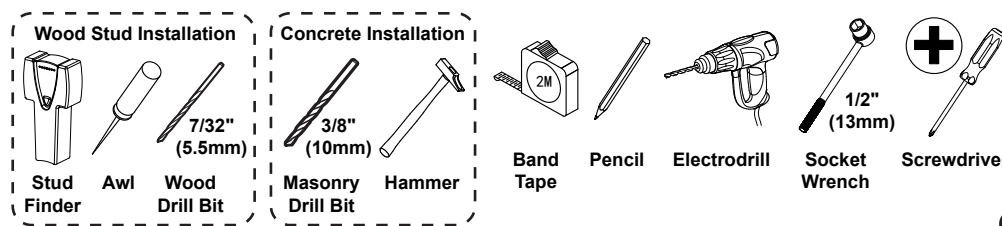

Hardware Included

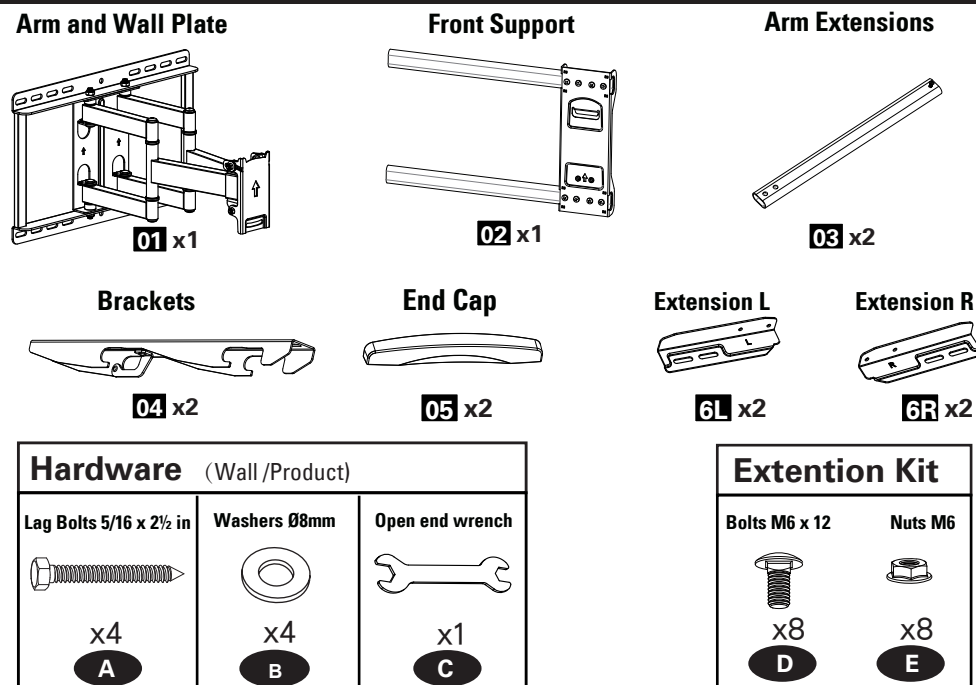


TV Screws / Washers

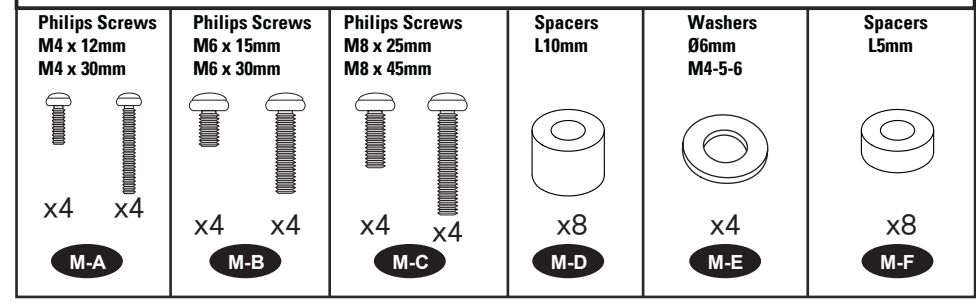


Step 1-1 Select TV screw diameter

Thread screws by hand into the threaded holes on the back of your TV to select which screw diameter fits your TV.

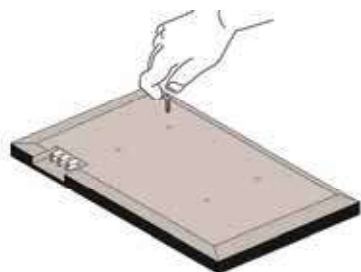

Step 1-2 Select TV screw length


! When attaching brackets to the flat screen, be careful not to over tighten screws and be sure that screws do not bottom out in the mounting holes.

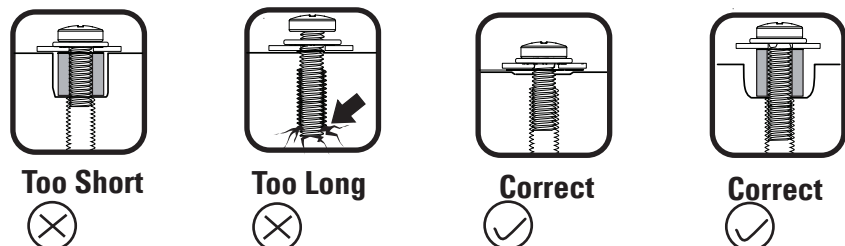


Step 1-3 Attach the bracket

CAUTION: Ensure bracket is securely fastened before moving on to the next step.


(a) For Flat Back

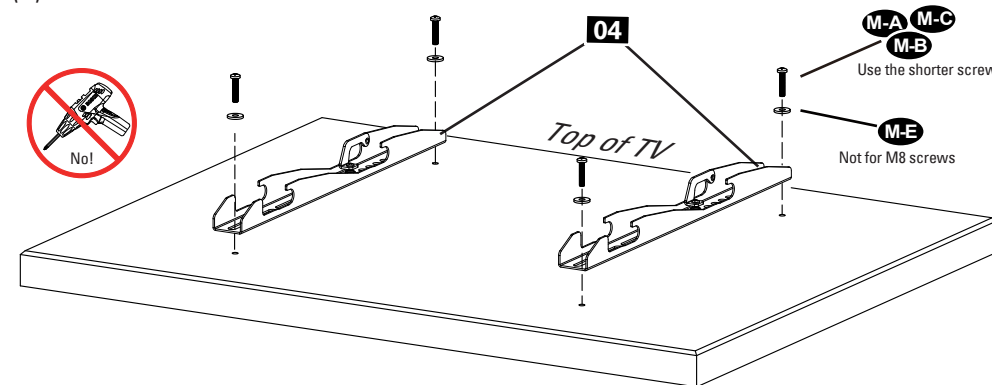



(b) For Round Back / Extra Space

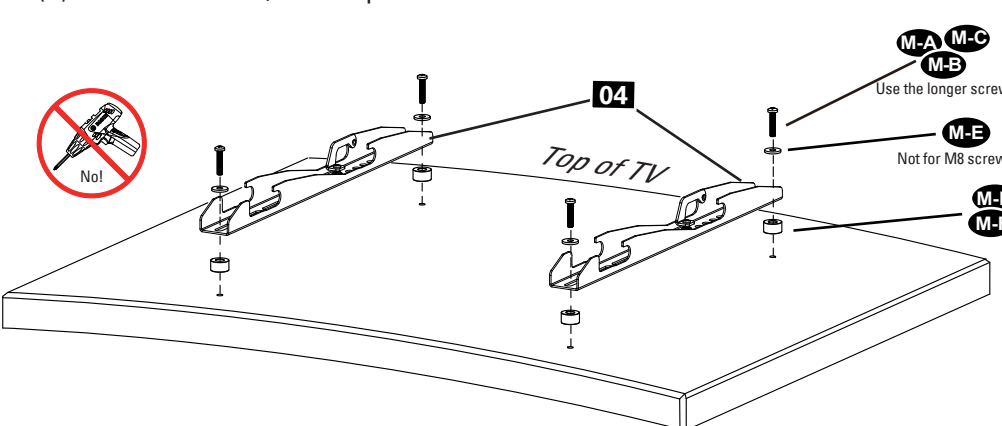


Step 2A Wall plate installation (wood stud)

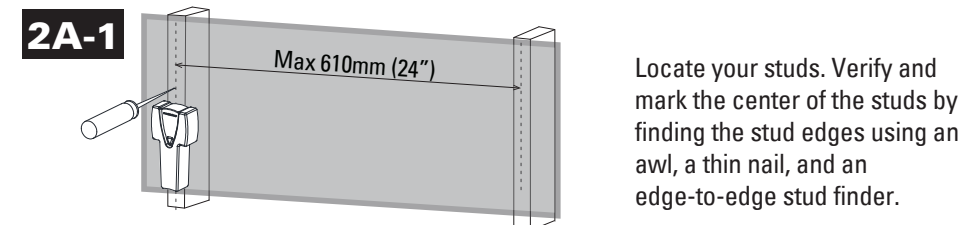

2A-2 Attach the Extensions to the Wall Plate

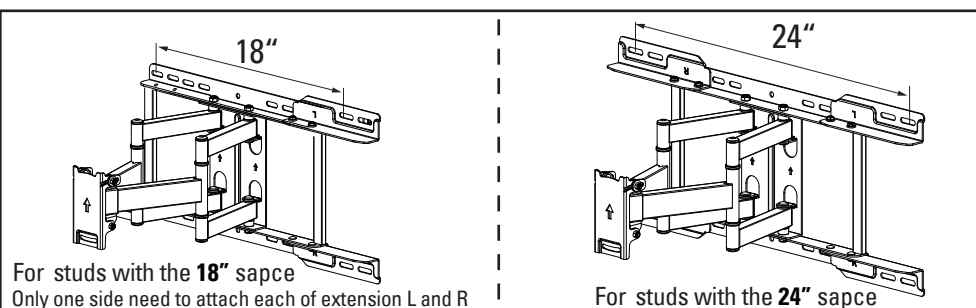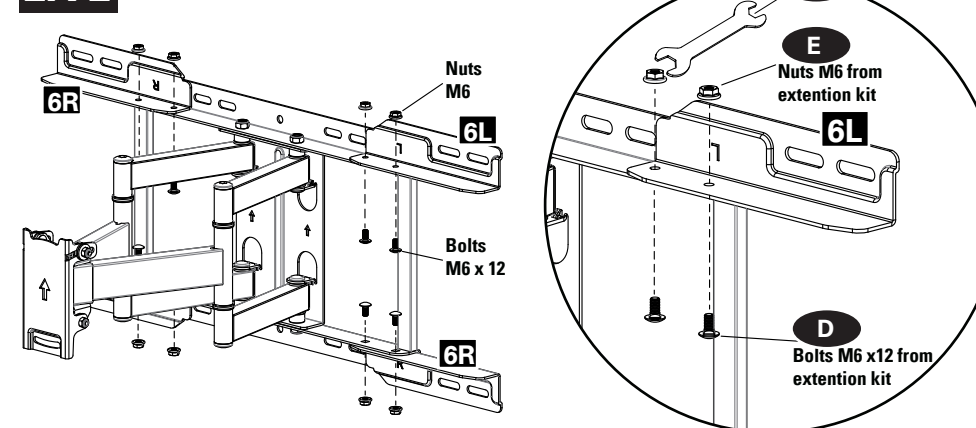


2A-3

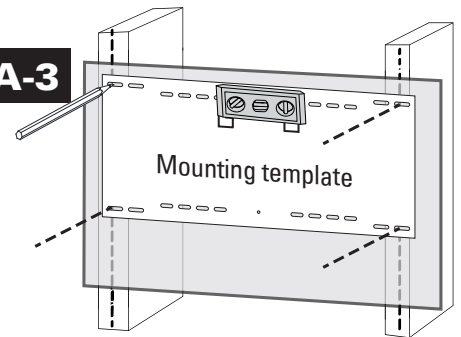

Position the mounting template at your desired height and line up the holes with your stud center line. Level the mounting template and mark the pilot hole locations.


2A-4

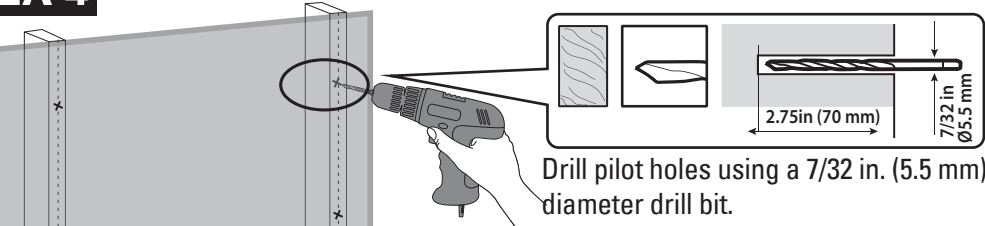

IMPORTANT: Pilot holes must be drilled to a depth of 2 3/4 in (70 mm). Be sure to drill into the center of the stud.

2A-5


Mount wall plate using 4 sets of 5/16" lag bolts **A** and washers **B** with a 1/2 in. socket wrench (not included).

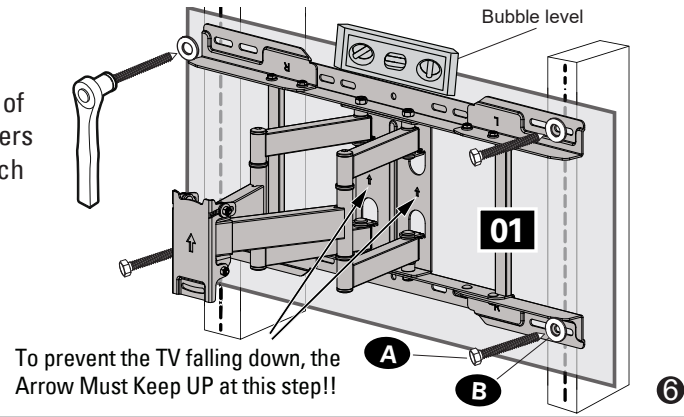

STEP 3 Install Front Support and Extensions and End Cap together


3-2

Install the end cover **05** to front support with the pre-assembled screws.

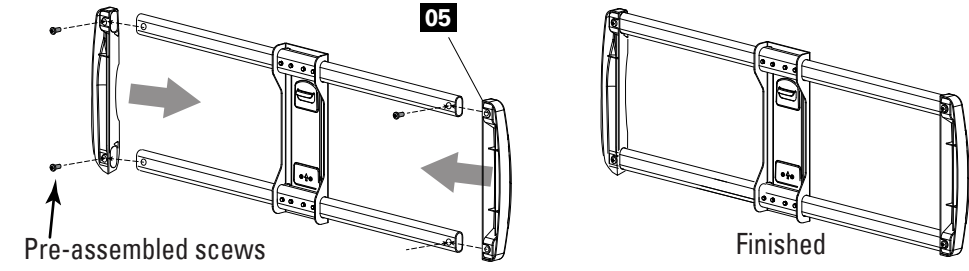

3-3


Hang **02** onto **01** and using a screwdriver to secure with preassembled screws and washer **P2**.

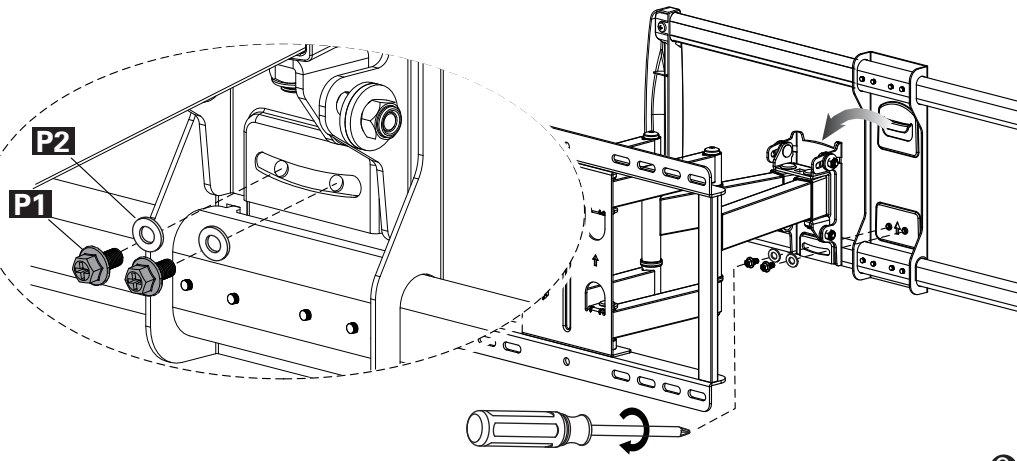


Step 2B Wall plate installation (concrete or brick)

2B-1


Position the mounting template at your desired height, level the mounting template and mark the pilot hole locations x4.

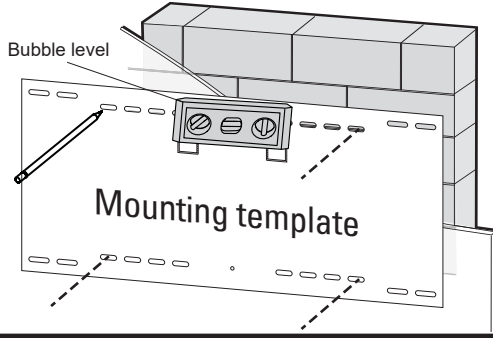

2B-2

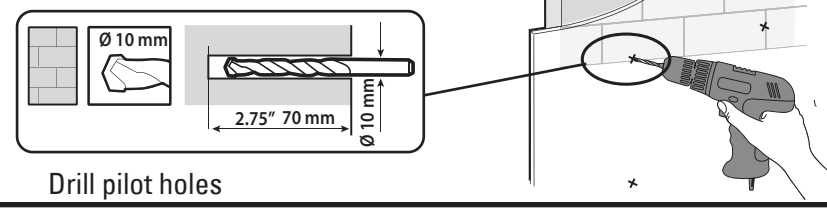


2B-3

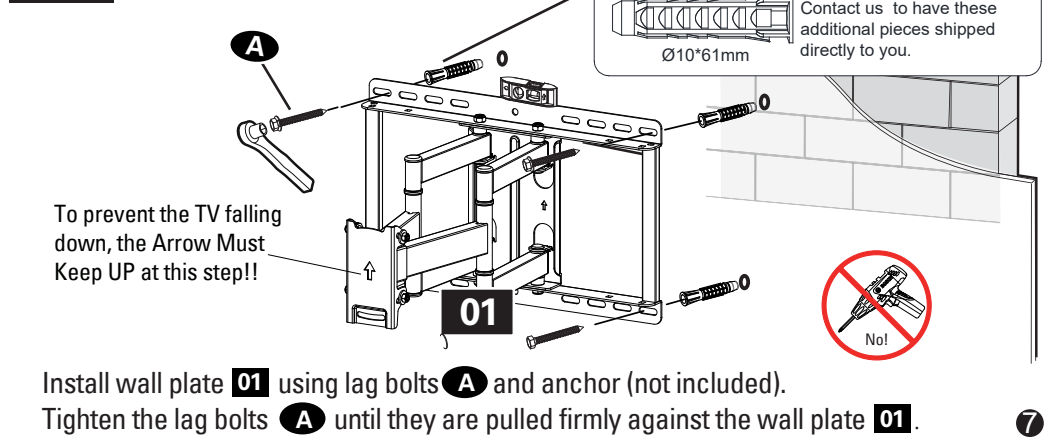


Step 4 Hang TV with brackets onto the arm extensions


4-1

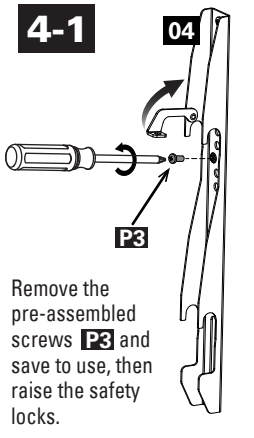

4-2

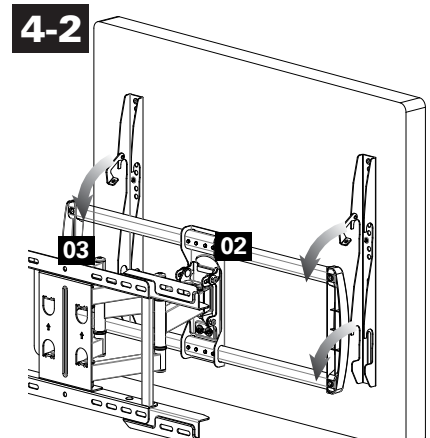


4-3

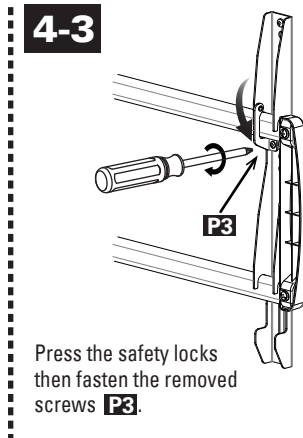

Adjustments


Tool-free Tilting Adjustment

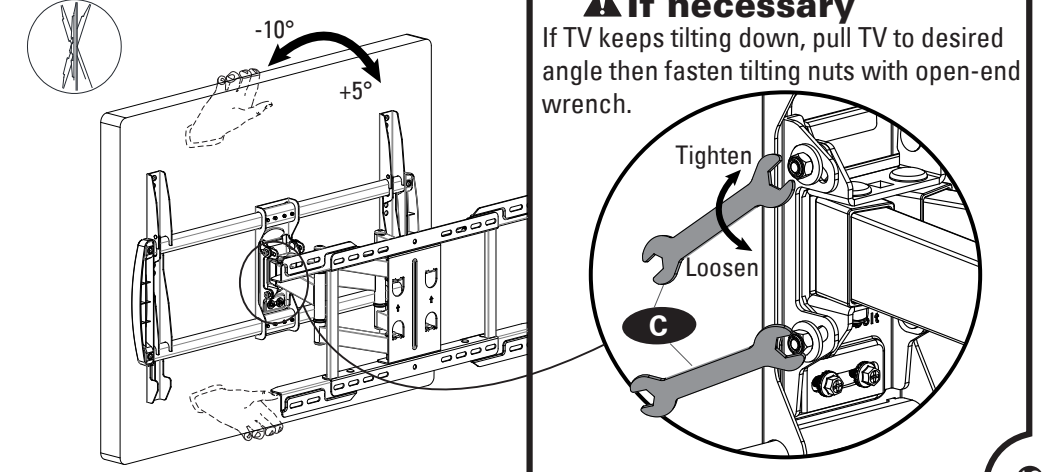

STEP 3 Install Front Support and Extensions and End Cap together


3-1

Install the extensions **03** to front support **02** with the pre-assembled screws.

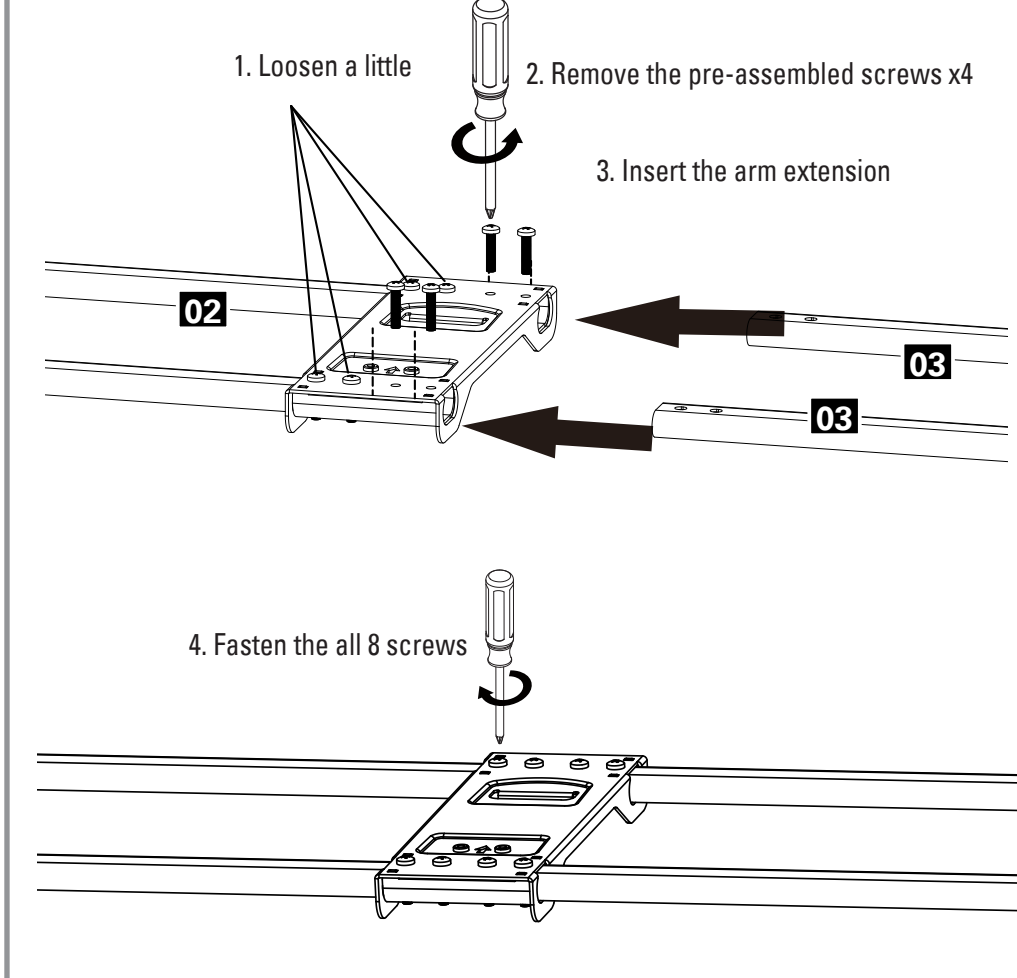

Adjustments

TV leveling adjustment (-3°/+3°)

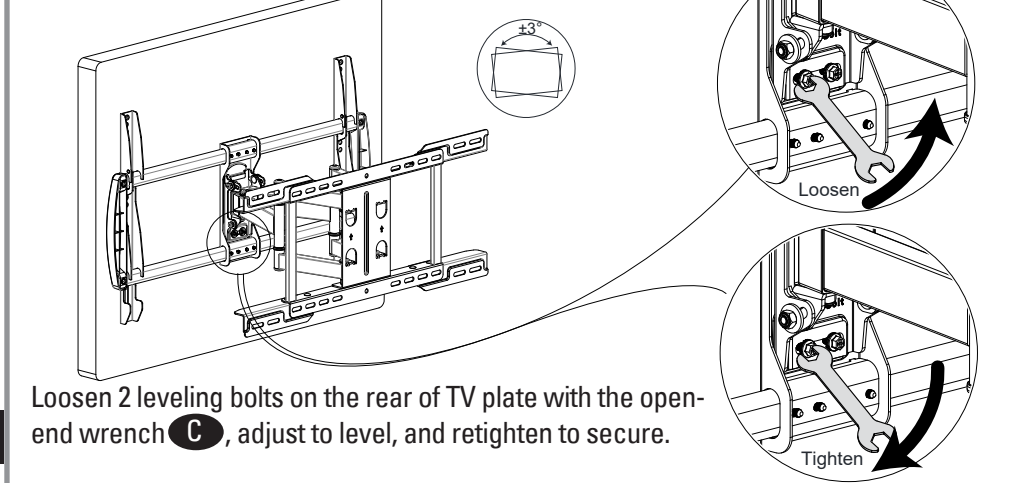

Product dimensions:

