

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (included): Allen key.

CARE AND MAINTENANCE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consist of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much the furniture wears.



ITEM ID: AMH8513A/B/C/D/E/F

PRODUCT DIMENSION: 47.5" W X 20" D X 36.5" H



Weight Capacity: 450LBS
WARNING: DO NOT STAND ON CHAIR

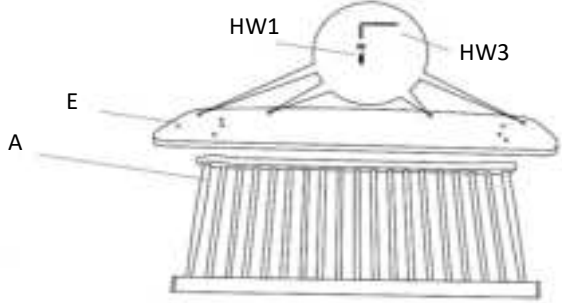
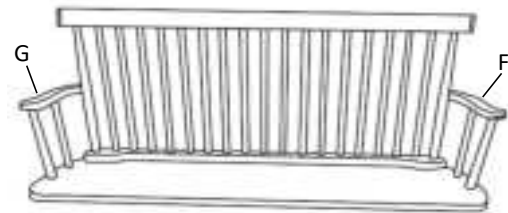
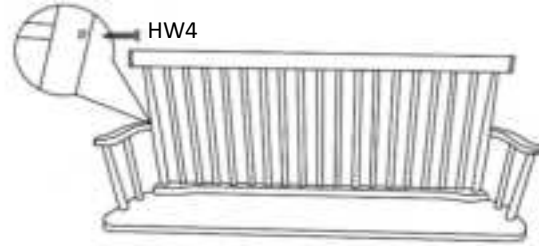

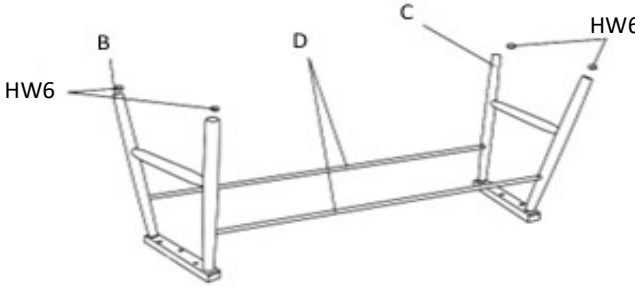
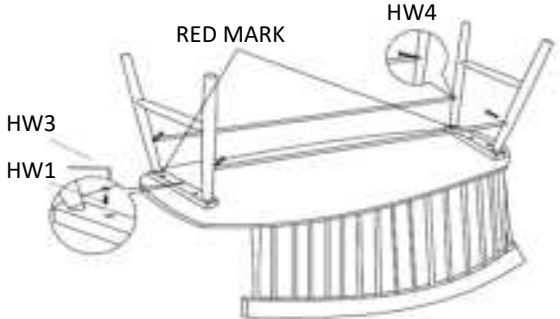
Part List and Hardware List



| PIECE | DESCRIPTION | PICTURE | QUANTITY |
|-------|-----------------|---------|----------|
| A | CHAIR BACK | | 1X |
| B | LEFT LEG FRAME | | 1X |
| C | RIGHT LEG FRAME | | 1X |
| D | CROSSBAR | | 2X |
| E | CHAIR SEAT | | 1X |
| F | LEFT ARM | | 1X |
| G | RIGHT ARM | | 1X |

| PIECE | DESCRIPTION | PICTURE | QUANTITY |
|-------|----------------------|---------|----------|
| HW1 | JCBC BOLT M6 X 35MM | | 10X |
| HW2 | FLAT WASHER 5/16 | | 2X |
| HW3 | ALLEN KEY M4 | | 1X |
| HW4 | WOOD SCREW M5 X 30MM | | 8X |
| HW5 | WOOD BUTTON | | 2X |
| HW6 | FOOT PAD | | 4X |
| HW7 | SPRING WASHER M6 | | 2X |

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (included): Allen key.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

| | | |
|--|---|--|
|  |  |  |
| <p>STEP 1: Attach Chair Back</p> <ul style="list-style-type: none"> • Attach Chair Back (A) to Chair Seat (E) using JCBC Bolt (HW1) and Allen Key (HW3). • Leave screws slightly loose for now to allow alignment later. | <p>STEP 2: Attach Arms</p> <ul style="list-style-type: none"> • Attach Left Arm (F) and Right Arm (G) to bolt Chair Seat (E) and Chair Back (A). | <p>STEP 3: Secure Arms</p> <ul style="list-style-type: none"> • Use Wood Screws (HW4) to secure the arms from the side posts. |
|  |  |  |
| <p>STEP 4: Reinforce Seat</p> <ul style="list-style-type: none"> • From underneath the seat, insert: <ul style="list-style-type: none"> - Wood Screws (HW4). - Spring Washers (HW7). - Flat Washers (HW2). • Tighten all screws from Steps 1-3. <p>Do not over-tighten . Avoid using power tools.</p> | <p>STEP 5: Install Crossbars</p> <ul style="list-style-type: none"> • Insert Crossbars (D) into holes on left Leg Frame (B) and Right Leg Frame (C). • Attach Foot Pads (HW6) to bottom of each leg. | <p>STEP 6: Attach Leg Frames</p> <ul style="list-style-type: none"> • Make sure the RED MARKS on front legs face forward. • Position leg frame assembly under Chair Seat (E). • Secure with JCBC Bolt (HW1) and Allen Key (HW3). • Use Wood Screws (HW4) to attach crossbars (D) to the leg frames. |

| | | |
|--|--|--|
|  <p>HW5</p> |  | |
| <p>STEP 7: Final Touch</p> <ul style="list-style-type: none"> • Tighten all screws. • Insert Wood Buttons (HW5) into holes on side posts to cover screw heads. <p>Assembly Complete - Enjoy your new chair!</p> | <p>Complete.</p> | |