




# Mcombo

---

## LIVING ROOM CHAIR

6151-HQ304

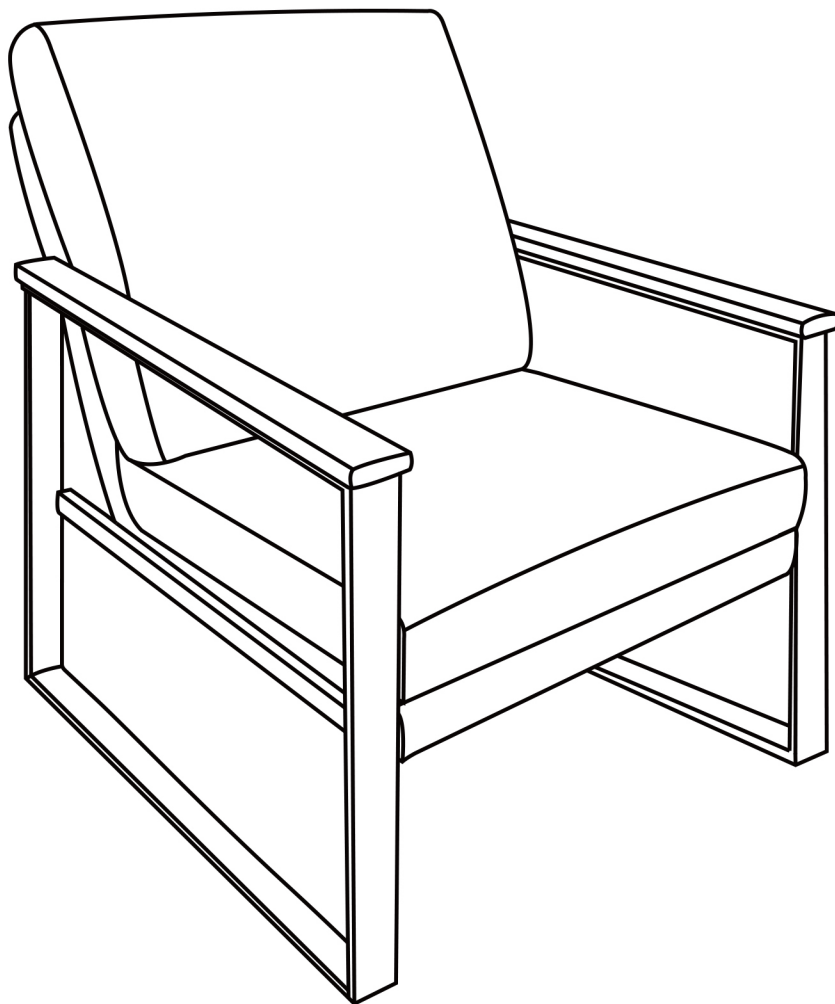

**Toll Free(US) :** 3235971109

**Website :** [www.mcombo.com](http://www.mcombo.com) Amazon sold by: MCombo

**Warranty Claim :** [sales@mcombo.com](mailto:sales@mcombo.com)

**Sales & Technical Questions :** [sales@mcombo.com](mailto:sales@mcombo.com) [sales@exacme.com](mailto:sales@exacme.com)

# CONGRATULATIONS!

Mcombo Accent Chair - a name synonymous with classic design and the carrier of value and quality. Our products are directly from factory and eliminated the cost of middlemen. The Accent Chair is a high-quality shading solution to enhance comfortable feelings as you try to enjoy the nice day.

## WARRANTY


- All warranties are to the original purchaser from **MCOMBO ONLY**®
- **MCOMBO**® will replace the defective parts or send replacement item provided that the warranty parts have not been subjected to misuse, abuse or improper service by the consumer, for example, damaged wire arising in consequence of negligence or improper operation.
- **MCOMBO**® All of chairs come with a 30-day return/replace policy. During this time, we will cover the shipping cost of return and replacement for defective and damaged item, through provide pre-paid return label or pick up service for customer's convenience.

## PARTS LIST




The vacuum package allows 48 hours to restore original thickness after opening package.  
If you want to accelerate this process, please pat it.

A

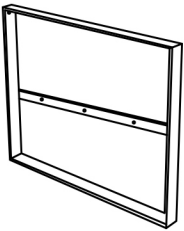


A\*1 Right Arm Frame

B

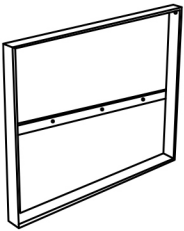


B\*1 Left Arm Frame

C

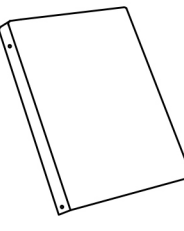


C\*1 Back Pad

D

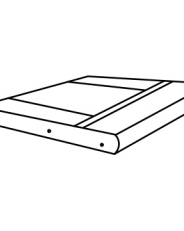


D\*1 Seat Pad

E




E\*1 Right Armrest

F




F\*1 Left Armrest

G1

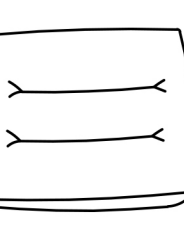


G1\*1 Back Cushion Insert

G2

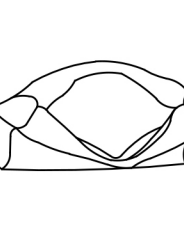


G2\*1 Back Cushion Cover

H1

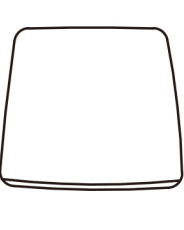

H1\*1 Seat Cushion Insert


H2

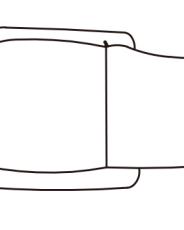

H2\*1 Seat Cushion Cover


## HARDWARE LIST

J

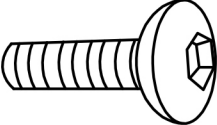


J\*6 Screw M6\*20mm

K

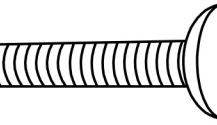


K\*4 Screw M6\*45mm

M

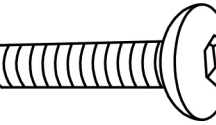


M\*4 Screw M6\*30mm

N



N\*1 Allen Wrench

Please remove all protective foam.

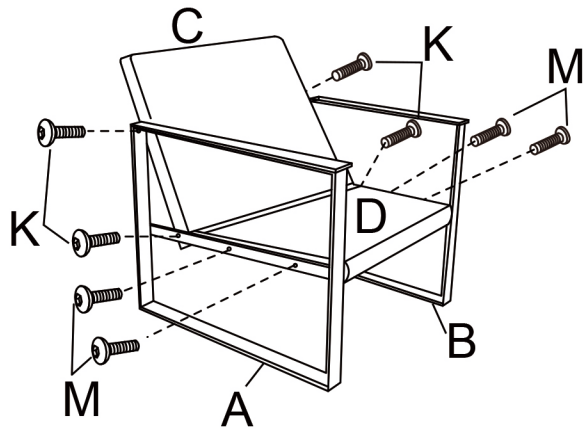




### Step 1

Use Screws **#M** to fix Arm Frame **#A** & **#B** to Seat Pad **#D** with Allen Wrench **#N**.

Use Screws **#K** to assemble Arm Frame **#A** & **#B**, Seat Pad **#D** and Back Pad **#C** together.



### Step 2

Use Screws **#J** to fix Left and Right Armrest **#F** & **#E** on the Left and Right Arm Frame **#B** & **#A** and with Allen Wrench **#N**.

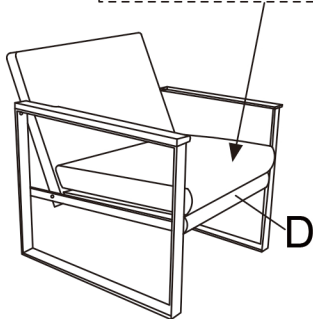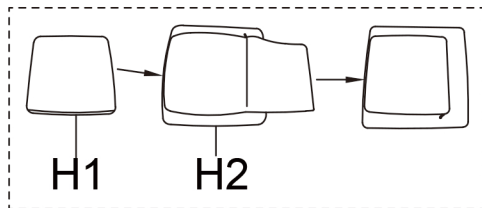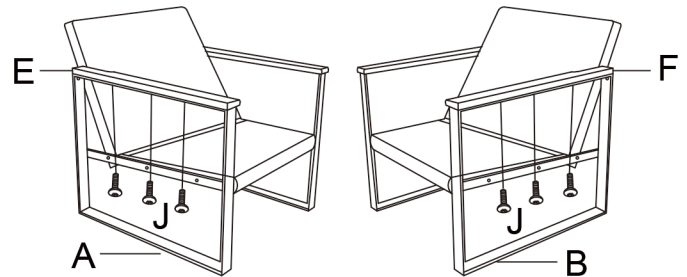

### Step 3

Unzip Seat Cushion Cover **#H2** and put Seat Cushion Insert **#H1** in Seat Cushion Cover **#H2**.

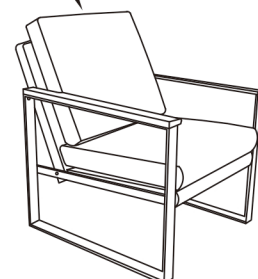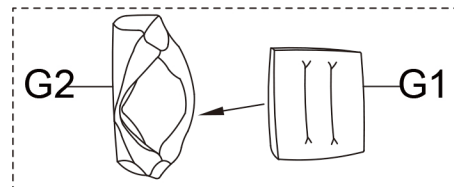


### Step 4

Unzip Back Cushion Cover **#G2** and put Back Cushion Insert **#G1** in Back Cushion Cover **#G2**.

## **Congratulations!**

Now you can relax your body on this chair  
and even decorate your living room.

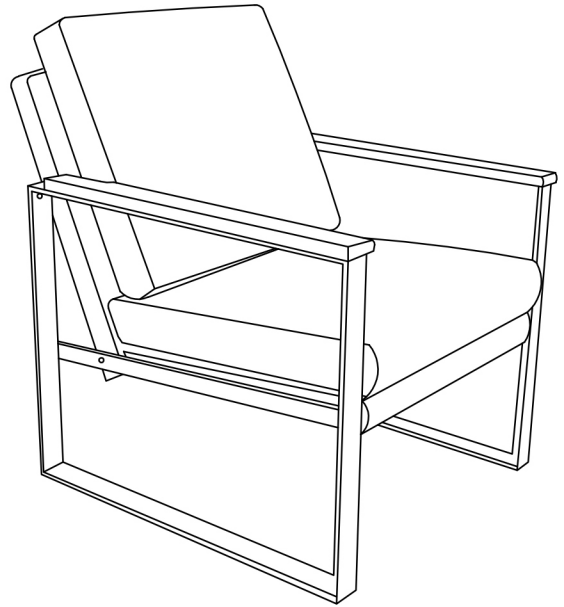

# **MCOMBO**

## **LIVING ROOM CHAIR**

### **KINDLY REMINDER**

If you have any questions about the product or use,  
please feel free to contact [sales@mcombo.com](mailto:sales@mcombo.com)