


Tailgate Table Storage Lock Box

MMR.20086-1

(1) Contents:

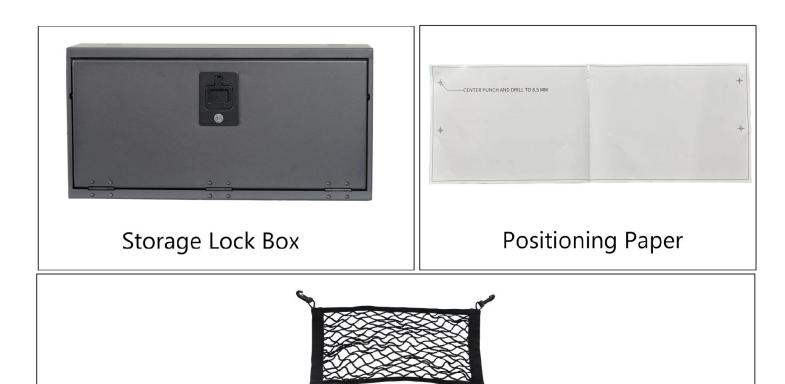

Net

Qty	Part Name	Size(mm)	Picture
4	Button Head Socket Cap Bolts Screws	M6*20	
4	Flat Washer	M6*20*1.5	0
4	Rivet Nut	M6	
1	Key		

(2) Tools required:

- a. 4mm Hex Bit Socket;
- b. 9.2-9.5mm Drill Bit & 6mm Rivet Nut Tool;
- c. Electrical Drill;
- d. Masking Tape;



(3) Installation time:

About 1 hour, 2-3 people may be needed. Installation time may differ according to your mechanical skill level.

(PLEASE VERIFY ALL PARTS ARE PRESENT AND READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION!)

To view the electronic version (MMR..20086-1), please scan the QR code.



(4) Installation instruction:

Step 1: Open the tailgate in preparation for installing our product.




Step 2: Unpack the product, take out the positioning paper from the package, place the positioning paper in the middle, facing downward (as long as it does not affect the closing of the tailgate after installation). Fix it with masking tape.





Step 3: First use an 9.2-9.5mm drill bit to drill the four holes marked on the positioning paper, and use a 6mm rivet nut tool to dive into the rivet nut.



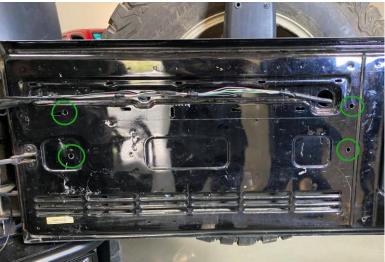





Step 4: Lift the storage box and install it into the tailgate using M6*20 screws (The two lower screw holes do not need to be used).










Step 5: If you need to use a net, you can insert the hooks into the internal circular holes.





Step 6:

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!

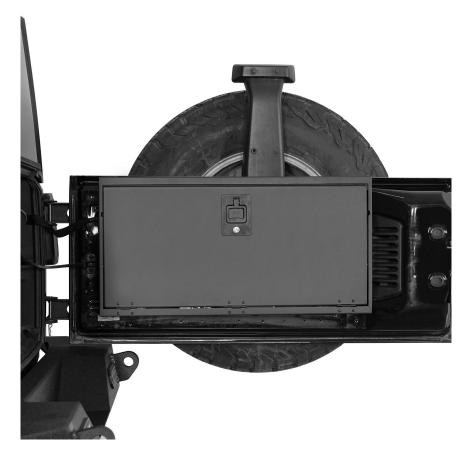

Attention:

1.The product parts in this instruction may differ slightly from the actual product contents but generally does not affect the installation of the product.

2.Please feel free to contact your distributor if you have any kind of question about your purchase.

Google Hooke Road to find your parts.

Feel Free To Share Your Vehicle @HookeRoad4x4
With The Hashtag #hookeroad If You'd Like







