











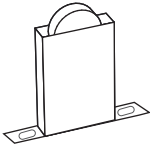






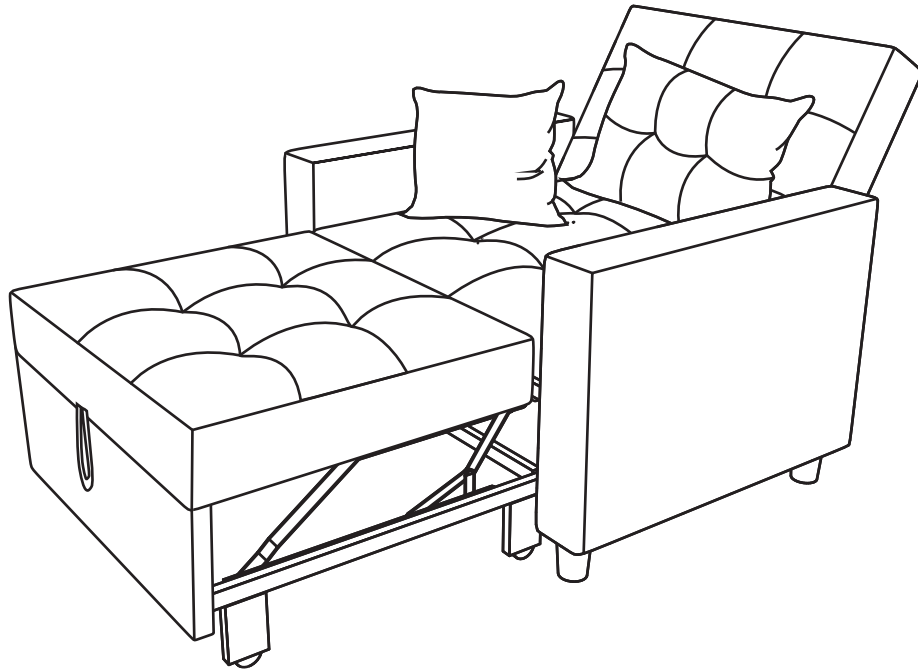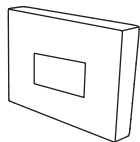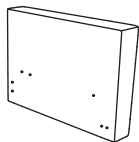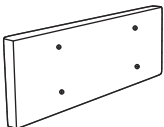







3-in-1 Convertible Chair Bed


1. Please check the manual carefully and make sure you have received all the parts.
2. If there is any missing, please let us know the letter of the parts you need.
3. If there is any damage, please send clear photos to us, we will check and offer you best solution soon.
4. Please align the bolts with all the holes first, and then tighten all the bolts.



Parts & Hardware List


 A x1pc	 B x1pc	 C x1pc	 D x1pc	 E x1pc			
 F x1pc	 G x1pc	 H-R x1pc	 H-L x1pc	 M x1pc	 N x1pc		
 J x4pcs	 K x4pcs	 L x4pcs	 T1 x2pcs		 T2 x2pcs		
 S x28pcs	 S1 x4pcs	 R x4pcs	 T x6pcs	 Q x34pcs	 P x10pcs	 Y1 x1pc	 Y2 x1pc

step 1




Install the pulleys T1&T2 to the B&C part respectively, connect them by using S bolt with Y1 tool, please pay attention to the direction (as shown in the figure)

PS: B part has a pocket on outer surface

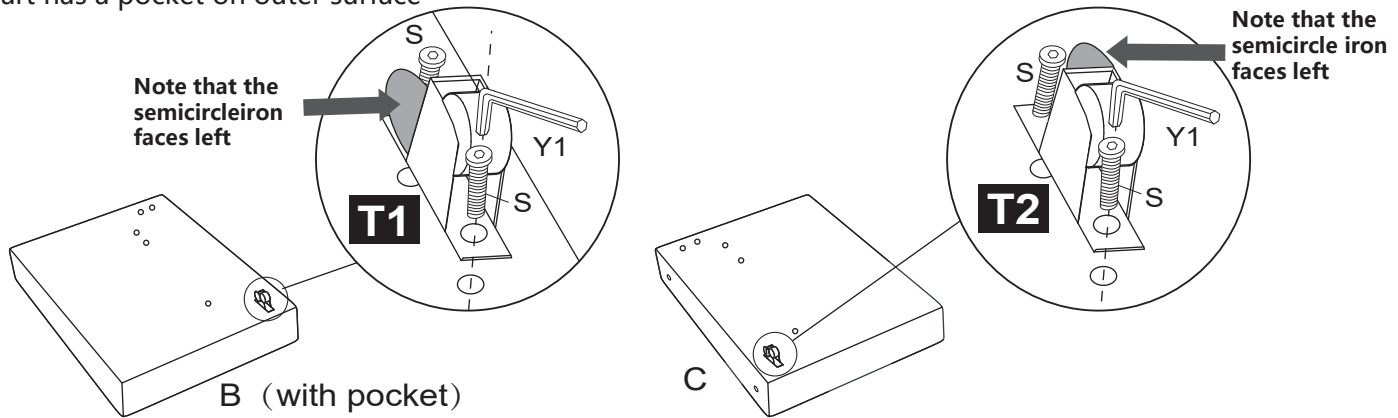


step 2




Place K spacer on L part (leg part), find the 4 holes on B&C sides(as shown in figure), then install 4 L parts on B &C respectively


PS: B part 2 holes, C part 2 holes

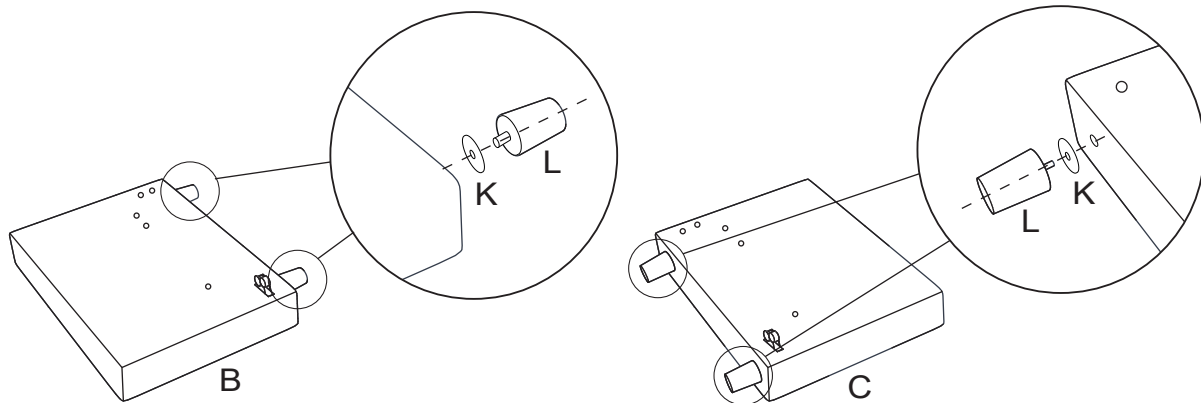




step 3 For all steps, align the holes first, then tighten the bolts.

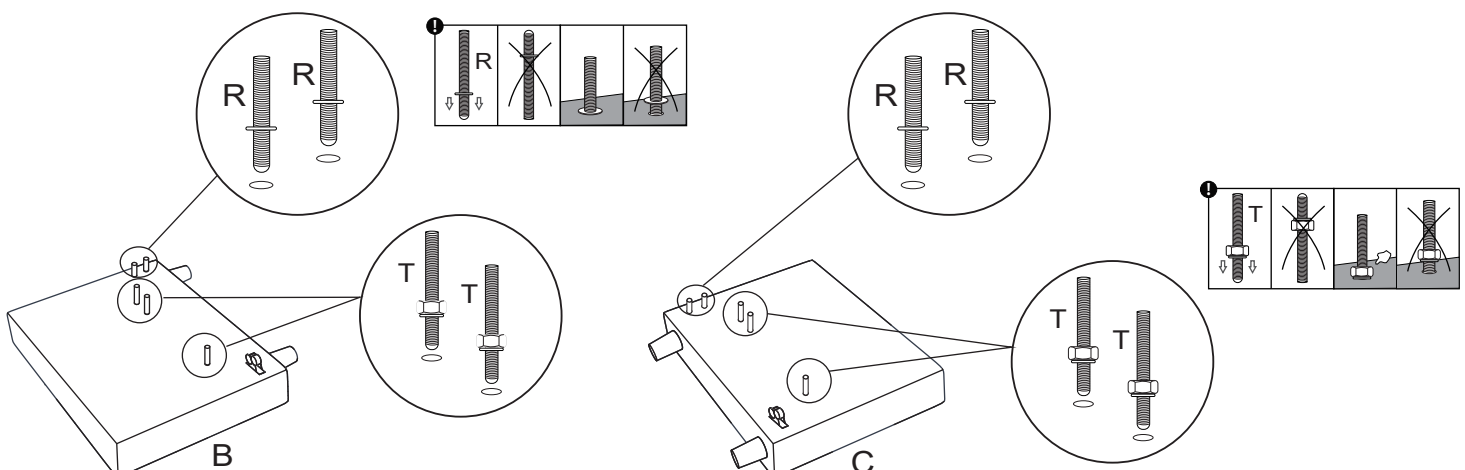


Install the corresponding screws on B and C first.




step 4 For all steps, align the holes first, then tighten the bolts.

		
Px10	Qx10	Y2

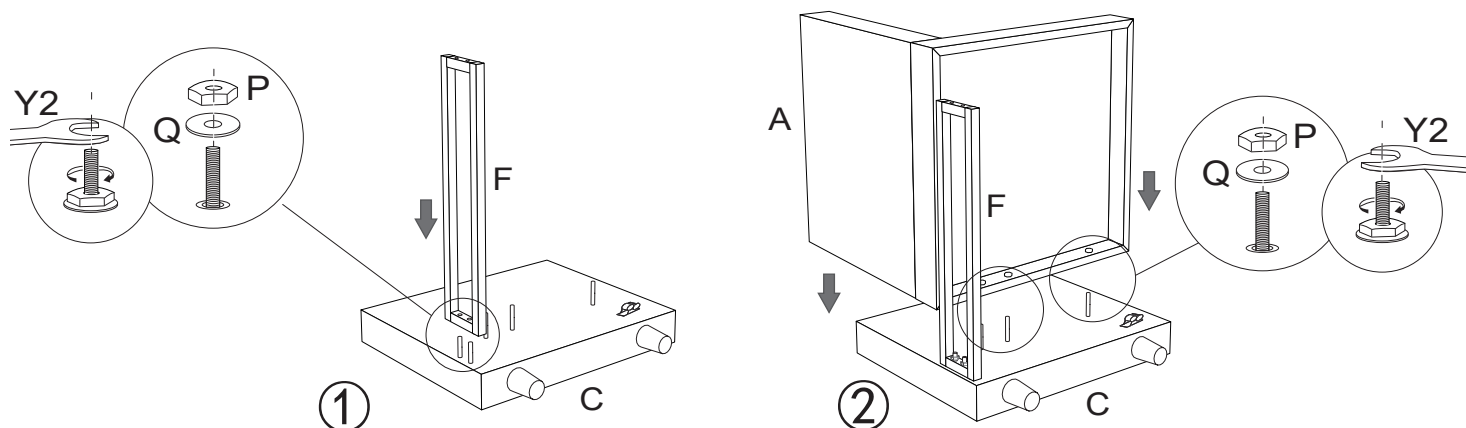


Install the F to the C, and tighten them by using Q and P first. Then put the A on this part as shown in figure.

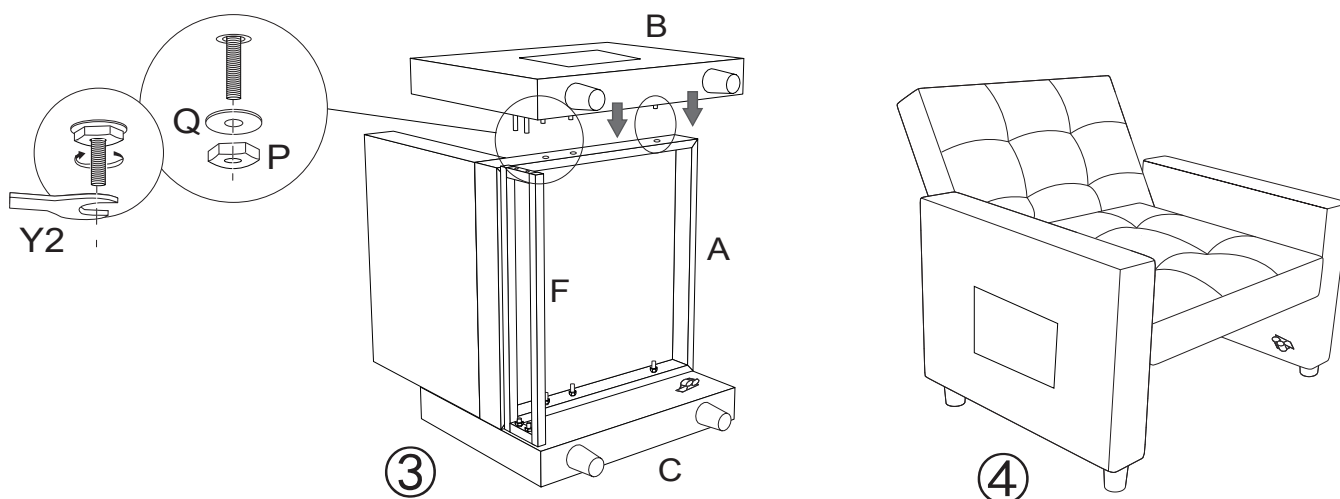


Install the B to the A and tighten all the bolts at last, and flip it back to positive.



step 5 For all steps, align the holes first, then tighten the bolts.


		
S1x4	Qx4	Y1

Align E with G part by 4 holes, connect them by using S1 bolt and Q spacers with Y1 tool. (pay attention to the direction as show in figure)

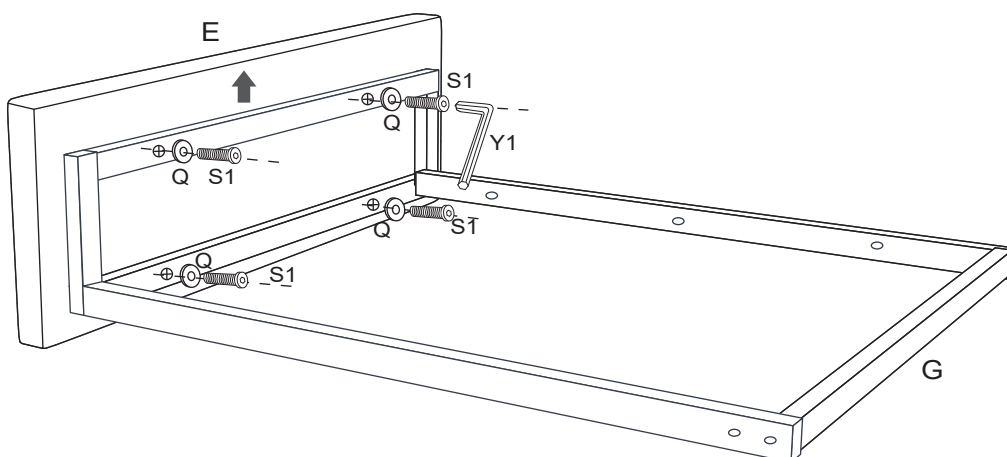




step 6-①

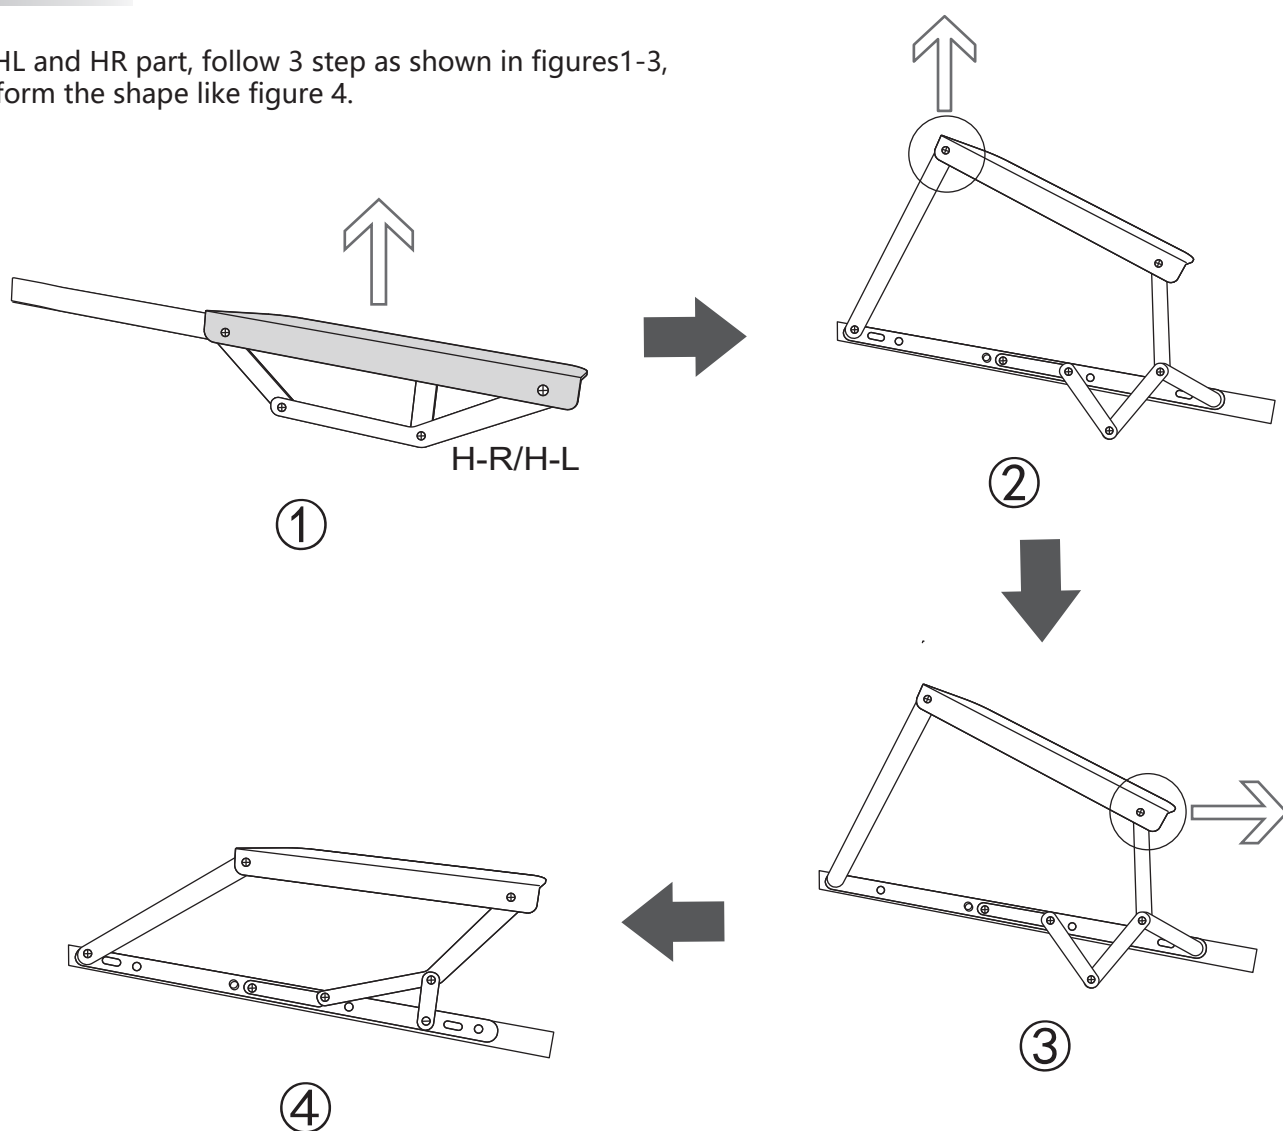
Find HL and HR part, follow 3 step as shown in figures 1-3, then form the shape like figure 4.



step 6-② For all steps, align the holes first, then tighten the bolts.


Assembling the 3 holes of HR and HL part with the G part, then connect them by using S bolt and Q spacers with Y1 tool. (note the left and right directions)

		
Sx6	Qx6	Y1

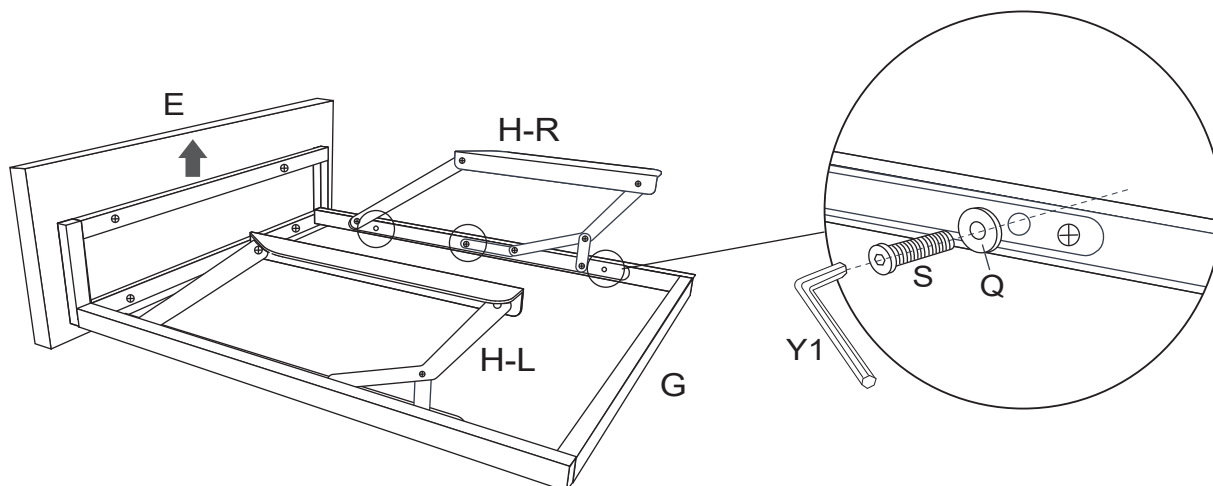

step 7

Install the two pulleys T1&T2 to two sides of G, align the holes, use S bolt and Y1 tool to combine them.

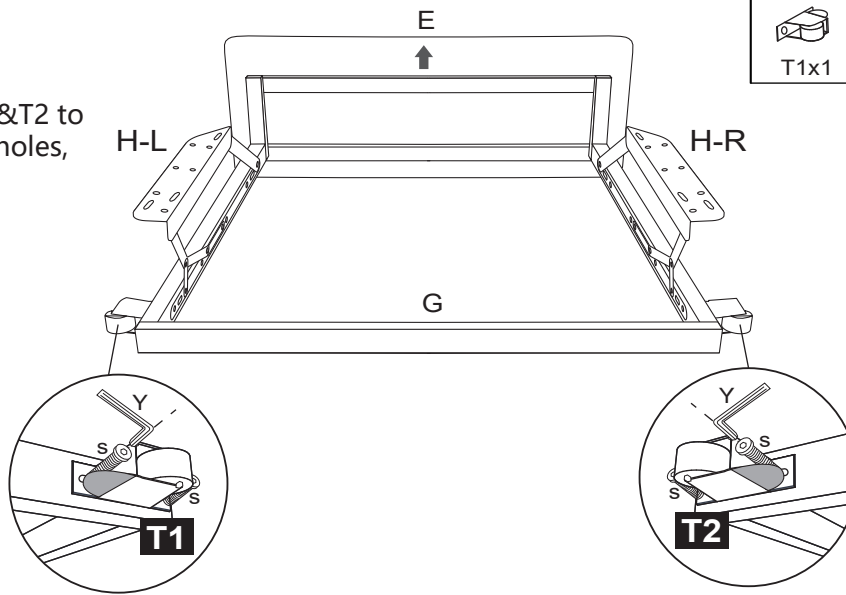


T1x1	T2x1	Sx4	Y1

Note that the semicircle iron faces to floor

Note that the semicircle iron faces to floor


step 8 For all steps, align the holes first, then tighten the bolts.

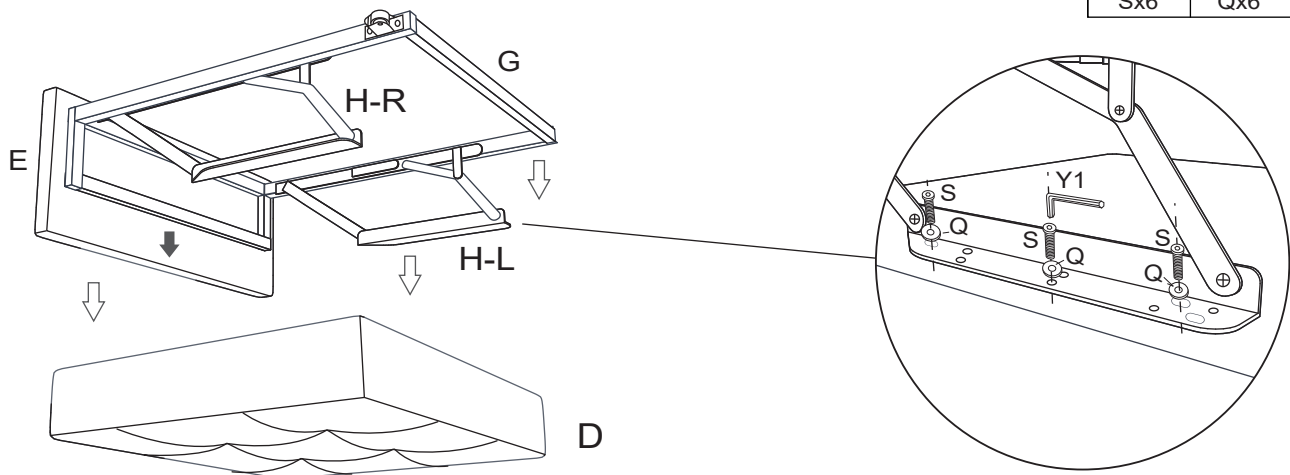

Sx6	Qx6	Y1

Turn the entire pedal part over(as shown in figure), Install HR, HL on D cushion, connect them by using S bolt and Q spacers with Y1 tool.

step 9

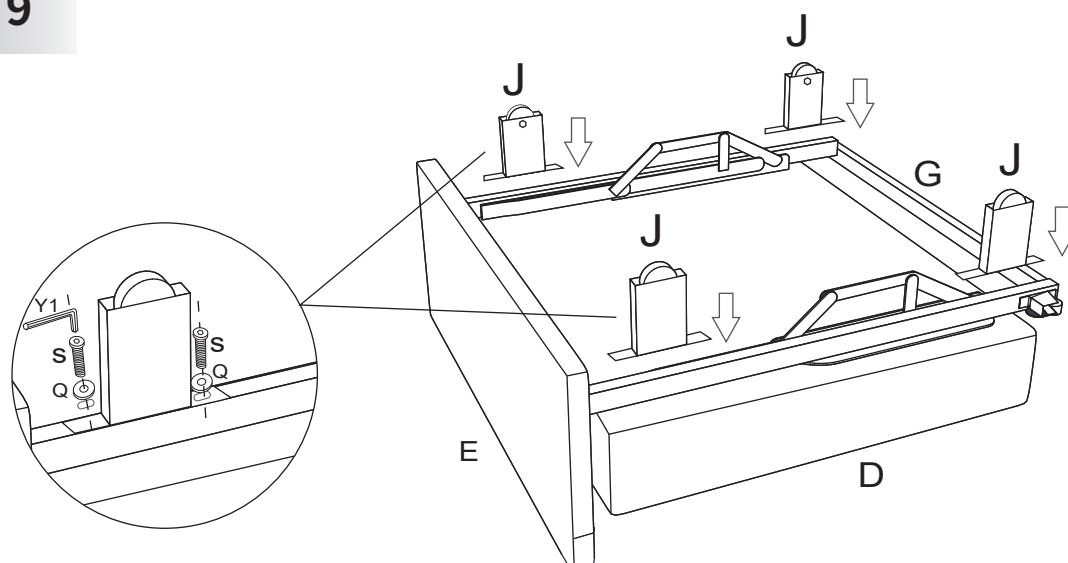


Sx8	Qx8	Y1


Find the corresponding hole in part G, install 4 J parts (Screws facing inward), use S bolts and Q spacers with Y1 tool

step 10

After installing the bottom pulleys, buckle the bottom pad, and pull the rope to make two pads together (as shown in figure). If need to retract the bottom PAD, pull up the rope and then slide it down to retract.

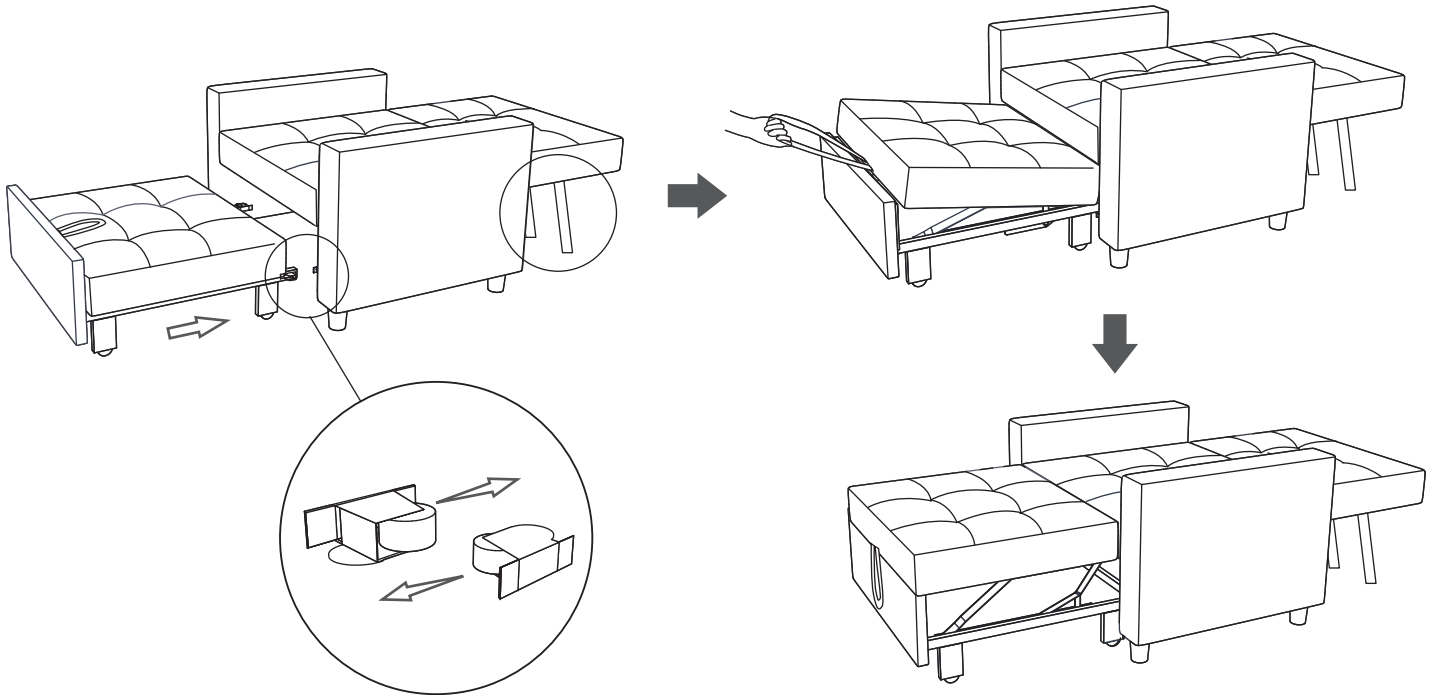


Converting to bed, please take out the two legs from the back first, then lift the back all the way upwards until the last click is heard (which unlocks the mechanism) and carefully return to a flat position.

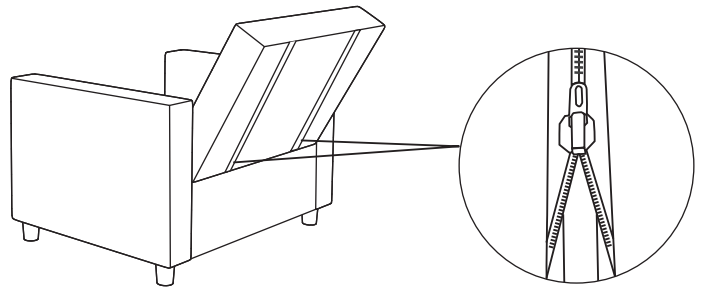


LEGS HIDE INSIDE THE ZIPPER


Functions & Modes demonstration

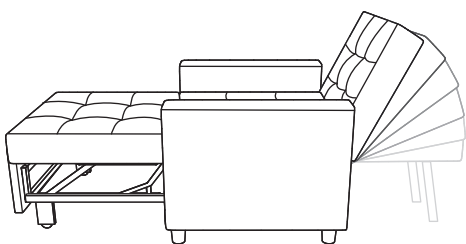

5-level adjustable backrest

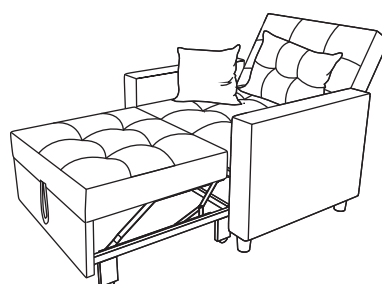

Recliner Mode

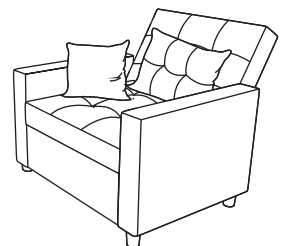

Sofa Mode