


LUCERNE MIRROR ASSEMBLY INSTRUCTIONS




BOX #1

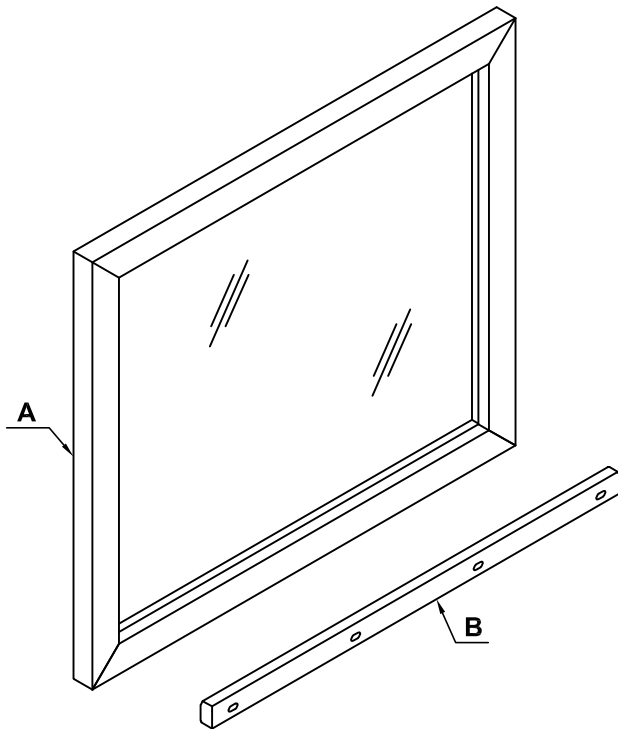


- A. DRESSER MIRROR 1PC
B. MIRROR SUPPORT 2PCS

BOX #2

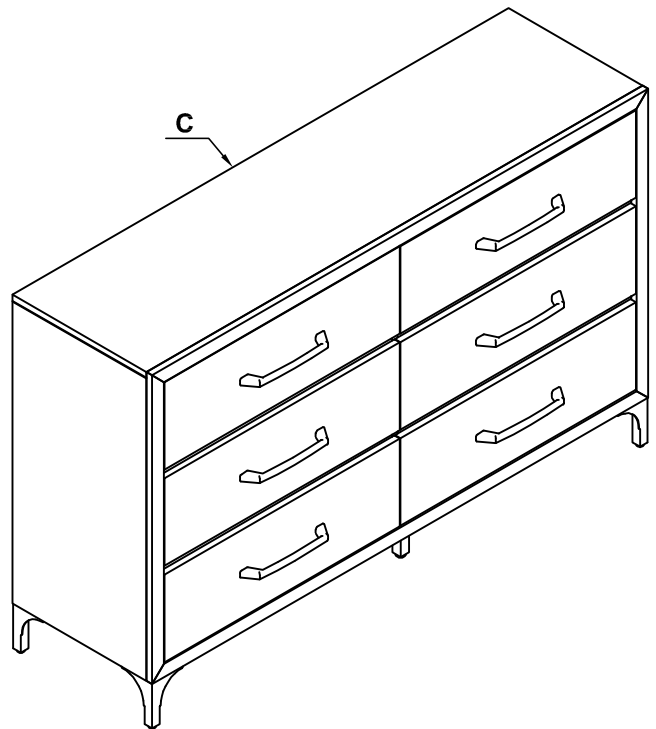

- C. 6 DRAWER DRESSER 1PC (SOLD SEPARATELY)



OPTION 1

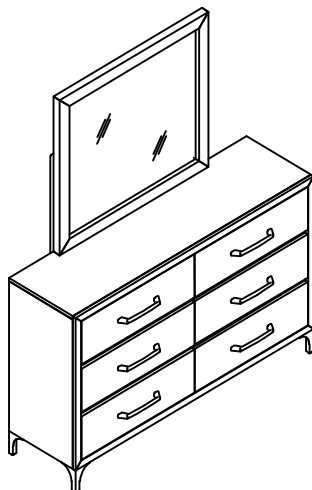

HARDWARE PACKED IN BOX #1

1	ALLEN BOLT (6x35mm)		8 PCS
2	SPRING WASHER (M8)		8 PCS
3	FLAT WASHER (M8)		8 PCS
4	ALLENKEY (M4)		1 PC
5	WOOD SCREW (4x40mm)		2 PCS

OPTION 2

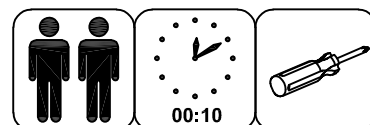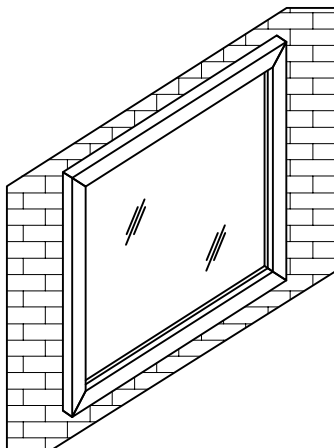


Not provided

LUCERNE MIRROR ASSEMBLY INSTRUCTIONS




OPTION 1: ATTACHING MIRROR TO DRESSER

STEP 1:

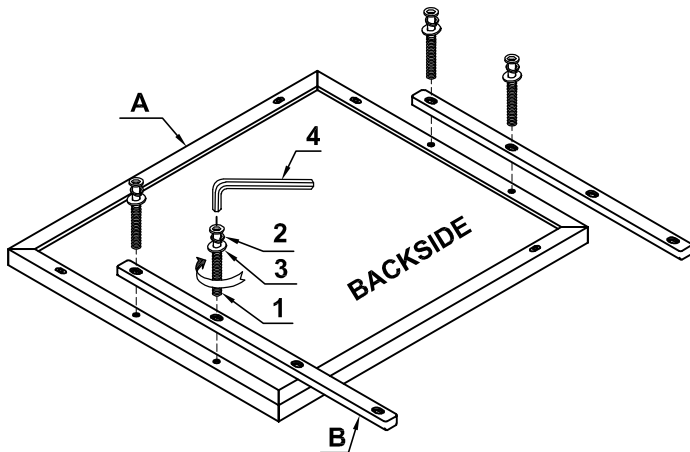

STEP 2:

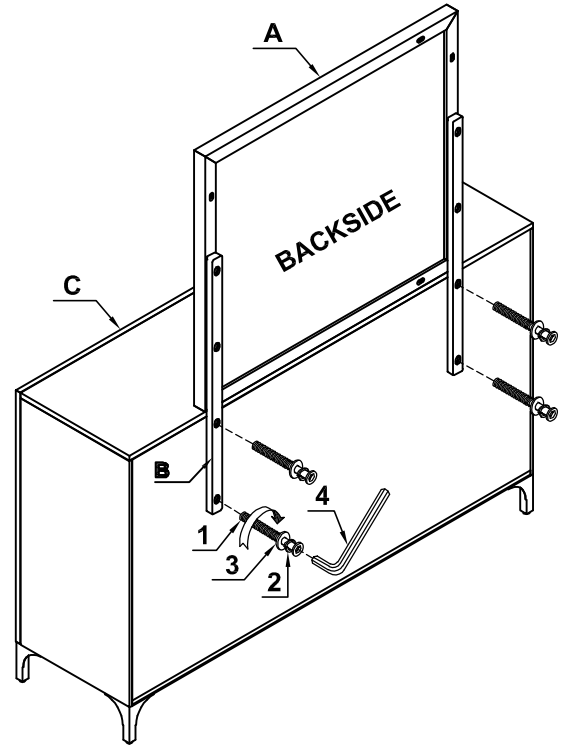

OPTION 2: ATTACHING MIRROR TO WALL

Pre-Installed mirror brackets are teardrop shaped. Test connection between mirror bracket and the mounting hardware before installing for a secure fit. Install mounting hardware on the wall. Make sure the distance between mounting hardware center on the wall matches the distance between brackets center of the mirror.

CAUTION ! We recommend installing mounting hardware in wall studs or a board that is secured to the studs. Consult a professional installer before installing in drywall.

Hang the mirror from the mounting hardware. Ensure teardrop brackets have caught the mounting hardware.

