

Included Components & Hardware


Headboard (1)
Footboard (1)
Side Rails (2)
Center Support Rail (1)
Center Support Legs (3)

Slats (Queen & King: 14; California King: 15) Washers (8) Nuts (8) Wrench (1) Notes


Assembly requires 2 people.

When installing this bed, ensure all hardware is firmly secured. Do not loosen or move hardware.


Headboard (1)

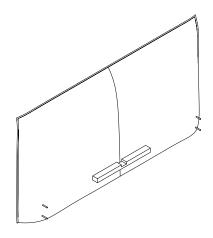


Footboard (1)

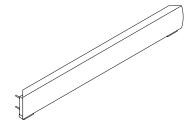


Side Rails (2)

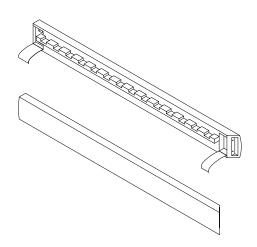

Center Support Rail (1)

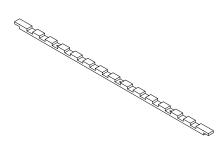

Slats (14-15)

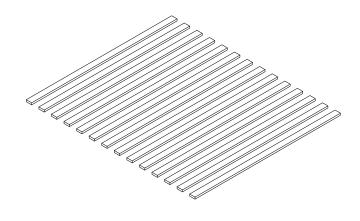

Center Support Legs (3)



Washers (8)



Wrench (1)




Nuts (8)




Step 1


Locate the zipped panels on the side rails and open them to access the assembly hardware that connects the headboard and side rails.

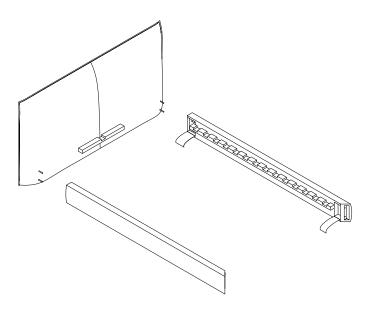

Step 2


Insert the pre-attached bolts on the headboard into the side rails. Once inserted, place a washer and nut onto each bolt, and use the wrench to tighten them.

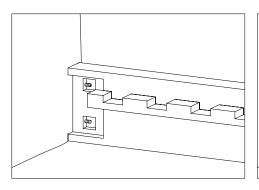

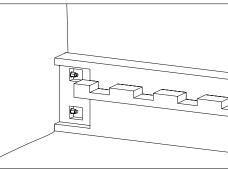


Step 3


Once the headboard and side rails are connected, locate the zipped panels on the opposite ends of the side rails and open them to access the assembly hardware that connects the footboard and side rails.

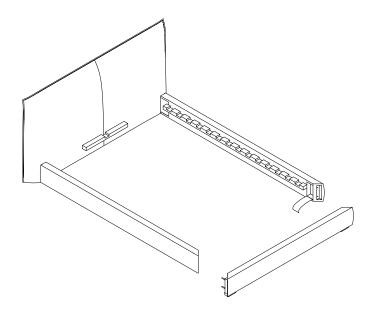

Step 4


Insert the pre-attached bolts on the footboard into the side rails. Once inserted, place a washer and nut onto each bolt, and use the wrench to tighten them.

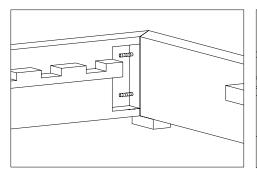

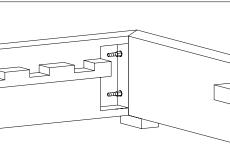


Step 5

Screw the center support legs into the center support rail, with the metal T-nuts facing upward.

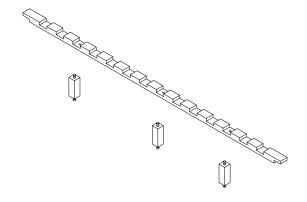


Step 6

Place the center support rail inside the bed frame and adjust the glides on the center support legs as needed, ensuring the legs stand straight and are flush to the floor. Check to ensure the zipped panels are closed.

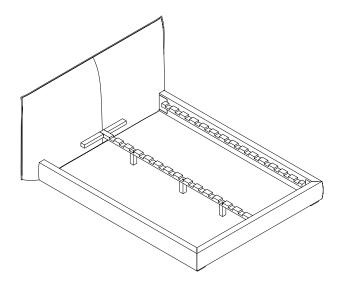

Step 7

Place the slats inside the bed frame. Note that the slat pocket is designed to be slightly wider than the slat for ease of assembly.

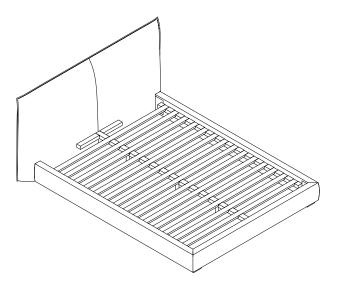


The illustrations below display the various configurations of the Wythe Bed.


Queen & King

14 Slats



15 Slats

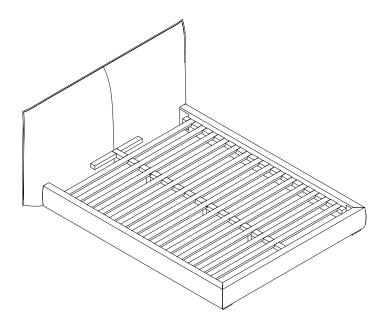

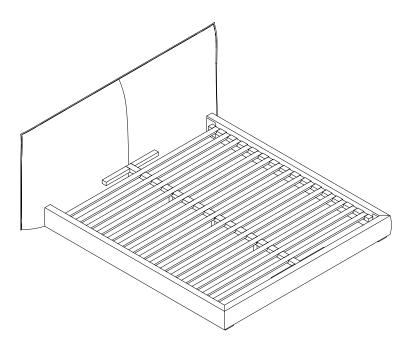

Assembly Checklist

Review the checklist below to ensure your bed is properly assembled.

- □ Ensure all slats are present.
- ☐ Ensure all slats are lying flat.
- Ensure all hardware is firmly secured.
 Do not loosen or move hardware.
- ☐ Ensure center support legs are level.
- ☐ Ensure the mitered corners are flush with each other.
- ☐ Should you need to move this piece for any reason—including installing a rug beneath it—disassemble it first, then reassemble in the desired position.