

Dirwin Caravan Cargo E-Bike Assembly Manual





Step 1 :Install front underframe bearing sleeve/bumper sleeve

						
Parts						M8-25
	2pcs	5pcs	1pcs	2pcs	6pcs	M8 M8

Step 2 :Install the fender

			
Screw		Specifications:	M6*16mm
		Quantity	4 ps

Step 3 :Install the front wheel

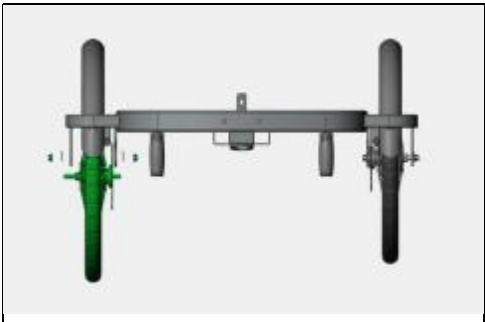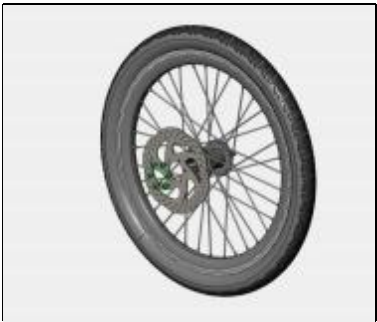

Screw		Specifications:	M5*16mm
		Quantity	12 ps


Step 4




Step 5

			
Screw		Specifications:	M8
		Quantity	4 ps


Step 6

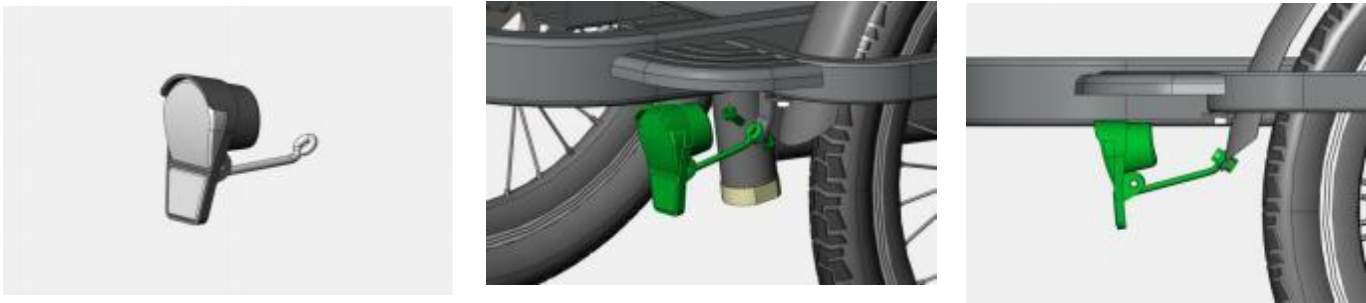			
Screw		Specifications:	M6*16mm
		Quantity	2 ps

Step 7

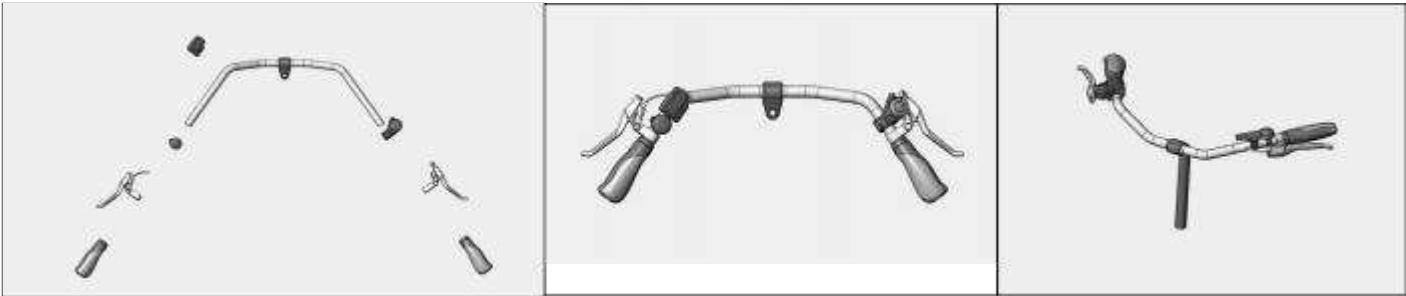		
---	--	--

Step 8

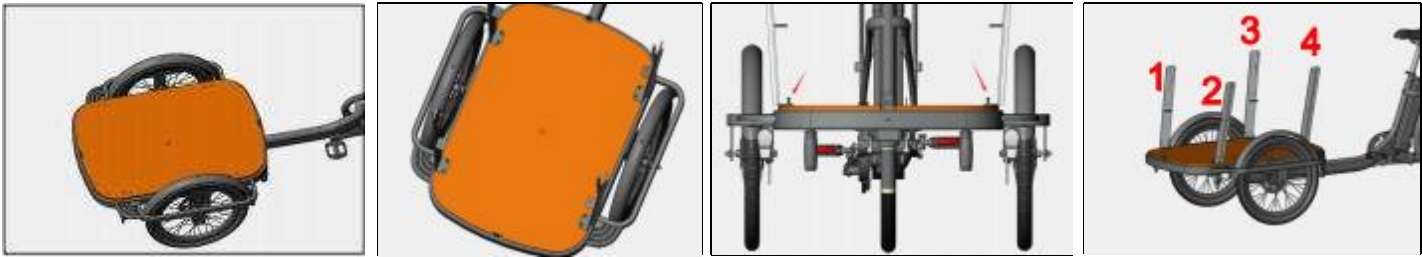


Screw		Specifications:	M6*35mm
		Quantity	8 ps

Step 9




Screw		Specifications:	M6*10mm M6*15mm
		Quantity	24 ps 24 ps

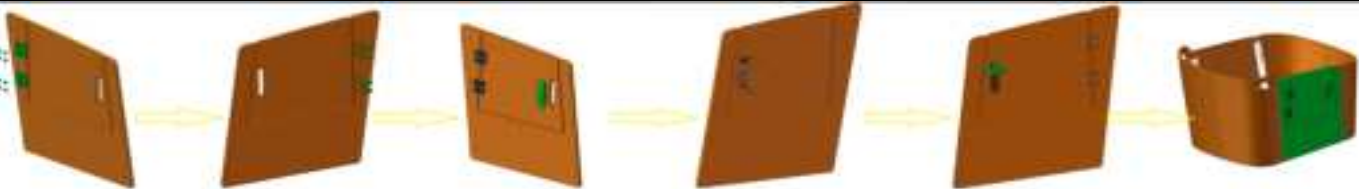

Screw	Hinge	Lock	
M6*10mm 8PS M6*12mm 8PS M6 8PS	8PS	1PS	

Step 10

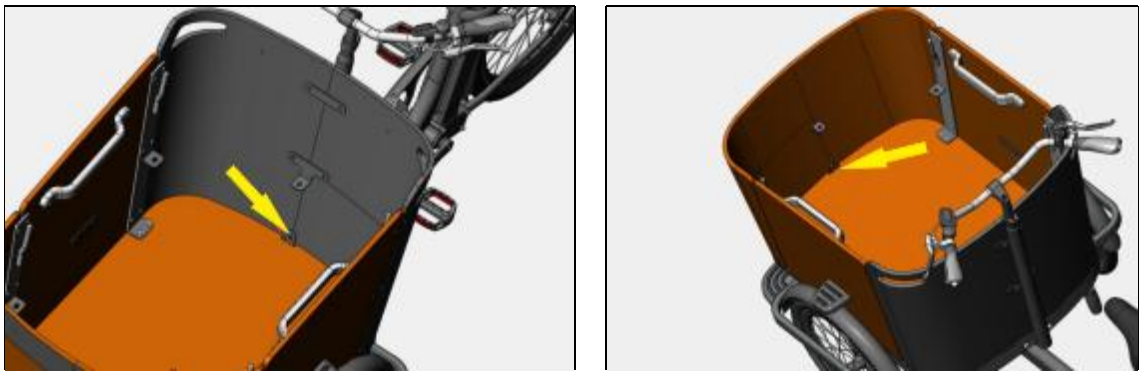

Screw		Specifications:	M 6*10mm
		Quantity	2 ps

Step 11




Screw		Specifications:	M 8*40mm
		Quantity	2 ps

Step 12




Screw		Specifications: M6*10mm M6*15mm Quantity 11 ps 11 ps
-------	---	--

Step 13

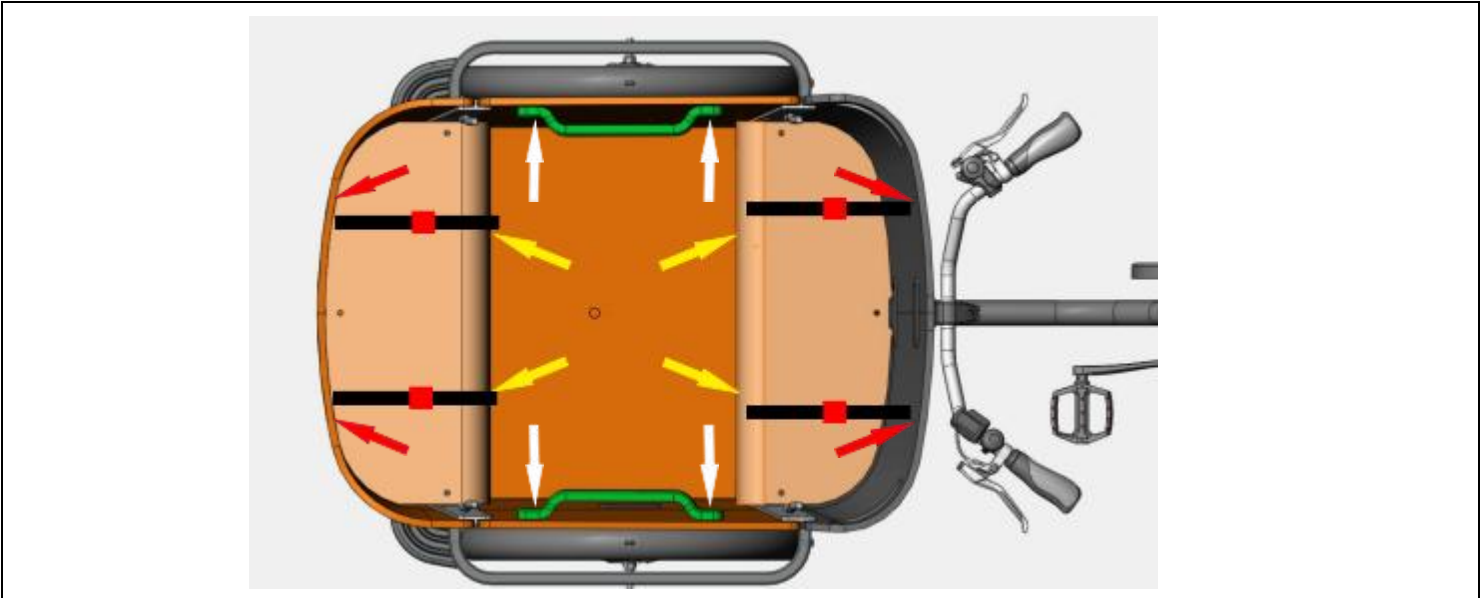

Screw	 	 	 
	Specifications: M6* 10mm M6* 12mm Quantity 4 ps 4 ps	Specifications: M4*27mm M4* 10mm Quantity 4 ps 4 ps	Specifications: M4* 16mm M4* 10mm Quantity 4 ps 4 ps

Step 14

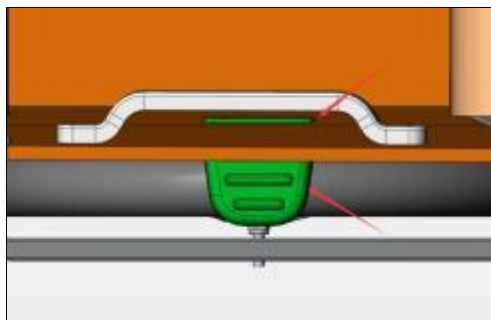

Screw




Specifications:

M6*25mm


Quantity

4 ps

Step 15

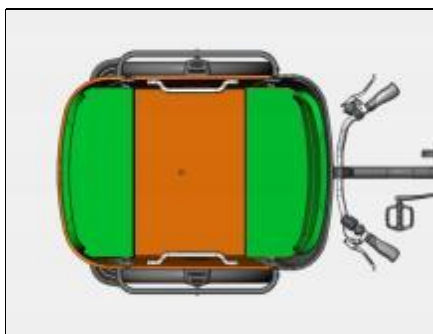

Electrical Connection Diagram

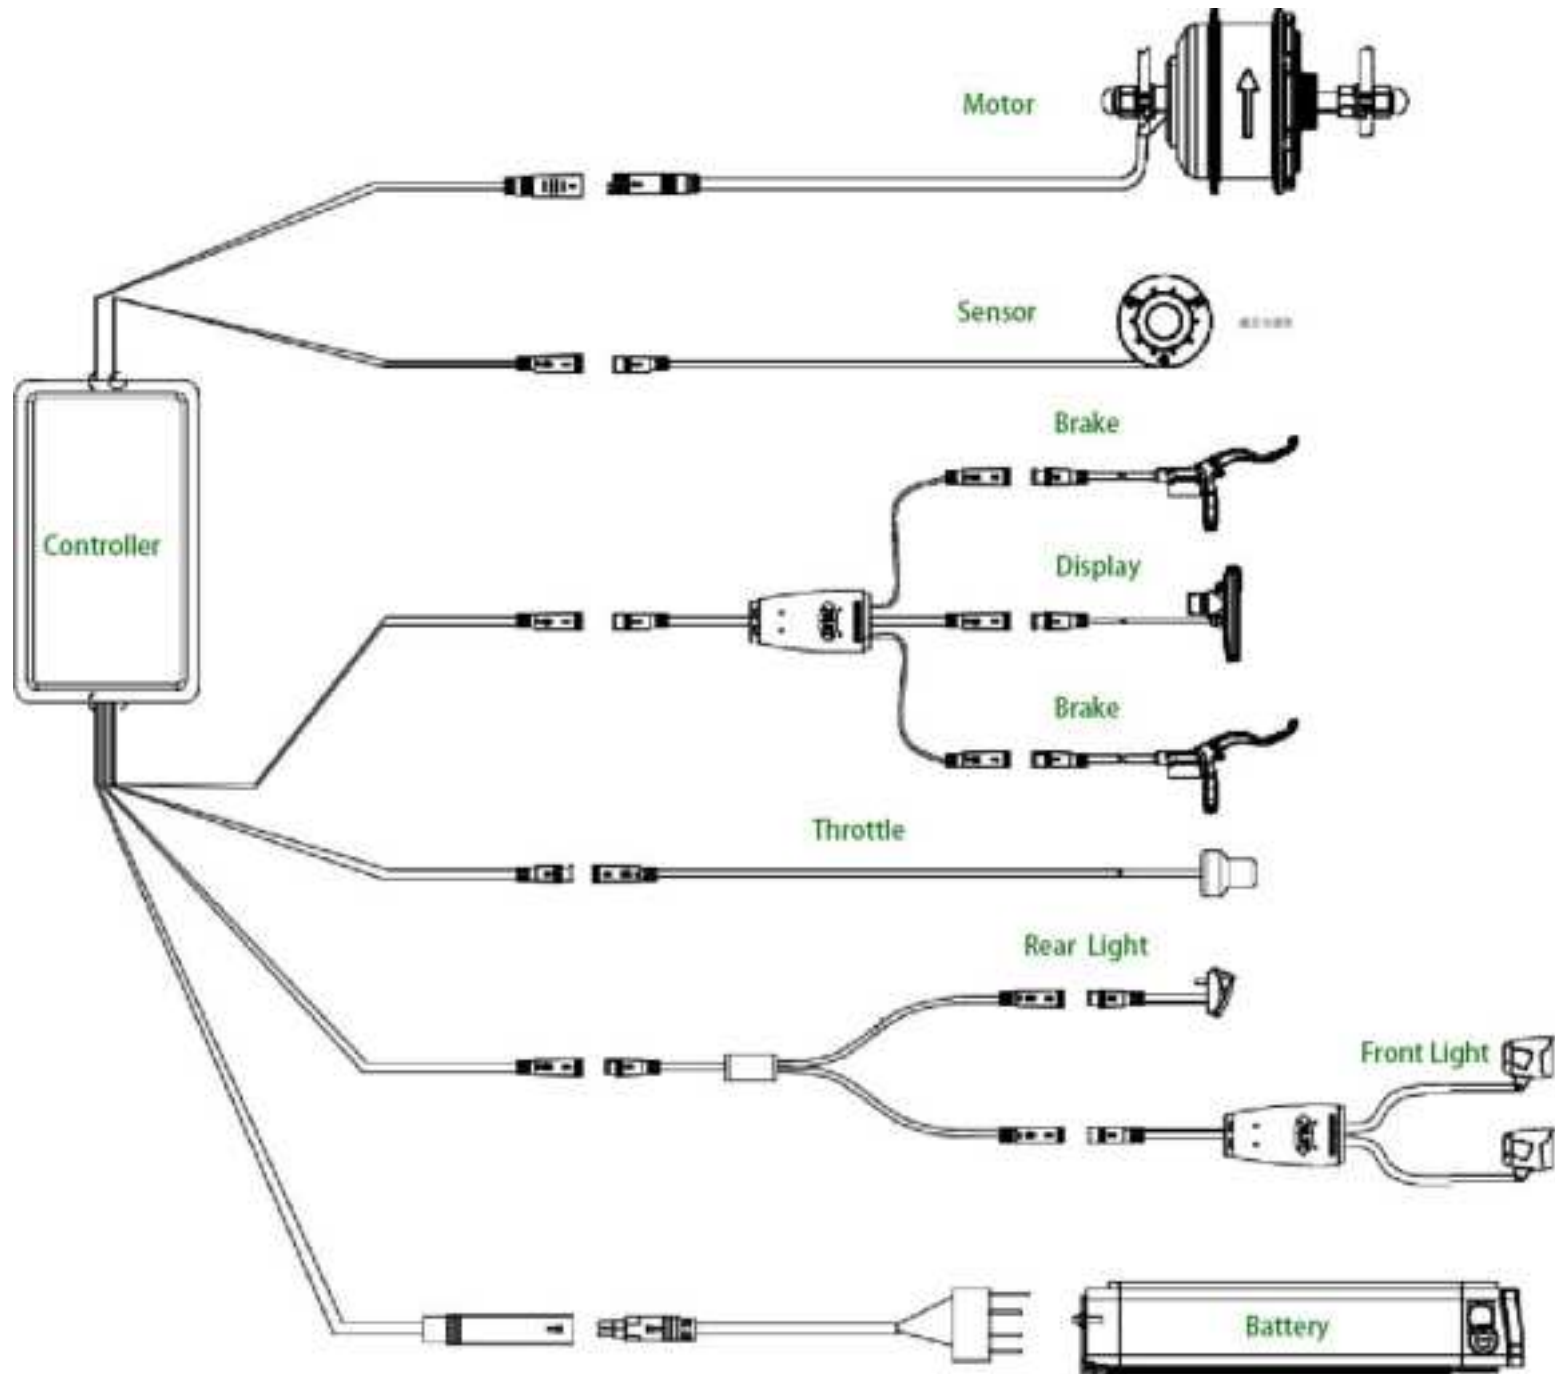



DIRWIN BIKE CO., LTD.

Call Us: (908) 444-0652

WD: 8 am-5 pm EST WKD: 9 am-6 pm EST

E-mail:

sales@dirwinbike.com;

customerservice@dirwinbike.com

www.dirwinbike.com